

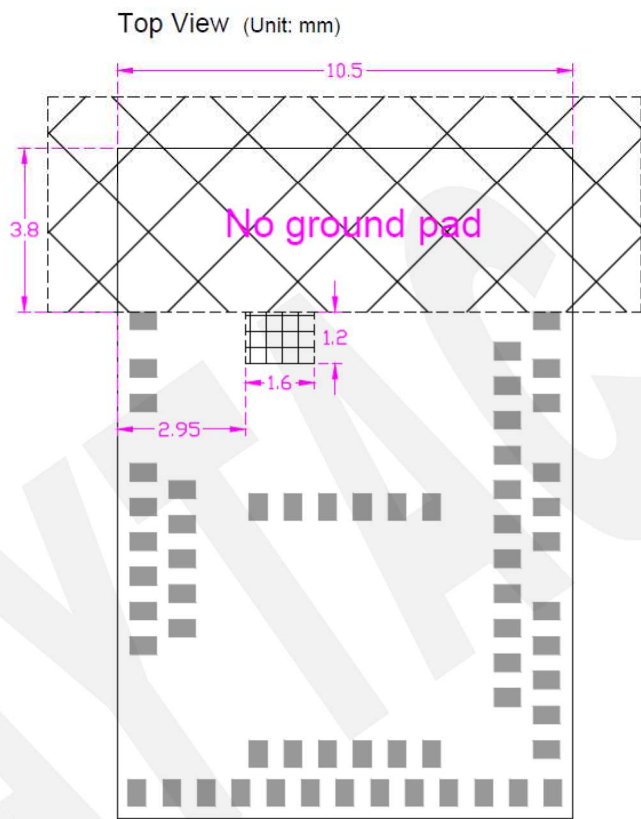


2.2. Recommended Layout of Solder Pad

Graphs are all in Top View, Unit in mm.

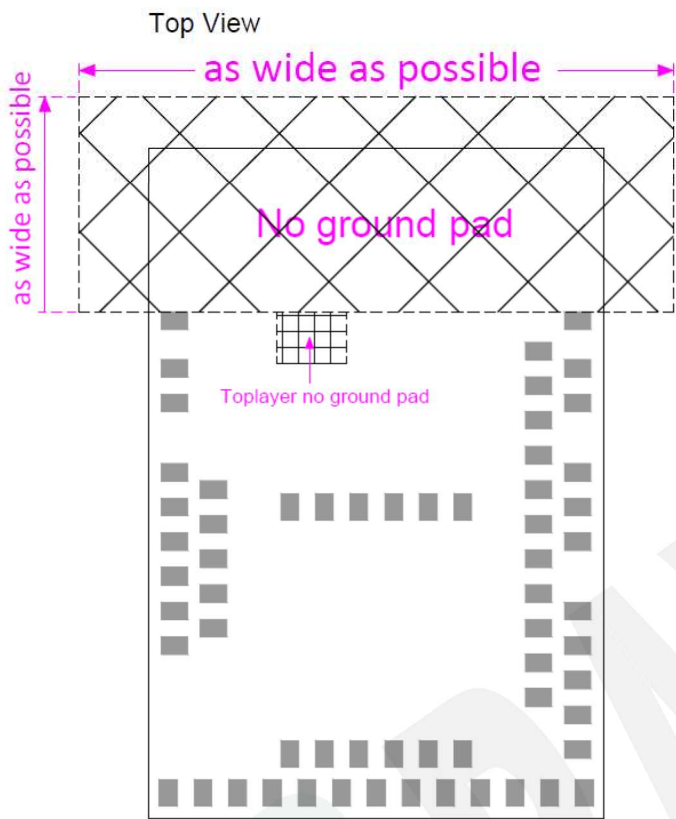


-  No ground pad (as wide as possible)
-  Toplayer no ground pad

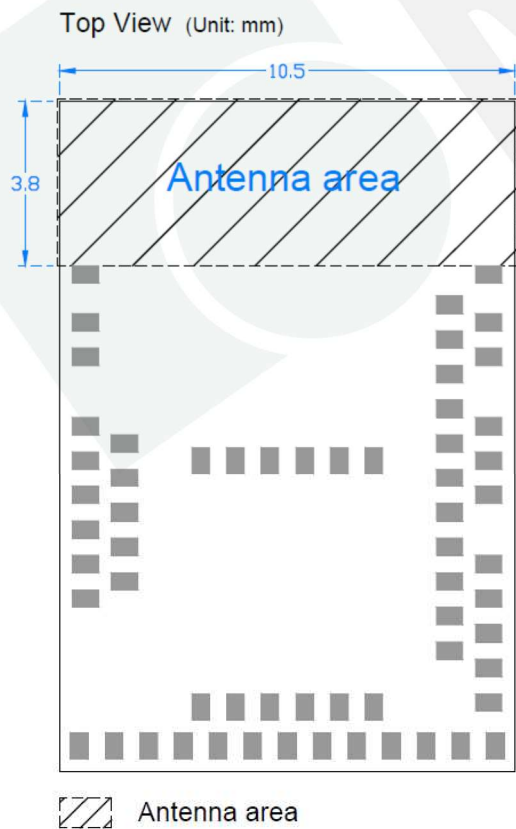

-  Antenna area

Top View (Unit: mm)

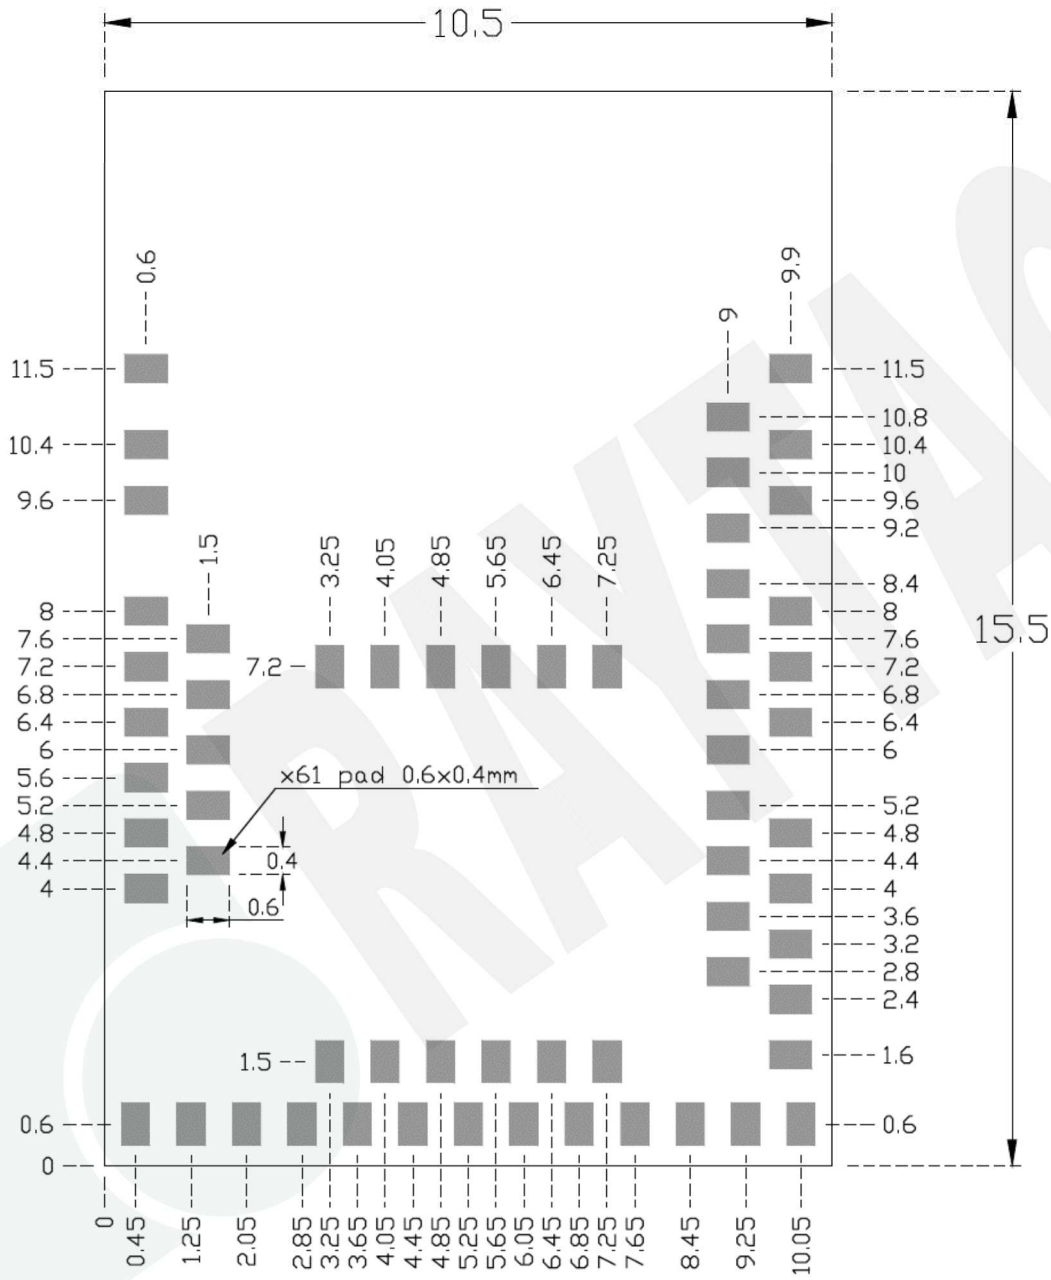


2.3. RF Layout Suggestion (aka Keep-Out Area)

Make sure to keep the “No Ground Pad” as wider as you can regardless of the size of your PCB.

No Ground Pad should be included in the corresponding position of the antenna in **EACH LAYER**.


Place the module towards the edge of PCB to have better performance than placing it on the center.

Welcome to send us your layout in PDF for review at service@raytac.com or your contact at Raytac with title “Layout reviewing – Raytac Model No. – YOUR company’s name”.

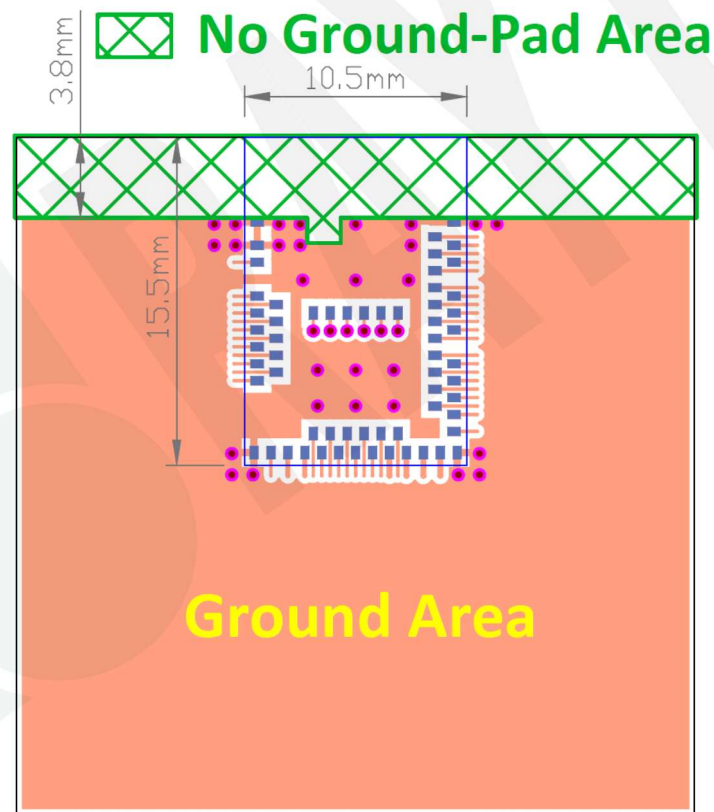


Top View

Please add via holes in GROUND area as many as possible, especially around the four corners.

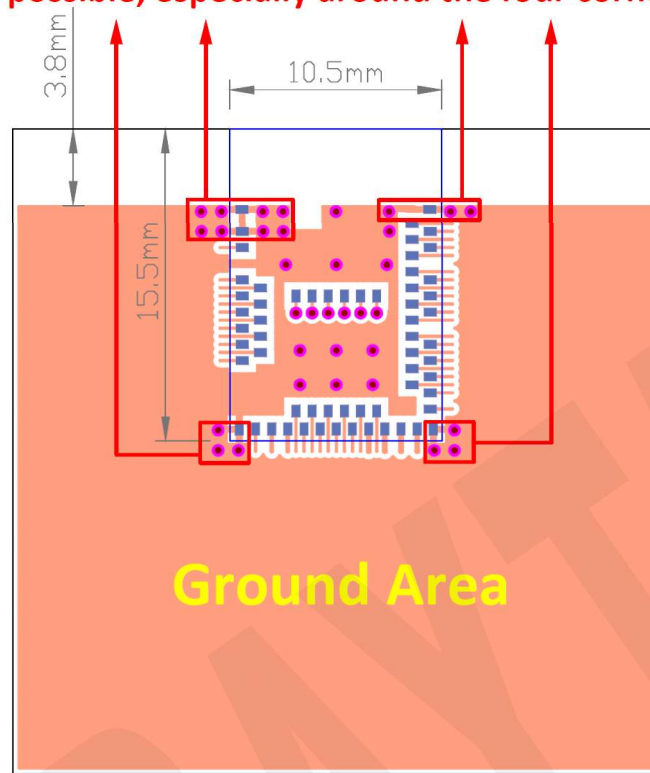

Top View


 No Ground-Pad Area

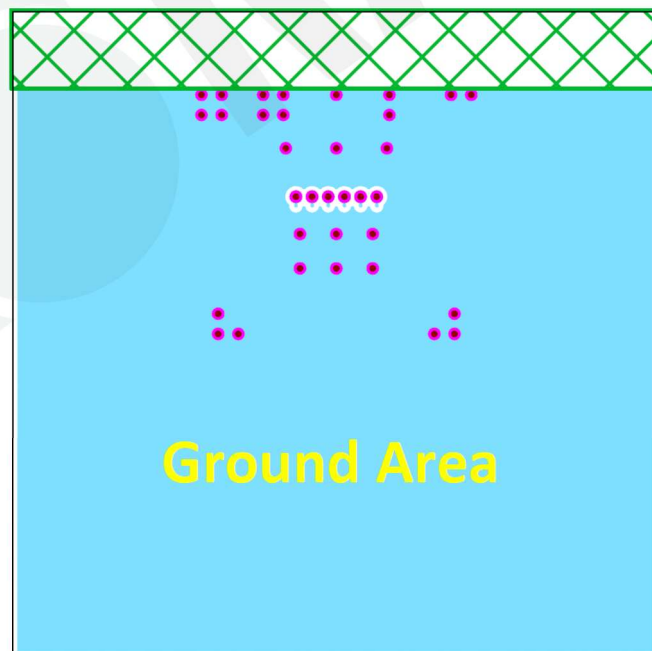


Perspective View

Examples of “**NOT RECOMMENDED**” layout

 where should be NO-GROUND area

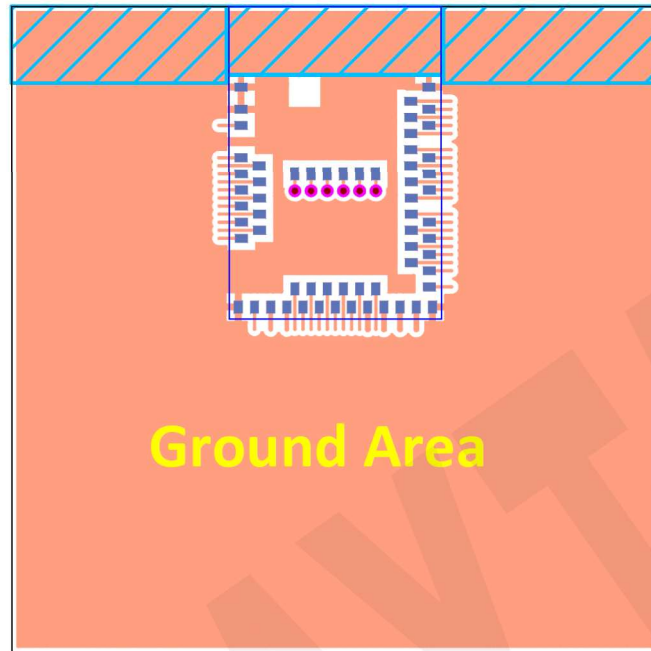

 where should be NO-GROUND area

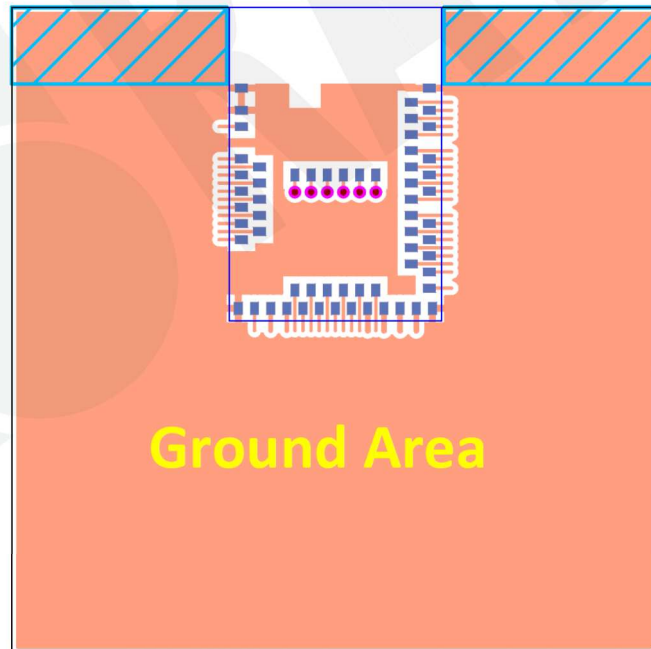

2.4. Footprint & Design Guide

Please visit “[Support](#)” page of our website to download. The package includes footprint, 2D/3D drawing, reflow graph/solder profile and recommended spec for external 32.768khz.