

1) Configure ADC parameters


PGA Gain				
	PGA Gain	128	V/V	
Supply Voltage(s)				
2.3 V ≤	AVDD	3,3	V	≤ 5.5 V
-2.75 V ≤	AVSS	0	V	≤ 0 V
Reference Voltage(s)				
1,8765 V ≤	V _{REFP}	2,0565	V	≤ 3,4 V
-0.1 V ≤	V _{REFN}	1,1265	V	≤ 1,3065 V

2) Define input voltages

Input Voltage				
	Input Mode	Differential/CM Voltages		
-0,0073 V ≤	VIN_DIFF	0,0015	V	≤ 0,0073 V
0,825 V ≤	VIN_CM	1,12575	V	≤ 3,004 V

3) Check for errors

Error messages	
V _(AVDD-AVSS)	
V _(REFP-REFN)	
V _{IN_DIFF}	
V _{INP}	
V _{INN}	

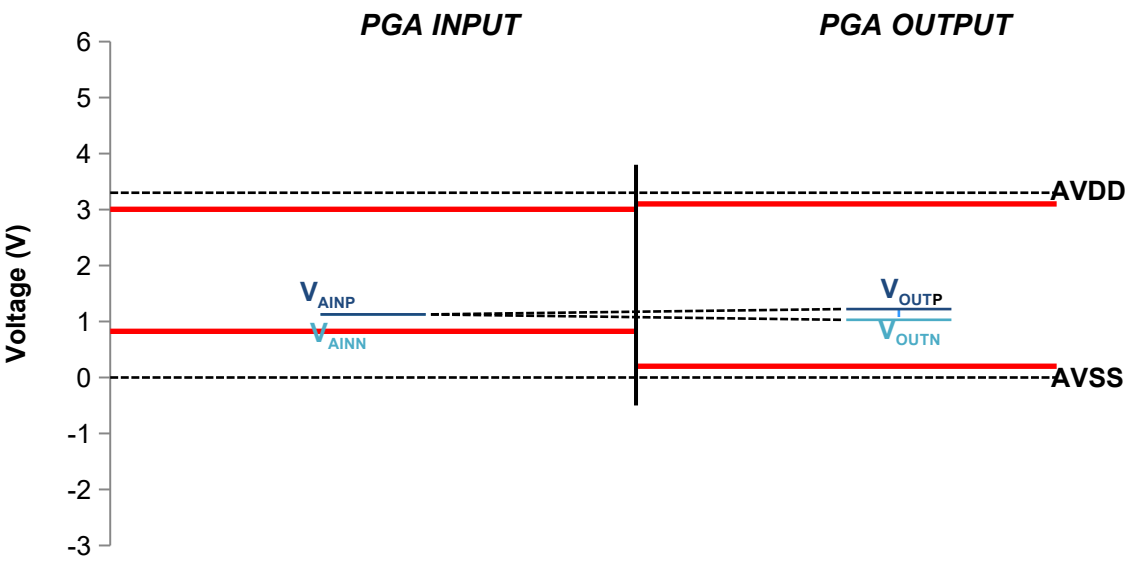

PGA Input			PGA Output		
1,1177 V ≤	V _{INP}	1,1265	0,2 V ≤	V _{OUTP}	1,22175
	V _{INN}	1,125		V _{OUTN}	1,02975
-0,0073 V ≤	V _{IN_DIFF}	0,0015	-0,93 V ≤	V _{OUT_DIFF}	0,192
0,825 V ≤	V _{IN_CM}	1,12575		V _{OUT_CM}	1,12575



[Table of Contents](#)

Legend	
<i>Input</i> =	#
<i>Result</i> =	#
<i>Invalid Parameter</i> =	#