


## Microwind & Dsch Version 3.0

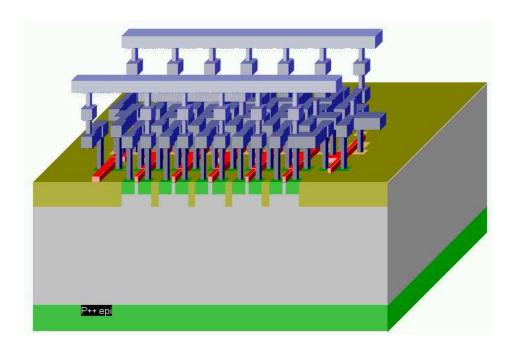

# User's Manual Lite Version Etienne Sicard

www.microwind.org

March 2005

#### About the author

ETIENNE SICARD was born in Paris, France, in June 1961. He received a B.S degree in 1984 and a PhD in Electrical Engineering in 1987 both from the University of Toulouse. He was granted a Monbusho scholarship and stayed 18 months at the University of Osaka, Japan. Previously a professor of electronics in the department of physics, at the University of Balearic Islands, Spain, E. Sicard is currently a professor at the INSA Electronic Engineering School of Toulouse. His research interests include several aspects of design of integrated circuits including crosstalk fault tolerance, and electromagnetic compatibility of integrated circuits. Etienne SICARD is the author of several commercial software in the field of microelectronics and sound processing.

#### Web information

- www.microwind.org for the Lite Version
- www.microwind.net for the professional Version

#### **Books Using Microwind**

"Chip Design for Submicron VLSI: CMOS Layout	"I
and Simulation" by John Uyemura - Georgia Institute	M
of Technology, USA - based on Microwind & Dsch	В
http://www.engineering.thomsonlearning.com	20
2005, IBSN 053446629X	

'Deep submicron CMOS design using Microwind' by Etienne Sicard and Sonia Bendhia, to appear McGraw-Hill,

#### Copyright

© Copyright 1997-2005 by INSA, Toulouse, FRANCE

#### ISBN 2-87649-049-8

Published by INSA Toulouse 135 Av de Rangueil 31077 Toulouse France April 2005

## **Table of Contents**

1	Introduction & Installation	6
$\Pi$	INSTALLATION	7
T	Technology Scale Down	8
2	The MOS device	9
	2.1 Logic Levels	
2.	2.2 The MOS as a switch	9
2.	2.3 MOS layout	
2.	2.4 Vertical aspect of the MOS	
2.	2.5 Static Mos Characteristics	
2.	2.6 Dynamic MOS behavior	
2.	2.7 Analog Simulation	
2.	2.8 Layout considerations	
2.	2.9 The MOS Models	
2.	2.10 The PMOS Transistor	
2.	2.11 The Transmission Gate	
2.	2.12 Features in the full version	19
3	The Inverter	
	3.1 The Logic Inverter	
3.	3.2 The CMOS inverter	
3.	3.3 Manual Layout of the Inverter	
3.	3.4 Connection between Devices	
3.	3.5 Useful Editing Tools	
3.	3.6 Metal-to-poly	
3.	3.7 Supply Connections	
3.	3.8 Process steps to build the Inverter	
3.	3.9 Inverter Simulation	
3.	3.10 Added Features in the Full version	
4	Basic Gates	28
	4.1 Introduction	
4.	4.2 The Nand Gate	
4.	4.3 The AND gate	
4.	4.4 The XOR Gate	
4.	4.5 Multiplexor	
4.	4.6 Interconnects	
4.	4.7 Added Features in the Full version	
5	Arithmetics	35
	5.1 Unsigned Integer format	

#### 1. Introduction


5.2	Half-Adder Gate	35
5.3	Full-Adder Gate	
5.4	Full-Adder Symbol in DSCH3	
5.5	Comparator	
5.6	Micro-controller Models	
5.7	Added Features in the Full version	40
6 La	utches	41
6.1	Basic Latch	41
6.2	RS Latch	41
6.3	Edge Trigged Latch	44
6.4	Added Features in the Full version	46
7 M	emory Circuits	47
7.1	Main structure	
7.2	RAM Memory	
7.3	Selection Circuits	
7.4	A Complete 64 bit SRAM	52
7.5	Dynamic RAM Memory	53
7.6	EEPROM	54
7.7	Flash Memories	55
7.8	Memory Interface	57
7.9	Added Features in the Full version	57
8 An	nalog Cells	59
8.1	Resistor	
8.2	Capacitor	
8.3	Poly-Poly2 Capacitor	
8.4	Diode-connected MOS	63
8.5	Voltage Reference	64
8.6	Amplifier	65
8.7	Simple Differential Amplifier	67
8.8	Added Features in the Full version	69
9 Ra	adio Frequency Circuits	
	On-Chip Inductors	
9.2	Power Amplifier	
9.3	Oscillator	
9.4	Phase-lock-loop	76
9.5	Analog to digital and digital to analog converters	79
9.6	Added Features in the Full version	83
10	Input/Output Interfacing	
10.1	The Bonding Pad	
10.2		
10.3	The supply rails	
10.4	Input Structures.	
10.5	High voltage MOS	
10.6		
10.7	Added Features in the Full version	91
11	Design Rules	92
11.1		
11.2		
11.3	N-Well	
11.0		02

#### 1. Introduction


11.5	Polysilicon	93
11.6	2 <sup>nd</sup> Polysilicon Design Rules	93
11.7	MOS option	94
11.8	Contact	94
11.9	Metal 1	94
11.10	Via	94
11.11	Metal 2	95
11.12	Via 2	95
11.13	Metal 3	95
11.14	Via 3	95
11.15	Metal 4	
11.16	Via 4	
11.17	Metal 5	96
11.18	Via 5	
11.19	Metal 6	
11.20	Pads	96
12 N	MICROWIND3 and DSCH3 Menus	<i>97</i>
12.1	FILE MENU	
12.2	VIEW MENU	97
12.3	EDIT MENU	97
12.4	SIMULATE MENU	98
12.5	COMPILE MENU	98
12.6	ANALYSIS MENU	98
12.7	PALETTE	98
12.8	NAVIGATOR WINDOW	99
12.9	MICROWIND3 SIMULATION MENU	99
12.10	DSCH3 MENUS	100
12.11	EDIT MENU	100
12.12	INSERT MENU	
12.13	VIEW MENU	101
12.14	SIMULATE MENU	101
12.11	SIMULATE MENU	101

## 1 Introduction & Installation

The present document introduces the design and simulation of CMOS integrated circuits, in an attractive way thanks to user-friendly PC tools DSCH3 and MICROWIND3. The lite version of these tools only includes a subset of available commands. The Lite version is freeware, available on the web site <a href="www.microwind.org">www.microwind.org</a>. The complete version of the tools is available from <a href="www.microwind.net">www.microwind.net</a>.

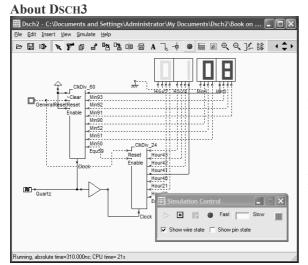

The DSCH3 program is a logic editor and simulator. DSCH3 is used to validate the architecture of the logic circuit before the microelectronics design is started. DSCH3 provides a user-friendly environment for hierarchical logic design, and fast simulation with delay analysis, which allows the design and validation of complex logic structures. Some techniques for low power design are described in the manual. DSCH3 also features the symbols, models and assembly support for 8051 and 18f64. DSCH3 also includes an interface to SPICE.

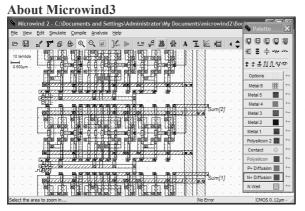

The MICROWIND3program allows the student to design and simulate an integrated circuit at physical description level. The package contains a library of common logic and analog ICs to view and simulate. MICROWIND3includes all the commands for a mask editor as well as original tools never gathered before in a single module (2D and 3D process view, Verilog compiler, tutorial on MOS devices). You can gain access to *Circuit Simulation* by pressing one single key. The electric extraction of your circuit is automatically performed and the analog simulator produces voltage and current curves immediately.

The chapters of this manual have been summarized below. Chapter 2 is dedicated to the presentation of the single MOS device, with details on the device modeling, simulation at logic and layout levels.

Chapter 3 presents the CMOS Inverter, the 2D and 3D views, the comparative design in micron and deep-submicron technologies. Chapter 4 concerns the basic logic gates (AND, OR, XOR, complex gates), Chapter 5 the arithmetic functions (Adder, comparator, multiplier, ALU). The latches and memories are detailed in Chapter 6.

As for Chapter 7, analog cells are presented, including voltage references, current mirrors, operational amplifiers and phase lock loops. Chapter 8 concerns analog-to-digital, digital to analog converter principles. and radio-frequency circuit. The input/output interfacing principles are illustrated in Chapter 9.

The detailed explanation of the design rules is in Chapter 10. The program operation and the details of all commands are given in the help files of the programs.

#### **INSTALLATION**

#### From The web

Connect to page www.microwind.org

Click "Download Microwind" and download mw03.zip

- Unzip the whole contents of the file to a user's directory (We suggest you create "Microwind3")
- ♦ Test: double-click MICROWIND3.EXE. Click "File ->Load", select "CMOS.msk". Click "Simulate".
- ♦ Click "Download Dsch" and download dsch03.zip
- Unzip the whole contents of the file to a user's directory (We suggest you create "Dsch3")
- ♦ Test: double click in DSCH3.EXE. Load "base.sch". Click "Simulate".

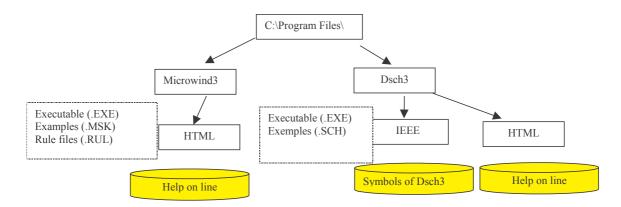


Figure 1-1: The architecture of Microwind and Dsch

Once installed, two directories are created, one for MICROWIND3, one for DSCH3. In each directory, a subdirectory called html contains help files.

#### **Technology Scale Down**

The figure below illustrates the tremendous improvements in terms of lithography. The deep submicron technology started in 1995 with the introduction of lithography better than 0.3µm. Ultra deep submicron technology concerned lithography below 0.1µm. Nano scale technologies started in 2004 with the 90nm CMOS technology, followed by the 65nm. Deep nanoscale technologies should include 32nm and 22nm processes, to appear in 2010-2013. It can be seen that the trend towards smaller dimensions has been accelerated since 1996. In the same figure, it is also shown that research has always kept around 5 years ahead of mass production. The lithography corresponds to the smallest patterns that can be implemented on the surface of the integrated circuit.

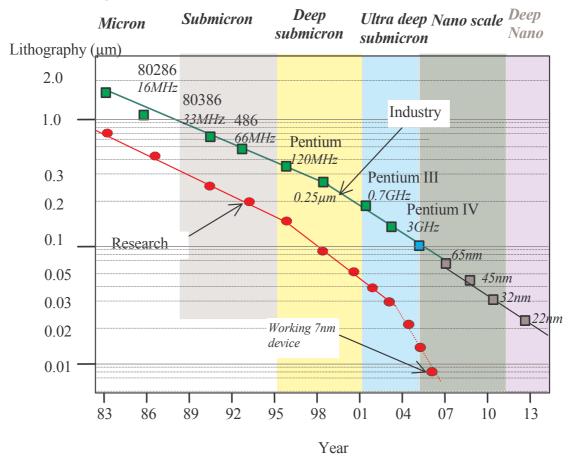


Figure 1-2: Evolution of lithography

Main reasons for this scale down are: faster circuits, lower consumption, lower costs, smaller size, and increased integration.

## 2 The MOS device

This chapter presents the CMOS transistor, its layout, static characteristics and dynamic characteristics. The vertical aspect of the device and the three dimensional sketch of the fabrication are also described.

#### 2.1 Logic Levels

Three logic levels 0,1 and X are defined as follows:

Logical value	Voltage	Name	Symbol in DSCH3	Symbol in MICROWIND3
0	0.0V	VSS	(Green in logic simulation)	(Green in analog simulation)
1	1.2V in cmos 0.12μm	VDD	(Red in logic simulation)	(Red in analog simulation)
X	Undefined	X	(Gray in simulation)	(Gray in simulation)

#### 2.2 The MOS as a switch

The MOS transistor is basically a switch. When used in logic cell design, it can be *on* or *off*. When *on*, a current can flow between drain and source. When off, no current flow between drain and source. The MOS is turned on or off depending on the gate voltage. In CMOS technology, both n-channel (or nMOS) and p-channel MOS (or pMOS) devices exist. The nMOS and pMOS symbols are reported below. The symbols for the ground voltage source (0 or VSS) and the supply (1 or VDD) are also reported in figure 2-1.

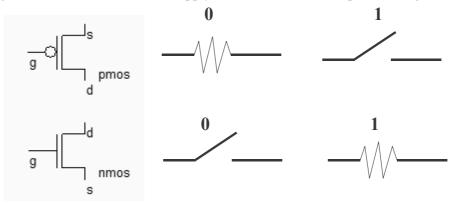


Fig. 2-1: the MOS symbol and switch

The n-channel MOS device requires a logic value 1 (or a supply VDD) to be on. In contrary, the p-channel MOS device requires a logic value 0 to be on. When the MSO device is on, the link between the source and

drain is equivalent to a resistance. The order of range of this 'on' resistance is  $100\Omega$ -5K $\Omega$ . The 'off' resistance is considered infinite at first order, as its value is several M $\Omega$ .

#### 2.3 MOS layout

We use MICROWIND3 to draw the MOS layout and simulate its behavior. Go to the directory in which the software has been copied (By default microwind3). Double-click on the MicroWind3 icon.

The MICROWIND3 display window includes four main windows: the main menu, the layout display window, the icon menu and the layer palette. The layout window features a grid, scaled in lambda ( $\lambda$ ) units. The lambda unit is fixed to half of the minimum available lithography of the technology. The default technology is a CMOS 6-metal layers 0.12 $\mu$ m technology, consequently lambda is 0.06 $\mu$ m (60nm).

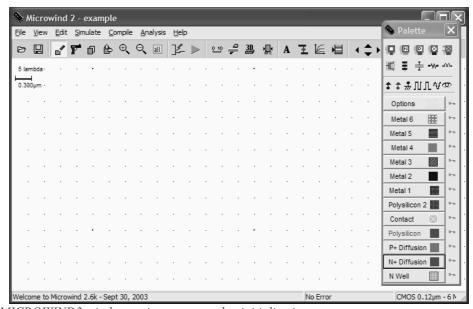


Fig. 2-23 The MICROWIND3 window as it appears at the initialization stage..

The palette is located in the lower right corner of the screen. A red color indicates the current layer. Initially the selected layer in the palette is polysilicon. By using the following procedure, you can create a manual design of the n-channel MOS.

- Fix the first corner of the box with the mouse. While keeping the mouse button pressed, move the mouse to the opposite corner of the box. Release the button. This creates a box in polysilicon layer as shown in Figure 2-3. The box width should not be inferior to  $2 \lambda$ , which is the minimum width of the polysilicon box.
- Change the current layer into N+ diffusion by a click on the palette of the Diffusion N+ button. Make sure that the red layer is now the N+ Diffusion. Draw a n-diffusion box at the bottom of the drawing as in Figure 2-3. N-diffusion boxes are represented in green. The intersection between diffusion and polysilicon creates the channel of the nMOS device.

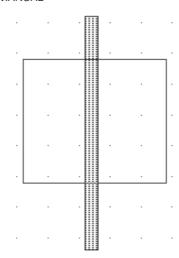


Fig. 2-3. Creating the N-channel MOS transistor

#### 2.4 Vertical aspect of the MOS



Click on this icon to access *process simulation* (Command *Simulate*  $\rightarrow$  *Process section in 2D*). The cross-section is given by a click of the mouse at the first point and the release of the mouse at the second point.

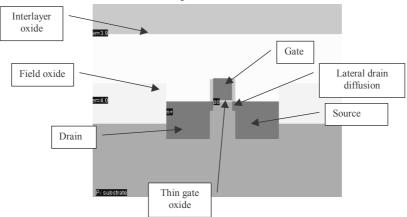


Fig. 2-4. The cross-section of the nMOS devices.

In the example of Figure 2-4, three nodes appear in the cross-section of the n-channel MOS device: the gate (red), the left diffusion called *source* (green) and the right diffusion called *drain* (green), over a substrate (gray). A thin oxide called the gate oxide isolates the gate. Various steps of oxidation have lead to stacked oxides on the top of the gate.

The physical properties of the source and of the drain are exactly the same. Theoretically, the source is the origin of channel impurities. In the case of this nMOS device, the channel impurities are the electrons. Therefore, the source is the diffusion area with the lowest voltage. The polysilicon gate floats over the channel, and splits the diffusion into 2 zones, the source and the drain. The gate controls the current flow from the drain to the source, both ways. A high voltage on the gate attracts electrons below the gate, creates an electron channel and enables current to flow. A low voltage disables the channel.

#### 2.5 Static Mos Characteristics



Click on the *MOS characteristics* icon. The screen shown in Figure 2-5 appears. It represents the *Id/Vd* static characteristics of the nMOS device.


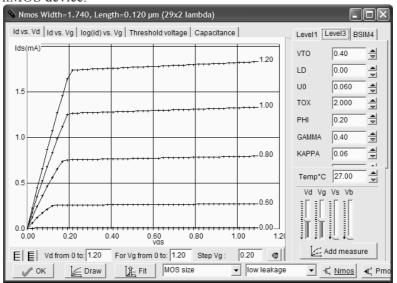


Fig. 2-5. N-Channel MOS characteristics.

The MOS size (width and length of the channel situated at the intersection of the polysilicon gate and the diffusion) has a strong influence on the value of the current. In Figure 2-5, the MOS width is 1.74 $\mu$ m and the length is 0.12 $\mu$ m. A high gate voltage (Vg = 1.2V) corresponds to the highest Id/Vd curve. For Vg = 0, no current flows. You may change the voltage values of Vd, Vg, Vs by using the voltage cursors situated on the right side of the window. A maximum current around 1.5mA is obtained for Vg = 1.2V, Vd = 1.2V, with Vs = 0.0. The MOS parameters correspond to SPICE Level 3. A tutorial on MOS model parameters is proposed later in this chapter.

#### 2.6 Dynamic MOS behavior

This paragraph concerns the dynamic simulation of the MOS to exhibit its switching properties. The most convenient way to operate the MOS is to apply a clock to the gate, another to the source and to observe the drain. The summary of available properties that can be added to the layout is reported below.

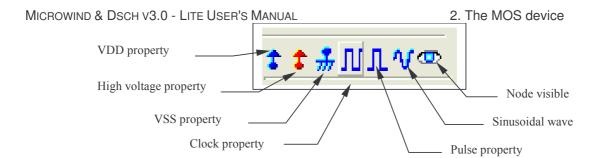

• Apply a clock to the gate. Click on the *Clock* icon and then, click on the polysilicon gate. The clock menu appears again. Change the name into Vgate and click on **OK** to apply a clock with 0.5ns period (0.225ns at 0, 25ps rise, 0.225ns at 1, 25ps fall).

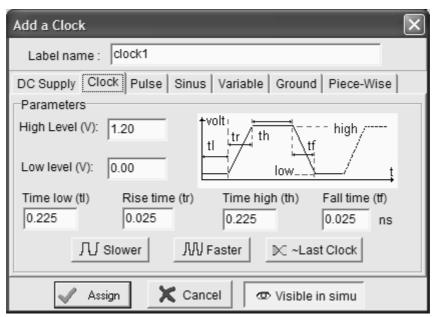


Fig. 2-6. The clock menu.

- 2 Apply a clock to the drain. Click on the Clock icon, click on the left diffusion. The *Clock* menu appears. Change the name into Vdrain and click on **OK**. A default clock with 1ns period is generated. The *Clock* property is sent to the node and appears at the right hand side of the desired location with the name Vdrain.
- Watch the output: Click on the *Visible* icon and then, click on the right diffusion. Click **OK**. The Visible property is then sent to the node. The associated text s1 is in italic, meaning that the waveform of this node will appear at the next simulation.

Always save <u>BEFORE</u> any simulation. The analog simulation algorithm may cause run-time errors leading to a loss of layout information. Click on **File**  $\rightarrow$  **Save as**. A new window appears, into which you enter the design name. Type for example myMos. Then click on **Save**. The design is saved under that filename.

#### 2.7 Analog Simulation

Click on **Simulate**  $\rightarrow$  **Start Simulation**. The timing diagrams of the nMOS device appear, as shown in Figure 2-7.

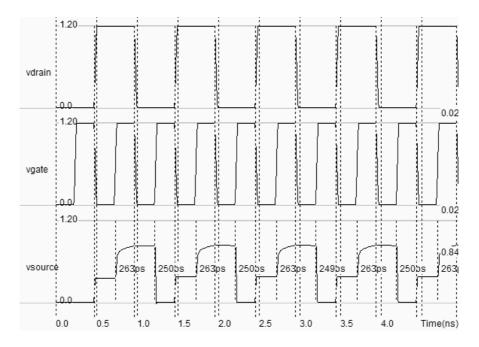


Fig. 2-7. Analog simulation of the MOS device.

When the gate is at zero, no channel exists so the node *vsource* is disconnected from the drain. When the gate is on, the source copies the drain. It can be observed that the nMOS device drives well at zero but poorly at the high voltage. The highest value of *vsource* is around 0.85V, that is VDD minus the threshold voltage. This means that the n-channel MOS device do not drives well logic signal 1, as summarized in figure 2-8. Click on **More** in order to perform more simulations. Click on **Close** to return to the editor.

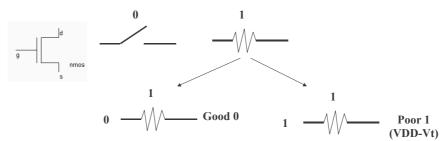



Fig. 2-9. The nMOS device behavior summary

#### 2.8 Layout considerations

The safest way to create a MOS device is to use the MOS generator. In the palette, click the MOS generator icon. A window appears as reported below. The programmable parameters are the MOS width, length, the number of gates in parallel and the type of device (n-channel or p-channel). By default metal interconnects

and contacts are added to the drain and source of the MOS. You may add a supplementary metal2 interconnect on the top of metal 1 for drain and source.



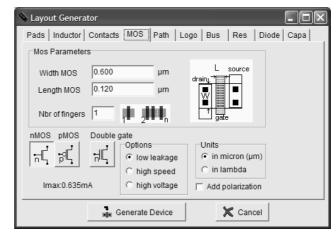


Fig. 2-10. The MOS generator

#### 2.9 The MOS Models

#### Mos level 1

For the evaluation of the current Ids between the drain and the source as a function of Vd, Vg and Vs, you may use the old but nevertheless simple MODEL 1 described below.

Mode	Condition	Expression for the current <i>Ids</i>
CUT-OFF	Vgs<0	Ids = 0
LINEAR	Vds <vgs-vt< td=""><td><math display="block">Ids = UO \frac{\varepsilon_0 \varepsilon_r}{TOX} \cdot \frac{W}{L} (V_{gs} - vt)^2</math></td></vgs-vt<>	$Ids = UO \frac{\varepsilon_0 \varepsilon_r}{TOX} \cdot \frac{W}{L} (V_{gs} - vt)^2$
SATURATED	Vds>Vgs-Vt	$Ids = UO \frac{\varepsilon_0 \varepsilon_r}{TOX} \cdot \frac{W}{L} (V_{gs} - vt)^2$

 $\varepsilon_0 = 8.85 \, 10^{-12} \, \text{F/m}$  is the absolute permittivity

 $\varepsilon_r$  = relative permittivity, equal to 3.9 in the case of SiO2 (no unit)

Mos Model 1 parameters						
Parameter Definition		Typical Value 0.12µm				
		NMOS	PMOS			
VTO	Theshold voltage	0.4V	-0.4V			
U0	Carrier mobility	$0.06 \text{m}^2/\text{V-s}$	$0.02 \text{m}^2/\text{V-s}$			
TOX	Gate oxide thickness	2nm	2nm			
PHI	Surface potential at strong inversion	0.3V	0.3V			
GAMMA	Bulk threshold parameter	$0.4 \text{ V}^{0.5}$	$0.4 \text{ V}^{0.5}$			
W	MOS channel width	1µm	1μm			
L	MOS channel length	0.12µm	0.12µm			

Table 2-1: Parameters of MOS level 1 implemented into Microwind3

When dealing with sub-micron technology, the model 1 is more than 4 times too optimistic regarding current prediction, compared to real-case measurements, as shown above for a  $10x0,12\mu m$  n-channel MOS.

#### The MOS Model 3

For the evaluation of the current *Ids* as a function of *Vd*, *Vg* and *Vs* between drain and source, we commonly use the following equations, close from the SPICE model 3 formulations. The formulations are derived from the model 1 and take into account a set of physical limitations in a semi-empirical way.

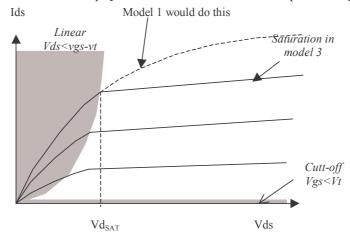


Fig. 2-11: Introduction of the saturation voltage VdSat which truncates the equations issued from model 1

One of the most important change is the introduction of  $Vd_{SAT}$ , a saturation voltage from which the current saturates and do not rise as the LEVEL1 model would do (Figure 2-11). This saturation effect is significant for small channel length.

#### The BSIM4 MOS Model

A new MOS model, called BSIM4, has been introduced in 2000. A simplified version of this model is supported by MICROWIND3, and recommended for ultra-deep submicron technology simulation. BSIM4 still considers the operating regions described in MOS level 3 (linear for low Vds, saturated for high Vds, subthreshold for Vgs < Vt), but provides a perfect continuity between these regions. BSIM4 introduces a new region where the impact ionization effect is dominant.

The number of parameters specified in the official release of BSIM4 is as high as 300. A significant portion of these parameters is unused in our implementation. We concentrate on the most significant parameters, for educational purpose. The set of parameters is reduced to around 20, shown in the right part of figure 2-12.

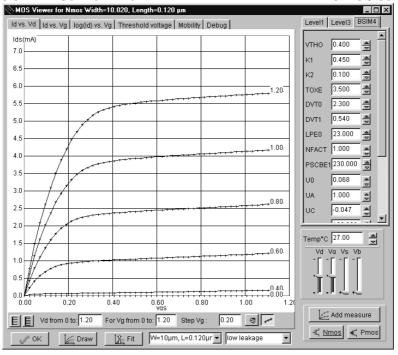


Fig.2-12: Implementation of BSIM4 within Microwind3

#### 2.10 The PMOS Transistor

The p-channel transistor simulation features the same functions as the n-channel device, but with opposite voltage control of the gate. For the nMOS, the channel is created with a logic 1 on the gate. For the pMOS, the channel is created for a logic 0 on the gate. Load the file pmos.msk and click the icon MOS characteristics. The p-channel MOS simulation appears, as shown in Figure 2-13. Note that the pMOS gives approximately half of the maximum current given by the nMOS with the same device size. The highest current is obtained with the lowest possible gate voltage, that is 0.

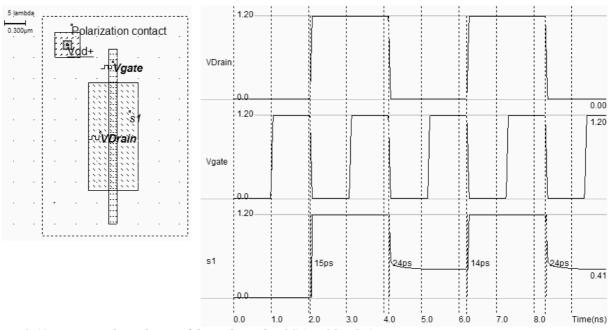


Fig. 2-13. Layout and simulation of the p-channel MOS (pMOS.MSK)

From the simulation of figure 3-21, we see that the pMOS device is able to pass well the logic level 1. But the logic level 0 is transformed into a positive voltage, equal to the threshold voltage of the MOS device. The summary of the p-channel MOS performances is reported in figure 3-20.

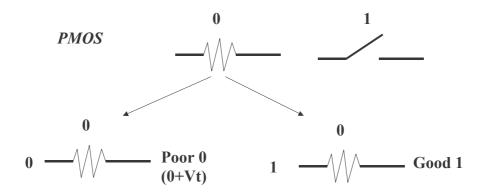


Fig. 2-14. Summary of the performances of a pMOS device

#### 2.11 The Transmission Gate

Both NMOS devices and PMOS devices exhibit poor performances when transmitting one particular logic information. The nMOS degrades the logic level 1, the pMOS degrades the logic level 0. Thus, a perfect pass gate can be constructed from the combination of nMOS and pMOS devices working in a complementary way, leading to improved switching performances. Such a circuit, presented in figure 2-15, is called the transmission gate. In DSCH3, the symbol may be found in the **Advance** menu in the palette. The transmission gate includes one inverter, one nMOS and one pMOS.

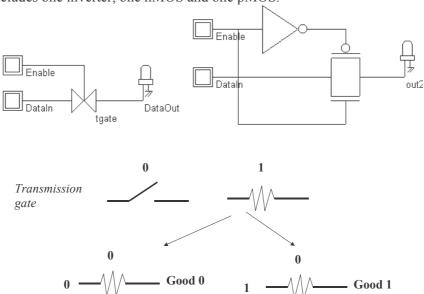


Fig. 2-15. Schematic diagram of the transmission gate (Tgate.SCH)

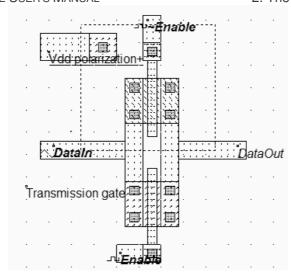


Fig. 2-16: Layout of the transmission gate (TGATE.MSK)

The layout of the transmission gate is reported in figure 2-16. The n-channel MOS is situated on the bottom the p-channel MOS on the top. Notice that the gate controls are not connected, as ~*Enable* is the opposite of *Enable*.

#### 2.12 Features in the full version

Technology Scale	A detailed description of technological trends, and several illustrations with			
Down	MICROWIND3 showing the impact of the progresses in lithography in terms of			
	switching speed and layout shrinking.			
High Speed Mos	A new kind of MOS device has been introduced in deep submicron technologies,			
	starting the 0.18µm CMOS process generation. The new MOS, called high speed			
	MOS (HS) is available as well as the normal one, recalled Low leakage MOS (LL).			
High Voltage MOS	For I/Os operating at high voltage, specific MOS devices called "High voltage			
	MOS" are used. The high voltage MOS is built using a thick oxide, two to three			
	times thicker than the low voltage MOS, to handle high voltages as required by the			
	I/O interfaces			
Temperature Effects	Three main parameters are concerned by the sensitivity to temperature: the			
	threshold voltage VTO, the mobility UO and the slope in sub-threshold mode. The			
	modeling of the temperature effect is described and illustrated.			
Process Variations	Due to unavoidable process variations during the hundreds of chemical steps for the			
	fabrication of the integrated circuit, the MOS characteristics are never exactly			
	identical from one device to another, and from one die to an other. Monte-carlo			
	simulation, min/max/typ simulations are provided in the full version.			

## 3 The Inverter

This chapter describes the CMOS inverter at logic level, using the logic editor and simulator DSCH3, and at layout level, using the tool MICROWIND3.

#### 3.1 The Logic Inverter

In this section, an inverter circuit is loaded and simulated. Click **File Open** in the main menu. Select INV.SCH in the list. In this circuit are one button situated on the left side of the design, the inverter and a led. Click **Simulate Start simulation** in the main menu.





Fig. 3.1: The schematic diagram including one single inverter (Inverter.SCH)

Now, click inside the buttons situated on the left part of the diagram. The result is displayed on the leds. The red value indicates logic 1, the black value means a logic 0. Click the button **Stop simulation** shown in the picture below. You are back to the editor.



Fig. 3.2: The button Stop Simulation



Click the **chronogram** icon to get access to the chronograms of the previous simulation (Figure 3-3). As seen in the waveform, the value of the output is the logic opposite of that of the input.

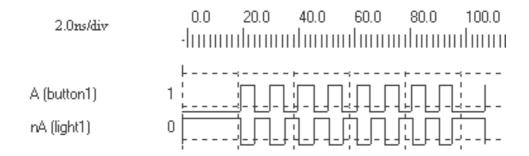


Fig. 3-3 Chronograms of the inverter simulation (CmosInv.SCH)

Double click on the INV symbol, the symbol properties window is activated. In this window appears the VERILOG description (left side) and the list of pins (right side). A set of drawing options is also reported in the same window. Notice the gate delay (0.03ns in the default technology), the fanout that represents the number of cells connected to the output pin (1 cell connected), and the wire delay due to this cell connection (An extra 0.140ns delay).

#### 3.2 The CMOS inverter

The CMOS inverter design is detailed in the figure below. Here the p-channel MOS and the n-channel MOS transistors function as switches. When the input signal is logic 0 (Fig. 3-4 left), the nMOS is switched off while PMOS passes VDD through the output. When the input signal is logic 1 (Fig. 3-4 right), the pMOS is switched off while the nMOS passes VSS to the output.

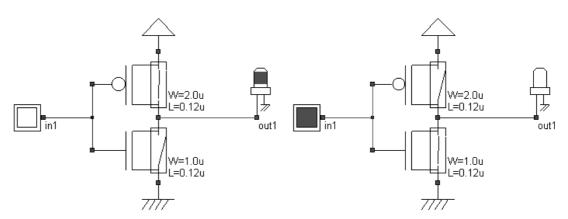


Fig. 3-4: The MOS Inverter (File CmosInv.sch)

The fanout corresponds to the number of gates connected to the inverter output. Physically, a large fanout means a large number of connections, that is a large load capacitance. If we simulate an inverter loaded with one single output, the switching delay is small. Now, if we load the inverter by several outputs, the delay and the power consumption are increased. The power consumption linearly increases with the load capacitance. This is mainly due to the current needed to charge and discharge that capacitance.

#### 3.3 Manual Layout of the Inverter

In this paragraph, the procedure to create manually the layout of a CMOS inverter is described. Click the icon **MOS generator** on the palette. The following window appears. By default the proposed length is the minimum length available in the technology (2 lambda), and the width is 10 lambda. In 0.12µm technology, where lambda is 0.06µm, the corresponding size is 0.12µm for the length and 0.6µm for the width. Simply click **Generate Device**, and click on the middle of the screen to fix the MOS device.

Click again the icon **MOS generator** on the palette. Change the type of device by a tick on **p-channel**, and click **Generate Device**. Click on the top of the nMOS to fix the pMOS device. The result is displayed in figure 3-4.

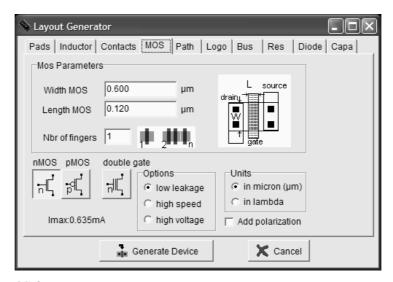


Fig. 3-4. Selecting the nMOS device

#### 3.4 Connection between Devices

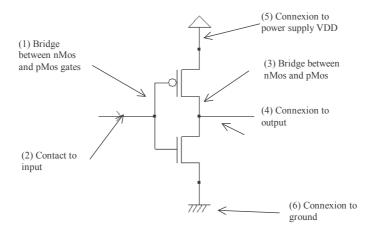


Fig. 3-6 Connections required to build the inverter (CmosInv.SCH)

Within CMOS cells, metal and polysilicon are used as interconnects for signals. Metal is a much better conductor than polysilicon. Consequently, polysilicon is only used to interconnect gates, such as the bridge (1) between pMOS and nMOS gates, as described in the schematic diagram of figure 3-5. Polysilicon is rarely used for long interconnects, except if a huge resistance value is expected.

In the layout shown in figure 3-5, the polysilicon bridge links the gate of the n-channel MOS with the gate of the p-channel MOS device. The polysilicon serves as the gate control and the bridge between MOS gates.

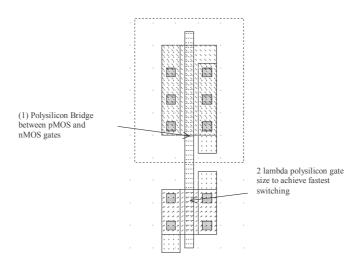


Fig. 3-6 Polysilicon bridge between nMOS and pMOS devices (InvSteps.MSK)

#### 3.5 Useful Editing Tools

The following commands may help you in the layout design and verification processes.

Command	Icon/Short cut	Menu	Description	
UNDO	CTRL+U	Edit menu	Cancels the last editing operation	
DELETE	ELETE CTRL+X		Erases some layout included in the given area or pointed by the mouse.	
STRETCH	<b>(</b>	Edit menu	Changes the size of one box, or moves the layout included in the given area.	
COPY	了 CTRL+C	Edit Menu	Copies the layout included in the given area.	
VIEW ELECTRICA L NODE	CTRL+N	View Menu	Verifies the electrical net connections.	
2D CROSS- SECTION	<u>Q</u>	Simulate Menu	Shows the aspect of the circuit in vertical cross-section.	

Table 3-1: A set of useful editing tools

#### 3.6 Metal-to-poly

As polysilicon is a poor conductor, metal is preferred to interconnect signals and supplies. Consequently, the input connection of the inverter is made with metal. Metal and polysilicon are separated by an oxide which prevents electrical connections. Therefore, a box of metal drawn across a box of polysilicon does not allow an electrical connection (Figure 3-6). To build an electrical connection, a physical contact is needed. The corresponding layer is called "contact". You may insert a metal-to-polysilicon contact in the layout using a direct macro situated in the palette.

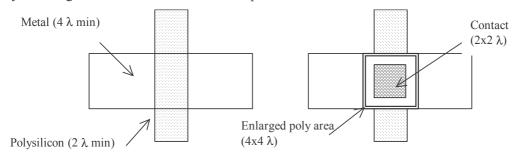


Fig. 3-7 Physical contact between metal and polysilicon

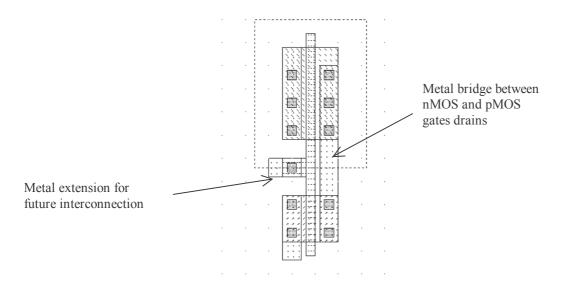


Fig. 3-8 Adding a poly contact, poly and metal bridges to construct the CMOS inverter (InvSteps.MSK)

The *Process Simulator* shows the vertical aspect of the layout, as when fabrication has been completed. This feature is a significant aid to understand the circuit structure and the way layers are stacked on top of each other. A click of the mouse on the left side of the n-channel device layout and the release of the mouse at the right side give the cross-section reported in figure 3-9.

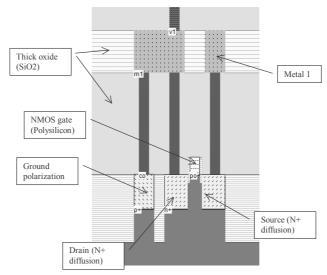


Fig. 3-9 The 2D process section of the inverter circuit near the nMOS device (InvSteps.MSK)

#### 3.7 Supply Connections

The next design step consists in adding supply connections, that is the positive supply VDD and the ground supply VSS. We use the metal2 layer (Second level of metallization) to create horizontal supply connections. Enlarging the supply metal lines reduces the resistance and avoids electrical overstress. The simplest way to build the physical connection is to add a metal/Metal2 contact that may be found in the palette. The connection is created by a plug called "via" between metal2 and metal layers.

The final layout design step consists in adding polarization contacts. These contacts convey the VSS and VDD voltage supply close to the bulk regions of the device. Remember that the n-well region should always be polarized to a high voltage to avoid short-circuit between VDD and VSS. Adding the VDD polarization in the n-well region is a very strict rule.

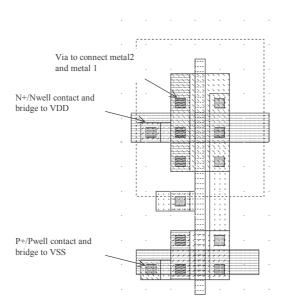


Fig.3-10 Adding polarization contacts

#### 3.8 Process steps to build the Inverter

At that point, it might be interesting to illustrate the steps of fabrication as they would sequence in a foundry. MICROWIND3 includes a 3D process viewer for that purpose. Click **Simulate**  $\rightarrow$  **Process steps in 3D**. The simulation of the CMOS fabrication process is performed, step by step by a click on **Next Step**. On figure 3-11, the picture on the left represents the nMOS device, pMOS device, common polysilicon gate and contacts. The picture on the right represents the same portion of layout with the metal layers stacked on top of the active devices.

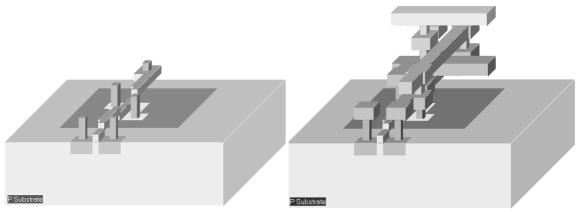


Fig.3-11 The step-by-step fabrication of the Inverter circuit (InvSteps.MSK)

#### 3.9 Inverter Simulation

The inverter simulation is conducted as follows. Firstly, a VDD supply source (1.2V) is fixed to the upper metal2 supply line, and a VSS supply source (0.0V) is fixed to the lower metal2 supply line. The properties are located in the palette menu. Simply click the desired property, and click on the desired location in the layout. Add a clock on the inverter input node (The default node name *clock1* has been changed into *Vin*) and a visible property on the output node *Vout*.

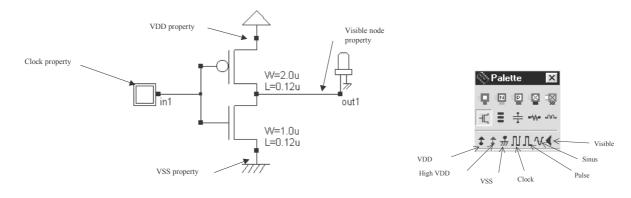


Fig.3-12 Adding simulation properties (InvSteps.MSK)

The command **Simulate**  $\rightarrow$  **Run Simulation** gives access to the analog simulation. Select the simulation mode **Voltage vs. Time**. The analog simulation of the circuit is performed. The time domain waveform, proposed by default, details the evolution of the voltages *in1* and *out1* versus time. This mode is also called transient simulation, as shown in figure 3-13.

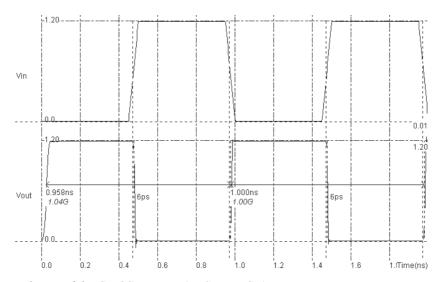


Fig. 3-13 Transient simulation of the CMOS inverter (InvSteps.MSK)

The truth-table is verified as follows. A logic zero corresponds to a zero voltage and a logic 1 to a 1.20V. When the input rises to 1, the output falls to 0, with a 6 Pico-second delay  $(6.10^{-12} \text{ second})$ .

#### 3.10 Added Features in the Full version

Power estimation	Analysis of the inverter consumption, the leakage, etc
3-state inverter	A complete description of the 3-state circuits, with details on the structure,
	behavior.
Inverter sizing effects	Impact of the width and length of MOS devices on the inverter characteristics.
Exercises	Some basic exercises related to the inverter design and its static/dynamic
	performances.

## **4 Basic Gates**

#### 4.1 Introduction

Table 4-1 gives the corresponding symbol to each basic gate as it appears in the logic editor window as well as the logic description. In this description, the symbol & refers to the logical AND, | to Or, ~to INVERT, and ^ to XOR.

Name	Logic symbol	Logic equation	
Inverter	-}>-	Out=~in;	
And	D-	Out=a&b	
Nand	₽	Out=~(a.b);	
OR	<b>Ď</b> -	Out=(a b);	
Nor	♪	Out= $\sim$ (a b);	
Xor	<b>)</b> ))-	Out=a^b;	
XNOR	ĴĎ	Out=~(a^b);	

Table 4-1. The list of basic gates

#### 4.2 The Nand Gate

The truth-table and logic symbol of the NAND gate with 2 inputs are shown below. In DSCH3, select the NAND symbol in the palette, add two buttons and one lamp as shown above. Add interconnects if necessary to link the button and lamps to the cell pins. Verify the logic behavior of the cell.

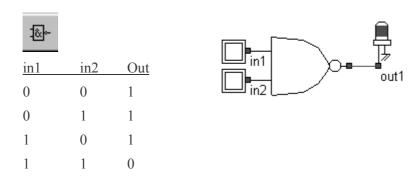


Fig. 4-1. The truth table and symbol of the NAND gate

In CMOS design, the NAND gate consists of two nMOS in series connected to two pMOS in parallel. The schematic diagram of the NAND cell is reported below. The nMOS in series tie the output to the ground for one single combination A=1, B=1.

For the three other combinations, the nMOS path is cut, but a least one pMOS ties the output to the supply VDD. Notice that both nMOS and pMOS devices are used in their best regime: the nMOS devices pass "0", the pMOS pass "1".



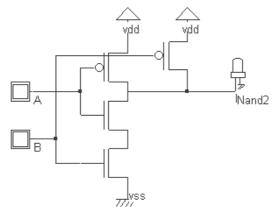


Fig. 4-2. The truth table and schematic diagram of the CMOS NAND gate design (NandCmos.SCH)

You may load the NAND gate design using the command  $File \rightarrow Read \rightarrow NAND.MSK$ . You may also draw the NAND gate manually as for the inverter gate. An alternative solution is to compile directly the NAND gate into layout with MICROWIND3. In this case, complete the following procedure:

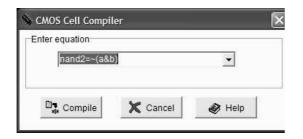

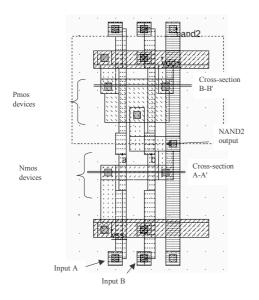

modified.

Click **Compile**. The result is reported above.

The compiler has fixed the position of VDD power supply and the ground VSS. The texts *A*,

In MICROWIND3, click on Compile→Compile

One Line. Select the line corresponding to the

2-input NAND description as shown above. The

input and output names can be by the user

Default clocks are assigned to inputs A and B.

B, and S have also been fixed to the layout.

Fig. 4-3. A NAND cell created by the CMOS compiler.

The cell architecture has been optimized for easy supply and input/output routing. The supply bars have the property to connect naturally to the neighboring cells, so that specific effort for supply routing is not required. The input/output nodes are routed on the top and the bottom of the active parts, with a regular spacing to ease automatic channel routing between cells.

#### 4.3 The AND gate

As can be seen in the schematic diagram and in the compiled results, the AND gate is the sum of a NAND2 gate and an inverter. The layout ready to simulate can be found in the file AND2.MSK. In CMOS, the negative gates (NAND, NOR, INV) are faster and simpler than the non-negative gates (AND, OR, Buffer). The cell delay observed in the figure 4-4 are significantly higher than for the NAND2 gate alone, due to the inverter stage delay.


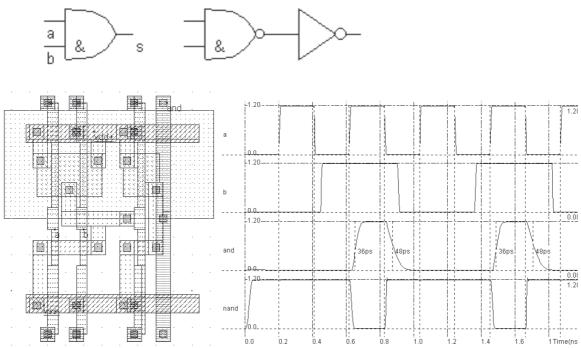


Fig. 4-4: Layout and simulation of the AND gate

#### 4.4 The XOR Gate

The truth-table and the schematic diagram of the CMOS XOR gate are shown above. There exist many possibilities for implementing the XOR function into CMOS. The least efficient design, but the most forward, consists in building the XOR logic circuit from its Boolean equation.

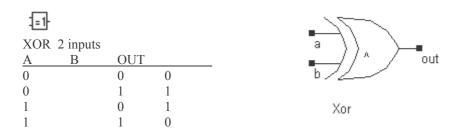

The proposed solution consists of a transmission-gate implementation of the XOR operator. The truth table of the XOR can be read as follow: IF B=0, OUT=A, IF B=1, OUT = Inv(A). The principle of the circuit presented below is to enable the A signal to flow to node NI if B=1 and to enable the Inv(A) signal to flow to node NI if B=0. The node OUT inverts NI, so that we can find the XOR operator. Notice that the nMOS and pMOS devices situated in the middle of the gate serve as pass transistors.

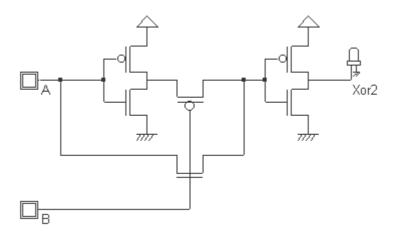


Fig. 4-5. The schematic diagram of the XOR gate (XORCmos.SCH)

You may use DSCH3 to create the cell, generate the Verilog description and compile the resulting text. In MICROWIND3, the Verilog compiler is able to construct the XOR cell as reported in Figure 4-6. You may add a visible property to the intermediate node which serves as an input of the second inverter. See how the signal, called *internal*, is altered by *Vtn* (when the nMOS is ON) and *Vtp* (when the pMOS is ON). Fortunately, the inverter regenerates the signal.

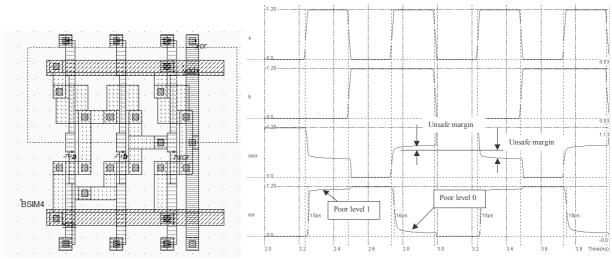


Fig. 4-6. Layout and simulation of the XOR gate (XOR.MSK).

#### 4.5 Multiplexor

Multiplexing means transmitting a large amount of information through a smaller number of connections. A digital multiplexor is a circuit that selects binary information from one of many input logic signals and directs it to a single input line. The main component of the multiplexor is a basic cell called the transmission gate. The transmission gate let a signal flow if *Enable* is asserted.

Sel	In0	In1	f	
0	X	0	0	
0	X	1	1	
1	0	X	0	
1	1 1	v	1	

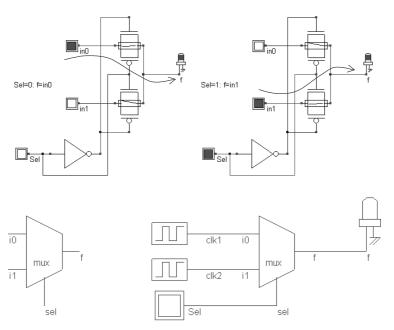


Fig. 4-7. The transmission gate used as a multiplexor (MUX.SCH)

In DSCH3, a transmission gate symbol exists (Figure 4-7). It includes the nMOS, pMOS and inverter cells. Concerning the layout, the channel length is usually the minimum length available in the technology, and the width is set large, in order to reduce the parasitic 'on' resistance of the gate.

#### 4.6 Interconnects

Up to 6 metal layers are available for signal connection and supply purpose. A significant gap exists between the 0.7μm 2-metal layer technology and the 0.12μm technology in terms of interconnect efficiency. Firstly, the contact size is 6 lambda in 0.7μm technology, and only 4 lambda in 0.12μm. This features a significant reduction of device connection to metal and metal2, as shown in figure 4-8. Notice that a MOS device generated using 0.7μm design rules is still compatible with 0.12μm technology. But a MOS device generated using 0.12μm design rules would violate several rules if checked in 0.7μm technology.

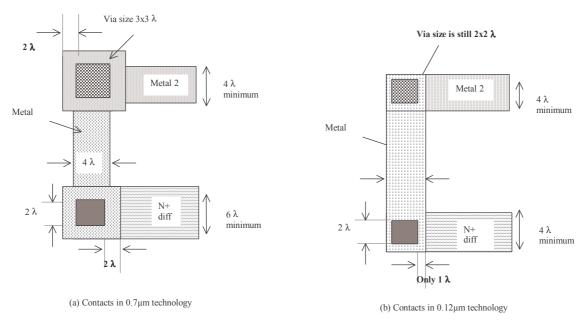


Figure 4-8: Contacts in 0.7μm technology require more area than in 0.12μm technology

Secondly, the stacking of contacts is not allowed in micro technologies. This means that a contact from poly to metal2 requires a significant silicon area as contacts must be drawn in a separate location. In deep-submicron technology (Starting 0.35µm and below), stacked contacts are allowed.

### 4.7 Added Features in the Full version

Basic Gates	Truth-table and schematic diagram of the three-input OR gate. AND 4 inputs. Generalization.
Complex Gates	The technique produces compact cells with higher performances in terms of spacing and speed than conventional logic circuits. The concept of complex gates is illustrated through concrete examples. The logic implementation of complex gates in DSCH3 is also described.
Multiplexor	Description of a $2^n$ input lines and n selection lines whose bit combinations determine which input is selected. Transmission gate implementation of the 8 to 1 multiplexor.
Interconnect layers and RC behavior	Description of the interconnect materials: metal1metal6, supply metals, via, RC effects in interconnects, as well as basic formulations for the resistance, inductance and capacitance. Illustration of the crosstalk effect in interconnects.
Exercises	XOR, complex gates, design considerations.

## 5 Arithmetics

This chapter introduces basic concepts concerning the design of arithmetic gates. The adder circuit is presented, with its corresponding layout created manually and automatically. Then the comparator, multiplier and the arithmetic and logic unit are also discussed. This chapter also includes details on a student project concerning the design of binary-to-decimal addition and display.

#### 5.1 Unsigned Integer format

The two classes of data formats are the integer and real numbers. The integer type is separated into two formats: unsigned format and signed format. The real numbers are also sub-divided into fixed point and floating point descriptions. Each data is coded in 8,16 or 32 bits. We consider here unsigned integers, as described in figure 5-1.

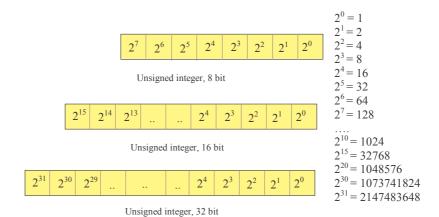
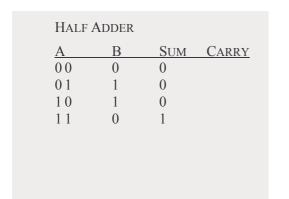


Fig. 6-1. Unsigned integer format

#### 5.2 Half-Adder Gate

The Half-Adder gate truth-table and schematic diagram are shown in Figure 6-2. The SUM function is made with an XOR gate, the Carry function is a simple AND gate.



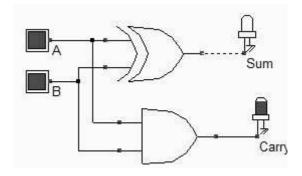


Fig. 5-2. Truth table and schematic diagram of the half-adder gate (HADD.MSK).

FULL	You may create the layout of the half-adder fully by hand in order
CUSTOM	to create a compact design. Use the polysilicon and metal1 layers
LAYOUT	for short connections only, because of the high resistance of these
	materials. Use Poly/Metal, Diff/Metal contact macros situated in the
	upper part of the Palette menu to link the layers together.
LAYOUT	Load the layout design of the Half-Adder using $File \rightarrow Open$ and
LIBRARY	loading the file HADD.MSK.

VERILOG COMPILING. Use DSCH3 to create the schematic diagram of the half-adder. Verify the circuit with buttons and lamps. Save the design under the name hadd.sch using the command File  $\rightarrow$  Save As. Generate the Verilog text by using the command File  $\rightarrow$  Make Verilog File. In MICROWIND3, click on the command Compile  $\rightarrow$  Compile Verilog File. Select the text file hadd.txt.

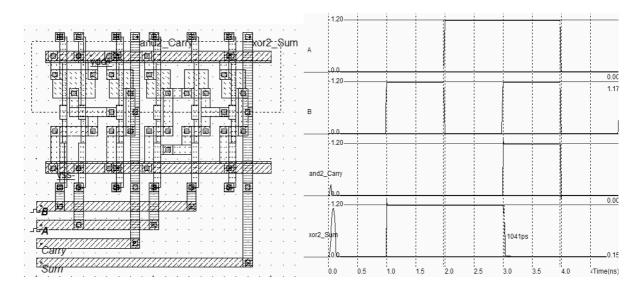


Fig. 5-3: Compiling and simulation of the half-adder gate (Hadd.MSK)

Click **Compile.** When the compiling is complete, the resulting layout appears shown below. The XOR gate is routed on the left and the AND gate is routed on the right. Now, click on **Simulate**  $\rightarrow$ **Start Simulation**. The timing diagrams of figure 5-3 appear and you should verify the truth table of the half-adder. Click on **Close** to return to the editor

#### 5.3 Full-Adder Gate

The truth table and schematic diagram for the full-adder are shown in Figure 5-4. The SUM is made with two XOR gates and the CARRY is a combination of NAND gates, as shown below. The most straightforward implementation of the CARRY cell is AB+BC+AC. The weakness of such a circuit is the use of positive logic gates, leading to multiple stages. A more efficient circuit consists in the same function but with inverting gates.

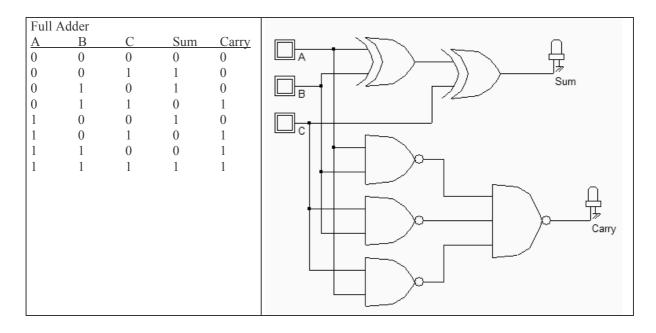


Fig. 5-4 The truth table and schematic diagram of a full-adder(FADD.SCH)

# 5.4 Full-Adder Symbol in DSCH3

When invoking File  $\rightarrow$  Schema to new symbol, the screen of figure 6-5 appears. Simply click **OK**. The symbol of the full-adder is created, with the name *FullAdder.sym* in the current directory. Meanwhile, the Verilog file **fullAdder.txt** is generated, which contents is reported in the left part of the window (Item **Verilog**).

We see that the XOR gates are declared as primitives while the complex gate is declared using the **Assign** command, as a combination of AND (&) and OR (|) operators. If we used AND and OR primitives instead,

the layout compiler would implement the function in a series of AND and OR CMOS gates, loosing the benefits of complex gate approach in terms of cell density and switching speed.

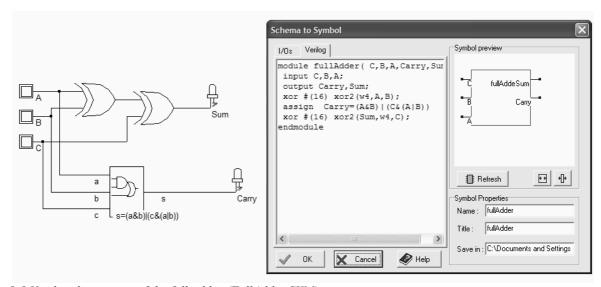


Fig. 5-5 Verilog description of the full adder (FullAdder.SYM)

Use the command  $Insert \rightarrow User Symbol$  to include this symbol into a new circuit. For example, a 4-bit adder is proposed in figure 5-6. The two displays are connected to the identical data, but are configured in different mode: hexadecimal format for the right-most display, and integer mode for the left-most display.

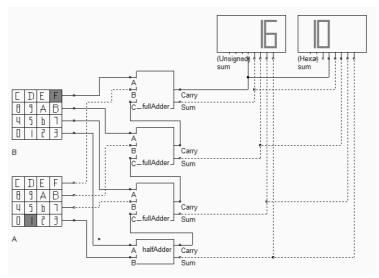


Fig. 5-6. Schematic diagram of the four-bit adder and some examples of results (Add4.SCH).

# 5.5 Comparator

The truth table and the schematic diagram of the comparator are given below. The A=B equality represents an XNOR gate, and A>B, A<B are operators obtained by using inverters and AND gates.

Comparator					
A	В	A>B	A < B	A=B	
0	0	0	0	1	
0	1	0	1	0	
1	0	1	0	0	
1	1	0	0	1	

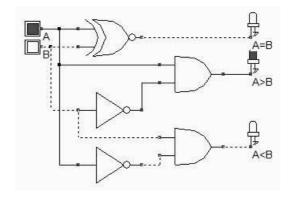


Fig. 5-7 The truth table and schematic diagram of the comparator (COMP.SCH).

Using DSCH3, the logic circuit of the comparator is designed and verified at logic level. Then the conversion into Verilog is invoked (**File**  $\rightarrow$  **Make verilog File**). MICROWIND3 compiles the verilog text into layout. The simulation of the comparator is given in Figure 5-8. The XNOR gate is located at the left side of the design. The inverter and NOR gates are at the right side. After the initialization, A=B rises to 1. The clocks A and B produce the combinations 00,01,10 and 11.

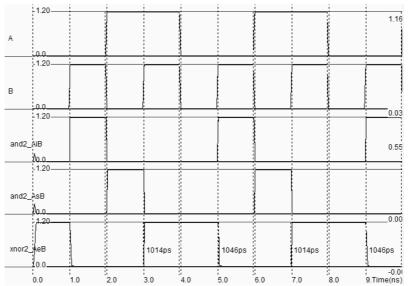


Fig. 5-8. Simulation of a comparator (COMP.MSK).

#### 5.6 Micro-controller Models

In DSCH3, a simplified model of the Intel 8051 and PIC 16f84 micro-controllers are included. The 8051 core includes an arithmetic and logic unit to support a huge set of instructions. You can add the corresponding symbol (8051.SYM) using the command **Insert**  $\rightarrow$  **User Symbol**, as the symbol is not directly accessible through the symbol palette. The symbol consists mainly of general purpose input/output ports (P0,P1,P2 and P3), a *clock* and a *reset* control signals. The basic connection consists of a clock on the *Clock* input and a button on the *Reset* input (Figure 5-9).

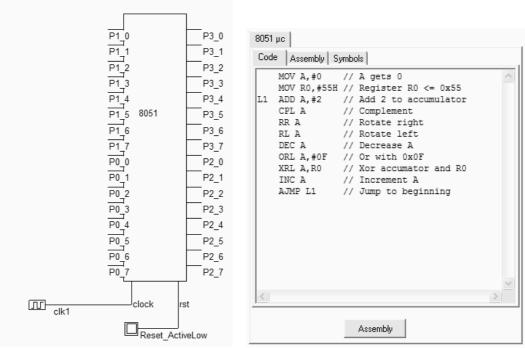


Figure 5-9. The 8051 symbol and its embedded software (8051.SCH)

After a double-click in the symbol, the embedded code appears. That code may be edited and modified (Figure 5-9). When the button **Assembly** is pressed, the assembly text is translated into executable binary format. Once the logic simulation is running, the code is executed as soon as the reset input is deactivated. The value of the program counter, the accumulator A, the current *op\_code* and the registers is displayed. In the chronograms, the accumulator variations versus the time are displayed. It can be noticed that this core operates with one single clock cycle per instruction, except for some instructions such as MOV (Move data) and AJMP (Jump to a specific address).

### 5.7 Added Features in the Full version

Adders	Full layout of the 4-bit adder. Structure of the carry look-ahead adder. Details on	
	the routing and supply strategy.	
Micro-controller	Model of the PIC16f84 micro-controller. Example files are provided, illustrating	
	code execution.	
Arithmetic and Logic	Basic principles of micro-operations on 8 bit format.	
Units		

# 6 Latches

This chapter details the structure and behavior of latch circuits. The RS Latch, the D Latch, the edge-sensitive register and the counter are presented.

#### 6.1 Basic Latch

The basis for storing an elementary binary value is called a latch. The simplest CMOS circuit is made from 2 inverters.

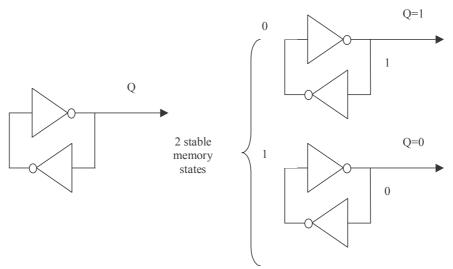


Figure 6-1: Elementary memory cell based on an inverter loop

#### 6.2 RS Latch

The RS Latch, also called Set-Reset Flip Flop (SR FF), transforms a pulse into a continuous state. The RS latch can be made up of two interconnected NOR or NAND gates, inspired from the two chained inverters of figure 6-2. In the case of RS-NOR, the *Reset* and *Set* inputs are active high. The memory state corresponds to Reset=Set=0. The combination Reset=Set=1 should not be used, as it means that Q should be Reset and Set at the same time.

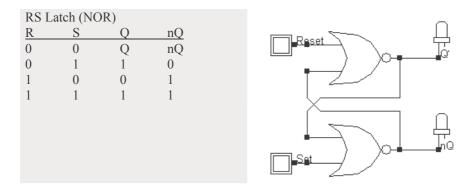


Fig. 6-2. The truth table and schematic diagram of a RS latch made (RSNor.SCH)

FULL CUSTOM LAYOUT. You may create the layout of RS latch manually. The two NOR gates may share the VDD and VSS supply achieving continuous diffusions.

LAYOUT COMPILING. Use DSCH3 to create the schematic diagram of the RS latch. Verify the circuit with buttons and lamps. Save the design under the name RS.sch using the command File  $\rightarrow$  Save As. Generate the Verilog text by using the command File  $\rightarrow$  Make Verilog File. In MICROWIND3, click on the command Compile  $\rightarrow$  Compile Verilog File. Select the text file RS.txt. Click on Compile. When the compiling is complete, the resulting layout appears as shown below. The NOR implementation of the RS gate is completed.

```
module RSNor( Reset, Set, Q, nQ);
input Reset, Set;
output Q, nQ;
nor nor1(Q, nQ, Reset);
nor nor2(nQ, Set, Q);
endmodule
```

With the *Reset* and *Set* signals behaving like clocks, the memory effect is not easy to illustrate. A much better approach consists in declaring pulse signals with an active pulse on *Reset* followed by an active pulse on *Set*. Consequently, you must change the clock property into a pulse property. For NOR implementation, the pulse is positive.

- 1. Select the **Pulse** icon. Click on the node *Reset*.
- 2. Click the brush to clear the existing pulse properties of the pulse.
- 3. Enter the desired sequence, for example 01000, and click **Insert**. A piece-wise-linear sequence is generated in the table, describing the 01000 waveform in an analog way.

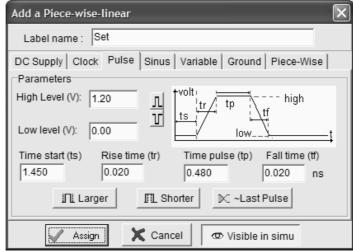


Fig. 6-3. The pulse property used to control the Reset of the latch (RsNor.MSK)

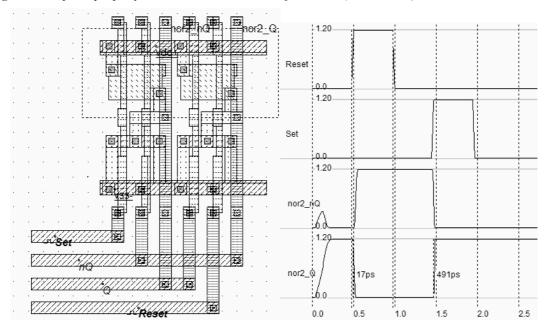


Fig. 6-4. Layout of the RS latch made (RSNor.MSK)

- 4. Repeat the same procedure to change the clock into a pulse for node *Set*. This time the sequence must be 000100 to delay the pulse.
- Click on Simulate →Start Simulation. The timing diagrams of figure 6-5 appear. Click on Close to return to the editor.

In the simulation of Figure 6-4, a positive pulse on Set turns Q to a stable high state. Notice that when Set goes to 0, Q remains at 1, which is called the 'memory' state. When a positive pulse occurs on Reset, Q goes low, nQ goes high. In this type of simulation, the combination Reset=Set=I is not present.

# 6.3 Edge Trigged Latch

This edge-trigged latch is one of the most widely used cells in microelectronics circuit design. The cell structure comprises two master-slave basic memory stages. The most compact implementation of the edge-trigged latch is reported below. The schematic diagram is based on inverters and pass-transistors. On the left side, the two chained inverter are in memory state when the pMOS loop transistor PI is on, that is when Clk=0. The two-chained inverters on the right side act in an opposite way. The reset function is obtained by a direct ground connection of the master and slave memories, using nMOS devices.

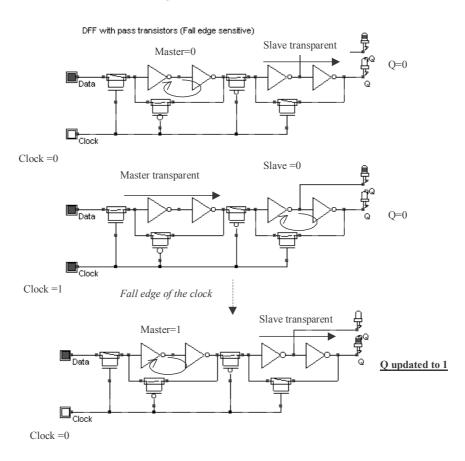


Figure 6-5 The edge-trigged latch and its logic simulation (Dreg.MSK)

In figure 6-5, clock is high, the master latch is updated to a new value of the input D. The slave latch produces to the output Q the previous value of D. When clock goes down, the master latch turns to memory state. The slave circuit is updated. The change of the clock from 1 to 0 is the active edge of the clock. This type of latch is a negative edge flip flop.

Use the Verilog compiler to generate the edge-trigged latch, using the following text (dreg.txt), or by creating a schematic diagram including the "D" register symbol, in the symbol palette of DSCH3. As can be seen, the register is built up from one single call to the primitive dreg. For simulation:

- *Reset* is active on a level 1. *Reset* is activated twice, at the beginning and later, using a piece-wise linear description included in the pulse property.
- *Clk* is a clock with 10ns at 0 and 10ns at 1.
- *D* is the data chosen here not synchronized with *Clk*, in order to observe various behaviors of the register.

To compile the DREG file, use the command Compile→Compile Verilog Text. The corresponding layout is reported below. The piece-wise-linear data is transferred to the text "rst" automatically.

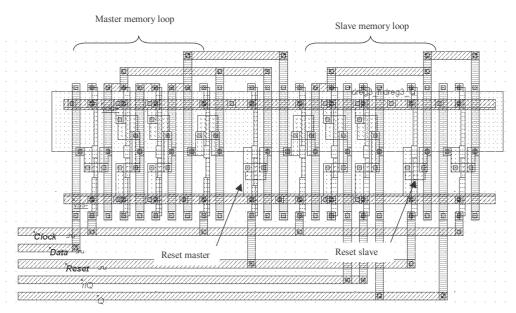


Fig. 6-6: Compiled version of the Edge-trigged D Flip Flop (DregCompile.MSK)

For testing the Dreg, the *Reset* signal is activated twice, at the beginning and later, using a piece-wise linear property. The *Clock* signal has a 2ns period. *D* is the data chosen here not synchronized with *Clock*, in order to observe various behaviors of the register.

The simulation of the edge-trigged D-register is reported in figure 6-7. The signals Q and nQ always act in opposite. When *Reset* is asserted, the output Q is 0, nQ is 1. When *Reset* is not active, Q takes the value of D at a fall edge of the clock. For all other cases, Q and nQ remain in memory state. The latch is thus sensitive to the fall edge of the clock.

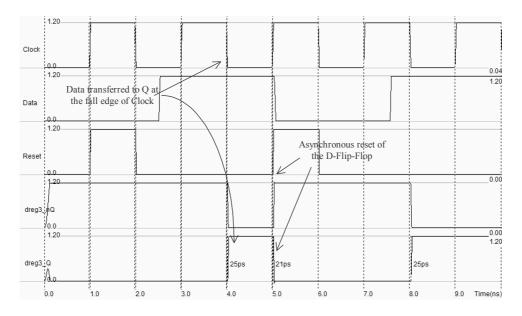


Fig. 6-7 Simulation of the DREG cell (DregCompile.MSK)

# 6.4 Added Features in the Full version

Latches	The truth table and schematic diagram of the static D latch, also called
	Static D-Flip-Flop are described. The main characteristics of the latch
	switching are presented.
Counters	The one-bit counter is able to produce a signal featuring half the
	frequency of a clock. The implementation is detailed. Up and down
	counters are also described.
Registers	Shift registers, serial registers are described.

# 7 Memory Circuits

### 7.1 Main structure

Figure 8-1 shows a typical memory organization layout. It consists of a memory array, a row decoder, a column decoder and a read/write circuit. The row decoder selects one row from  $2^N$ , thanks to a N-bit row selection address. The column decoder selects one row from  $2^M$ , thanks to a M-bit column selection address. The memory array is based on  $2^N$  rows and  $2^M$  columns of a repeated pattern, the basic memory cell. A typical value for N and M is 10, leading to 1024 rows and 1024 columns, which corresponds to 1048576 elementary memory cells (1Mega-bit).

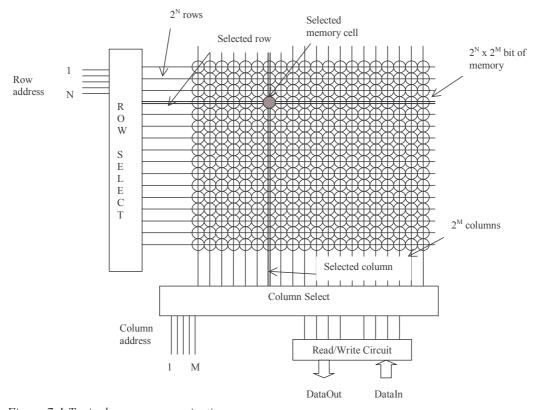


Figure 7-1 Typical memory organization

# 7.2 RAM Memory

The basic cell for static memory design is based on 6 transistors, with two pass gates instead of one. The corresponding schematic diagram is given in Figure 7-2. The circuit consists of the 2

cross-coupled inverters, but uses two pass transistors instead of one. The cell has been designed to be duplicated in X and Y in order to create a large array of cells. Usual sizes for Megabit SRAM memories are 256 column x 256 rows or higher. A modest arrangement of 4x4 RAM cells is proposed in figure 7-2. The selection lines *WL* concern all the cells of one row. The bit lines *BL* and ~*BL* concern all the cells of one column.

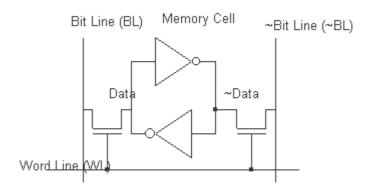


Figure 7-2: The layout of the 6 transistor static memory cell (RAM6T.SCH)

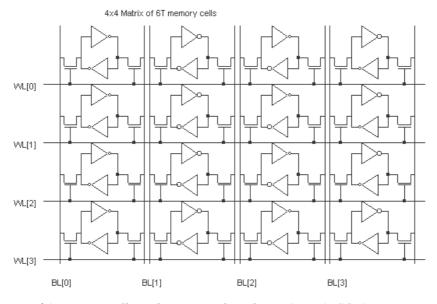


Fig. 7-3 An array of 6T memory cells, with 4 rows and 4 columns (RAM6T.SCH)

The RAM layout is given in Figure 7-4. The BL and  $\sim BL$  signals are made with metal2 and cross the cell from top to bottom. The supply lines are horizontal, made with metal3. This allows easy matrix-style duplication of the RAM cell.

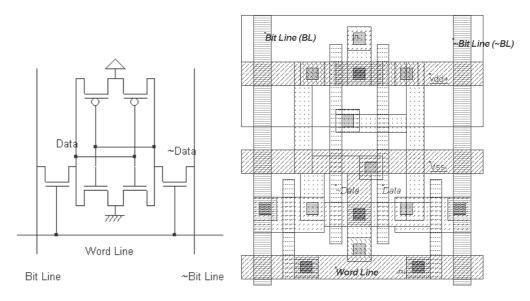


Fig. 7-4. The layout of the static RAM cell (RAM6T.MSK).

WRITE CYCLE. Values 1 or 0 must be placed on *Bit Line*, and the data inverted value on ~*Bit Line*. Then the selection *Word Line* goes to 1. The two-inverter latch takes the *Bit Line* value. When the selection *Word Line* returns to 0, the RAM is in a memory state.

READ CYCLE. The selection signal *Word Line* must be asserted, but no information should be imposed on the bit lines. In that case, the stored data value propagates to *Bit Line*, and its inverted value ~*Data* propagates to ~*Bit Line*.

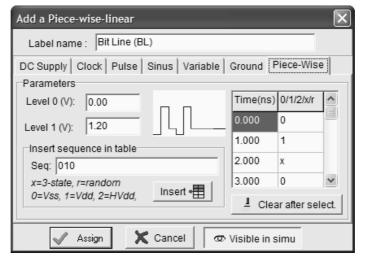


Fig. 7-5 The bit Line pulse used the "x" floating state to enable the reading of the memory cell (RamStatic6T.MSK)

SIMULATION. The simulation parameters correspond to the read and write cycle in the RAM. The proposed simulation steps consist in writing a 0, a 1, and then reading the 1. In a second phase, we write a 1, a 0, and read the 0. The *Bit Line* and ~*Bit Line* signals are controlled by pulses (Figure 7-5). The floating state is obtained by inserting the letter "x" instead of 1 or 0 in the description of the signal.

The simulation of the RAM cell is proposed in figure 7-6. At time 0.0, *Data* reaches an unpredictable value of 1, after an unstable period. Meanwhile, ~*Data* reaches 0. At time 0.5ns, the memory cell is selected by a 1 on *Word Line*. As the *Bit Line* information is 0, the memory cell information *Data* goes down to 0. At time 1.5ns, the memory cell is selected again. As the *Bit Line* information is now 1, the memory cell information *Data* goes to 1. During the read cycle, in which *Bit Line* and ~*Bit Line* signals are floating, the memory sets these wires respectively to 1 and 0, corresponding to the stored values.

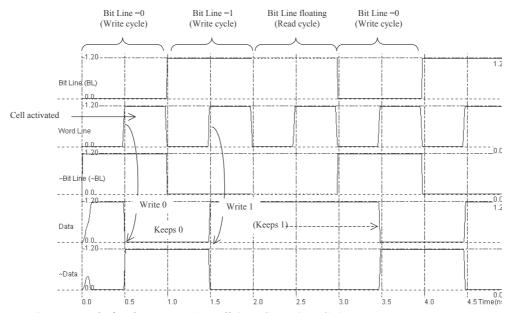


Fig. 7-6. Write cycle for the static RAM cell (RamStatic6T.MSK).

#### 7.3 Selection Circuits

The row selection circuit decodes the row address and activates one single row. This row is shared by all word line signals of the row. The row selection circuit is based on a multiplexor circuit. One line is asserted while all the other lines are at zero.

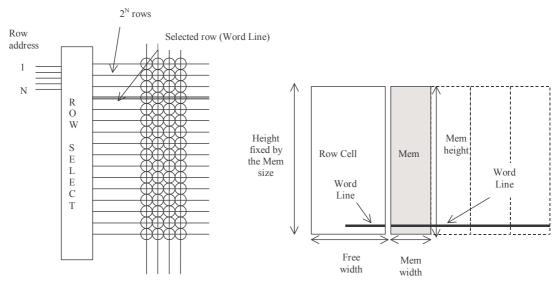


Fig. 7-7 The row selection circuit

In the row selection circuit for the 16x4 array, we simply need to decode a two-bit address. Using AND gates is one simple solution. In the case of a very large number of address lines, the decoder is split into sub-decoders, which handle a reduced number of address lines.

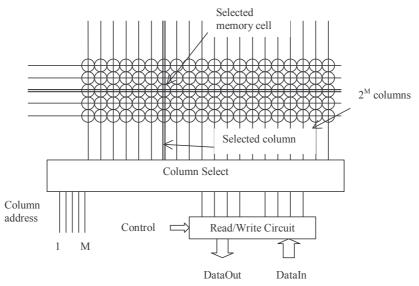


Figure 7-8. The column selection circuit principles

The column decoder selects a particular column in the memory array to read the contents of the selected memory cell (Figure 7-8) or to modify its contents. The column selector is based on the same principles as those of the row decoder. The major modification is that the data flows both ways, that is either from the memory cell to the *DataOut* signal (Read cycle), or from the *DataIn* signal to the cell (Write cycle).

# 7.4 A Complete 64 bit SRAM

The 64 bit SRAM memory interface is shown in figure 7-9. The 64 bits of memory are organized in words of 4 bits, meaning that *DataIn* and *DataOut* have a 4 bit width. Each data *D0..D15* occupies 4 contiguous memory cells in the array. Four address lines are necessary to decode one address among 16. The memory structure requires two address lines *A0* and *A1* for the word lines *WL[0]..WL[3]* and two address lines *A2* and *A3* for the bit line selection. The final layout of the 64 bit static RAM is proposed in Figure 7-10.

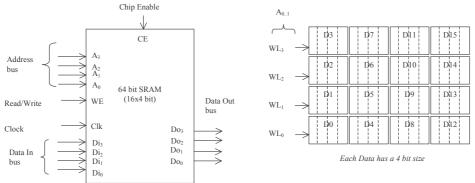


Figure 7-9. The architecture of the 64 bit RAM (RAM64.MSK)

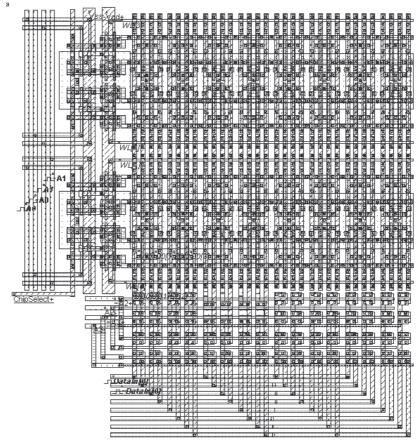


Figure 7-10. The complete RAM layout (RAM64.MSK)

# 7.5 Dynamic RAM Memory

The dynamic RAM memory has only one transistor, in order to improve the memory matrix density by almost one order of magnitude. The storage element is no longer the stable inverter loop, as for the static RAM, but only a capacitor Cs, also called the storage capacitor. The write and hold operation for a "1" is shown in figure 7-11. The data is set on the bit line, the word line is then activated and Cs is charged. As the pass transistor is n-type, the analog value reaches VDD-Vt. When WL is inactive, the storage capacitor Cs holds the "1".

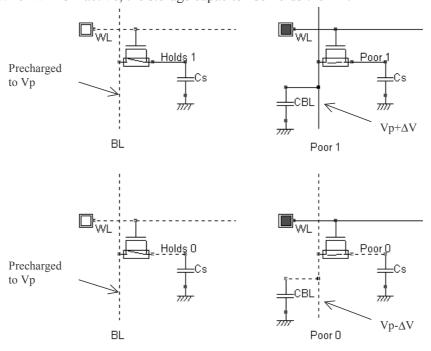


Figure 7-11: Simulation of the Read cycle for the 1 transistor dynamic RAM cell (RAM1T.SCH)

The reading cycle is destructive for the stored information. Suppose that Cs holds a 1. The bit line is precharged to a voltage Vp (Usually around VDD/2). When the word line is active, a communication is established between the bit line, loaded by capacitor CBL, and the memory, loaded by capacitor CS. The charges are shared between these nodes, and the result is a small increase of the voltage Vp by  $\Delta V$ , thanks to the injection of some charges from the memory.

The cross-section of the DRAM capacitor is given in figure 7-12. The bit line is routed in metal2, and is connected to the cell through a metal1 and diffusion contact. The word line is the polysilicon gate. On the right side, the storage capacitor is a sandwich of conductor material connected to the diffusion, a thin oxide (SiO2 in this case) and a second conductor that fills the capacitor and is connected to ground by a contact to the first level of metal. The capacitance is around 20fF in this design. Higher capacitance values may be obtained using larger option layer areas, at the price of a lower cell density.

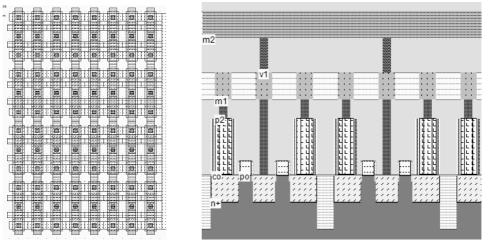


Figure 7-12: The stacked capacitor cell compared to the diffusion capacitor cell (DramEdram.MSK)

#### 7.6 EEPROM

The basic element of an EEPROM (Electrically Erasable PROM) memory is the floating-gate transistor. The concept was introduced several years ago for the EPROM (Erasable PROM). It is based on the possibility of trapping electrons in an isolated polysilicon layer placed between the channel and the controlled gate. The charges have a direct impact on the threshold voltage of a double-gate device. When there is no charge in the floating gate (Figure 7-13, upper part), the threshold voltage is low, meaning that a significant current may flow between the source and the drain, if a high voltage is applied on the gate. However, the channel is small as compared to a regular MOS, and the Ion current is 3 to 5 times lower, for the same channel size.

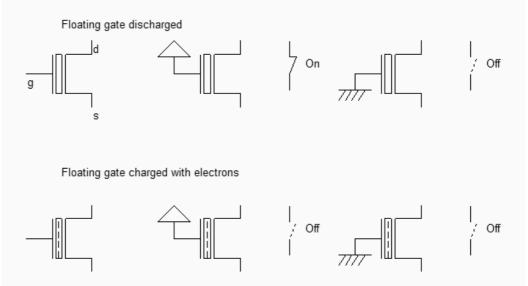


Fig. 7-13: The two states of the double gate MOS (EepromExplain.SCH)

When charges are trapped in the floating polysilicon layer (Figure 7-14, left), the threshold voltage is high, almost no current flows through the device, independently of the gate value. As

a matter of fact, the electrons trapped in the floating gate prevent the creation of the channel by repealing channel electrons. Data retention is a key feature of EEPROM, as it must be guaranteed for a wide range of temperatures and operating conditions. Optimum electrical properties of the ultra thin gate oxide and inter-gate oxide are critical for data retention. The typical data retention of an EEPROM is 10 years.

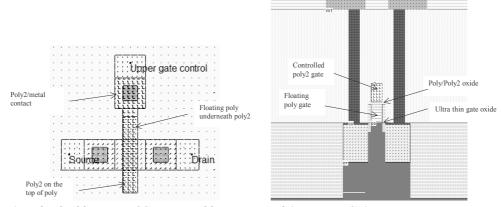


Fig. 7-14: The double gate MOS generated by Microwind (Eeprom.MSK)

The double gate MOS layout is shown in figure 7-14. The structure is very similar to the nchannel MOS device, except for the supplementary poly2 layer on top of the polysilicon. The lower polysilicon is unconnected, resulting in a floating node. Only the poly2 upper gate is connected to a metal layer through a poly2/metal contact situated at the top. The cross-section of figure 7-14 right reveals the stacked *poly/poly2* structure, with a thin oxide in between.

#### 7.7 **Flash Memories**

Flash memories are a variation of EEPROM memories. Flash arrays can be programmed electrically bit-by-bit but can only be erased by blocks. Flash memories are based on a single double poly MOS device, without any selection transistor (Figure 7-15). The immediate consequence is a more simple design, which leads to a more compact memory array and more dense structures. Flash memories are commonly used in micro-controllers for the storage of application code, which gives the advantage of non volatile memories and the possibility of reconfiguring and updating the code many times.

55 05/04/05

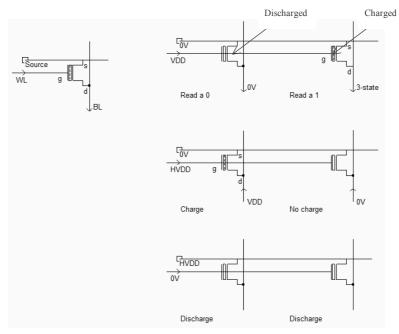


Fig. 7-15. The flash memory point and the principles for charge/discharge (FlashMemory.SCH)

The Flash memory point usually has a "T-shape", due to an increased size of the source for optimum tunneling effect. The horizontal polysilicon2 is the bit line, the vertical metal2 is the word line which links all drain regions together. The horizontal metal line links all sources together (7-16).

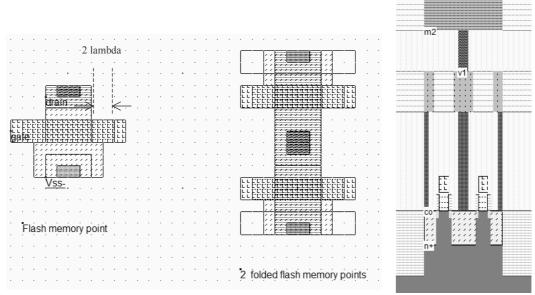


Fig. 7-16. The flash memory point and the associated cross-section (Flash8x8.MSK)

# 7.8 Memory Interface

All inputs and outputs of the RAM are synchronized to the rise edge of the clock, and more than one word can be read or written in sequence. The typical chronograms of a synchronous RAM are shown in figure 7-17. The active edge of the clock is usually the rise edge. One read cycle includes 3 active clock edges in the example shown in figure 7-17. The row address selection is active at the first rise edge, followed by the column address selection. The data is valid at the third fall edge of the system clock.

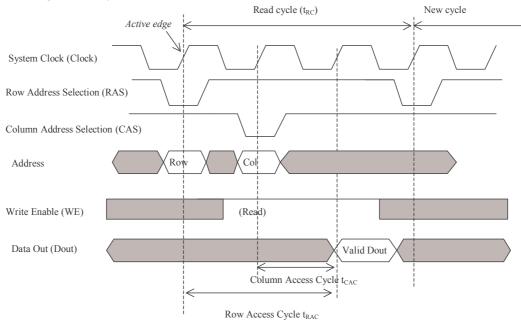


Figure 7-17: Synchronous RAM timing diagram

### 7.9 Added Features in the Full version

World of memories	Semiconductor memories are vital components in modern integrated
	circuits. The introductory part details the main families of memories.
Memories	Compact memory cell obtained by sharing all possible contacts: the
	supply contact, the ground contact and the bit line contacts.
	Detailed information about ROM memories.
Double-gate MOS	The programming of a double-poly transistor involves the transfer of
	electrons from the source to the floating gate through the thin oxide.
	Details are provided on the programming and charge removal.
Ferroelectric RAM	FRAM memories are the most advanced of the Flash memory
	challengers. The FRAM memory point is based on a two-state
	ferroelectric insulator. A complete description and simulation of the

# 7. Memory circuits

	FRAM is proposed.
Interfacing	Some information is provided about the Double data Rate memories,
	which involve both the rise and fall edge of the clock.
Exercises	Leakage currents, 4x4 EEPROM memory

# 8 Analog Cells

This chapter deals with analog basic cells, from the simple resistor and capacitor to the operational amplifier.

#### 8.1 Resistor

An area-efficient resistor available in CMOS process consists of a strip of polysilicon. The resistance between s1 and s2 is usually counted in a very convenient unit called "ohm per square", noted  $\Omega$ /. The default value polysilicon resistance per square is  $10\Omega$ , which is quite small, but rises to  $200\Omega$  if the salicide material is removed (Figure 8-1).

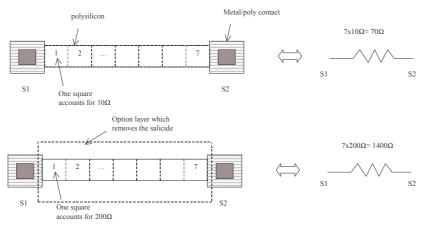


Figure 8-1: The polysilicon resistance with unsalicide option

In the cross-section shown in figure 8-2, the salicide material deposited on the upper interface between the polysilicon layer and the oxide creates a metal path for current that reduces the resistance dramatically. Notice the shallow trench isolation and surrounding oxide that isolate the resistor from the substrate and other conductors, enabling very high voltage biasing (up to 100V). However, the oxide is a poor thermal conductor which limits the power dissipation of the polysilicon resistor.

The salicide is part of the default process, and is present at the surface of all polysilicon areas. However, it can be removed thank to an option layer programmed by a double click in the option layer box, and a tick at "Remove Salicide". In the example shown in figure 8-3, the default resistance is  $76\Omega$ , and the unsalicide resistance rises to  $760\Omega$ .

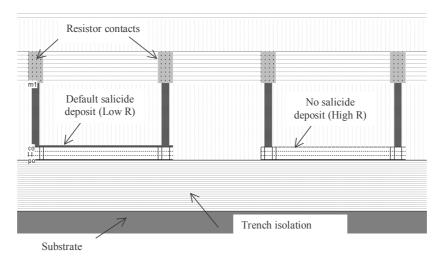


Figure 8-2: Removing the salicide material to increase the sheet resistance (ResPoly.MSK)

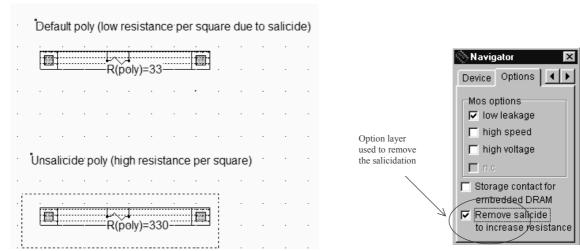


Figure 8-3: Removing the salicide material thanks to an option layer

Other resistors consist of N+ or P+ diffusions. An interesting feature of diffusion resistor is the ability to combine a significant resistance value and a diode effect. The diffusion resistor is used in input/output protection devices.

The resistor value varies because of lithography and process variations. In the case of the poly resistance, the width, height and doping may vary (Figure 8-4 left). Polysilicon resistors are rarely designed with the minimum 2 lambda width, but rather 4 or 6 lambda, so that the impact of the width variations is smaller. But the equivalent resistance is smaller, meaning less silicon efficiency. A variation  $\Delta W$  of 0.2 $\lambda$  on both edges results in a 20% variation of the resistance on a 2 $\lambda$  width resistor, but only a 10% variation for a larger resistor designed with a width of 4 $\lambda$ .

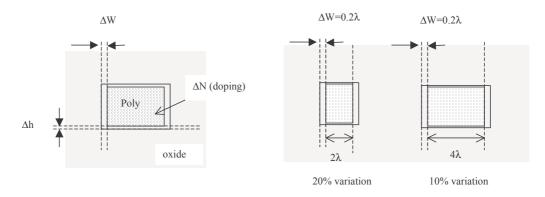


Figure 8-4: Resistance variations with the process

# 8.2 Capacitor

Capacitors are used in analog design to build filters, compensation, decoupling, etc.. Ideally, the value of the capacitor should not depend on the bias conditions, so that the filtering effect would be situated at constant frequencies.

Diodes in reverse mode exhibit a capacitor behavior, however, the capacitance value is strongly dependent on the bias conditions. A simple N+ diffusion on a P-substrate is a NP diode, which may be considered as a capacitor as long as the N+ region is polarized at a voltage higher than the P-substrate voltage which is usually the case as the substrate is grounded (0V). In  $0.12\mu m$ , the capacitance is around  $300aF/\mu m2$  (1 atto-Farad is equal to  $10^{-18}$  Farad).

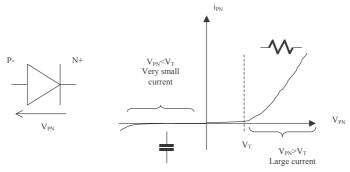


Figure 8-5: The diffusion over substrate as a non-linear capacitor (Capa.MSK)

The typical variation of the capacitance with the diffusion voltage  $V_N$  is given in figure 8-6. The capacitance per  $\mu$ m2 provided in the electrical rules is a rude approximation of the capacitance variation. A large voltage difference between  $V_N$  and the substrate result in a thick zone with empty charges, which corresponds to a thick insulator, and consequently to a small capacitance. When  $V_N$  is lowered, the zone with empty charges is reduced, and the capacitance increases. If  $V_N$  goes lower than the substrate voltage, the diode starts to conduct.

### 8. Analog Cells

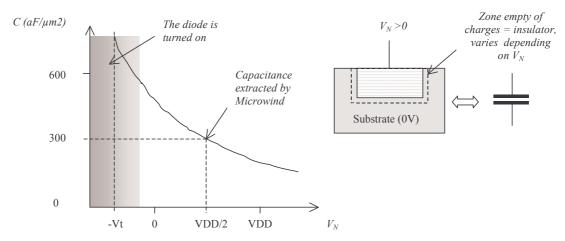


Figure 8-6 The diffusion capacitance varies with the polarization voltage

# 8.3 Poly-Poly2 Capacitor

Most deep-submicron CMOS processes incorporate a second polysilicon layer (poly2) to build floating gate devices for EEPROM. An oxide thickness around 20nm is placed between the poly and poly2 materials, which induces a plate capacitor around  $1.7 \text{fF/}\mu\text{m}^2$ . In MICROWIND3, the command "Edit  $\rightarrow$  Generate  $\rightarrow$  Capacitor" gives access to a specific menu for generating capacitor (Figure 9-9). The parameter in the design rules used to configure the poly-poly2 capacitor is CP2PO.

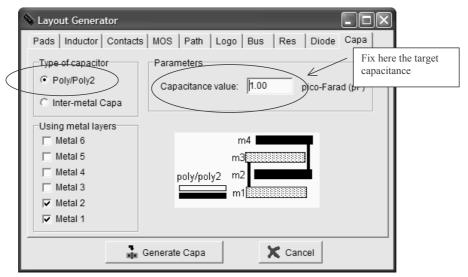


Figure 8-7: The generator menu handles the design of poly/poly2 capacitor and inter-metal capacitors

The poly/poly2 capacitor simply consists of a sheet of polysilicon and a sheet of poly2, separated by a specific dielectric oxide which is 20nm in the case of the default CMOS 0.12µm process.

#### 8.4 Diode-connected MOS

The schematic diagram of the diode-connected MOS is proposed in figure 8-8. This circuit features a high resistance within a small silicon area. The key idea is to build a permanent connection between the drain and the gate. Most of the time, the source is connected to ground in the case of n-channel MOS, and to VDD in the case of p-channel MOS.

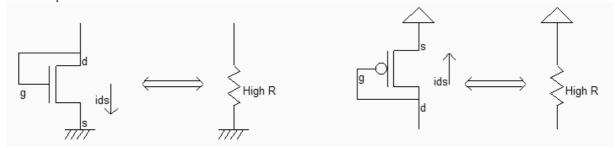


Figure 8-8: Schematic diagram of the MOS connected as a diode (MosRes.SCH)

To create the diode-connected MOS, the easiest way is to use the MOS generator. Enter a large length and a small width, for example  $W=0.24\mu m$  and  $L=2.4\mu m$ . This sizing corresponds to a long channel, featuring a very high equivalent resistance. Add a poly/metal contact and connect the gate to one diffusion. Add a clock on that node. Add a VSS property to the other diffusion. The layout result is shown in figure 8-9.

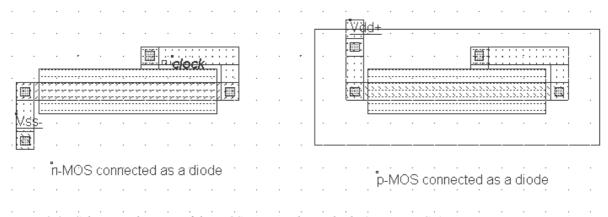


Figure 8-9: Schematic diagram of the MOS connected as a diode (ResMos.MSK)

Now, click **Simulation on Layout.** In a small window, the MOS characteristics are drawn, with the functional point drawn as a color dot (Figure 8-10). It can be seen that the I/V characteristics correspond to a diode. The resistance is the invert value of the slope in the Id/Vd characteristics. For Vds larger than 0.6V, the resistance is almost constant. As the current Ids increases of  $10\mu A$  in 0.4V, the resistance can be estimated around  $40K\Omega$ . A more precise evaluation is performed by MICROWIND3 if you draw the slope manually. At the bottom of the screen, the equivalent resistance appears, together with the voltage and current.

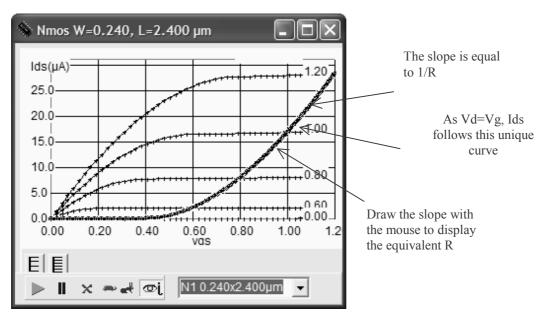


Figure 8-10: Using the Simulation on Layout to follow the characteristics of the diode-connected MOS (ResMos.MSK)

In summary, the MOS connected as a diode is a capacitance for Vgs < Vt, a high resistance when Vgs is higher than the threshold voltage Vt. The resistance obtained using such a circuit can easily reach  $100 \text{K}\Omega$  in a very small silicon area.

# 8.5 Voltage Reference

The voltage reference is usually derived from a voltage divider made from resistance. The output voltage *Vref* is defined by equation 8-1.

$$V_{ref} = \frac{R_N}{R_N + R_P} V_{DD}$$
 (Eq. 8-1)

with

V<sub>DD</sub>=power supply voltage (1.2V in 0.12μm)

R<sub>N</sub>=equivalent resistance of the n-channel MOS (ohm)

R<sub>P</sub>=equivalent resistance of the p-channel MOS (ohm)

Notice that two n-MOS or two p-MOS properly connected feature the same function. P-MOS devices offer higher resistance due to lower mobility, compared to n-channel MOS. Four voltage reference designs are shown in figure 8-11. The most common design uses one p-channel MOS and one n-channel MOS connected as diodes.

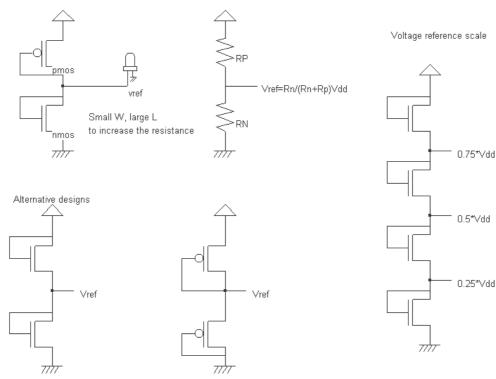


Figure 8-11: Voltage reference using PMOS and NMOS devices as large resistance

The alternative solutions consist in using two n-channel MOS devices only (Left lower part of the figure), or their opposite built from p-channel devices only. Not only one reference voltage may be created, but also three, as shown in the right part of the figure, which use four n-channel MOS devices connected as diodes.

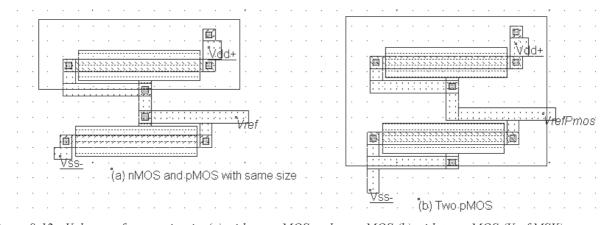


Figure 8-12: Voltage reference circuits (a) with one nMOS and one pMOS (b) with two pMOS (Vref.MSK)

# 8.6 Amplifier

The goal of the amplifier is to multiply by a significant factor the amplitude of a sinusoidal voltage input *Vin*, and deliver the amplified sinusoidal output *Vout* on a load. The single stage amplifier may consist of a MOS device (we choose here a n-channel MOS) and a load. The load can be a resistance or an inductance. In the circuit, we use a resistance made with a p-channel MOS device with gate and drain connected (Figure 8-13). The pMOS which replaces the passive load is called an active resistance.

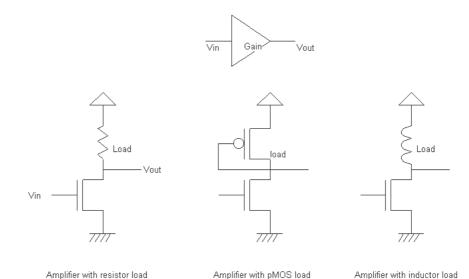


Figure 8-13: Single stage amplifier design with MOS devices (AmpliSingle.SCH)

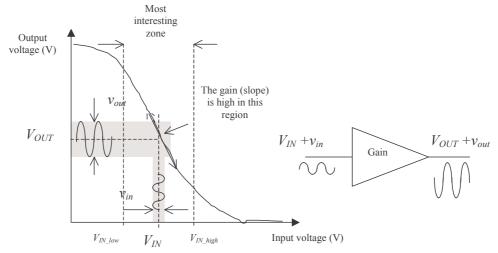


Figure 8-14: The amplifier has a high gain in a certain input range, where a small input signal vin is amplified to a large signal vout.

The single stage amplifier characteristics between Vin and Vout have a general shape shown in figure 8-14. The most interesting zone corresponds to the input voltage range where the transfer function has a linear shape, that is between  $VIN_low$  and  $VIN_high$ . Outside this voltage range, the behavior of the circuit does not correspond anymore to an amplifier. If we add a small sinusoidal input  $v_{in}$  to  $V_{IN}$ , a small variation of current  $i_{ds}$  is added to the static current  $I_{DS}$ , which induces a variation  $v_{out}$  of the output voltage  $V_{OUT}$ . The link between the variation of current  $i_{ds}$  and the variation of voltage  $v_{in}$  can be approximated by equation 9-2.

$$i_{ds} = g_m v_{gs} \tag{Equ. 8-2}$$

In figure 8-15, a nMOS device with large width and minimum length is connected to a high resistance pMOS load. A 50mV sinusoidal input (vin) is superimposed to the static offset 0.6V ( $V_{IN}$ ). What we expect is a 500mV sinusoidal wave (vout) with a certain DC offset ( $V_{OUT}$ ).

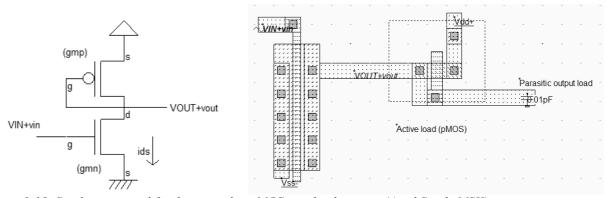


Figure 8-15: Single stage amplifier layout with a pMOS as a load resistor (AmpliSingle.MSK)

What we need now is to find the characteristics Vout/Vin in order to tune the offset voltage  $V_{IN}$ . In the simulation window, click **Voltage vs voltage**" and **More**, to compute the static response of the amplifier (Figure 8-16). The range of voltage input that exhibits a correct gain appears clearly. For  $V_{DS}$  higher than 0.25V and lower than 0.4V, the output gain is around 3. Therefore, an optimum offset value is 0.35V. Change the parameter **Offset** of the input sinusoidal wave to place the input voltage in the correct polarization. A gain of 3.5 is observed when the offset  $V_{IN}$  is 0.35V.

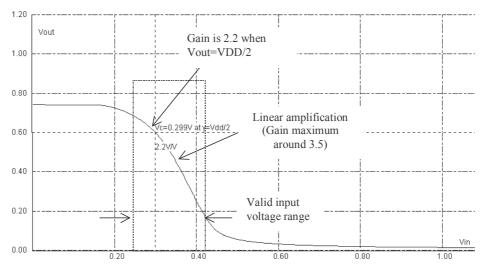


Figure 8-16: Single stage amplifier static response showing the valid input voltage range.

# 8.7 Simple Differential Amplifier

The goal of the differential amplifier is to compare two analog signals, and to amplify their difference. The differential amplifier formulation is reported below (Equation 8-3). Usually, the gain *K* is high, ranging from 10 to 1000. The consequence is that the differential amplifier output saturates very rapidly, because of the supply voltage limits.

$$Vout = K(Vp - Vm)$$
 (Equ. 8-3)

The schematic diagram of a basic differential amplifier is proposed in figure 9-26. An nMOS device has been inserted between the differential pair and the ground to improve the gain. The gate voltage *Vbias* controls the amount of current that can flow on the two branches. This pass transistor permits the differential pair to operate at lower *Vds*, which means better analog performances and less saturation effects.

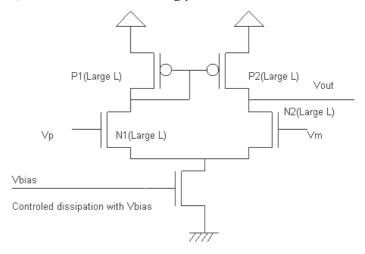


Figure 8-17: An improved differential amplifier (AmpliDiff.SCH)

The best way to measure the input range is to connect the differential amplifier as a follower, that is *Vout* connect to *Vm*. The *Vm* property is simply removed, and a contact poly/metal is added at the appropriate place to build the bridge between *Vout* and *Vm*. A slow ramp is applied on the input *Vin* and the result is observed on the output. We use again the « Voltage vs. Voltage » to draw the static characteristics of the follower. The BSIM4 model is forced for simulation by a label "BSIM4" on the layout.

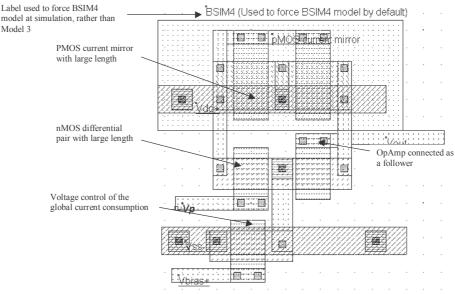


Figure 8-18: The layout corresponding to the improved differential amplifier (AmpliDiffLargeLength.MSK)

As can be seen from the resulting simulation reported in figure 8-19, a low *Vbias* features a larger voltage range, specifically at high voltage values. The follower works properly starting 0.4V, independently of the *Vbias* value. A high *Vbias* leads to a slightly faster response, but reduces the input range and consumes more power as the associated nMOS transistor drives an important current. The voltage *Vbias* is often fixed to a value a little higher than the threshold voltage *Vtn*. This corresponds to a good compromise between switching speed and input range.

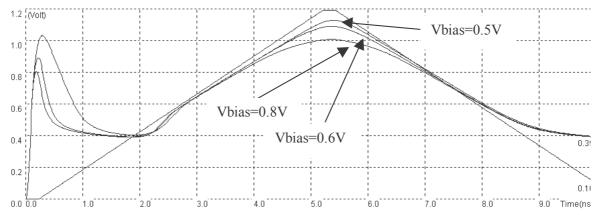


Figure 8-19: Effect of Vbias on the differential amplifier performance (AmpliDiffVbias.MSK)

### 8.8 Added Features in the Full version

Amplifiers	The push-pull amplifier is built using a voltage comparator and a power output stage. Its schematic diagram and performances are detailed.
Improved layout techniques	A set of design techniques can improve the current mirror behavior: MOS orientation, channel length modulation effects, dummy devices, MOS matching.
Resistor	There exist efficient techniques to reduce the resistance variations within the same chip. Layout techniques which minimize the effects of process variations are presented.
Capacitor	The multiplication of metal layers create lateral and vertical capacitance effects of rising importance. The spared silicon area in upper metal layers may be used for small size capacitance. The implementation of these capacitor is described.
Current Mirror	The current mirror is one of the most useful basic blocs in analog design. It is primarily used to copy currents. The principles and behavior of current mirrors are given in the full version. The cascode current mirror is also presented, which has several advantages over the simple current mirror.

# 9 Radio Frequency Circuits

# 9.1 On-Chip Inductors

Inductors are commonly used for filtering, amplifying, or for creating resonant circuits used in radio-frequency applications. The inductance symbol in DSCH3 and MICROWIND3 is as follows (Figure 9-1).

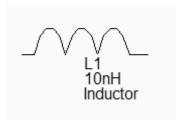


Figure 9-1. The inductance symbol

The quality factor Q is a very important metric to quantify the resonance effect. A high quality factor Q means low parasitic effects compared to the inductance. The formulation of the quality factor is not as easy as it could appear. An extensive discussion about the formulation of Q depending on the coil model is given in [Lee]. We consider the coil as a serial inductor L1, a parasitic serial resistor R1, and two parasitic capacitors C1 and C2 to the ground, as shown in figure 10-2. Consequently, the Q factor is approximately given by equation 9-1.

$$Q = \frac{\sqrt{\frac{L1}{(C1 + C2)}}}{R1}$$
(Equ. 9-1)

$$A = \frac{12nH}{C1}$$

$$C = \frac{10pF}{C1}$$

$$C = \frac{10pF}{C2}$$

Figure 9-2. The equivalent model of the 12nH default coil and the approximation of the quality factor Q

The inductor can be generated automatically by MICROWIND3 using the command  $Edit \rightarrow Generate \rightarrow Inductor$ . The inductance value appears at the bottom of the window, as well as the parasitic resistance and the resulting quality factor Q.

Using the default parameters, the coil inductance approaches 12nH, with a quality factor of 1.15. The corresponding layout is shown in figure 9-3. Notice the virtual inductance (L1) and resistance (R1) symbols placed in the layout. The serial inductor is placed between A and B and a serial resistance between B and C. If these symbols were omitted, the whole inductor would be considered as a single electrical node.

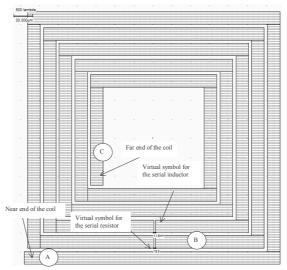


Figure 9-3. The inductor generated by default (inductor12nH.MSK)

The coil can be considered as a RLC resonant circuit. At very low frequencies, the inductor is a short circuit, and the capacitor is an open circuit (Figure 9-4 left). This means that the voltage at node C is almost equal to A, if no load is connected to node C, as almost no current flows through RI. At very high frequencies, the inductor is an open circuit, the capacitor a short circuit (Figure 9-4 right). Consequently, the link between C and A tends towards an open circuit.

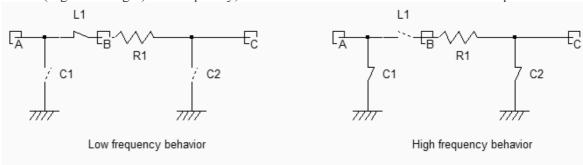


Figure 9-4. The behavior of a RLC circuit at low and high frequencies (Inductor.SCH)

At a very specific frequency the LC circuit features a resonance effect. The theoretical formulation of this frequency is given by equation 9-2.

$$f_r = \frac{1}{2\pi\sqrt{L1(C1+C2)}}$$
 (Equ. 9-2)

We may see the resonance effect of the coil and an illustration of the quality factor using the following procedure. The node A is controlled by a sinusoidal waveform with increased frequency (Also called "chirp" signal). We specify a very small amplitude (0.1V), and a zero offset.

The resonance can be observed when the voltage at nodes B and C is higher than the input voltage A. The ratio between B and A is equal to the quality factor Q.

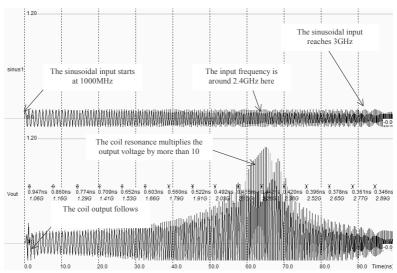


Figure 9-5. The behavior of a RLC circuit near resonance (Inductor3nHighQ.MSK)

### 9.2 Power Amplifier

The power amplifier is part of the radio-frequency transmitter, and is used to amplify the signal being transmitted to an antenna so that it can be received at the desired distance. Most CMOS power amplifiers are based on a single MOS device, loaded with a "Radio-Frequency Choke" inductor  $L_{RFC}$ , as shown in figure 9-6.

The inductor serves as a load for the MOS device (At a given frequency f, the inductor is equivalent to a resistance  $L.2\pi f$ ), with two significant advantages as compared to the resistor: the inductor do not consume DC power, and the combination of the inductor and the load capacitor CL creates a resonance. The power is delivered to the load RL, which is often fixed to 500hm. This load is for example the antenna monopole, which can be assimilated to a radiation resistance, as described in the previous section. The resonance effect is obtained between  $L_{RFC}$  and  $C_{L}$ .

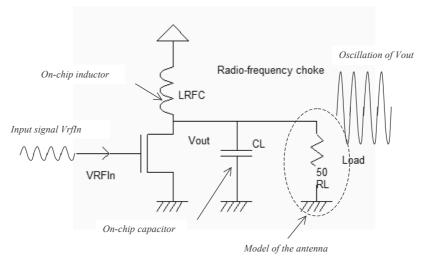


Figure 9-6: The basic diagram of a power amplifier (PowerAmp.SCH)

An example of powerful MOS device is shown in figure 9-7. The maximum current is close to 40mA. A convenient way to generate the polarization ring consists in using the Path generator command, and selection the option **Metal and p-diffusion**. Then draw the location for the polarization contacts in order to complete the ring.

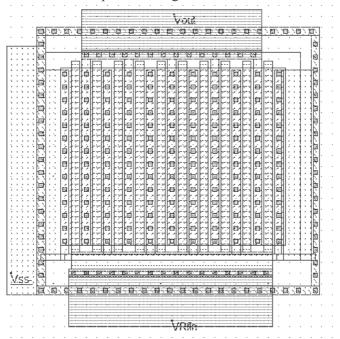


Figure 9-7: The layout of the power MOS also includes a polarization ring, and the contacts to metal2 connections to VRF in and VOut (PowerAmplifier.MSK)

The distinction between class A,B,AB, etc.. amplifiers is mainly given with the polarization of the input signal. A Class A amplifier is polarized in such a way that the transistor is always conducting. The MOS device operates almost linearly.

The sinusoidal input offset is 1.3V, the amplitude is 0.4V. The power MOS functional point trajectory is plotted in figure 9-8, and is obtained using the command **Simulate on Layout**. We see the evolution of the functional point with the voltage parameters: as *Vgs* varies from 0.9V to 1.7V, *Ids* fluctuates between 20mA to 70mA. The MOS device is always conducting, which corresponds to class A amplifiers.

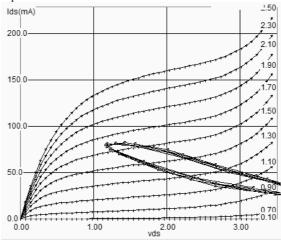


Figure 9-8 The class A amplifier has a sinusoidal input (PowerAmplifierClassA.MSK)

#### 9.3 Oscillator

The role of oscillators is to create a periodic logic or analog signal with a stable and predictable frequency. Oscillators are required to generate the carrying signals for radio frequency transmission, but also for the main clocks of processors. The ring oscillator is a very simple oscillator circuit, based on the switching delay existing between the input and output of an inverter. If we connect an odd chain of inverters, we obtain a natural oscillation, with a period which corresponds roughly to the number of elementary delays per gate. The fastest oscillation is obtained with 3 inverters (One single inverter connected to itself does not oscillate). The usual implementation consists in a series of five up to one hundred chained inverters (Figure 9-9).

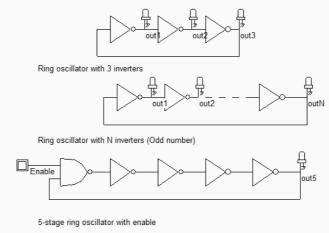


Figure 9-9: A ring oscillator is based on an odd number of inverters (Inv3.SCH)

The main problem of this type of oscillators is the very strong dependence of the output frequency on virtually all process parameters and operating conditions. This means that any supply fluctuation has a significant impact on the oscillator frequency.

The LC oscillator proposed below is not based on the logic delay, as with the ring oscillator, but on the resonant effect of a passive inductor and capacitor circuit. In the schematic diagram of figure 9-10, the inductor LI resonates with the capacitor CI connected to S1 combined with C2 connected to S2.

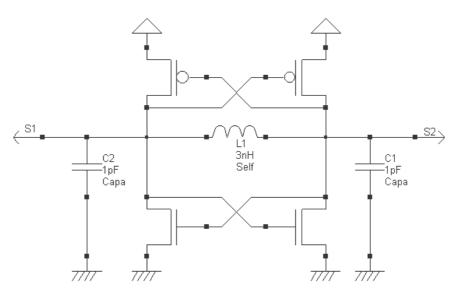


Figure 9-10: A differential oscillator using an inductor and companion capacitor (Oscillator Diff.SCH)

The layout implementation is performed using a 3nH virtual inductor and two 1pF capacitor. The large width of active devices to ensure a sufficient current to charge and discharge the huge capacitance of the output node at the desired frequency. Using virtual capacitors instead of onchip physical coils is recommended during the development phase. It allows an easy tuning of the inductor and capacitor elements in order to achieve the correct behavior. Once the circuit has been validated, the L and C symbols can be replaced by physical components. The time-domain simulation (Figure 9-11) shows a warm-up period around 1ns where the DC supply rises to its nominal value, and where the oscillator effect reaches a permanent state after some nanoseconds.

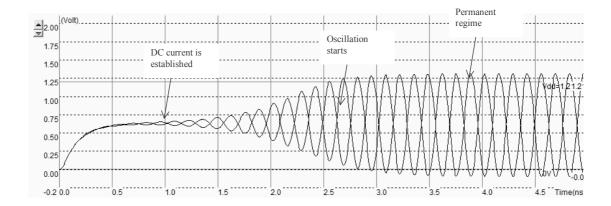


Figure 9-11: Simulation of the differential oscillator (OscillatorDiff.MSK)

The Fourier transform of the output s1 reveals a main sinusoidal contribution at f0=3.725GHz as expected, and some harmonics at 2xf0 and 3xf0 (Figure 9-126). The remarkable property of this circuit is its ability to remain in a stable frequency even if we change the supply voltage or the temperature, which features a significant improvement as compared to the ring oscillator. Furthermore, the variations of the MOS model parameters have almost no effect on the frequency.

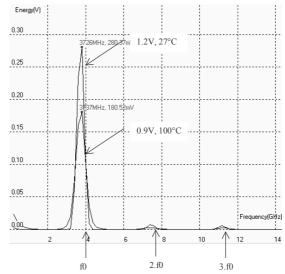


Figure 9-12: The frequency spectrum of the oscillator (Oscillator Diff. MSK)

#### 9.4 Phase-lock-loop

The phase-lock-loop (PLL) is commonly used in microprocessors to generate a clock at high frequency ( $F_{out}$ =2GHz for example) from an external clock at low frequency ( $F_{ref}$  = 100MHz for example). The PLL is also used as a clock recovery circuit to generate a clock signal from a series of bits transmitted in serial without synchronization clock (Figure 9-13).

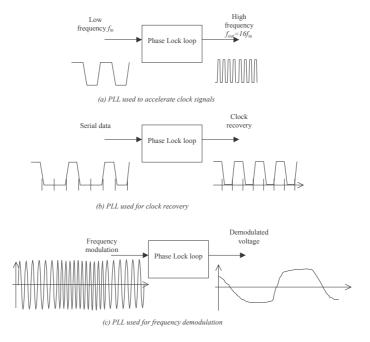


Figure 9-13. Principles of phase lock loops

The PLL uses a high frequency oscillator with varying speed, a counter, a phase detector and a filter (figure 9-14). The PLL includes a feedback loop which lines up the output clock ClkOut with the input clock ClkIn through a phase locking stabilization process. When locked, the high input frequency  $f_{out}$  is exactly  $Nx f_{in}$ . A variation of the input frequency  $f_{in}$  is transformed by the phase detector into a pulse signal which is converted in turn into variation of the analog signal Vc. This signal changes the VCO frequency which is divided by the counter and changes clkDiv according to  $f_{in}$ .

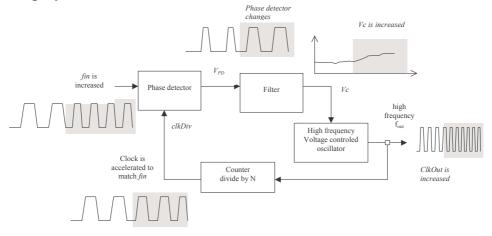


Figure 9-14. Principles of phase lock loops

The implementation of the PLL shown in figure 9-15 includes a resistor *Rfilter* (1000Ohm) and *Rvdd2* (5000 Ohm). The capacitor *Cfilter* is a virtual component fixed to 0.3pF. These resistance and capacitance are easy to integrate on-chip.

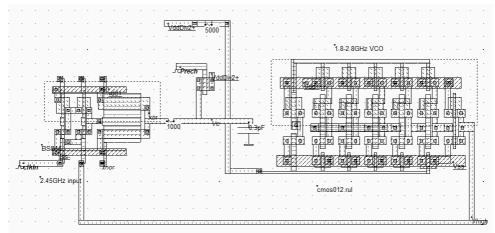


Figure 9-15: Connecting the current-starved VCO to the phase detector (VCOPII.MSK)

The input frequency is fixed to 2.44GHz. During the initialization phase (Simulation of figure 9-16), the precharge is active, which pushes rapidly the voltage of Vc around VDD/2. The VCO oscillation is started and the phase detector starts operating erratically. The output Xnor is an interesting indication of what happens inside the phase detector. We see that the phase difference is very important during the first 10 nanoseconds. Then, the VCO output starts to converge to the reference clock. In terms of voltage control, Vc tends to oscillate and then converge to a stable state where the PLL is locked and stable. The output is equal to the input, and the phase difference is equal to one fourth of the period  $(\pi/2)$  according to the phase detector principles.

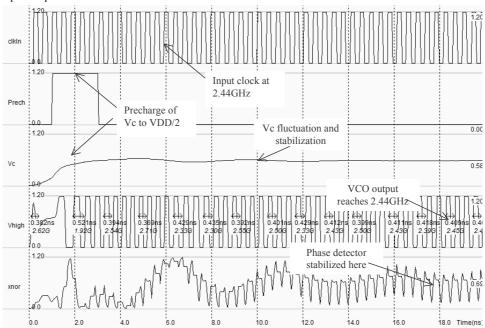


Figure 9-16: Simulation of the PLL showing the locking time (VCOPll.MSK)

#### 9.5 Analog to digital and digital to analog converters

The analog to digital converters (ADC) and digital to analog converters (DAC) are the main links between the analog signals and the digital world of signal processing. The ADC and DAC viewed as black boxes are shown in figure 9-17. On the right side, the ADC takes an analog input signal Vin and converts it to a digital output signal A. The digital signal A is a binary coded representation of the analog signal using N bits:  $A_{N-1} \dots A_0$ . The maximum number of codes for N bits is  $2^N$ . The digital signal is usually treated by a microprocessor unit (MPU) or by a specific digital signal processor (DSP) before being restituted as an output B. Then, the DAC, which has the opposite function compared to the ADC, converts the digital signal to the final analog output signal Vout.




Figure 9-17. Basic principle of N bits analog to digital and digital to analog converters.

The most basic DAC is based on a resistance ladder. This type of DAC consists of a simple resistor string of  $2^N$  identical resistors, and a binary switch array whose inputs are a binary word. The analog output is the voltage division of the resistors flowing via pass switches. In the example of figure 9-19, the resistance ladder includes 8 identical resistors, which generate 8 reference voltage equally distributed between the ground voltage and Vdac. The digital-analog converter uses the three-bit input (B2,B1,B0) to control the transmission gate network which selects one of the voltage references (A portion of Vdac) which is then transferred to the output Vout.

B2	B1	В0	Vout*	Analog output Vout* (V) with Vdac=1.2V
0	0	0	0/8 Vdac	0.0
0	0	1	1/8 Vdac	0.15
0	1	0	2/8 Vdac	0.3
0	1	1	3/8 Vdac	0.45
1	0	0	4/8 Vdac	0.6
1	0	1	5/8 Vdac	0.75
1	1	0	6/8 Vdac	0.9
1	1	1	7/8 Vdac	1.05

Figure 9-18 The specifications of a 3-bit digital-to-analog converter

A long path of polysilicon between VDD and VSS may give intermediate voltage references required for the DAC circuit. We activate the property "Remove salicide to increase resistance" of the option layer (Figure 9-19). Consequently, the resistor value is multiplied by 10 and can be used to design an area-efficient resistor network.

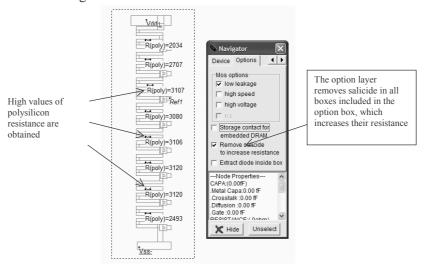


Figure 9-19. The sheet resistance is increased by removing the salicide deposit, thanks to an option layer (DAC.MSK)

The simulation of the R ladder DAC (Figure 9-20) shows a regular increase of the output voltage *Vout* with the input combinations, from 000 (0V) to 111 (1.2V). Each input change provokes a capacitance network charge and discharge. Notice the fluctuation of the reference voltage *Vref5* (One of the 8 reference voltages) too. This is due to the weak link to VDD and VSS through a highly resistive path. The analog level *Vout* increases regularly with increasing digit input *B*. The converter is monotonic.

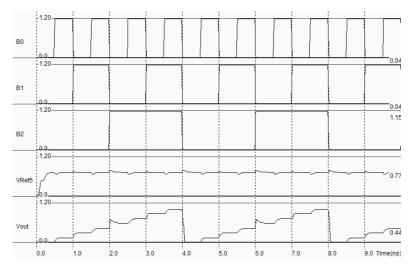


Figure 9-20. Simulation of the digital-analog converter (DAC.MSK).

The analog to digital converter is considered as an encoding device, where an analog sample is converted into a digital quantity with a number N of bits. ADCs can be implemented by employing a variety of architectures. The 2-bit analog-digital converter converts an analog value Vin into a two-bit digital value A coded on 2-bit  $A_1,A_0$ . The flash converter uses three amplifiers which produce results  $C_0,C_1$  and  $C_2$ , connected to a coding logic to produce  $A_1$  and  $A_0$  in a very short delay (Figure 9-21). The flash converters are widely used for very high sampling rates, a the cost of very important power dissipation.

Analog Input Vin	C2	C1	C0	A1	A0
Vin <vref0< td=""><td>0</td><td>0</td><td>0</td><td>0</td><td>0</td></vref0<>	0	0	0	0	0
Vref0 <vin<vref1< td=""><td>0</td><td>0</td><td>1</td><td>0</td><td>1</td></vin<vref1<>	0	0	1	0	1
Vref1 <vin<vref2< td=""><td>0</td><td>1</td><td>1</td><td>1</td><td>0</td></vin<vref2<>	0	1	1	1	0
Vin>Vref2	1	1	1	1	1

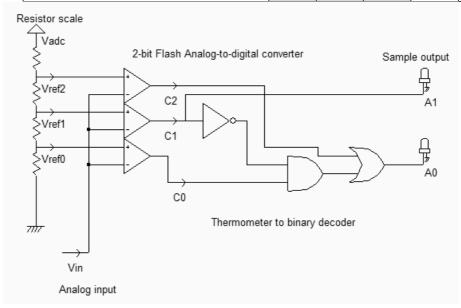


Figure 9-21. The schematic diagram of the 2-bit flash ADC converter (AdcFlash2bits.SCH)

The resistor ladder generates intermediate voltage references used by the voltage comparators located in the middle of the layout. An unsalicide option layer multiplies the sheet resistance of the polysilicon ladder for an area-efficient implementation. The resistance symbol R(poly) is inserted in the layout to indicate to the simulator that an equivalent resistance must be taken into account for the analog simulation. Open-loop amplifiers are used as voltage comparators. The comparators address the decoding logic situated to the right and that provides correct  $A_0$  and  $A_1$  coding.

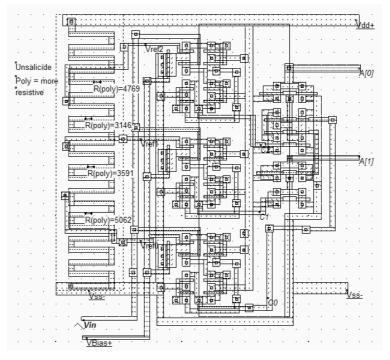


Figure 9-22. Design of the analog-digital converter (ADC.MSK).

In the simulation shown in figure 9-23, the comparators  $C_0$  and  $C_1$  work well but the comparator  $C_0$  is used in the lower limit of the voltage input range. The generation of combinations "01", "10" and "11" is produced rapidly but the generation of "00" is slow. The comparator  $C_0$  may be modified to provide a faster response in comparison with low voltage, by changing the biasing conditions. An alternative is to reduce the input voltage range, which means that the resistance scale would be supplied by Vdac- larger than VSS and Vdac+ smaller than VDD.

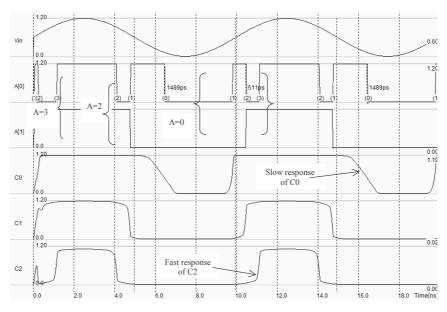


Figure 9-23. Simulation of the analog-digital converter (ADC.MSK).

#### 9.6 Added Features in the Full version

Voltage Controlled	The voltage controlled oscillator (VCO) generates a clock with a
oscillator	controllable frequency. The VCO is commonly used for clock
	generation in phase lock loop circuits, as described later in this chapter.
	The clock may vary typically by +/-50% of its central frequency. A
	current-starved voltage controlled oscillator is detailed.
Gilbert mixer	The Gilbert mixer is used to shift the frequency of an input signal Vin to
	a high frequency. The Gilbert cell consists of only six transistors, and
	performs a high quality multiplication of the sinusoidal waves. The
	schematic diagram and the physical implementation are described in the
	full version.
Phase-Lock-Loop	Each basic component of the PLL (Phase comparator, filter, VCO) and
	the design issues are described, supported by a large set of simulations.
Digital to analog	The R-2R ladder consists of a network of resistors alternating between $R$
converter	and 2R. For a N bits DAC, only N cells based on 2 resistors R and 2R in
	series are required. The 4-bit and 8-bit implementation of this circuit are
	described.
Sample and Hold	The sample-and-hold main function is to capture the signal value at a
	given instant and hold it until the ADC has processed the information
	The principles and parasitic effects of the circuit are described.
Analog to digital	Successive approach analog to digital converter.
converter	

# 10 Input/Output Interfacing

This chapter is dedicated to the interfacing between the integrated circuit and the external word. After a brief justification of the power supply decrease, the input/output pads used to import and export signals are dealt with. Then, the input pad protections against electrostatic discharge and voltage overstress are described. The design of output buffers is also presented, with focus on current drive.

#### 10.1 The Bonding Pad

The bonding pad is the interface between the integrated circuit die and the package. The pad has a very large surface (Almost giant compared to the size of logic cells) because it is the place where the connection wire is attached to build the electrical link to the outside word. The pad is approximately 80µm x 80µm. The basic design rules for the pad are shown in figure 10-1.

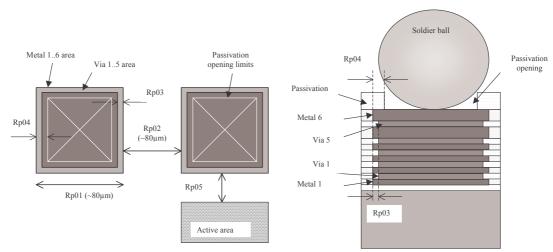


Figure 10-1: The bonding pad design rules

The cross-section shown in figure 10-2 gives an illustration of the passivation opening and associated design rule Rp04 on top of the metal and via stack. The thick oxide used for passivation is removed so that a bonding wire or a bonding ball can be connected by melting to the package. The pad can be generated by MICROWIND3 using the command **Edit**  $\rightarrow$ **Generate**  $\rightarrow$  **I/O pads**. The menu gives access to a single pad, with a default size given by the technology (around  $80\mu$ m in this case), or to a complete pad rind, as detailed later.

#### 10.2 The Pad ring

The pad ring consists of several pads on each of the four sides of the integrated circuit, to interface with the outside world. The default menu for an automatic generation of a pad ring is shown in figure 10-2. The proposed architecture is based on 5 pads on each side, meaning a total of 20 pads.

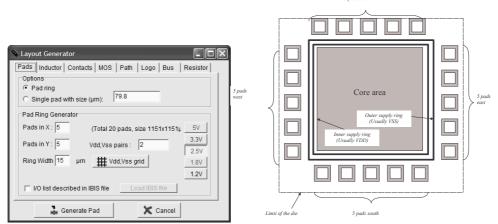


Figure 10-2: The menu for generating the pad ring and the corresponding architecture

#### 10.3 The supply rails

The supply voltage may be 5V, 3.3V, 2.5V, 1.8V or 1.2V. Most designs in 0.12µm use 1.2V for the internal core supply and 2.5V for the interfacing. This is because the logic circuits of the core operate at low voltage to reduce power consumption, and the I/O structures operate at high voltage for external compatibility and higher immunity to external perturbations. Usually, an on-chip voltage regulator converts the high voltage into an internal low voltage.

A metal wire cannot drive an unlimited amount of current. When the average current density is higher than  $2.10^9~A/m^2$  [Hastings], the grains of the polycrystalline aluminum interconnect start to migrate (The phenomenon is called electro migration) and the conductor ultimately melts. To handle very high current density, the supply metal lines must be enlarged. A typical rule of thumb is  $2mA/\mu m$  width for aluminum supply lines and  $5mA/\mu m$  for copper, which means that a copper interconnect is superior to aluminum in sustaining large currents.

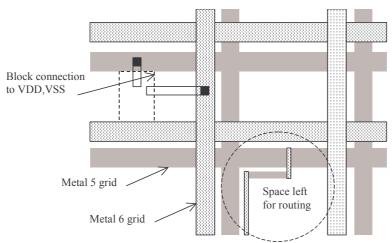


Figure 10-3: The supply rails are routed in metal5 and metal6 with a regular grid to provide power supply in all regions of the integrated circuit

A complex logic core may consume amperes of current. In that case, the supply lines must be enlarged in order to handle very large currents properly. The usually design approach consists in creating a regular grid structure, as illustrated in figure 10-3, which provides the supply current at all points of the integrated circuit. In that test circuit, the VDD supply is assigned to metal5, VSS to metal 6.

#### 10.4 Input Structures

The input pad includes some over-voltage and under-voltage protections due to external voltage stress, electrostatic discharge (ESD) coupling with external electromagnetic sources, etc.. Such protections are required as the oxide of the gate connected to the input can easily be destroyed by over voltage. The electrostatic discharges may attain 1000 to 5000Volt.

One of the most simple ESD protections is made up of one resistance and two diodes (Fig. 10-4). The resistor helps to dissipate the parasitic energy and reduces the amplitude of the voltage overstress. One diode handles the negative voltage flowing inside the circuit (N+/P substrate diode), the other diode (P+/N well) handles the positive voltage. The combination of the serial resistor and the diode bridge represents an acceptable protection circuit against transient voltage overstress around +/-50V.

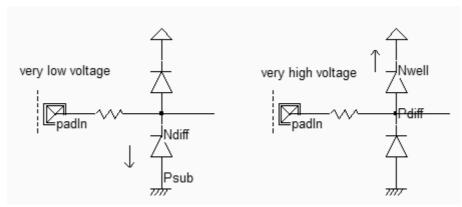


Figure 10-4: Input protection circuit (IOPadIn.SCH)

Diodes are essential parts of the ESD protection. Used since the infancy stage of microelectronics, the diodes are still widely used because of their efficiency and simplicity [Dabral]. The native diodes in CMOS technology consist of an N+ diffusion in the p-substrate and a P+ diffusion in the n-well.

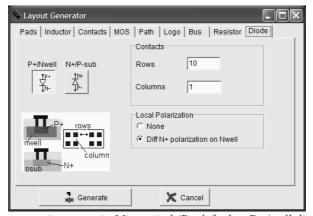


Figure 10-5: The diode generating menu in Microwind (By default a P+/well diode)

The command used to generate a protection diode in MICROWIND3 is  $\mathbf{Edit} \rightarrow \mathbf{Generate} \rightarrow \mathbf{Diode}$ . Click either the P+/nwell diode or the N+/P substrate diode. By default, the diode is quite large, and connected to the upper metal by a row of 10 contacts. The N+ diode region is surrounded by a polarization ring made of P+ diffusion. The large number of rows ensures a large current capability, which is very important in the case of ESD protection devices.

A protection circuit example is simulated in figure 10-6. It consists of a pad  $50x50\mu m$ , a serial resistor around 200 ohm and two diodes. When a very high sinusoidal waveform (+/- 10V) is injected, the diodes exhibit a clamping effect both for the positive and negative overstress. The best simulation mode is **Voltage and Currents**. The internal voltage remains within the voltage range [0..VDDH] while the voltage near the pad is -10 to +10V wide. Notice that the current flowing in the diodes is around 1mA (Figure 10-6).

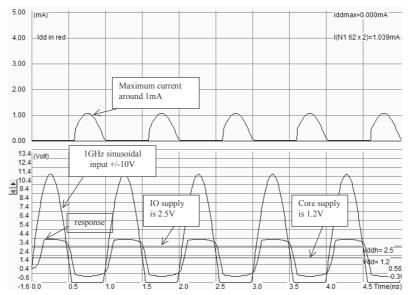


Figure 10-6: The diodes clamp the positive and negative overstress so that the internal voltage keeps close to the voltage range [0..VDDH] (IoPadIN.MSK)

#### 10.5 High voltage MOS

The general diagram of an input structure is given in figure 10-7. A high voltage buffer is used to handle voltage overstress issued from electrostatic discharges. The logic signal is then converted into a low voltage signal to be used in the core logic. For interfacing with input/output, specific high voltage MOS are introduced. These MOS devices are called high voltage MOS. They use a double gate oxide to handle the high voltage of the I/Os. The high voltage device symbols are drawn with a double line. The symbol *Vdd\_HV* represents the I/O voltage, which is usually 2.5V in CMOS 0.12μm.

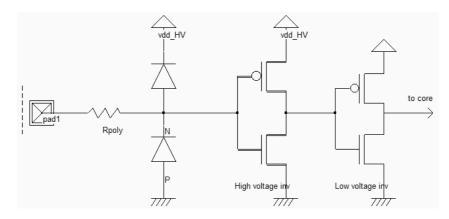


Figure 10-7: The basic principles for an input circuit, including the ESD protection and the voltage translator (IOPadIn.SCH)

The high voltage MOS layout differs slightly from the normal MOS. The high voltage MOS uses a gate width which is much larger than that of the regular MOS. Usually, the lateral drain diffusion, which aims at limiting the hot-carrier effect at boosting the device lifetime, is removed in high voltage MOS devices. In 0.12µm, the gate oxide of the high voltage MOS is around 5nm, while the core MOS is 2nm.

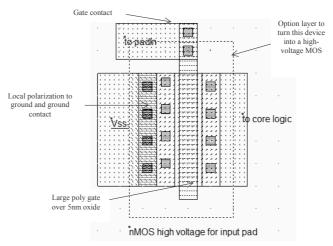


Figure 10-8: Layout of the input MOS device (IOPadMos.MSK)

The gate oxide is twice thicker than the low voltage MOS. The high voltage device performance corresponds approximately to a 0.25µm MOS device. To turn a normal MOS into a high voltage MOS, the designer must add an option layer (The dot rectangle in figure 10-8). The tick in front of **High voltage MOS** assigns high voltage properties to the device: double oxide, removed LDD, different rules for minimum length, and different MOS model parameters.

#### 10.6 Level shifter

The role of the level shifter is to translate the low voltage logic signal *Data\_Out* into a high voltage logic signal which controls the buffer devices. Figure 10-9 gives the schematic diagram of a level shifter circuit which has no problem of parasitic DC power dissipation. The circuit consists of a low voltage inverter, the level shifter itself and the buffer. The circuit has two power supplies: a low voltage *VDD* for the left-most inverter, and a high voltage *VddHV* for the rest of the circuit.

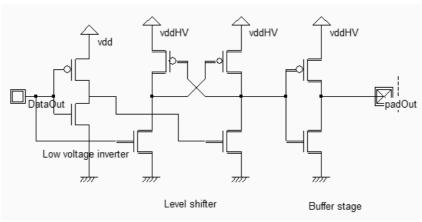


Figure 10-9: Schematic diagram of a level shifter (IOPadOut.SCH)

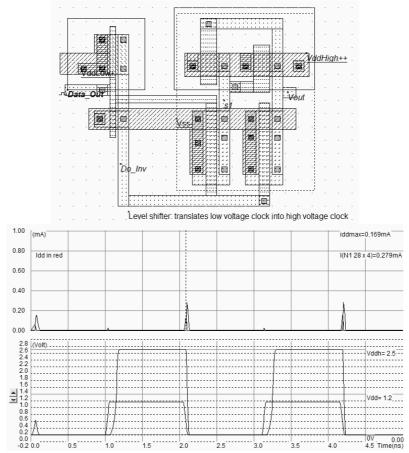


Figure 10-10: Layout and simulation of the level shifter (LevelShift.MSK)

The layout of the level shifter is shown in figure 10-10. The left part works at low voltage 1.2V, the right part works with high-voltage MOS devices, at a supply of 2.5V (*VddHigh*). The data signal *Data\_Out* has a 0-1.2V voltage swing. The output *Vout* has a 0-2.5V voltage swing. This time, no DC consumption appears except during transitions of the logic signals, as shown in the simulation of figure 10-10.

## 10.7 Added Features in the Full version

Pad/Core limitation	When the active area of the chip is the main limiting factor, the pad
	structure may be designed in such a way that the width is large but the
	height is as small as possible. This situation, called "Core Limited", as
	well as its opposite "Pad limited" are detailed.
Schmitt trigger	Using a Schmitt trigger instead of an inverter helps to transform a very
	noisy input signal into a clean logic signal. The Schmitt trigger circuit
	switching is illustrated and compared to the normal inverter.
Ibis	IBIS is a standard for electronic behavioral specifications of integrated
	circuit input/output analog characteristics. MICROWIND3 uses IBIS to
	pilot the generation of pads.

# 11 Design Rules

#### 11.1 Select a Design Rule File

The software can handle various technologies. The process parameters are stored in files with the appendix '.RUL'. The default technology corresponds to a generic 6-metal  $0.25\mu m$  CMOS process. The default file is CMOS012.RUL.

- To select a new foundry, click on File → Select Foundry and choose the appropriate technology in the list.
- To set a specific foundry as the default foundry, click File → Properties , 'Set as Default Technology'.

#### 11.2 Lambda Units

The MICROWIND3 software works is based on a lambda grid, not on a micro grid. Consequently, the same layout may be simulated in any CMOS technology. The value of lambda is half the minimum polysilicon gate length. Table 11-1 gives the correspondence between lambda and micron for all CMOS technologies available in the companion CD-ROM.


Technology	file	available	in	the	Minimum	gate	Value	of
CD-Rom					length		lambda	
Cmos12.rul					1.2µm		0.6µm	
Cmos08.rul					0.7µm		0.35µm	
Cmos06.rul					0.5µm		0.25µm	
Cmos035.rul					0.4µm		0.2µm	
Cmos025.rul					0.25µm		0.125µm	
Cmos018.rul					0.2µm		0.1µm	
Cmos012.rul					0.12µm		0.06µm	
Cmos90n.rul					0.1µm		0.05µm	
Cmos70n.rul					0.07µm		0.035µm	
Cmos50n.rul					0.05µm		0.025µm	

Table 11-1: correspondence between technology and the value of lambda in  $\mu m$ 

The software can handle various technologies. The process parameters are stored in files with the appendix '.RUL'. The default technology corresponds to a generic 6-metal 0.12µm CMOS process. The default file is CMOS012.RUL. To select a new foundry, click on **File** -> **Select Foundry** and choose the appropriate technology in the list.


#### 11.3 N-Well

r101	Minimum well size	12 λ
r102	Between wells	12 λ
r110	Minimum well area	$144 \lambda^{2}$

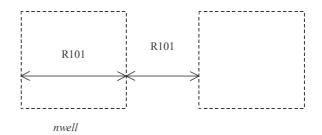


#### 11.4 Diffusion

r206 Between N+ and P+ polarization $0 \lambda$	207 D 1 C 11 C M; 1 ' '	r203 r204: r205	Minimum N+ and P+ diffusion width Between two P+ and N+ diffusions Extra nwell after P+ diffusion: Between N+ diffusion and nwell Border of well after N+ polarization Between N+ and P+ polarization Border of Nwell for P+ polarization Minimum diffusion area	$4 \lambda$ $4 \lambda$ $6 \lambda$ $6 \lambda$ $2 \lambda$ $0 \lambda$ $6 \lambda$ $24 \lambda^{2}$
	r206 Between N+ and P+ polarization $0 \lambda$		1	
207 D 1 C 11 C M; 1 : 4:		r204:	Between N+ diffusion and nwell	6 λ
0 /v	r204: Between N+ diffusion and nwell 6 λ	r203	Extra nwell after P+ diffusion:	6 λ
r204: Between N+ diffusion and nwell $6\lambda$	0//			
r202 Between two P+ and N+ diffusions $4 \lambda$ r203 Extra nwell after P+ diffusion : $6 \lambda$ r204: Between N+ diffusion and nwell $6 \lambda$	r202 Between two P+ and N+ diffusions $4 \lambda$ r203 Extra nwell after P+ diffusion: $6 \lambda$	r201	Minimum N+ and P+ diffusion width	4 λ

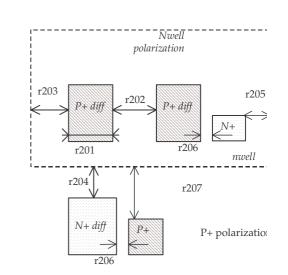

### 11.5 Polysilicon


r301	Polysilicon width	2λ
R302	Polysilicon gate on diffusion	2 λ
R303	Polysilicon gate on diffusion for high voltage MOS	4 λ
R304	Between two polysilicon boxes	3 λ
R305	Polysilicon vs. other diffusion	2 λ
R306	Diffusion after polysilicon	4 λ
R307	Extra gate after polysilicon	3 λ
r310	Minimum surface	$8 \lambda^2$

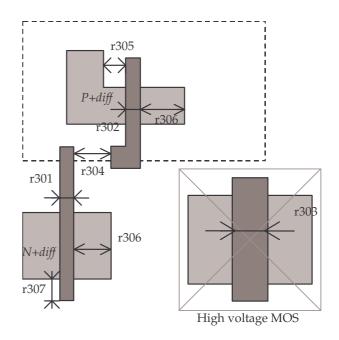

## 11.6 2<sup>nd</sup> Polysilicon Design Rules


r311	Polysilicon2	width		2 λ
r312	Polysilicon2 diffusion	gate	on	2 λ
220	D - 1:1: 2			0.12

 $\begin{array}{cc} r320 & Polysilicon2 & 8 \ \lambda^2 \\ & minimum \ surface \end{array}$ 

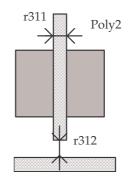


#### 11.7 MOS option

rOpt Border of "option" layer over diff 7λ N+ and diff P+




#### 11.8 Contact

r401	Contact width	2 λ
r402	Between two contacts	5 λ
r403	Extra diffusion over contact	2 λ
r404	Extra poly over contact	2 λ
r405	Extra metal over contact	2 λ
r406	Distance between contact	3 λ
r407	and poly gate Extra poly2 over contact	2 λ

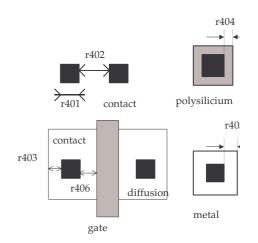

#### 11.9 Metal 1

r501	Metal width	4 λ
r502	Between two metals	4 λ
r510	Minimum surface	$16 \lambda^2$

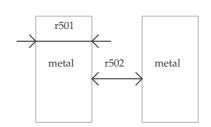


#### 11.10 Via

r601	Via width			2 λ
r602	Between tv	wo Via		5 λ
r603	Between	Via	and	0 λ


#### 11. Design Rules

r604 Extra metal over via  $2 \lambda$ r605 Extra metal2 over via:  $2 \lambda$ 

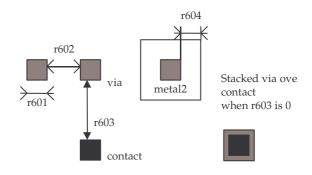


#### 11.11 Metal 2

r/01	Metal width::	4 λ
r702	Between two metal2	4 λ
r710	Minimum surface	16 λ <sup>2</sup>

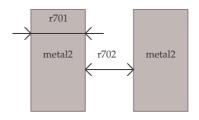


#### 11.12 Via 2

r801	Via2 width: 2 $\lambda$
r802	Between two Via2: 5 λ
r804	Extra metal2 over via2: 2 λ
r805	Extra metal3 over via2: $2 \lambda$




# 11.13 Metal 3

Metal3 width: $4 \lambda$
Between two metal3 : $4 \lambda$
Minimum surface : $32 \lambda^2$

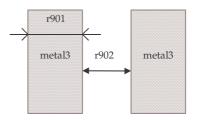


#### 11.14 Via 3

ra01	Via3 width : $2 \lambda$
ra02	Between two Via3: 5 λ
ra04	Extra metal3 over via3: 2 λ
ra05	Extra metal4 over via3: 2 λ





#### 11.15 Metal 4

rb01	Metal4 width: 4 λ
rb02	Between two metal4 : $4 \lambda$
rb10	Minimum surface : $32 \lambda^2$

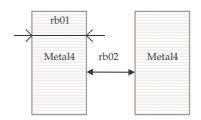


#### 11.16 Via 4






#### 11.17 Metal 5

rd01	Metal5 width: 8 λ
rd02	Between two metal5 : $8 \lambda$
rd10	Minimum surface : $100 \lambda^2$

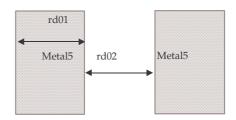

#### 11.18 Via 5

re01	Via5 width : 4 λ
re02	Between two Via5: 6 λ
re04	Extra metal5 over via5: 3 λ
re05	Extra metal6 over via5: 3 λ

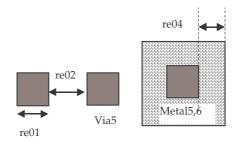

#### 11.19 Metal 6


rt01	Metal6 width: 8 λ
rf02	Between two metal6 : 15 $\lambda$
rf10	Minimum surface : 300 $\lambda^2$




#### 11.20 Pads


The rules are presented below in  $\mu m$ . In .RUL files, the rules are given in lambda. As the pad size has an almost constant value in  $\mu m$ , each technology gives its own value in  $\lambda$ .


rp01Pad width:100 μmrp02Between two pads100 μmrp03Opening in passivation v.s via :  $5\mu m$ rp04Opening in passivation v.s metals:  $5\mu m$ rp05Between pad and unrelated active area :

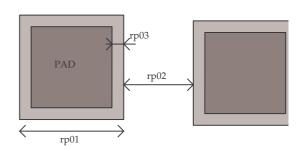


# 12 MICROWIND3 and DSCH3 Menus

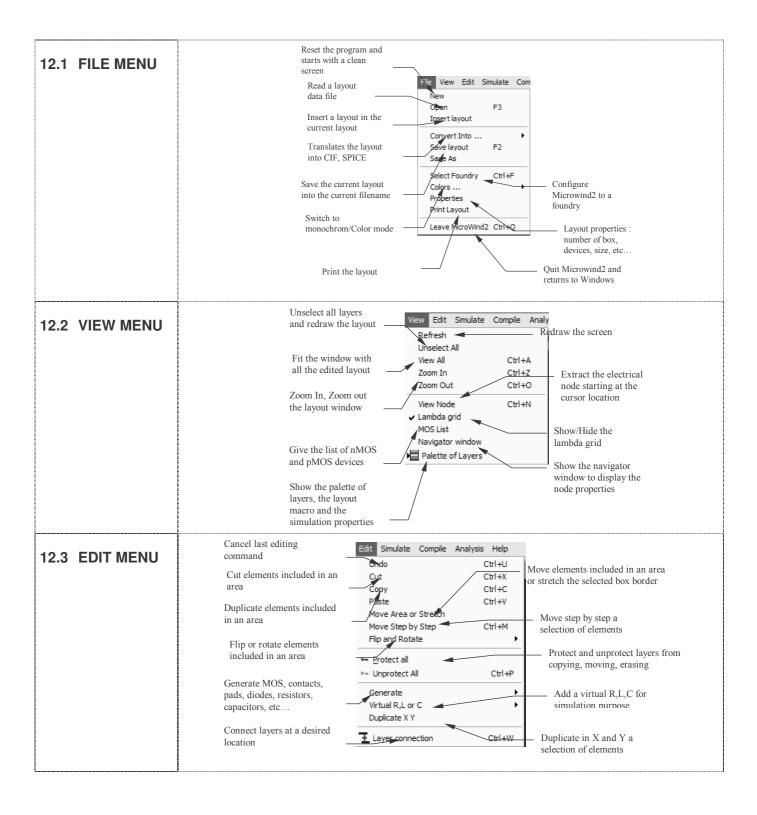


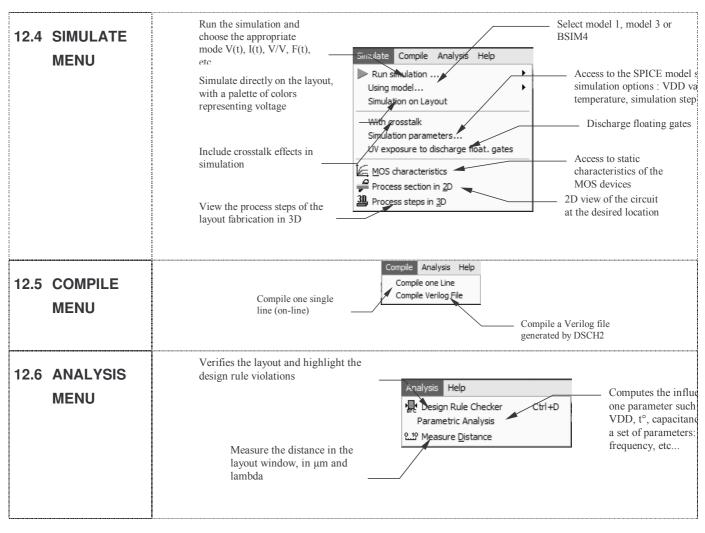

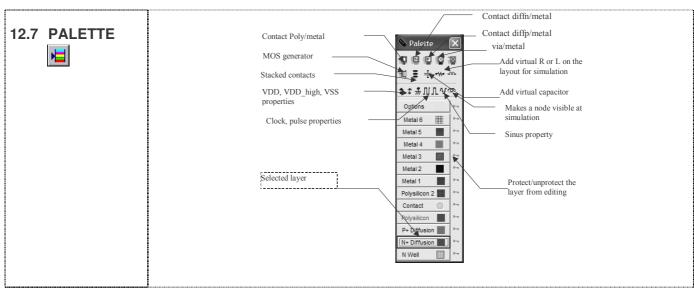


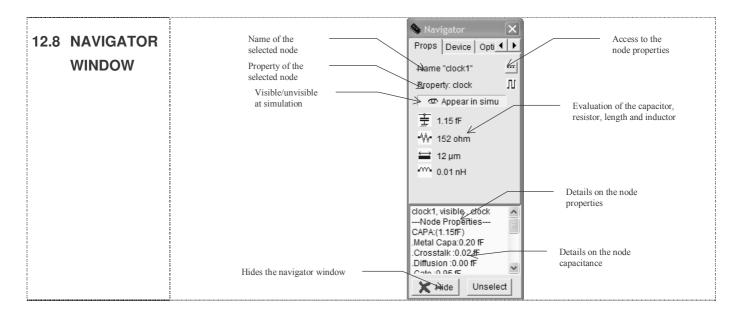


#### 12.9 MICROWIND3 SIMULATION MENU

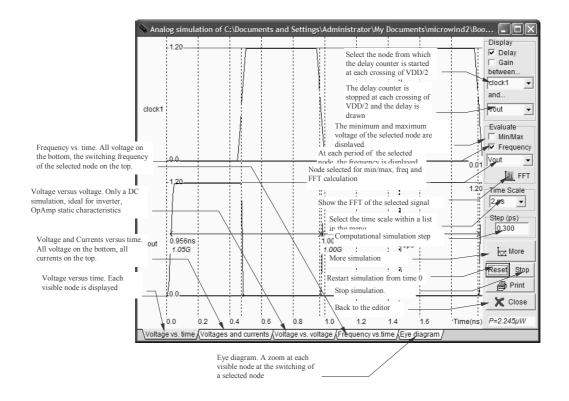


#### **12.10 DSCH3 MENUS**

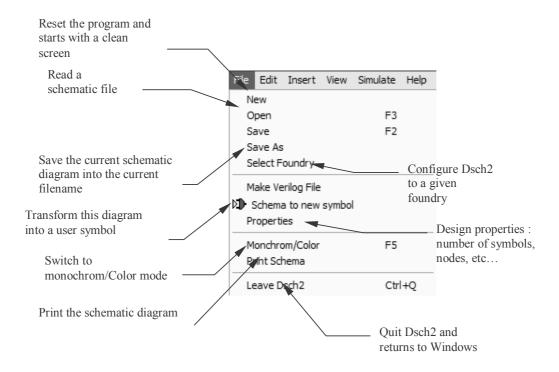


#### **12.11 EDIT MENU**

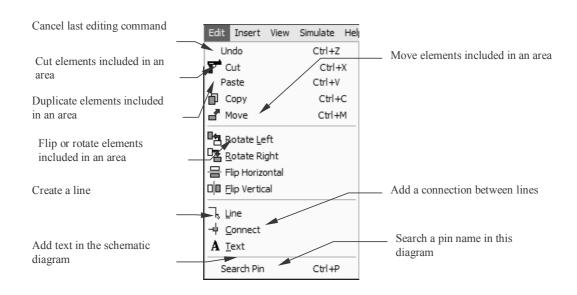


#### 12.12 INSERT MENU




#### **12.13 VIEW MENU**

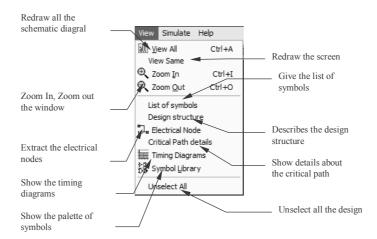

#### 12.14 SIMULATE MENU



#### 12.15 SYMBOL PALETTE

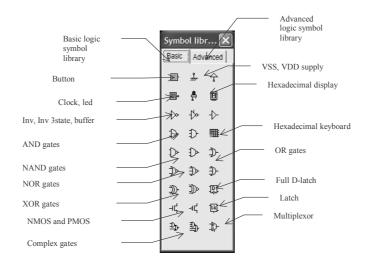

## ISBN 2-87649-049-8

Published by INSA Toulouse 135 Av de Rangueil 31077 Toulouse France April 2005