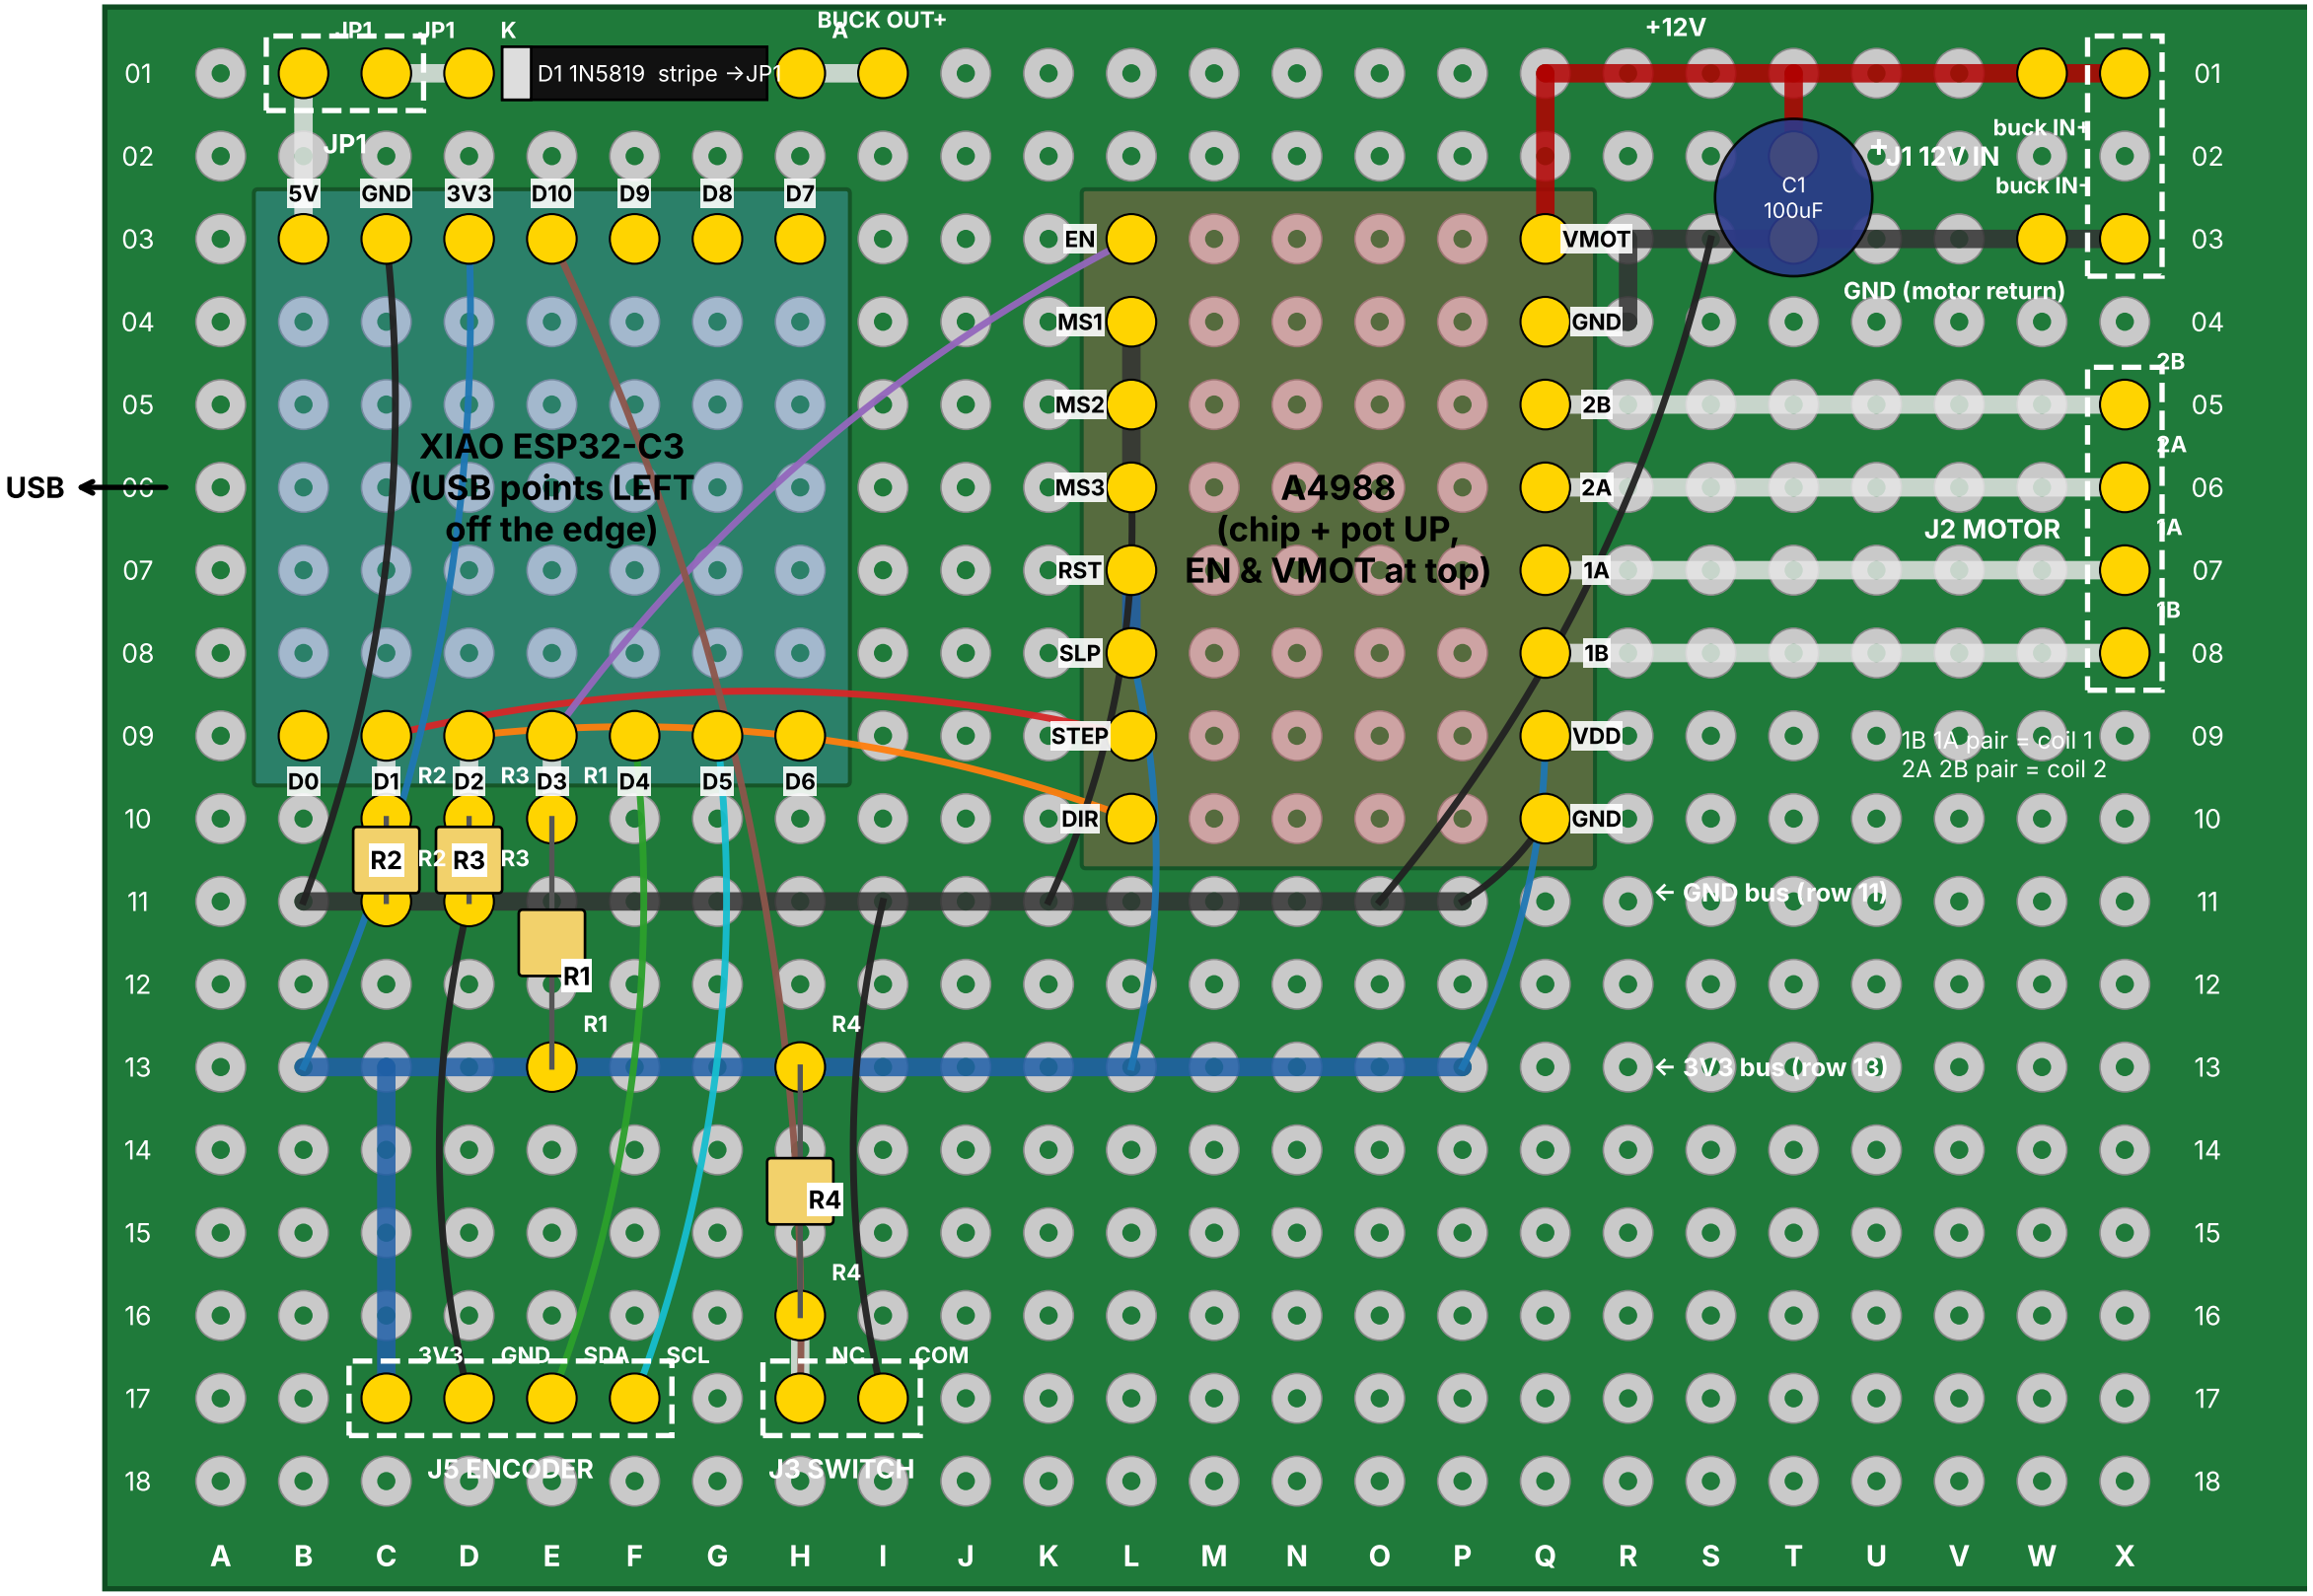


COMPONENT SIDE VIEW. Thick grey/red/blue = bare wire or solder run on the bottom. Thin coloured = insulated wire on the bottom (crossings OK). Yellow = soldered hole.

Match module pin LABELS to the holes before soldering headers: XIAO 5V at B03, D0 at B09; A4988 EN at L03, VMOT at Q03, DIR at L10.