
RoomCleaner claw Rev B on a breadboard (full-size 830, rows 1-30). Same nets as CLAW_REVB_SPEC.md and the KiCad schematic.

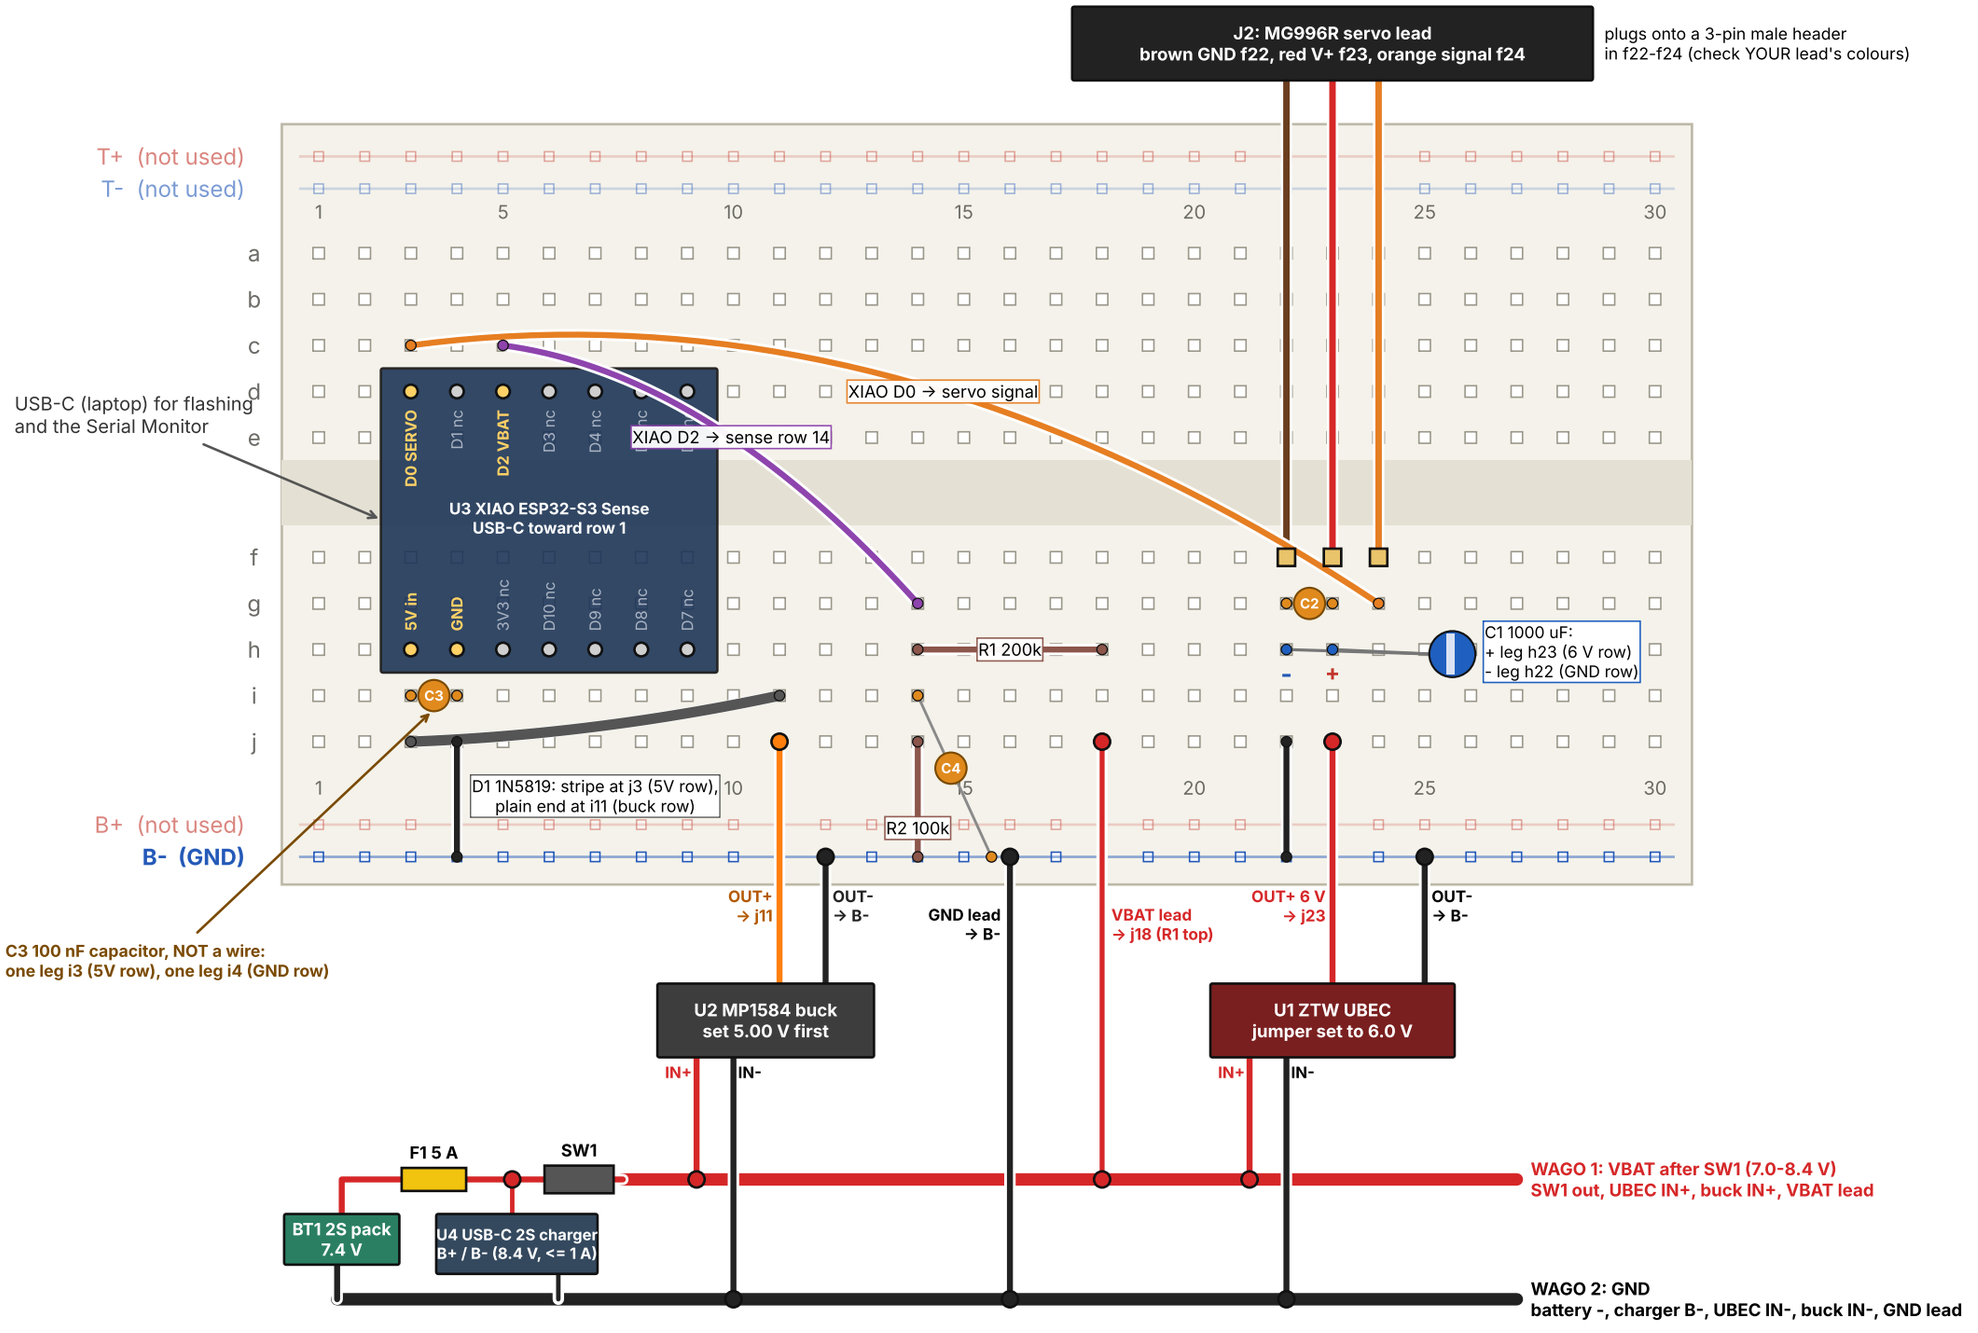

Pack side, all OFF the board (solder or lever nuts, 18-20 AWG): BT1 + → F1 → SW1 → WAGO 1. The charger's B+ joins between F1 and SW1, so it charges with SW1 OFF (the only way to charge). Battery -, charger B- and both module IN- go to WAGO 2.

Rails: only B- (bottom blue) is used, as GND. T+, T- and B+ stay EMPTY: no 7.4 V and no 6 V is on any rail.
7.4-8.4 V is only in WAGO 1 and row 18 (f-j). 6 V is only in row 23 (f-j). 5 V is only in rows 11 and 3 (f-j, through D1).
Servo current (up to ~2.5 A stalled) runs through rows 22-23 only: fine for bench travel tests, but do not hold a stall for more than a second on the breadboard. The claw itself gets soldered.