# Floor reference: how to lay it out

1. Print this PDF on US Letter at 100 % (Actual size, NOT 'fit to page'); keep this page for yourself.
2. Measure the black square of sheet 0 (should be 150 mm) and enter it, in metres, as marker.edge_m.
3. Put sheet 0 in the middle, directly under where the claw rests at startup.
4. Lay the other 8 sheets roughly as drawn below, about 450 mm centre to centre. Exact spacing and rotation do NOT matter - the robot surveys the layout itself - but they must not overlap or touch.
5. Every sheet must lie FLAT and fully visible: tape all corners down, no curl, no folds, no objects or cables across a tag, avoid glare (close curtains / matte paper). Carpet ridges and rugs that slide are not OK.
6. Sheet 0 defines the frame: its +X points right as printed. Enter the approximate room heading of that +X as marker.heading_prior_rad.
7. Do NOT move or bump any sheet once startup begins. If one moves, stop and run the survey again.

**Schematic, looking down at the floor (not to scale; the 0 sheet is the thick one)**

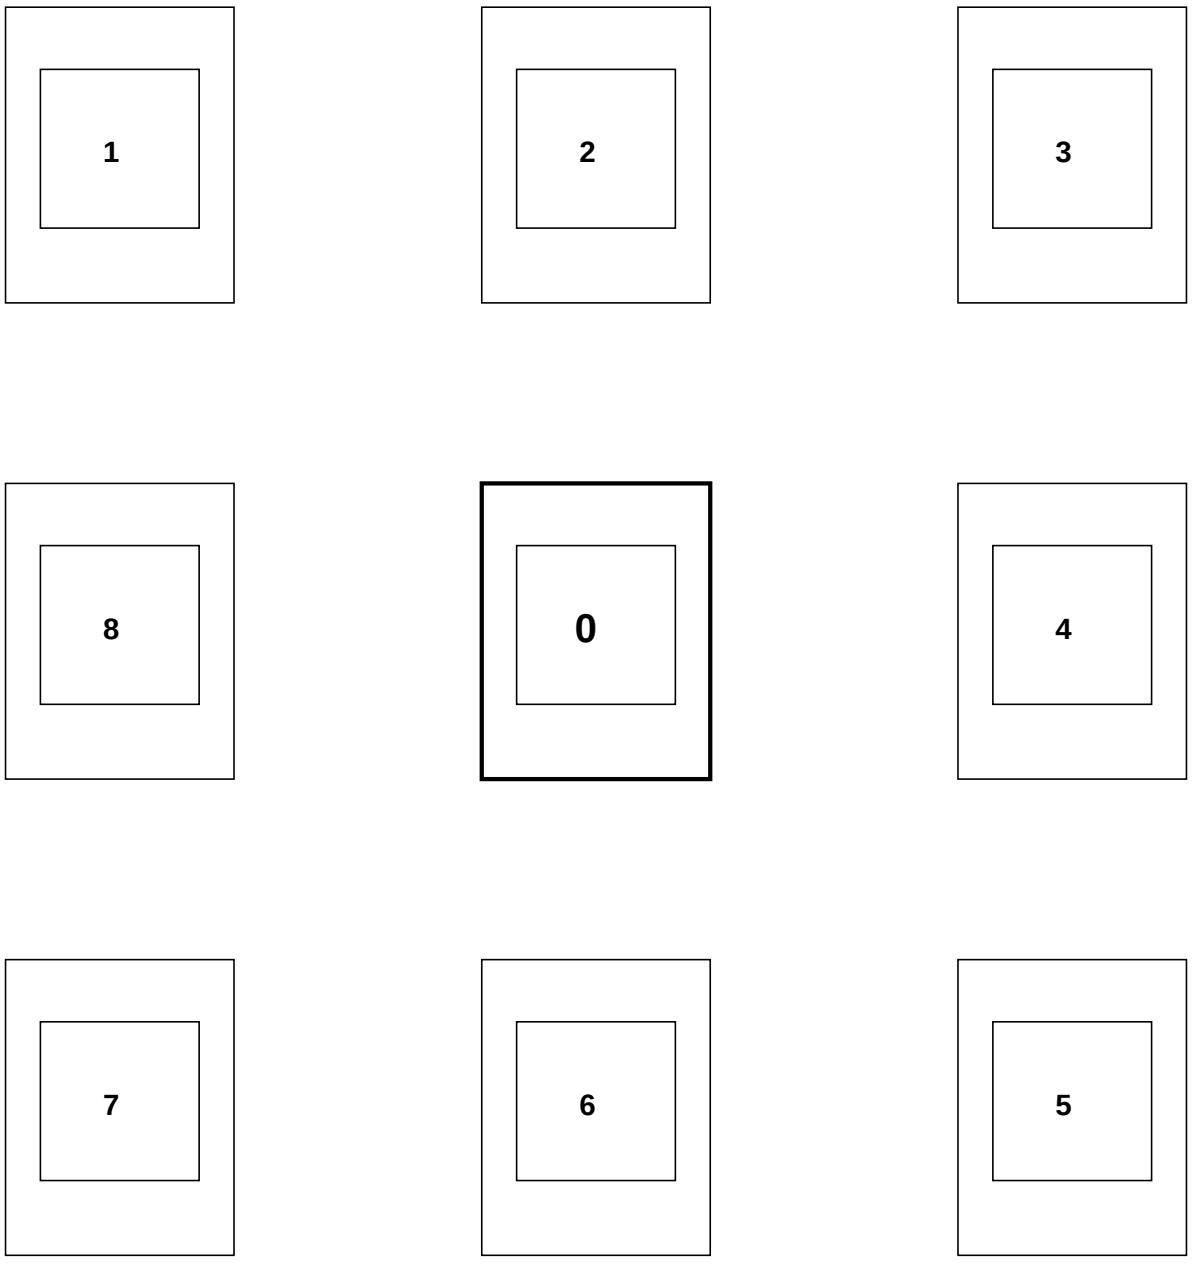

# 0

## ROOMCLEANER FLOOR REFERENCE

sheet 1 of 9 - AprilTag 36h11 id 0

**CENTRE SHEET: put it under the claw. It defines the floor frame:**
+X = right as printed, +Y = up the page.

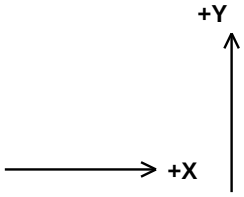


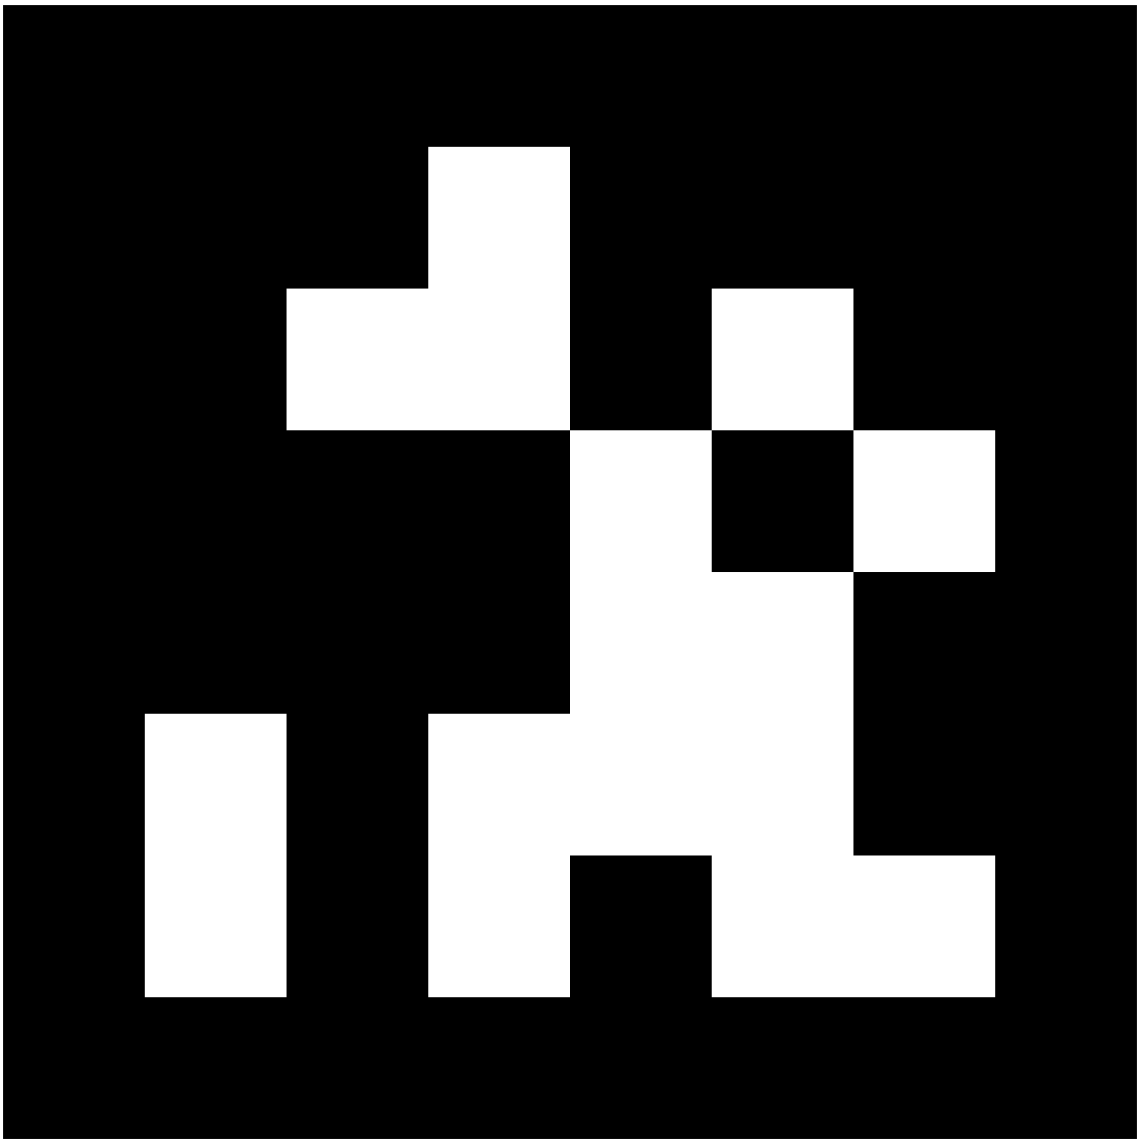




1. Print at ACTUAL SIZE / 100 % (never 'fit to page'). Print every sheet in one run, same settings.
2. With a ruler, MEASURE THE BLACK SQUARE EDGE of this sheet (printed: 150.0 mm). Enter the measured value of sheet 0, in metres, as marker.edge_m in the robot config. Check the 100 mm bar above on every sheet.
3. Reprint any sheet whose black square differs from sheet 0 by more than 1 mm.

# 1

## ROOMCLEANER FLOOR REFERENCE

sheet 2 of 9 - AprilTag 36h11 id 1

Lay flat, any rotation, roughly where the layout page shows.

TOP

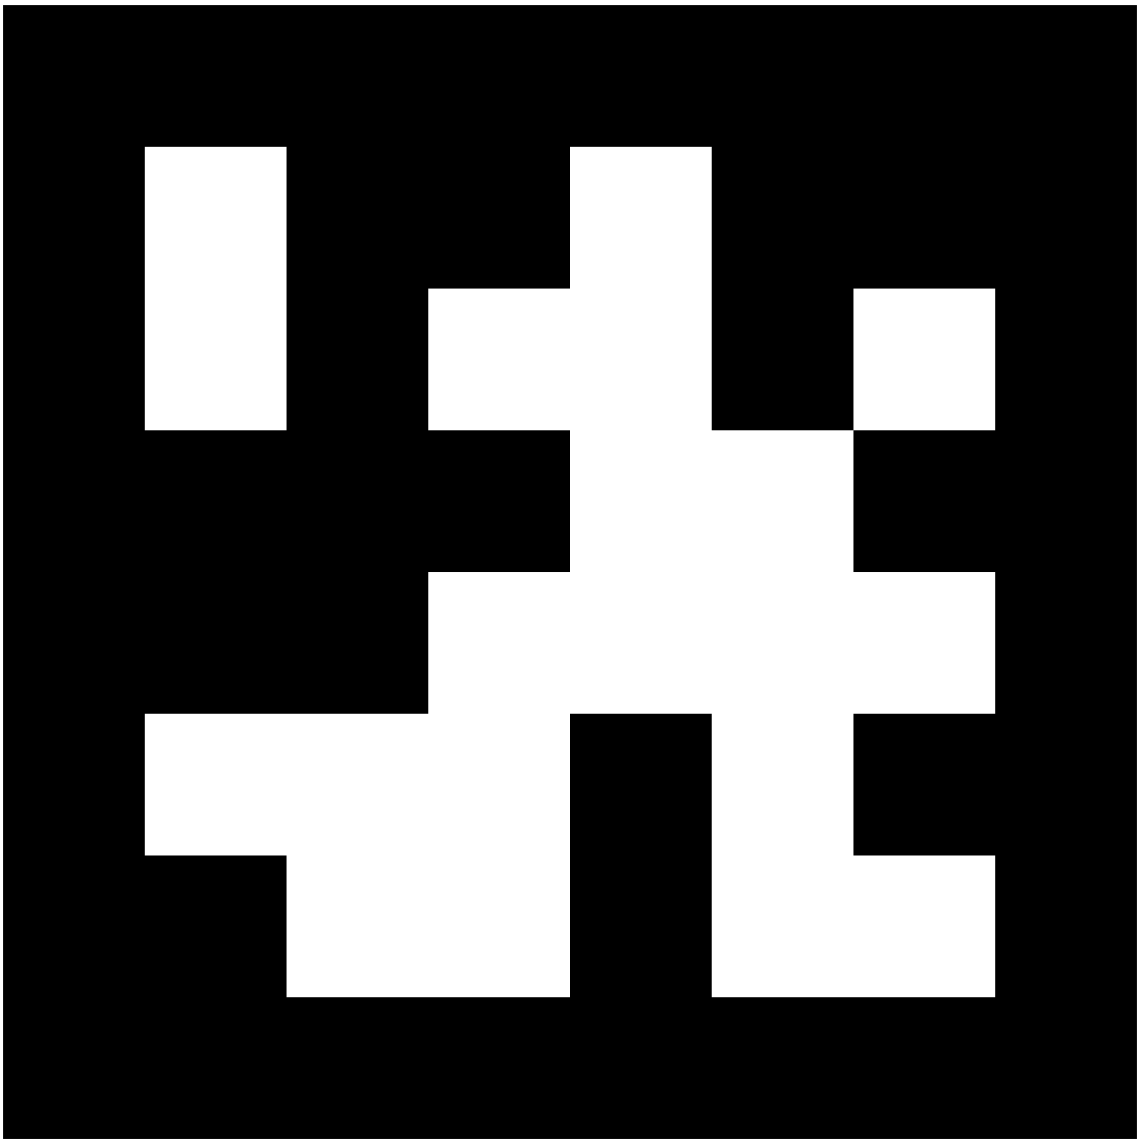

<- must measure 100 mm

1. Print at ACTUAL SIZE / 100 % (never 'fit to page'). Print every sheet in one run, same settings.
2. With a ruler, MEASURE THE BLACK SQUARE EDGE of this sheet (printed: 150.0 mm). Enter the measured value of sheet 0, in metres, as marker.edge_m in the robot config. Check the 100 mm bar above on every sheet.
3. Reprint any sheet whose black square differs from sheet 0 by more than 1 mm.

# 2

## ROOMCLEANER FLOOR REFERENCE

sheet 3 of 9 - AprilTag 36h11 id 2

Lay flat, any rotation, roughly where the layout page shows.

TOP

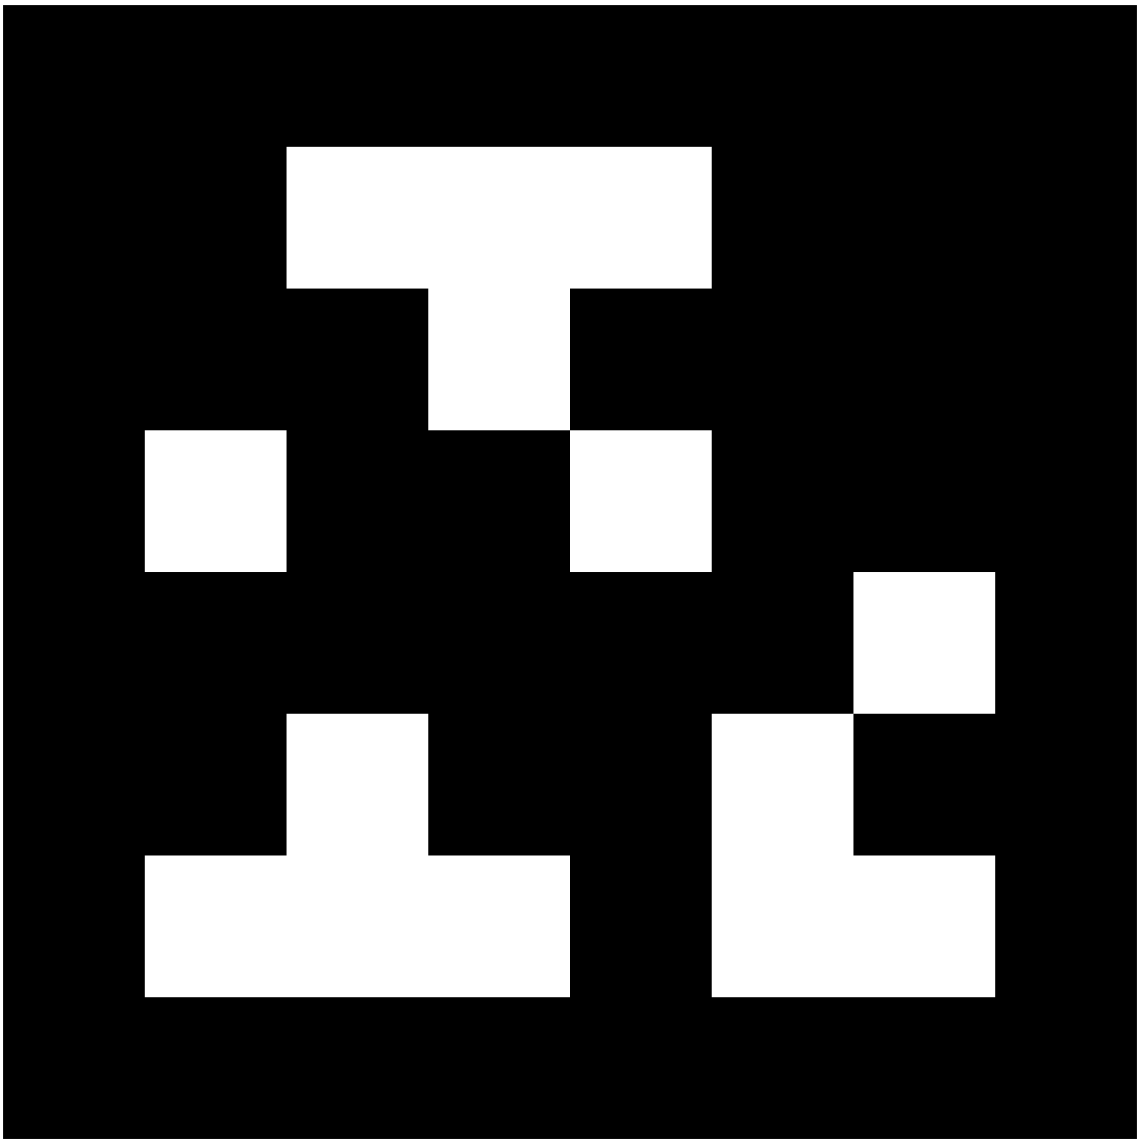

<- must measure 100 mm

1. Print at ACTUAL SIZE / 100 % (never 'fit to page'). Print every sheet in one run, same settings.
2. With a ruler, MEASURE THE BLACK SQUARE EDGE of this sheet (printed: 150.0 mm). Enter the measured value of sheet 0, in metres, as marker.edge_m in the robot config. Check the 100 mm bar above on every sheet.
3. Reprint any sheet whose black square differs from sheet 0 by more than 1 mm.

# 3

## ROOMCLEANER FLOOR REFERENCE

sheet 4 of 9 - AprilTag 36h11 id 3

Lay flat, any rotation, roughly where the layout page shows.

TOP

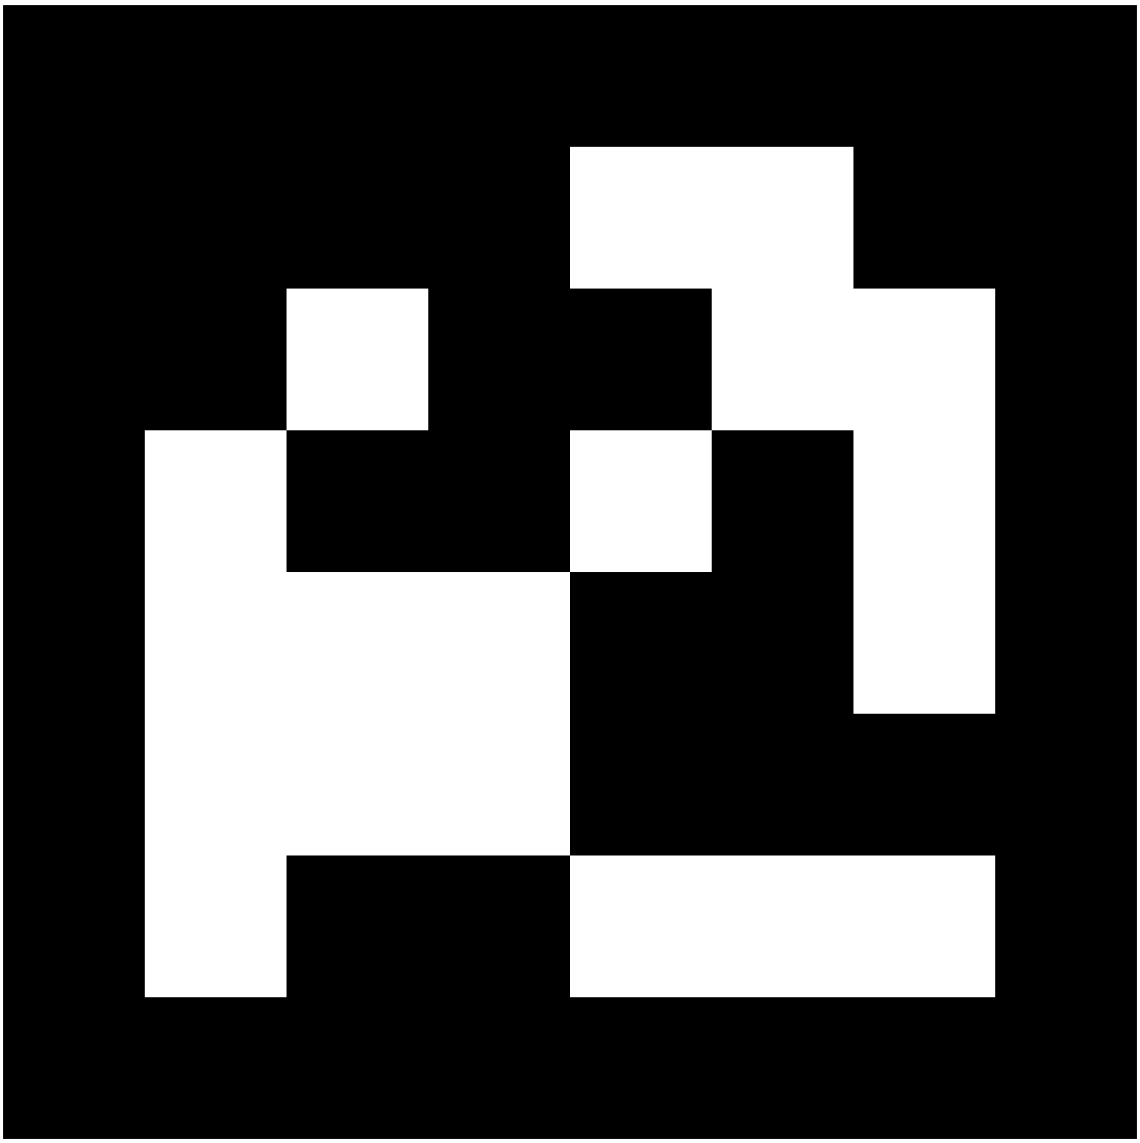

<- must measure 100 mm

1. Print at ACTUAL SIZE / 100 % (never 'fit to page'). Print every sheet in one run, same settings.
2. With a ruler, MEASURE THE BLACK SQUARE EDGE of this sheet (printed: 150.0 mm). Enter the measured value of sheet 0, in metres, as marker.edge_m in the robot config. Check the 100 mm bar above on every sheet.
3. Reprint any sheet whose black square differs from sheet 0 by more than 1 mm.

# 4

## ROOMCLEANER FLOOR REFERENCE

sheet 5 of 9 - AprilTag 36h11 id 4

Lay flat, any rotation, roughly where the layout page shows.

TOP

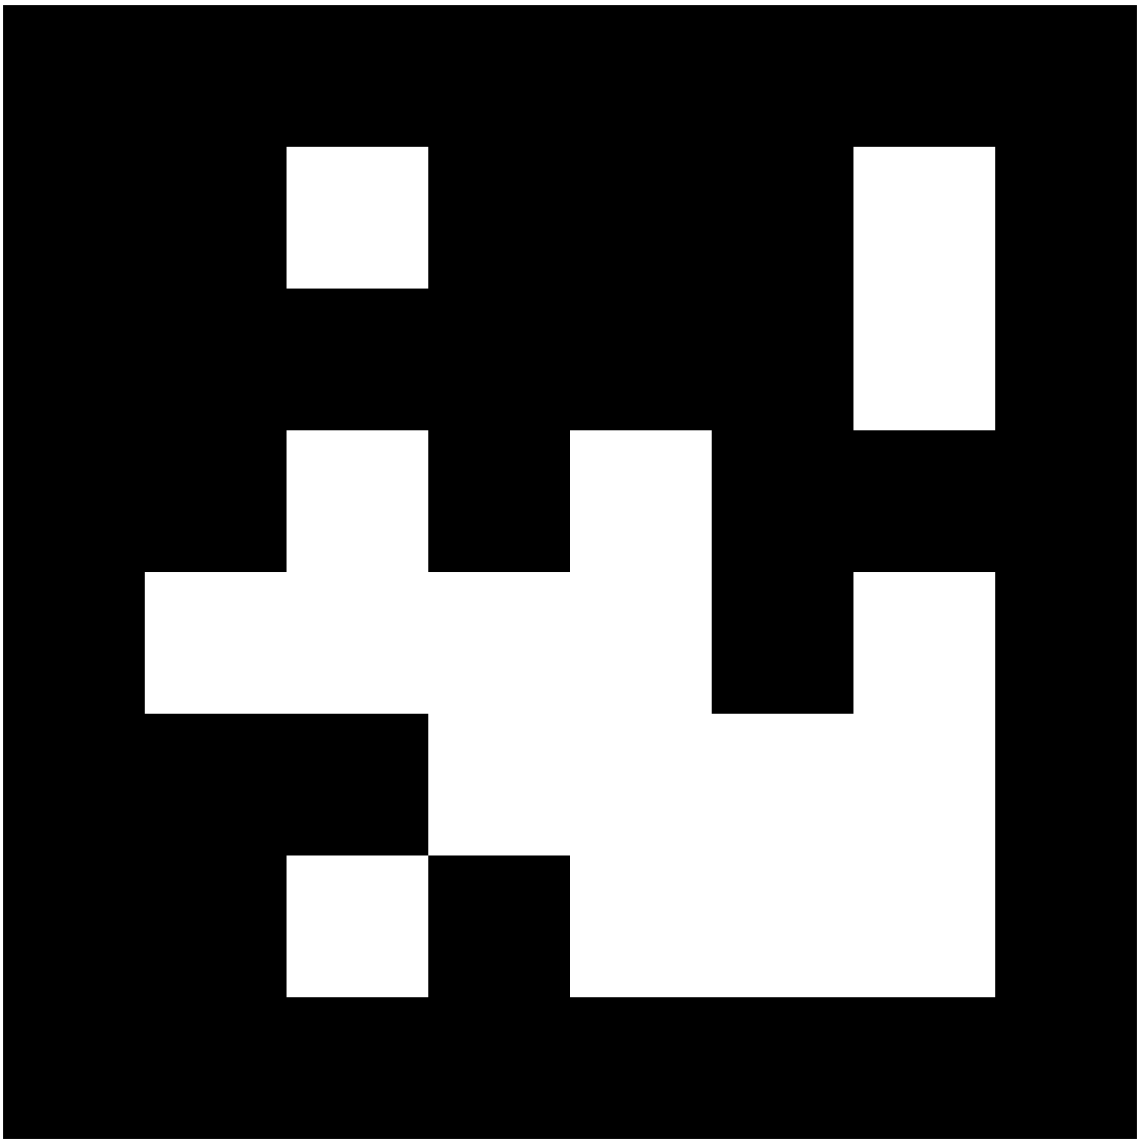

<- must measure 100 mm

1. Print at ACTUAL SIZE / 100 % (never 'fit to page'). Print every sheet in one run, same settings.
2. With a ruler, MEASURE THE BLACK SQUARE EDGE of this sheet (printed: 150.0 mm). Enter the measured value of sheet 0, in metres, as marker.edge_m in the robot config. Check the 100 mm bar above on every sheet.
3. Reprint any sheet whose black square differs from sheet 0 by more than 1 mm.

# 5

## ROOMCLEANER FLOOR REFERENCE

sheet 6 of 9 - AprilTag 36h11 id 5

Lay flat, any rotation, roughly where the layout page shows.

TOP

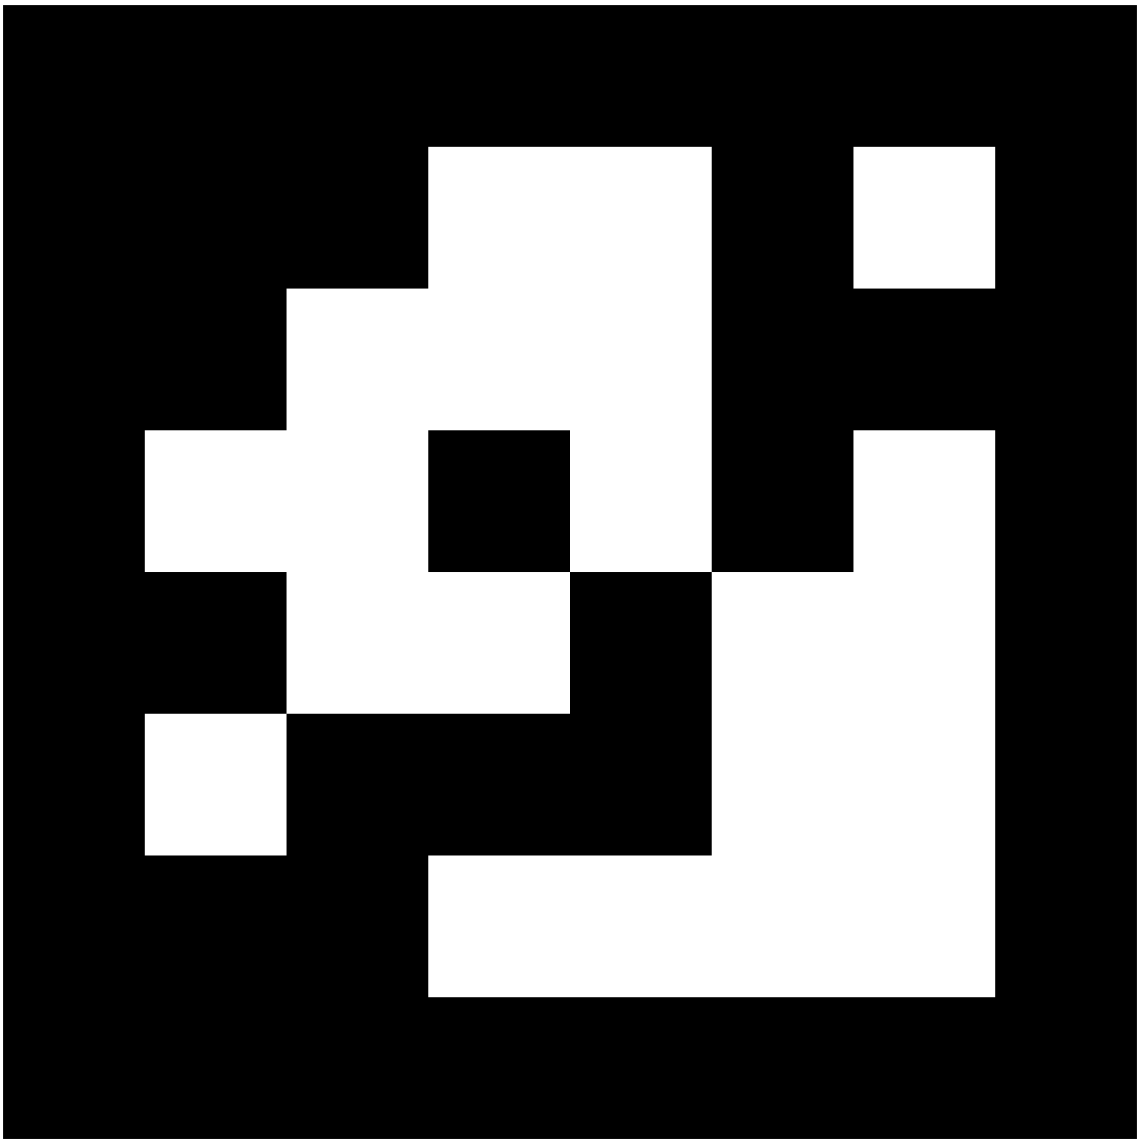

<- must measure 100 mm

1. Print at ACTUAL SIZE / 100 % (never 'fit to page'). Print every sheet in one run, same settings.
2. With a ruler, MEASURE THE BLACK SQUARE EDGE of this sheet (printed: 150.0 mm). Enter the measured value of sheet 0, in metres, as marker.edge_m in the robot config. Check the 100 mm bar above on every sheet.
3. Reprint any sheet whose black square differs from sheet 0 by more than 1 mm.

# 6

## ROOMCLEANER FLOOR REFERENCE

sheet 7 of 9 - AprilTag 36h11 id 6

Lay flat, any rotation, roughly where the layout page shows.

TOP

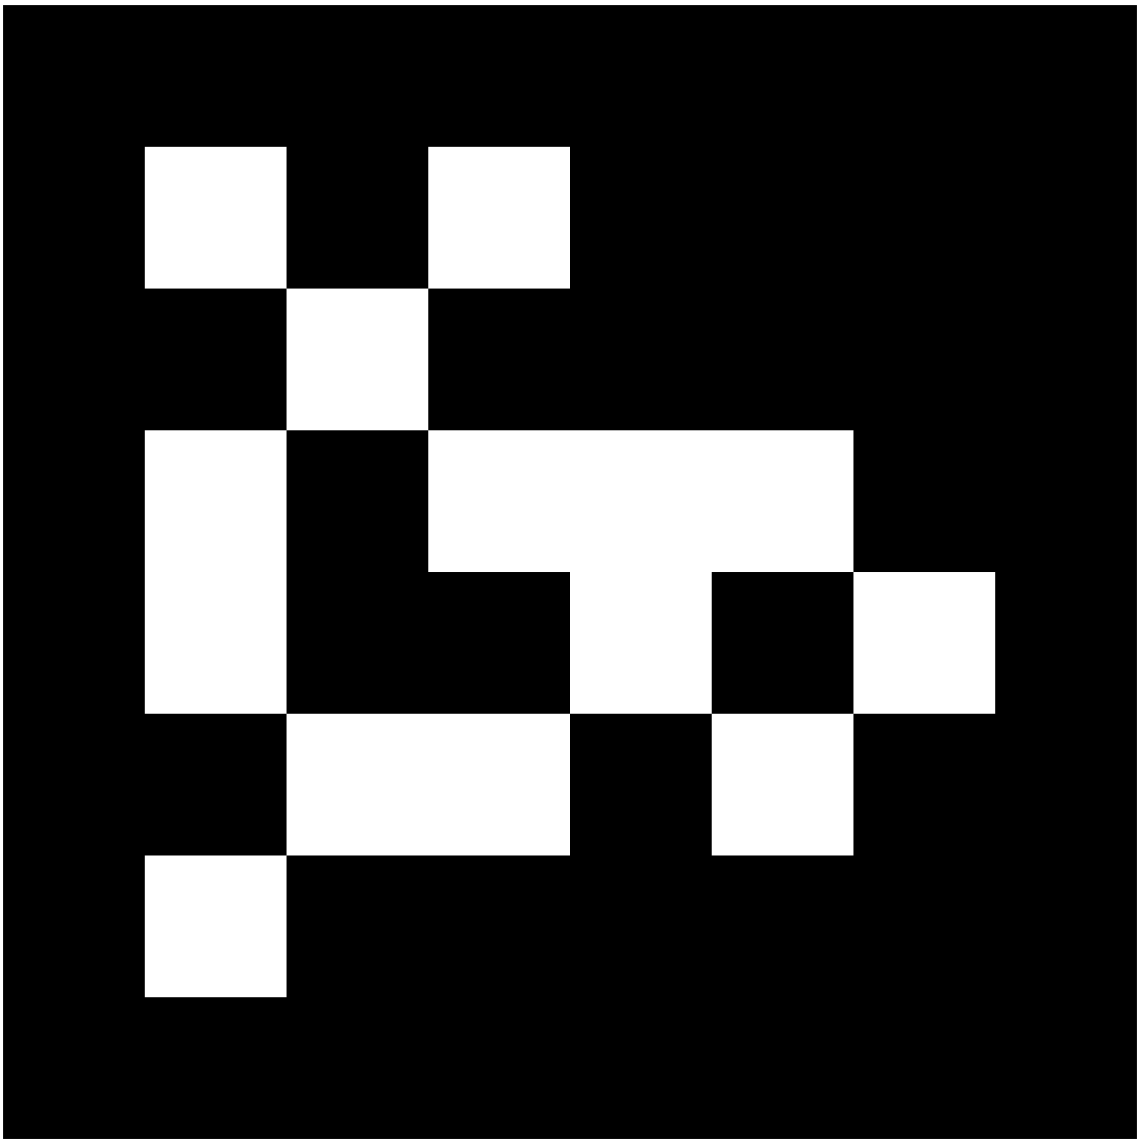

<- must measure 100 mm

1. Print at ACTUAL SIZE / 100 % (never 'fit to page'). Print every sheet in one run, same settings.
2. With a ruler, MEASURE THE BLACK SQUARE EDGE of this sheet (printed: 150.0 mm). Enter the measured value of sheet 0, in metres, as marker.edge_m in the robot config. Check the 100 mm bar above on every sheet.
3. Reprint any sheet whose black square differs from sheet 0 by more than 1 mm.

# 7

## ROOMCLEANER FLOOR REFERENCE

sheet 8 of 9 - AprilTag 36h11 id 7

Lay flat, any rotation, roughly where the layout page shows.

TOP

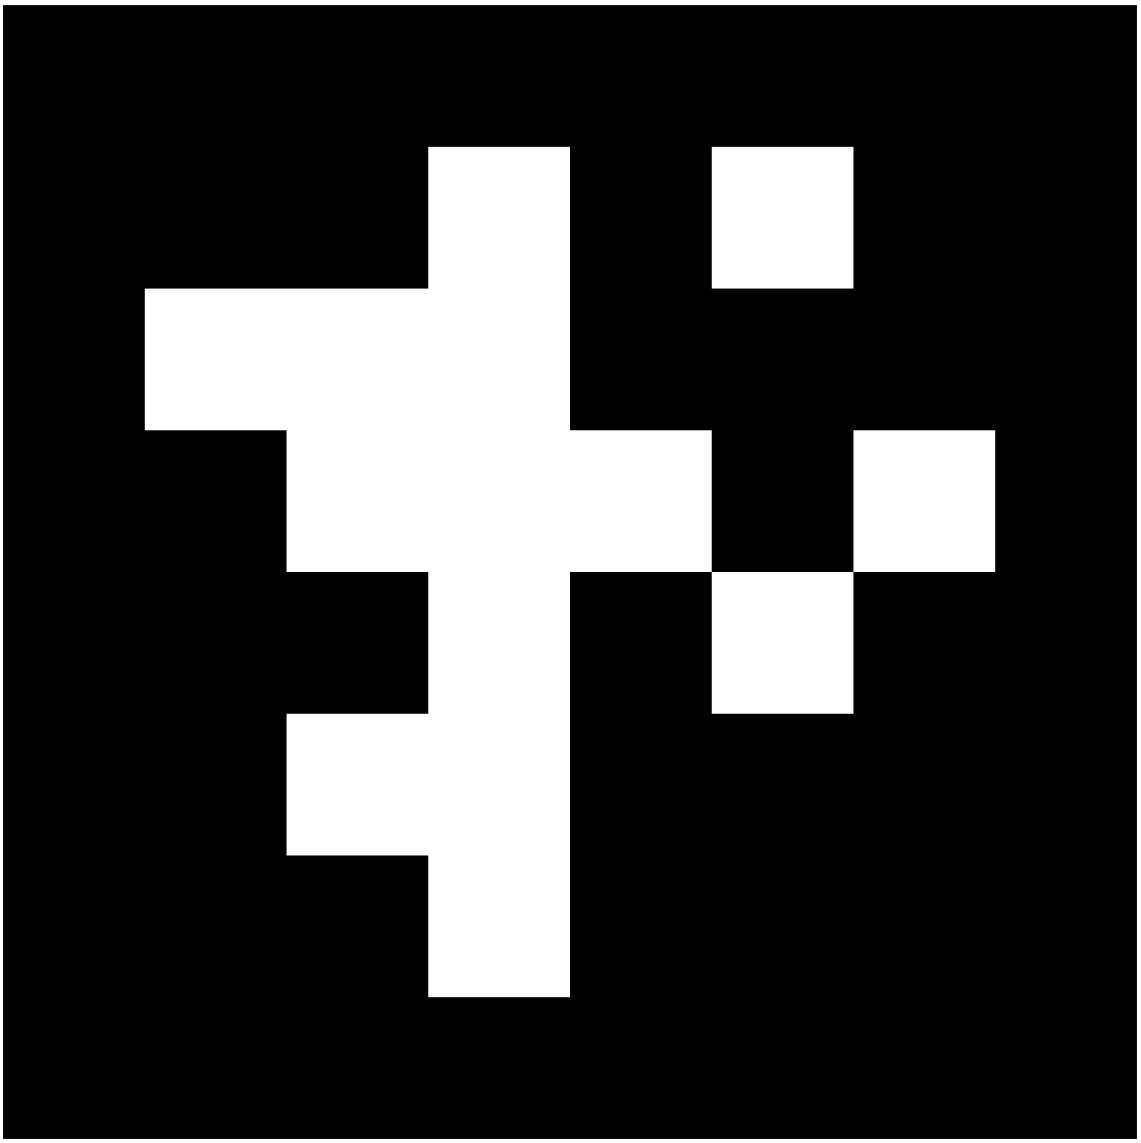

<- must measure 100 mm

1. Print at ACTUAL SIZE / 100 % (never 'fit to page'). Print every sheet in one run, same settings.
2. With a ruler, MEASURE THE BLACK SQUARE EDGE of this sheet (printed: 150.0 mm). Enter the measured value of sheet 0, in metres, as marker.edge_m in the robot config. Check the 100 mm bar above on every sheet.
3. Reprint any sheet whose black square differs from sheet 0 by more than 1 mm.

# 8

## ROOMCLEANER FLOOR REFERENCE

sheet 9 of 9 - AprilTag 36h11 id 8

Lay flat, any rotation, roughly where the layout page shows.

TOP

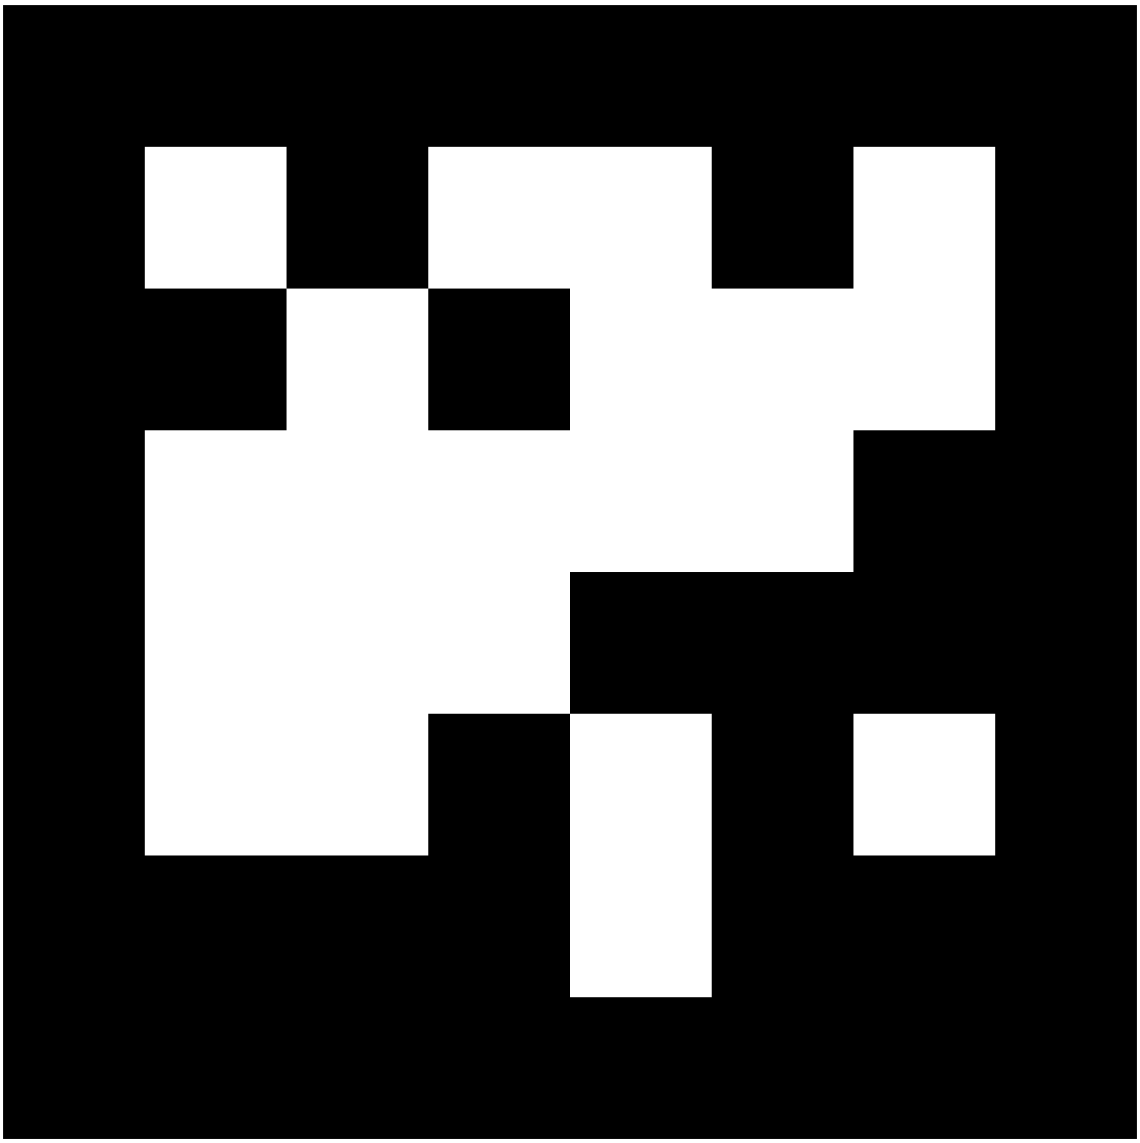

<- must measure 100 mm

1. Print at ACTUAL SIZE / 100 % (never 'fit to page'). Print every sheet in one run, same settings.
2. With a ruler, MEASURE THE BLACK SQUARE EDGE of this sheet (printed: 150.0 mm). Enter the measured value of sheet 0, in metres, as marker.edge_m in the robot config. Check the 100 mm bar above on every sheet.
3. Reprint any sheet whose black square differs from sheet 0 by more than 1 mm.