Tock Embedded OS Tutorial

SenSys 2017

Welcome to the Tock OS Training!

Please make sure you have completed all of the tutorial pre-requisites. If you prefer, you can download a virtual machine image with all the pre-requisites already installed.

https://github.com/helena-project/tock/tree/master/doc/courses/sensys/README.md

aka

http://bit.do/tock

Tock

A secure operating system for microcontrollers

- Kernel components in Rust
- ► Type-safe API for safe driver development
- ► Hardware isolated processes for application code

Use cases

- Security applications (e.g. authentication keys)
- Sensor networks
- Programmable wearables
- ► PC/phone peripherals
- ► Home/industrial automation
- ▶ Flight control

TockOS Stack

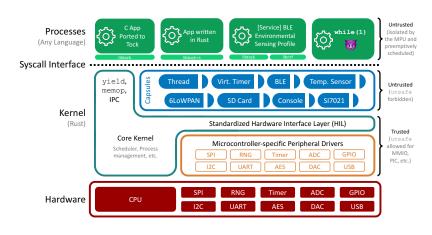


Figure 1

State of Tock

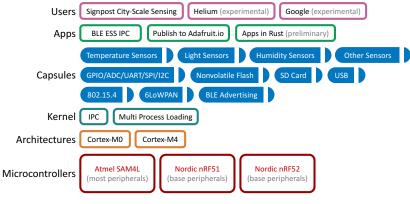


Figure 2

Tock 1.0 (Coming very soon)

- Stabilize the initial syscall interface
 - Docs: https://github.com/helena-project/tock/tree/master/doc/syscalls
- Enable apps to be portable and independent of kernel
- Punts on stabilizing the internal kernel interfaces


Agenda Today

- 1. Intro to hardware, tools and development environment
- 2. Write an end-to-end Bluetooth Low Energy environment sensing application
- 3. Add functionality to the Tock kernel
 - Write some Rust!

Part 1: Hardware, tools, and development environment

Hail

SAM4L Accelerometer MCU RGB LED

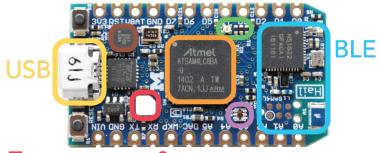

Temperature & Humidity

Light Sensor

We need the Hails back at the end of the tutorial

But you can take one home with you! Purchase here:

https://tockos.org/hardware

Put in "SENSYS17" for \$5 off, and "XXX" as the address for local pickup.

Binaries on-board in flash

- ▶ 0x00000: **Bootloader**: Interact with Tockloader; load code
- ► 0x10000: **Kernel**
- ▶ 0x30000: **Processes**: Packed back-to-back

Tools

- make
- ▶ Rust/Cargo/Xargo (Rust code → LLVM)
- ightharpoonup arm-none-eabi (LLVM ightarrow Cortex-M)
- tockloader to interact with Hail and the bootloader

Tools: tockloader

Write a binary to a particular address in flash

\$ tockloader flash --address 0x10000 \
 target/thumbv7em-none-eabi/release/hail.bin

Program a process in Tock Binary Format¹:

\$ tockloader install myapp.tab

Restart the board and connect to the debug console:

\$ tockloader listen

¹TBFs are relocatable process binaries prefixed with headers like the package name. .tab is a tarball of TBFs for different architectures as well as a metadata file for tockloader.

Check your understanding

- 1. What kinds of binaries exist on a Tock board? Hint: There are three, and only two can be programmed using tockloader.
- 2. What steps would you follow to program a process onto Hail? What about to replace the kernel?

Answers

- The three binaries are the serial bootloader, the kernel, and a series of processes. The bootloader can be used to load the kernel and processes, but cannot replace itself.
- To install a process, simply run tockloader install in the app directory. To load the kernel, use tockloader flash and specify the binary and the address: tockloader flash --address 0x10000 hail.bin.

Hands-on: Set-up development environment

- 3. Compile and flash the kernel
- 4. (Optional) Familiarize yourself with tockloader commands
 - uninstall
 - ▶ list
 - erase-apps
- 5. (Optional) Add some other apps from the repo, like blink and sensors
- ► Head to http://bit.do/tock2 to get started!
- https://github.com/helena-project/tock/blob/master/doc/courses/sensys/environment.md)

Part 2: User space

System calls

Tock supports five syscalls that applications use to interact with the kernel.

Call	Target	Description
command	Capsule	Invoke an operation on a capsule
allow	Capsule	Share memory with a capsule
subscribe	Capsule	Register an upcall
memop	Core	Modify memory break
yield	Core	Block until next upcall is ready

C System Calls: command & allow

```
// Start an operation
int command(u32 driver, u32 command, int arg1, int arg2);
// Share memory with the kernel
int allow(u32 driver, u32 allow, void* ptr, size_t size);
```

C System Calls: subscribe

C System Calls: yield & yield_for

```
// Block until next callback
void yield(void);

// Block until a specific callback
void yield_for(bool *cond) {
   while (!*cond) {
      yield();
   }
}
```

Example: printing to the debug console

```
#define DRIVER NUM CONSOLE 0x0001
bool done = false:
static void putstr cb(int x, int y, int z, void* ud) {
 done = true;
int putnstr(const char *str, size t len) {
  allow(DRIVER_NUM_CONSOLE, 1, str, len);
  subscribe(DRIVER_NUM_CONSOLE, 1, putstr_cb, NULL);
  command(DRIVER NUM CONSOLE, 1, len, 0);
  yield_for(&done);
  return SUCCESS;
}
```

Inter Process Communication (IPC)

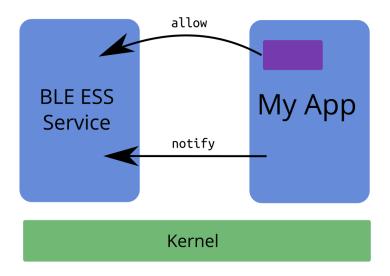


Figure 4

Tock Inter Process Communication Overview

Servers

- Register as an IPC service
- Call notify to trigger callback in connected client
- Receive a callback when a client calls notify

Clients

- Discover IPC services by application name
- ▶ Able to share a buffer with a connected service
- Call notify to trigger callback in connected service
- Receive a callback when service calls notify

Client Inter Process Communication API

```
// Discover IPC service by name
int ipc discover(const char* pkg name);
// Share memory slice with IPC service
int ipc share(int pid, void* base, int len);
// Register for callback on server `notify`
int ipc_register_client_cb(int pid, subscribe_cb cb,
                           void* userdata):
// Trigger callback in service
int ipc_notify_svc(int pid);
```

Check your understanding

- How does a process perform a blocking operation? Can you draw the flow of operations when a process calls delay_ms(1000)?
- 2. Which functions would a client call to interact with an IPC service that provides a UART console? What does the design of the console service look like?

Answers

- 1. A blocking operation starts with setting up a callback (using the subscribe syscall), then is initiated with a command syscall, and the process then blocks until the callback is called. For delay_ms(1000), the application first registers a timer done callback, then calls the correct timer command with the value 1000, then calls yield() which will return when the timer callback is triggered after 1000 ms.
- 2. First the client would call ipc_discover() to find the ID of the console service. Then, the client would call ipc_share() to share a buffer with the service, fill in the buffer with the string it wants to print to the console, and call ipc_notify_svc() to invoke the service to actually print the string. If the client wants to know when the string has been printed, it should ipc_register_client_cb() before notifying the service to get a callback.

The console service is relatively simple. It first has to register a callback to receive notifications from clients. When the callback triggers, it uses the buffer shared by the client and prints the contents to the console.

Hands-on: Write a BLE environment sensing application

- 3. Get an application running on Hail
- 4. Print "Hello World" every second
- 5. Extend your app to sample on-board sensors
- Extend your app to report through the ble-env-sense service
- ► Head to http://bit.do/tock3 to get started!
- https://github.com/helena-project/tock/blob/master/doc/courses/sensys/application.md)

Part 3: The kernel

Trusted Computing Base (unsafe allowed)

- Hardware Abstraction Layer
- Board configuration
- Event & Process scheduler
- Rust core library
- Core Tock primitives

```
kernel/chips/
```

Capsules (unsafe not allowed)

- Virtualization
- Peripheral drivers
- ► Communication protocols (IP, USB, etc)
- Application logic

capsules/

Constraints

Small isolation units

Breaking a monolithic component into smaller ones should have low/no cost

Avoid memory exhaustion in the kernel

No heap. Everything is allocated statically.

Low communication overhead

Communicating between components as cheap as an internal function call. Ideally inlined.

Event-driven execution model

```
pub fn main<P, C>(platform: &P, chip: &mut C,
                  processes: &mut [Process]) {
    loop {
        chip.service_pending_interrupts();
        for (i, p) in processes.iter_mut().enumerate() {
            sched::do_process(platform, chip, process);
        if !chip.has pending interrupts() {
            chip.prepare for sleep();
            support::wfi();
```

Event-driven execution model

```
fn service pending interrupts(&mut self) {
    while let Some(interrupt) = get interrupt() {
        match interrupt {
            ASTALARM => ast::AST.handle_interrupt(),
            USARTO => usart::USARTO.handle_interrupt(),
            USART1 => usart::USART1.handle_interrupt(),
            USART2 => usart::USART2.handle_interrupt(),
```

Event-driven execution model

```
impl Ast {
    pub fn handle_interrupt(&self) {
        self.clear alarm();
        self.callback.get().map(|cb| { cb.fired(); });
impl time::Client for MuxAlarm {
   fn fired(&self) {
        for cur in self.virtual alarms.iter() {
            if cur.should_fire() {
                cur.armed.set(false);
                self.enabled.set(self.enabled.get() - 1);
                cur.fired();
```

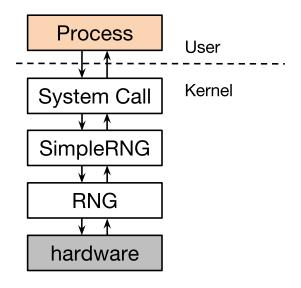


Figure 5: Capsules reference each other directly, assisting inlining

Check your understanding

Hands-on: Write and add a capsule to the kernel

- 4. Read the Hail boot sequence in boards/hail/src/main.rs
- 5. Write a new capsule that prints "Hello World" to the debug console.
- 6. Extend your capsule to print "Hello World" every second
- 7. Extend your capsule to print light readings every second
- Extra credit
- ► Head to http://bit.do/tock4 to get started!
- https://github.com/helena-project/tock/blob/master/doc/courses/sensys/capsule.md)

We need the Hails back!

But you can take one home with you! Purchase here:

https://tockos.org/hardware

Put in "SENSYS17" for \$5 off, and "XXX" as the address for local pickup.

Stay in touch!

```
https://www.tockos.org
https://github.com/helena-project/tock
tock-dev@googlegroups.com
#tock on Freenode
Quick Survey!
```

► https://goo.gl/???