
PARTS CATALOGUE FOR

XL5010	XL5030	XL5500	PX100
XL5010NTP	XL5030NTP	XL5500NTC AV	PX100HC
XL5011	XL5031	XL5500 SE	RPX100
XL5011AV	XL5031AV	XL5600	PX100NTC
XL5011NTC	XL5031NTC	XL5600NTC AV	PX110NTC
XL5011NTP	XL5031NTP	XL5700	PX150
XL5012	XL5032	XL5700NTC AV	PX200
XL5012AV	XL5032AV	RS-15	PX200HC
XL5012NTP	XL5032NTP	RS-25	PX200NTC
XL5012NTP AV	XL5032NTP AV	RS-35	PX220NTC
XL5020	XL5050	RXL5130	PX300
XL5020NTP	XL5050NTC	RXL5232	PX300HC
XL5021	XL5060	RXL5340	PX300NTC
XL5021AV	XL5060NTC		PX330NTC
XL5021NTC	XL5070		
XL5021NTP	XL5070NTC		
XL5022AV	XL5130		
XL5022NTP	XL5232		
XL5022NTP AV	XL5300		
	XL5340		


CONTENTS

(1)	PRINCIPAL PARTS (XL Series)2
	PRINCIPAL PARTS (PX Series)6
(2)	UPPER SHAFT / NEEDLE BAR / THREAD TENSION / PRESSER MECHANISM10
(3)	HORIZONTAL FEED / VERTICAL FEED MECHANISM 12
(4)	FEED ADJUSTMENT MECHANISM14
(5)	ROTARY HOOK DRIVE / ROTARY HOOK MECHANISM16
(6)	ZIGZAG / BH MECHANISM 18
(7)	PATTERN SELECTION MECHANISM without BH CONNECTING LINK ASSY
	PATTERN SELECTION MECHANISM with BH CONNECTING LINK ASSY
(8)	BOBBIN WINDER / THREAD GUIDE / LAMP MECHANISM 24
(9)	MOTOR UNIT26
(10)	ATTACHMENTS / PACKING MATERIALS / PRINTED MATTERS30


No.	CODE.	NAME	REMARKS	No.	CODE.	NAME	REMARKS
1	XA5721021	FRONT COVER (XL5300)		6	XA5748021	MYLAR STICKER 4STEP	
	XA5721024	FRONT COVER (XL5130, RXL5130)				(XL5130, XL5500: CANADA)	
	XA5721025	FRONT COVER (XL5232, RXL5232)			XA5749021	MYLAR STICKER 1STEP	
	XA5721026	FRONT COVER (XL5340, RXL5340)				(XL5232, XL5600, XL5700:CANADA)	
	XA6009021	FRONT COVER (XL501*)		7	XA6583022	DROP MARK	
	XC7329021	FRONT COVER (XL5500, XL5500NTC AV)				(XL5500, XL5600, XL5700: GER, U.K, FRA),	
	XC7329022	FRONT COVER (XL5600*)				(XL5500SE), (XL5500NTC AV),	
	XC7329023	FRONT COVER (XL5700*)				(XL5600NTC AV),	
	XC7329024	FRONT COVER (XL5500SE)				(XL5700NTC AV), (RS15), (RS25)	
	XC7329025	FRONT COVER (RS15)		8	XC8623021	QUICK SYSTEM STICKER (RS-35)	
	XC7329026	FRONT COVER (RS25)		9	053400806	SCREW, PAN (T WASHER) M4X8	
	XC7329027	FRONT COVER (RS35)		10	XA5723121	REAR COVER	
	XC7431021	FRONT COVER			XC7333021	REAR COVER	
		(XL5050*, XL5060*, XL5070*)				(XL5050*, XL5060*, XL5070*, XL5500*,	
2	XA5739021	DECORATION PLATE (XL5300)				XL5600*, XL5700*, RS15, RS25, RS35)	
	XA5739027	DECORATION PLATE (XL5130, RXL5130)		11	XA6106021	THREAD GUIDE ASSY	
	XA5739028	DECORATION PLATE (XL5232, RXL5232)		12	0A5301006	SCREW, PAN (S/P WASHER) M3X10	
	XA5739029	DECORATION PLATE (XL5340, RXL5340)		13	052301606	SCREW, PAN (S/P WASHER) M3X16	
	XC7331021	DECORATION PLATE		14	021300106	NUT, 1 M3	
		(XL5500, XL5500NTC AV)		15	188058121	SPOOL PIN	
	XC7331022	DECORATION PLATE (XL5600*)		16	XA4441021	SPOOL PIN STAND	
	XC7331023	DECORATION PLATE (XL5700*)		17	XA0628021	SPOOL PIN SPRING	
	XC7331025	DECORATION PLATE (XL5060*)		18	X59864221	BOBBIN PRESSER	040152
	XC7331027	DECORATION PLATE (XL5050*)		19	XA5724021	HINGE DOOR ASSY (XL5340)	
	XC7331028	DECORATION PLATE (XL5070*)			XA5724022	HINGE DOOR ASSY (XL5700*, RS35)	
	XC7331029	DECORATION PLATE (XL5500SE)		20	XA5963021	HINGE DOOR	
	XC7331031	DECORATION PLATE (RS-15)			XA5963022	HINGED DOOR	
	XC7331032	DECORATION PLATE (RS-25)				(XL5050*, XL5060*, XL5070*, XL5500*,	
	XC7331033	DECORATION PLATE (RS-35)				XL5600*, RS15, RS25)	
	XA6010021	DISPLAY SHEET (XL5030*)		21	X53638121	SPRING	
	XA6010022	DISPLAY SHEET (XL5020*)		22	X53625121	UPPER COVER THREAD GUIDE	
	XA6010023	DISPLAY SHEET (XL5010*)		23	XA5726121	HANDLE	
	XA6010027	DISPLAY SHEET (XL5011*)			XA5726122	HANDLE	
	XA6010028	DISPLAY SHEET (XL5021*)				(XL5050*, XL5060*, XL5070*, XL5500*,	
	XA6010029	DISPLAY SHEET (XL5031*)				XL5600*, XL5700*, RS15, RS25, RS35)	
	XA6010031	DISPLAY SHEET (XL5012*)		24	XA8476020	HANDLE HOLDER XR	
	XA6010032	DISPLAY SHEET (XL5032*)		25	XA8477020	HANDLE HOLDER XL	
	XA6010033	DISPLAY SHEET (XL5022*)		26	XA3337022	TAPTITE, CUP P M4X20	
3	XA4657021	CUSHION		27	XA5728121	FACE PLATE	
	XA4657051	CUSHION]		XC7336021	FACE PLATE	
		(XL5130, XL5232: U.S.A.), (XL5340)				(XL5050*, XL5060*, XL5070*, XL5500*,	
		(RXL5130), (RXL5232), (RXL5340)				RS15, XL5600*, RS25, XL5700*, RS35)	
4	XA5732021	BOTTOM HOLD PLATE		28	0A0211850	SPRING PIN	
5	XA3337022	TAPTITE CUP P M4X20					

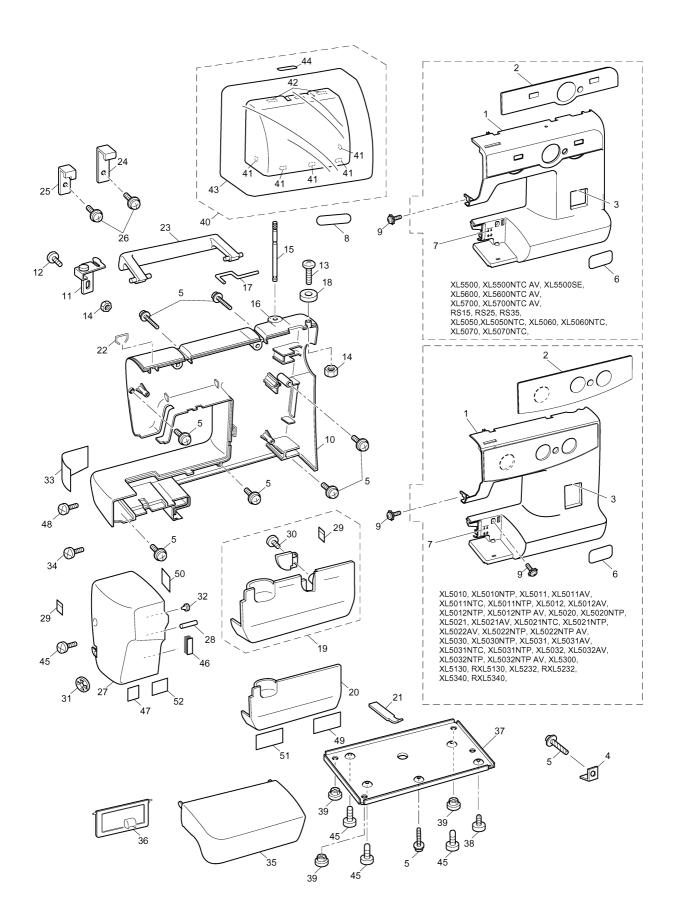


No.	CODE.	NAME	REMARKS	No.	CODE.	NAME	REMARKS
29	X80321001	NT LOWER THREAD CUTTER			125782051	SEW-LIGHT RATING STICKER	
		(RXL5130, RXL5232, RXL5340)				(RXL5130, RXL5232: U.S.A.)	
	X80321021	NT LOWER THREAD CUTTER		51	X56455021	HINGE DOOR LABEL	
30	136681021	TAPTITE, BIND B M3X8				(XL501*, XL5050*, XL502*, XL5060*, XL503*,	
		(XL5340, XL5700*, RS35)				XL5070*: U.K.),	
31	138384021	RETAINING RING,CS5				(XL5130), (XL5232), (XL5340),	
	138384051	RETAINING RING,CS5				(XL5500*, XL5600*, XL5700*: U.S.A., CAN, U.K.)	
		(RXL5130, RXL5232, RXL5340)			X56455051	HINGE DOOR LABEL	
32	X51895021	FACE PLATE BUSH				(RXL5130, RXL5232: U.S.A.)	
	X51895051	FACE PLATE BUSH		52	XC3372021	UPPER THREADING LABEL	
		(RXL5130, RXL5232, RXL5340)				(XL501*, XL502*, XL503*: U.K.)	
33	XA4468021	REAR COVER REFLECTOR			XC6750021	UPPER THREADING LABEL	
34	060401416	SCREW, BIND M4X14				(XL5050*, XL5060*, XL5070*, XL5500*,	
35	XA5730021	ACCESSORY TABLE				XL5600*, XL5700*: U.K.)	
	XA5730024	ACCESSORY TABLE					
		(XL5050*, XL5060*, XL5070*, XL5500*,					
		XL5600*, XL5700*, RS15, RS25, RS35)					
36	XA5731221	ACCESSORY TABLE COVER					
	XA5731222	ACCESSORY TABLE COVER					
		(XL5050*, XL5060*, XL5070*, XL5500*,					
		XL5600*, XL5700*, RS15, RS25, RS35)					
37	XA4569020	BASE PLATE					
38	XA4687021	ADJUSTING SCREW ASSY					
39	XA1805021	BASE RUBBER A					
40	XC0425021	MACHINE COVER ASSY (XL5020: KOREA)					
41	125440050	CASE FELT (XL5020: KOREA)					
42	XZ0016050	CASE FELT TOP (XL5020: KOREA)					
43	X60678051	BAG, 700X630H (XL5020: KOREA)					
44	XA3028021	DECORATION PLATE (XL5020: KOREA)					
45	060400816	SCREW, BIND M4X8					
46	XA6661021	PILE					
	XA6661051	PILE (RXL5130, RXL5232, RXL5340)					
47	XC4167021	CAUTION STICKER (KOREA)					
48	138172021	SCREW,PAN (S/P WASHER) M4X10					
	138172051	SCREW,PAN (S/P WASHER) M4X10					
		(RXL5130, RXL5232, RXL5340, XL5500SE)					
49	XA2107221	LABEL					
		(XL5500, XL5700: U.S.A., CAN, CHILE)					
		(XL5232), (XL5600: U.S.A., CAN), (XL5340),					
		(XL5300), (XL5130)					
	XA2107251	LABEL (RXL5130, RXL5232: U.S.A.)					
50	125782021	SEW-LIGHT RATING STICKER					
		(XL5500, XL5600, XL5700: U.S.A., CAN)					
		(XL5130), (XL5232), (XL5300), (XL5340)					

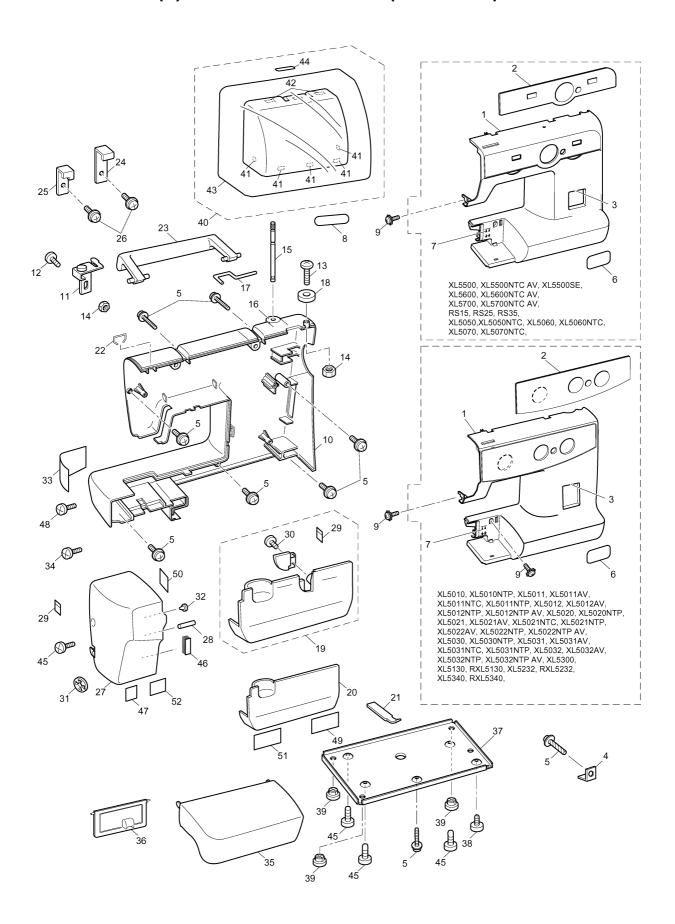

No.	CODE.	NAME	REMARKS	No.	CODE.	NAME	REMARKS
1	XA6356021	FRONT COVER			XA6394023	PATTERN DECORATION PLATE	
		(PX200, PX200NTC, PX200HC, PX220NTC,				(PX100: ARGENTINE, CHILE, MEXICO)	
		PX300, PX300HC, PX300NTC, PX330NTC)			XA6394025	PATTERN DECORATION PLATE	
	XA6393021	FRONT COVER				(PX100NTC, PX110NTC, PX150)	
		(PX100, PX100HC, PX100NTC,		8	XA6360021	PATTERN DISPLAY RACK	
		PX110NTC, PX150)		9	XA6361021	DISPLAY PLATE	
2	XA6357021	PANEL DECORATION PLATE (PX300)		10	XA6361022	DISPLAY PLATE	
	XA6357023	PANEL DECORATION PLATE		11	XA6362020	SPRING	
		(PX200, except PX200: U.S.A.)		12	XA6363021	DISPLAY REAR PLATE	
	XA6357024	PANEL DECORATION PLATE (PX100)		13	146200051	RETAINING RING,CS4	
	XA6357026	PANEL DECORATION PLATE		14	053400806	SCREW,PAN (T WASHER) M4X8	
		(PX200: U.S.A.)		15	XA5723121	REAR COVER	
	XA6357031	PANEL DECORATION PLATE		16	XA6106021	THREAD GUIDE ASSY	040161
		(PX100NTC)		17	0A5301006	SCREW,PAN (S/P WASHER) M3X10	
	XA6357032	PANEL DECORATION PLATE		18	188058121	SPOOL PIN	
		(PX200NTC)		19	XA4441021	SPOOL PIN STAND	
	XA6357033	PANEL DECORATION PLATE		20	XA0628021	SPOOL PIN SPRING	
		(PX300NTC)		21	X59864221	BOBBIN PRESSER	040152
	XA6357034	PANEL DECORATION PLATE		22	052301606	SCREW,PAN (S/P WASHER) M3X16	
		(PX330NTC)		23	021300106	NUT, 1 M3	
	XA6357035	PANEL DECORATION PLATE (PX150)		24	XA5724021	HINGE DOOR ASSY	
	XA6357036	PANEL DECORATION PLATE		25	XA5963021	HINGE DOOR	
		(PX110NTC)		26	X53638121	SPRING	
	XA6357037	PANEL DECORATION PLATE		27	X53625121	UPPER COVER THREAD GUIDE	
		(PX220NTC)		28	XA5726121	HANDLE	
3	XA6358021	F PATTERN INDICATOR PLATE		29	XA8476020	HANDLE HOLDER XR	
4	XA5732021	BOTTOM HOLD PLATE		30	XA8477020	HANDLE HOLDER XL	
5	XA3337022	TAPTITE CUP P M4X20		31	XA3337022	TAPTITE, CUP P M4X20	
6	XA6583021	DROP MARK		32	XA6365121	FACE PLATE	
7	XA6359021	PATTERN DECORATION PLATE		33	X80321001	NT LOWER THREAD CUTTER (RPX100)	
		(PX300)			X80321021	NT LOWER THREAD CUTTER	
	XA6359023	PATTERN DECORATION PLATE		34	136681021	TAPTITE, BIND B M3X8	
		(PX300: ARGENTINE, CHILE, MEXICO)		35	138384021	RETAINING RING,CS5	
	XA6359025	PATTERN DECORATION PLATE			138384051	RETAINING RING,CS5 (RPX100)	
		(PX300NTC, PX330NTC)		36	XA4468021	REAR COVER REFLECTOR	
	XA6392021	PATTERN DECORATION PLATE		37	X51895021	FACE PLATE BUSH	
		(PX200)			X51895051	FACE PLATE BUSH (RPX100)	
	XA6392022	PATTERN DECORATION PLATE		38	X52654001	PILE 19X6X6	
		(PX200: U.S.A.)		39	060401416	SCREW, BIND M4X14	
	XA6392023	PATTERN DECORATION PLATE		40	XA5730022	ACCESSORY TABLE	
		(PX200: ARGENTINE, CHILE, MEXICO)		41	XA5731221	ACCESSORY TABLE COVER	
	XA6392025	PATTERN DECORATION PLATE		42	XA4569020	BASE PLATE	
		(PX200NTC, PX220NTC)		43	XA4687021	ADJUSTING SCREW ASSY	
	XA6394021	PATTERN DECORATION PLATE		44	XA1805021	BASE RUBBER A	

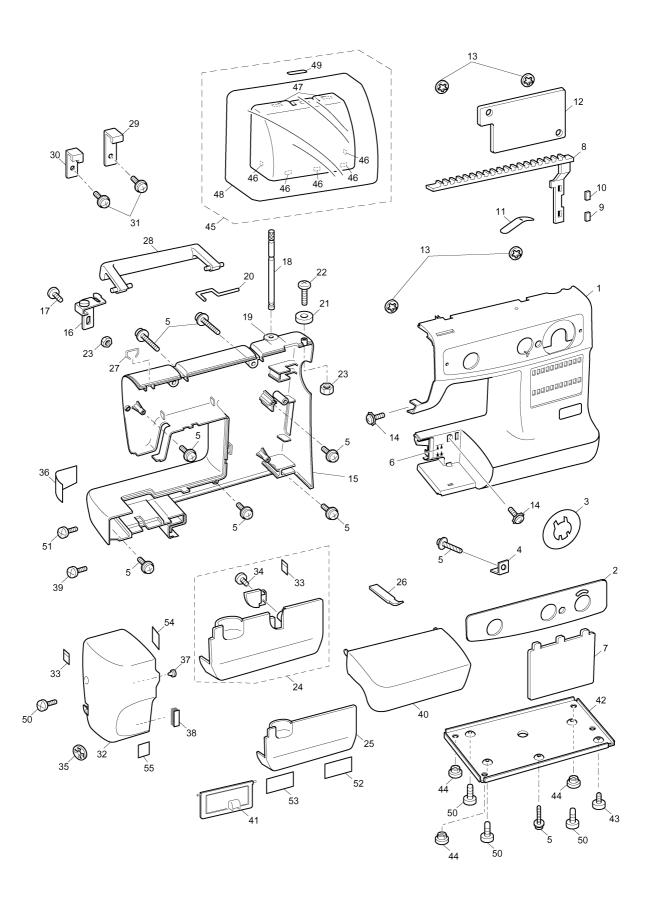


No.	CODE.	NAME	REMARKS
45	XC0425021	MACHINE COVER ASSEMBLY	
		(PX100HC), (PX100: KOREA)	
		(PX200HC), (PX200: KOREA, IRAQ)	
		(PX300HC), (PX300: IRAQ)	
46	125440050	CASE FELT	
		(PX100HC), (PX100: KOREA)	
		(PX200HC), (PX200: KOREA, IRAQ)	
		(PX300HC), (PX300: IRAQ)	
47	XZ0016050	CASE FELT TOP	
		(PX100HC), (PX100: KOREA)	
		(PX200HC), (PX200: KOREA, IRAQ)	
		(PX300HC), (PX300: IRAQ)	
48	X60678051	BAG, 700X630H	
		(PX100HC), (PX100: KOREA)	
		(PX200HC), (PX200: KOREA, IRAQ)	
		(PX300HC), (PX300: IRAQ)	
49	XA3028021	DECORATION PLATE	
		(PX100HC), (PX100: KOREA)	
		(PX200HC), (PX200: KOREA, IRAQ)	
		(PX300HC), (PX300: IRAQ)	
50	060400816	SCREW, BIND M4X8	
51	138172021	SCREW,PAN (S/P WASHER) M4X10	
	138172051	SCREW,PAN (S/P WASHER) M4X10	
		(RPX100, PX220NTC)	
52	XA2107221	LABEL (PX100, PX200, PX300: U.S.A.)	
53	X56455021	HINGE DOOR LABEL	
		(PX100, PX200, PX300: U.S.A.)	
54	125782021	SEW-LIGHT RATING STICKER	
		(PX100, PX200, PX300: U.S.A.)	
55	XC4167021	CAUTION STICKER (KOREA)	
<u> </u>			

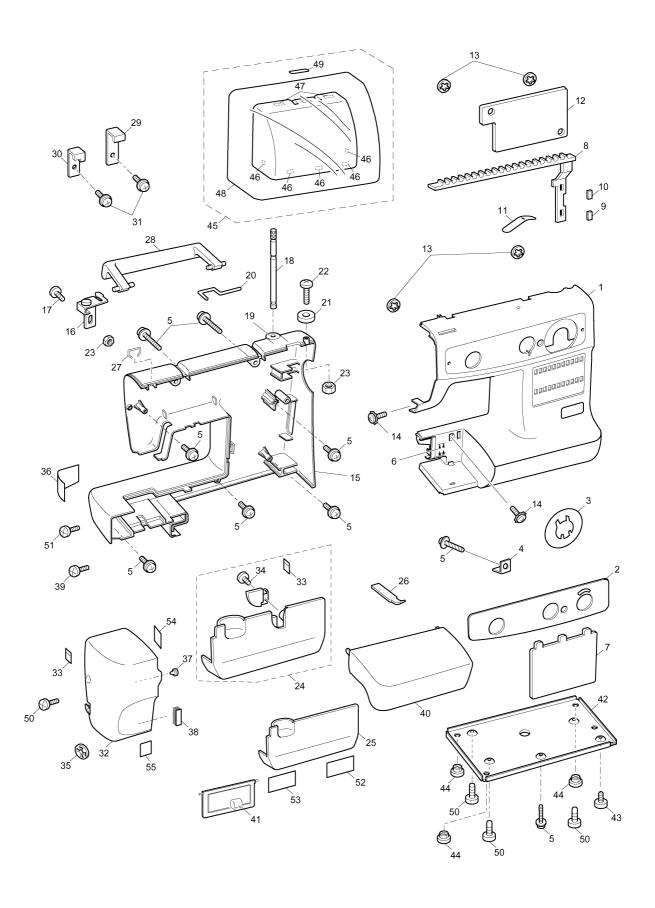

(2) UPPER SHAFT / NEEDLE BAR / THREAD TENSION / PRESSER MECHANISM

No.	CODE.	NAME	REMARKS	No.	CODE.	NAME	REMARKS
		UPPER SHAFT MECHANISM				PRESSER MECHANISM	
1	XA7211321	UPPER SHAFT ASSEMBLY		35	XA2402050	PRESSER BAR	
2	X52478021	BUSHING PRESSER			XA2402020	PRESSER BAR	
3	X57908021	TAPTITE, BIND S M4X10				(XL5050NTC), (XL5060NTC), (XL5070NTC),	
4	XA8378021	PULLEY				(XL5500: U.S.A., CAN, CHILE), (XL5500SE),	
	XA8378022	PULLEY				(XL5500NTC AV), (XL5600: U.S.A., CAN),	
		(XL5050*, XL5060*, XL5070*, XL5500*				(XL5600NTC AV), (XL5700),	
		XL5600*, XL5700*, RS15, RS25, RS35)				(XL5700NTC AV)	
		NEDDLE BAR MECHANISM			128437020	PRESSER BAR	040158
5	XA2358121	NEEDLE BAR				(XL5010), (XL5011), (XL5011AV), (XL5012),	
6	XZ0005020	NEEDLE BAR THREAD GUIDE				(XL5020), (XL5021), (XL5012AV), (XL5022AV),	
7	012400432	SET SCREW, SOCKET (FT) M4X4				(XL5021AV), (XL5030), (XL5031), (XL5031AV),	
8	XZ0001121	NEEDLE CLAMP				(XL5032), (XL5032AV), (PX100), (PX200),	
9	XA5718121	NEEDLE CLAMP PIN	040212			(XL5050), (XL5060), (XL5070), (RS15), (RS25),	
10	XZ0002021	NEEDLE CLAMP SCREW				(XL5500, XL5600: GER, U.K., FRA)	
11	XA8379021	NEEDLE BAR SUPPORTER ASSY		36	X55770021	PRESSER BAR SPRING	
12	XA3952220	NEEDLE BAR SUPPORTER		37	XA3955121	PRESSER BAR BRACKET	
13	XA1289121	NEEDLE BAR CRANK ROD ASSY		38	X52760021	SET SCREW,PAN M6X12	
14	XA3477021	NEEDLE BAR SUPPORTER STUD			X52760051	SET SCREW,PAN M6X12	
15	X54369021	SPRING				(RXL5130, RXL5232, RXL5340, RPX100)	
16	X56851021	LOCK NUT		39	XA2511121	PRESSER FOOT LIFTER	
17	XA8380021	NEEDLE BAR SUPPORTER GUIDE		40	XA0977120	PRESSER FOOT LIFTER STUD	
18	X59115121	NEEDLE BAR CRANK		41	138135122	ZIGZAG PRESSER FOOT	
19	132051022	SCREW, FLAT SM3.57-40X7 L			138135152	ZIGZAG PRESSER FOOT	
20	XA3954021	ZIGZAG NEEDLE PLATE				(RXL5130, RXL5232, RXL5340, RPX100)	
21	X50487051	SCREW M4		42	138134021	PRESSER FOOT HOLDER	
22	X57908021	TAPTITE, BIND S M4X10			138134051	PRESSER FOOT HOLDER	
		(XL5***NTP, NTC, NTP AV, NTC AV, SE,				(RXL5130, RXL5232, RXL5340, RPX100)	
		XL5130,RXL5130: U.S.A., XL5232, RXL5232,		43	132730122	TIGHTENING SCREW 3.57	
		XL5500,XL5600: U.S.A., CANADA, CHILE,		44	XA5796021	TENSION RELEASER C	
		XL5340, RXL5340, XL5700, RS35)		45	120454021	RETAINING RING, CS3	
23	XA2367020	NEEDLE THREADER SET COLLAR			120454051	RETAINING RING, CS3	
24	XA0430021	NEEDLE THREADER SET PLATE				(RXL5130, RXL5232, RXL5340, RPX100)	
25	004260405	SCREW, FLAT M2.6X4		46	XA5797021	SPRING	
26	XA5535021	NEEDLE THREADER SUPPORTER ASSY		47	025030236	WASHER, PLAIN M3	
27	XA0445151	THREADER HOOK ASSEMBLY		48	XA5737021	BH LEVER SET PLATE	
28	037200516	TAPPING SCREW, PAN V M2X5	040207	49	X57908021	TAPTITE, BIND S M4X10	
29	060400616	SCREW, BIND M4X6					
		THREAD TENSION MECHANISM					
30	XA4747021	THREAD TAKE-UP LEVER ASSY					
31	XA4585021	THREAD TAKE-UP LEVER SHAFT					
32	048050346	RETAINING RING, E5					
33	X57913021	TAPTITE, BIND S M4X16					
34	X50532021	PRESSER PLATE					


(2) UPPER SHAFT / NEEDLE BAR / THREAD TENSION / PRESSER MECHANISM

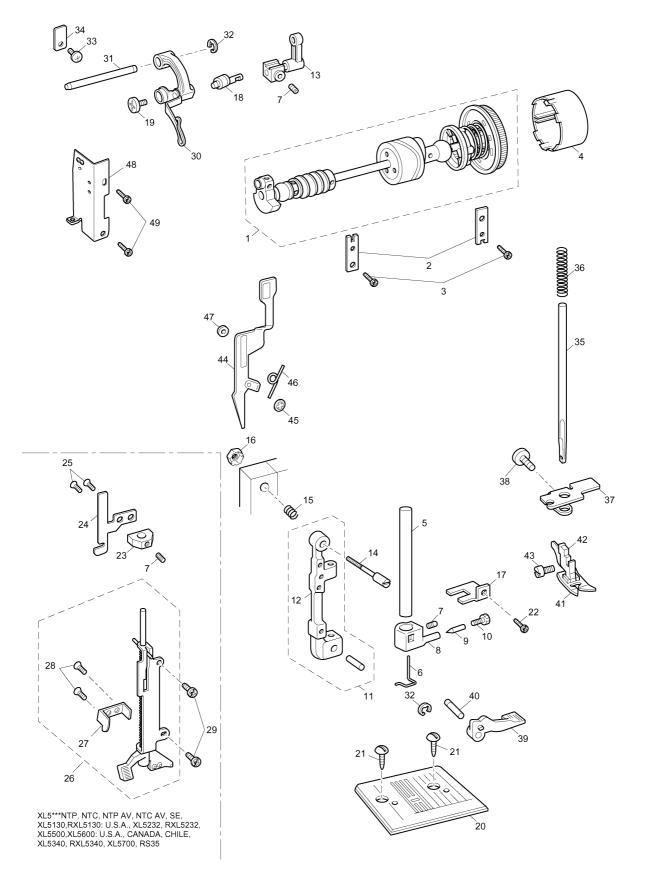


(3) HORIZONTAL FEED / VERTICAL FEED MECHANISM


No.	CODE.	NAME	REMARKS	No.	CODE.	NAME	REMARKS
		HORIZONTAL FEED MECHANISM				VERTICAL FEED MECHANISM	
1	XA0978021	FEED CONNECTING ROD ASSY		37	XA3480021	VERTICAL FEED ARM	
2	XA0980021	SPRING				(XL501*), (XL5050*), (XL502*), (XL5060*),	
3	XA3958020	HORIZONTAL FEED SHAFT				(XL503*), (XL5070*), (XL5130), (RXL5130),	
4	XA0983121	HORIZONTAL FEED ARM ASSY				(XL5232), (RXL5232), (XL5340), (RXL5340),	
5	021400205	NUT, 2 M4				(XL5500, XL5700: U.S.A., CAN, CHILE),	
6	060401416	SCREW, BIND M4X14				(XL5300), (XL5600: U.S.A., CAN)	
7	XA0987021	HORIZONTAL FEED PLATE		38	XA3481021	VERTICAL FEED ADJUSTER	
8	XA0988021	FEED STAND SHAFT		39	XA1504021	VERTICAL FEED SHAFT ARM	
9	XA3960021	FEED STAND				(XL5500, XL5600, XL5700: GER, U.K., FRA)	
10	048030346	RETAINING RING, E3				(XL5500SE), (XL5500NTC AV),	
11	146200051	RETAINING RING, CS4				(XL5600NTC AV), (XL5700NTC AV), (RS15),	
12	XA4430021	FEED DOG				(RS25), (RS35), (PX100), (PX100HC),	
13	XA3474021	DUST PROTECT PLATE				(PX100NTC), (PX110NTC), (RPX100), (PX150),	
14	060300416	SCREW, BIND M3X4				(PX200), (PX200HC), (PX200NTC), (PX220NTC)	
15	060400816	SCREW, BIND M4X8				(PX300), (PX300HC), (PX300NTC), (PX330NTC)	
16	X53330020	WASHER		40	XA1660021	VERTICAL ADJUSTING	
17	XA1082021	TAPER POINT STUD R		41	X50559020	ZIGZAG ADJUSTING NUT	
		(XL5050*, XL5060*, XL5070*, XL5500*,			X50559050	ZIGZAG ADJUSTING NUT	
		XL5600*, XL5700*, RS15, RS25, RS35)				(RXL5130, RXL5232, RXL5340)	
	XA1082051	TAPER POINT STUD R		42	062300806	SCREW, PAN M3X8	
18	XZ0074021	TAPTITE, CUP S4X16		43	060400516	SCREW, BIND M4X5	
19	XA0991021	SPRING		44	XA0995121	VERTICAL FEED SHAFT	
20	X55472021	TAPER POINT STUD L ASSY		45	048060346	RETAINING RING, E6	
21	X56613021	SPRING		46	048030346	RETAINING RING, E3	
22	XA0649021	TAPTITE, CUP S4X14		47	XA1659021	NOTCH SPRING	
23	XA3962021	SS CONNECTING ROD		48	X57908021	TAPTITE, BIND S M4X10	
24	X56960021	NUT 4		49	XA2338021	DROP STOPPER	
25	XA3082121	SS CHANGE LEVER SUB ASSY		50	052401406	SCREW, PAN (S/P WASHER) M4X14	
26	XA3085021	SS FEED LEVER ASSY		51	XA1505021	DROP LEVER	
27	XA3087021	SS FEED LEVER SHAFT			XA1505051	DROP LEVER	
28	048050346	RETAINING RING, E5				(RPX100), (XL5700: GER, U.K, FRA), (RS35)	
29	XA3080121	SS ADJUSTING SHAFT					
30	048040346	RETAINING RING, E4					
31	XA3088021	SS FEED ROD					
32	048030346	RETAINING RING, E3					
33	048050346	RETAINING RING, E5					
34	XA4042120	FEED STAND SUPPORT					
35	XA4692021	SPRING					
36	025040133	WASHER, PLAIN S4					

(3) HORIZONTAL FEED / VERTICAL FEED MECHANISM

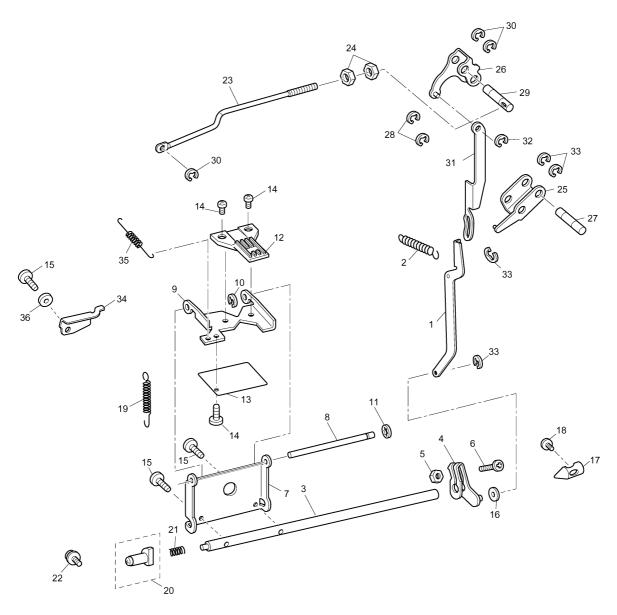

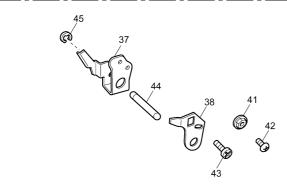


XL501*, XL5050*, XL502*, XL5060*, XL503*, XL5070*, XL5130, RXL5130, XL5500(U.S.A., CAN, CHILE), XL5232, RXL5232, XL5600(U.S.A., CAN), XL5340, XL5300, RXL5340, XL5700(U.S.A., CAN, CHILE)

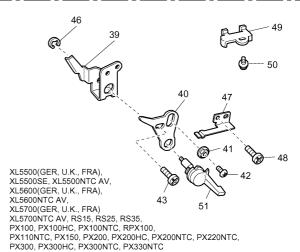

(4) FEED ADJUSTMENT MECHANISM

No.	CODE.	NAME	REMARKS	No.	CODE.	NAME	REMARKS
1	XA0030021	FEED SQUARE BLOCK			XA5735024	DIAL SHEET	
2	XA3089051	FEED REGULATOR ASSY				(XL5020, XL5020NTP, XL5232, RXL5232)	
	XA3089021	FEED REGULATOR ASSY			XA5735025	DIAL SHEET	
		(XL5050, XL5050NTC, XL5060, XL5060NTC,				(XL5010, XL5010NTP, XL5130, RXL5130)	
		XL5070, XL5070NTC, XL5500, XL5500SE,			XA5735028	DIAL SHEET	
		XL5500NTC AV, RS15, XL5600,				(XL5011, XL5011AV, XL5011NTP, XL5011NTC)	
		XL5600NTC AV, RS25, XL5700,			XA5735029	DIAL SHEET	
		XL5700NTC AV, RS35)				(XL5021, XL5021AV, XL5021NTP, XL5021NTC)	
3	X53330020	WASHER			XA5735030	DIAL SHEET	
4	XA4534021	STOP PLATE L				(XL5031, XL5031AV, XL5031NTP, XL5031NTC)	
5	X57913021	TAPTITE, BIND S M4X16			XA5735032	DIAL SHEET	
6	XA0998021	SPRING				(XL5012, XL5012AV,	
7	XA3092021	FEED REGULATOR PLATE ASSY				XL5012NTP, XL5012NTP AV)	
8	XA4343021	REVERSE SEWING LEVER ASSY			XA5735033	DIAL SHEET	
	XA6366021	REVERSE SEWING LEVER (PX Series)				(XL5032, XL5032AV,	
9	XA4532121	REVERSE SEWING LEVER PLATE A				XL5032NTP, XL5032NTP AV)	
10	XA4675021	SPRING			XA5735034	DIAL SHEET	
11	XA1004120	REVERSE SEWING SHAFT				(XL5022AV, XL5022NTP, XL5022NTP AV)	
12	XA6582021	REVERSE BUTTON HOLDER			XC7370021	DIAL SHEET (XL5500, XL5500NTC AV)	
13	XA5733021	FEED REGULATING LEVER KNOB			XC7370023	DIAL SHEET (XL5600, XL5600NTC AV)	
	XC7338021	FEED REGULATING LEVER KNOB			XC7370025	DIAL SHEET (XL5700, XL5700NTC AV)	
		(XL5050, XL5050NTC, XL5060, XL5060NTC,			XC7370029	DIAL SHEET (XL5050, XL5050NTC)	
		XL5070, XL5070NTC, XL5500, XL5500SE,			XC7370028	DIAL SHEET (XL5060, XL5060NTC)	
		XL5500NTC AV, RS15, XL5600,			XC7370030	DIAL SHEET (XL5070, XL5070NTC)	
		XL5600NTC AV, RS25, XL5700,			XC7370031	DIAL SHEET (XL5500SE)	
		XL5700NTC AV, RS35)			XC7370034	DIAL SHEET (RS-15)	
14	XA6369021	REVERSE SEWING BUTTON (PX Series)			XC7370036	DIAL SHEET (RS-25)	
15	XA6015021	FEED REGULATOR CAM			XC7370038	DIAL SHEET (RS-35)	
16	048040346	RETAINING RING, E4		21	XA3099021	SPRING	
17	048050346	RETAINING RING, E5					
18	XA5734021	MANUAL DIAL					
	XC7339121	MANUAL DIAL					
		(XL5050, XL5050NTC, XL5060, XL5060NTC,					
		XL5070, XL5070NTC, XL5500, XL5500SE,	 				
		XL5500NTC AV, RS15, XL5600,					
		XL5600NTC AV, RS25, XL5700,					
		XL5700NTC AV, RS35)					
19	XA6370021	FEED DIAL (PX Series)					
	XA6370022	FEED DIAL (PX300NTC)					
	XA6370023	FEED DIAL (PX100NTC)					
	XA6370024	FEED DIAL (PX200NTC)					
20	XA5735021	DIAL SHEET					
		(XL5340, RXL5340, XL5300,					
		XL5030, XL5030NTP)					


(4) FEED ADJUSTMENT MECHANISM

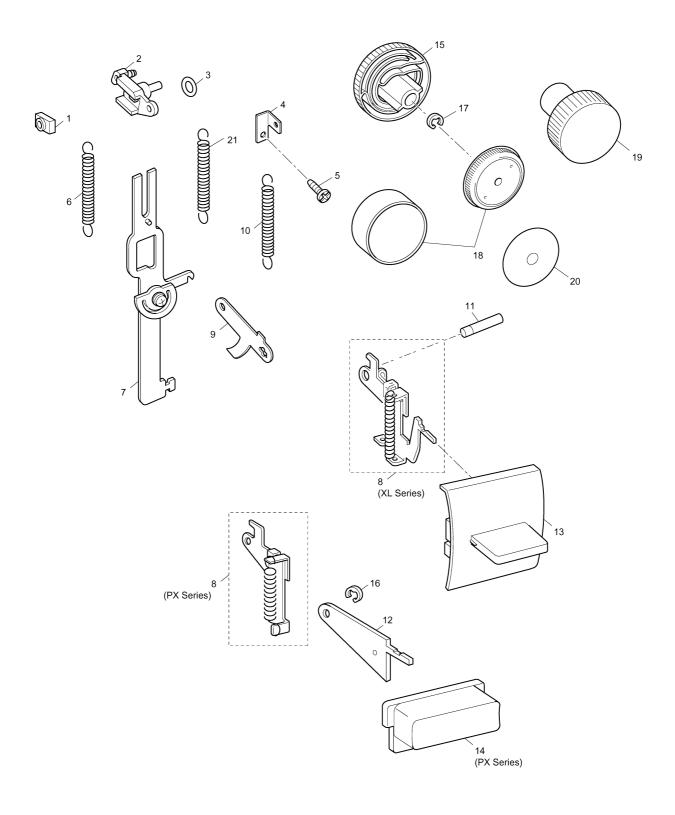

(5) ROTARY HOOK DRIVE / ROTARY HOOK MECHANISM

No.	CODE.	NAME	REMARKS	No.	CODE.	NAME	REMARKS
		ROTARY HOOK DRIVE MECHANISM	•			ROTARY HOOK MECHANISM	
1	XA4693121	CAM DRIVE CONNECTING ROD A		17	XA1317051	SHUTTLE RACE ASSEMBLY	
2	XA1012221	CAM DRIVE CONNECTING ROD B			XA1317021	SHUTTLE RACE ASSEMBLY	
3	XA3969021	CONNECTING ROD C ASSY				(XL5070, XL5070NTC, XL5700, XL5700NTC AV,	
4	XA1017120	RACK				RS35)	
5	052300606	SCREW, PAN (S/P WASHER) M3X6			XA1317022	SHUTTLE RACE ASSEMBLY	
6	048040346	RETAINING RING, E4				(XL5050, XL5050NTC, XL5060, XL5060NTC,	
7	060400816	SCREW, BIND M4X8				XL5500, XL5500SE, XL5500NTC AV, XL5600,	
8	131976020	WASHER, THRUST				XL5600NTC AV, RS15, RS25)	
9	XA1019021	RACK PLATE SPRING		18	128581053	SHUTTLE HOOK	
10	XA6909021	TOOTHED WASHER			128581021	SHUTTLE HOOK	
	XA6909051	TOOTHED WASHER				(XL5070, XL5070NTC, XL5700, XL5700NTC AV,	
		(RXL5130, RXL5232, RXL5340, RPX100)				RS35)	
11	X52077121	COLLAR			128581022	SHUTTLE HOOK	
12	014400432	SET SCREW, SOCKET (CP) M4X4				(XL5050, XL5050NTC, XL5060, XL5060NTC,	
13	X53330020	WASHER				XL5500, XL5500SE, XL5500NTC AV, XL5600,	
14	XA8290021	TAPTITE, BIND S M4X8				XL5600NTC AV, RS15, RS25)	
		TAPTITE, BIND S M4X8		19	XA1021051	SHUTTLE DRIVE ASSY	
		(RXL5130, RXL5232, RXL5340, RPX100)			XA1021052	SHUTTLE DRIVE ASSY	
15	X50559020	ZIGZAG ADJUSTING NUT				(PX300, PX300NTC, PX330NTC, PX300HC)	
	X50559050	ZIGZAG ADJUSTING NUT			XA1021021	SHUTTLE DRIVE ASSY	
		(RXL5130, RXL5232, RXL5340, RPX100)				(XL5050, XL5050NTC, XL5060, XL5060NTC,	
16	062301006	SCREW, PAN M3X10				XL5070, XL5070NTC, XL5500, XL5500SE,	
						XL5500NTC AV, XL5600, XL5600NTC AV,	
						XL5700, XL5700NTC AV, RS15, RS25, RS35)	
				20	XA1025021	DRIVER SHAFT GEAR	
				21	132434020	WASHER	
				22	128582023	BOBBIN CASE ASSEMBLY	
				23	X52800120	BOBBIN	
				24	014400632	SET SCREW, SOCKET (CP) M4X6	
				25	X57313121	RACK STOPPER	
				26	XA5702021	RACK STOPPER A	
				27	X57908021	TAPTITE, BIND S M4X10	
			•			I.	1


(5) ROTARY HOOK DRIVE / ROTARY HOOK MECHANISM

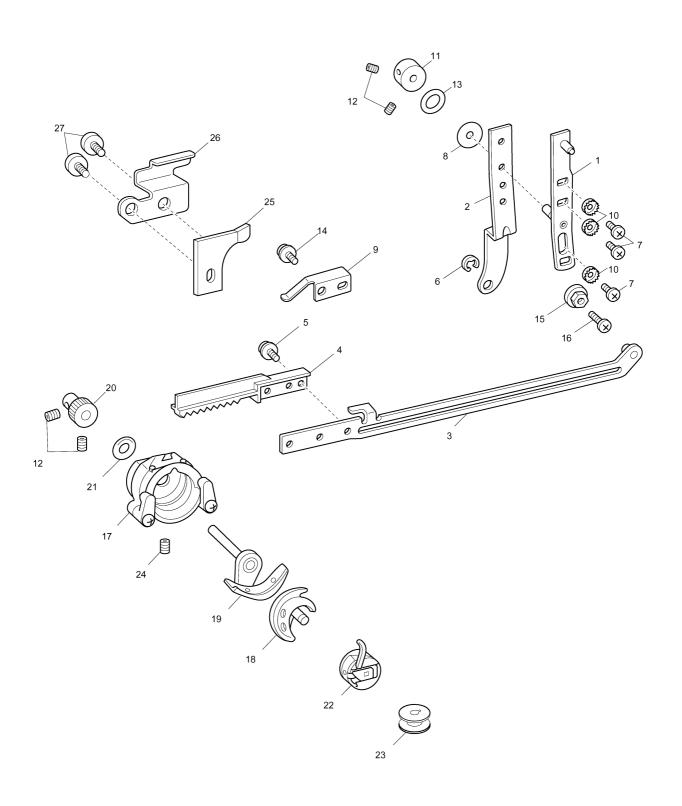

(6) ZIGZAG / BH MECHANISM

No.	CODE.	NAME	REMARKS
		ZIGZAG MECHANISM	
1	XA4466021	Z CONNECTING ROD	
		(XL501*, XL5050*, XL502*, XL5060*, XL503*	
		XL5070*)	
	XA3971021	Z CONNECTING ROD	
		(XL5130, XL5500*, XL5600*, XL5700*, XL5232	
		XL5340, XL5300, RS15, RS25, RS35, PX100*	
		PX110NTC, RPX100, PX200*, PX220NTC,	
		PX300*, PX330NTC)	
	XA3971051	Z CONNECTING ROD	
		(RXL5130, RXL5232, RXL5340, RPX100)	
2	XA8474021	UPSET 4X12DB	
	XA8474051	UPSET 4X12DB	
		(RXL5130, RXL5232, RXL5340, RPX100)	
3	XZ0024021	ZIGZAG CONNECTING ROD SPRING	
	XA3143021	ZIGZAG CONNECTING ROD SPRING	
		(XL5130, XL5232, RXL5130, RXL5232,	
		XL5300, XL5340, RXL5340, XL5500, XL5500SE,	
		XL5500NTC AV, XL5600, XL5600NTC AV,	
		XL5700, XL5700NTC AV, RS15, RS25, RS35,	
		PX100*, PX110NTC, RPX100, PX200*,	
		PX220NTC, PX300*, PX330NTC)	
4	X50559020	ZIGZAG ADJUSTING NUT	
	X50559050	ZIGZAG ADJUSTING NUT	
		(RXL5130, RXL5232, RXL5340, RPX100)	
5	062301006	SCREW, PAN M3X10	
		BH MECHANISM	
		(XL502*, 5060*, XL503*, XL5070*, XL5232	
		RXL5322, XL5600*, XL5340, RXL5340, XL5300,	
		XL5700*, RS15, RS25, RS35, PX200*,	
	 	PX220NTC, PX300*, PX330NTC)	
6	XZ0021021	BH CHANGE ARM ASSY	
7	XA3972021	BH NOTCH SPRING	
8	136997021	BH SPRING	
9	060400816	SCREW, BIND M4X8	
10	XA5812021	BH LEVER SET PLATE ASSY	
11	XA3975151	BH LEVER HOLDER ASSEMBLY	
12	XA3978021	BH CHANGE SHAFT	
13	048025346	RETAINING RING, E2.5	
14	XA3979021	BH HOLDER ASSY	
15	X57908021	TAPTITE, BIND S M4X10	


(6) ZIGZAG / BH MECHANISM

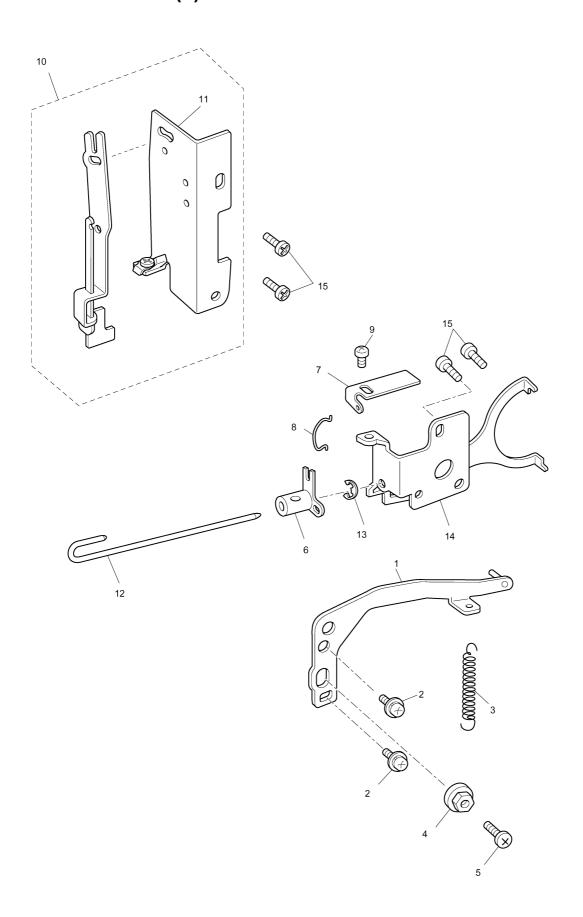

(7) PATTERN SELECTION MECHANISM without BH CONNECTING LINK ASSY

No.	CODE.	NAME	REMARKS	No.	CODE.	NAME	REMARKS
1	XA6004021	PATTERN SELECTING UNIT ASSY		9	XA4685021	BH KNOB SPACER	
l		(XL5130, RXL5130)			XA4685051	BH KNOB SPACER	
	XA6013021	PATTERN SELECTING UNIT ASSY				(PX100, PX100HC, PX100NTC, RPX100,	
		(XL5010, XL5010NTP, XL5011,				PX110NTC)	
		XL5011AV, XL5011NTC, XL5011NTP,			XC7433021	BH KNOB SPACER	
		XL5012, XL5012AV, XL5012NTP,				(XL5050, XL5050NTC, XL5500, XL5500SE,	
		XL5012NTP AV, XL5050,				XL5500NTC AV, RS15)	
		XL5050NTC)					
	XC7341021	PATTERN SELECTING UNIT ASSY					
		(XL5500, XL5500SE, XL5500NTC AV, RS15)					
	XA9837021	PATTERN SELECTING UNIT ASSY					
		(PX100, PX100NTC, PX100HC, PX150,					
		PX110NTC, RPX100)					
2	X57908021	TAPTITE, BIND S M4X10					
l	X57908051	TAPTITE, BIND S M4X10					
		(XL5050, XL5050NTC)					
3	XA5736021	PATTERN SELECTION DIAL					
	XA6371021	PATTERN SELECTION DIAL					
		(PX100, PX100HC, RPX100, PX110NTC)					
	XA6371023	PATTERN SELECTION DIAL (PX100NTC)					
	XC7343021	PATTERN SELECTION DIAL					
		(XL5050, XL5050NTC, XL5500, XL5500SE,					
		XL5500NTC AV, RS15)					
4	XA6372021	PATTERN DECORATION GEAR 1					
		(PX100, PX100HC, PX100NTC, PX110NTC.					
		RPX100)					
5	XA5734021	MANUAL DIAL					
		(XL5130, RXL5130)					
	XC7339121	MANUAL DIAL					
		(XL5500, XL5500SE, XL5500NTC AV, RS15)					
6	XA6373021	ZIGZAG DIAL					
		(PX100, PX100NTC, PX110NTC, RPX100)					
	XA6373023	ZIGZAG DIAL (PX100NTC)					
7	XA6003025	DIAL SHEET (XL5010, XL5010NTP)					
	XA6003030	DIAL SHEET					
		(XL5011, XL5011AV, XL5011NTP, XL5011NTC)					
l	XA6003034	DIAL SHEET (XL5130, RXL5130)					
l	XA6003037	DIAL SHEET					
		(XL5012, XL5012AV, XL5012NTP,					
		XL5012NTP AV)					
l	XC7370022	DIAL SHEET					
l		(XL5500, XL5500SE, XL5500NTC AV)					
		DIAL SHEET (RS-15)					
8	XA5735022	DIAL SHEET (XL5130, RXL5130)					


(7) PATTERN SELECTION MECHANISM without BH CONNECTING LINK ASSY

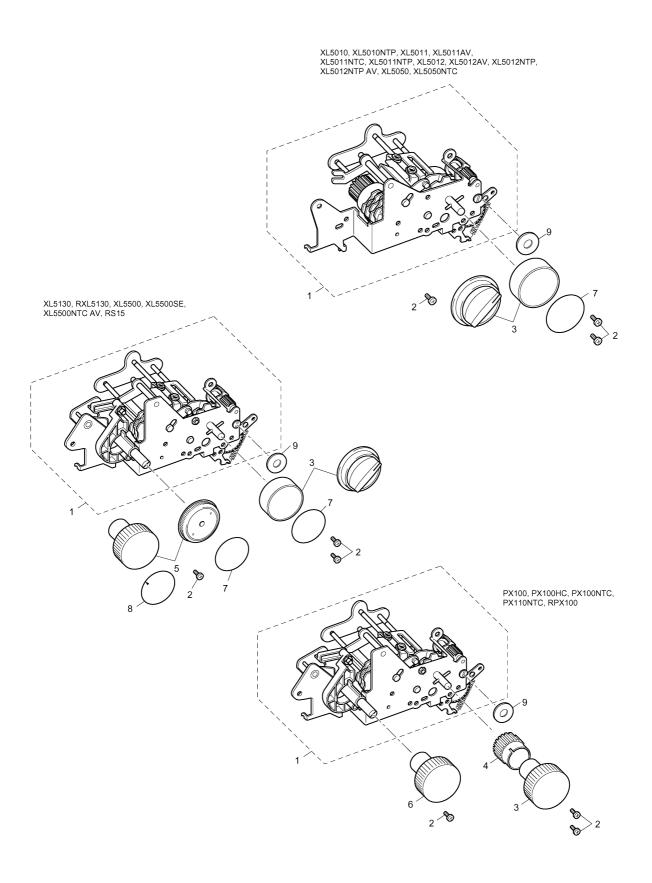

(7) PATTERN SELECTION MECHANISM with BH CONNECTING LINK ASSY

No.	CODE.	NAME	REMARKS	No.	CODE.	NAME	REMARKS
1	XA5798121	PATTERN SELECTING UNIT ASSY		6	XA6373021	ZIGZAG DIAL	
		(XL5300, XL5340, RXL5340)				(PX200, PX200HC, PX220NTC, PX300,	
	XA6011121	PATTERN SELECTING UNIT ASSY				PX300HC, PX330NTC)	
		(XL5030, XL5030NTP, XL5031, XL5031AV,			XA6373022	ZIGZAG DIAL (PX300NTC)	
		XL5031NTP, XL5031NTC, XL5032, XL5032AV			XA6373024	ZIGZAG DIAL (PX200NTC)	
		XL5032NTP, XL5032NTP AV, XL5070,		7	XA6003021	DIAL SHEET (XL5300)	
		XL5070NTC)			XA6003023	DIAL SHEET (XL5030, XL5030NTP)	
	XA6033121	PATTERN SELECTING UNIT ASSY			XA6003024	DIAL SHEET (XL5020, XL5020NTP)	
		(XL5020, XL5021, XL5021AV,			XA6003031	DIAL SHEET	
		XL5021AV, XL5021NTP,				(XL5021, XL5021AV, XL5021NTP, XL5021NTC)	
		XL5021NTC, XL5020NTP,			XA6003032	DIAL SHEET	
		XL5022NTP, XL5022NTP AV,				(XL5031, XL5031AV, XL5031NTP, XL5031NTC)	
		XL5060, XL5060NTC)			XA6003035	DIAL SHEET (XL5232, RXL5232)	
	XA6034121	PATTERN SELECTING UNIT ASSY			XA6003038	DIAL SHEET	
		(XL5232, RXL5232)				(XL5032, XL5032AV, XL5032NTP,	
	XC7378021	PATTERN SELECTING UNIT ASSY				XL5032NTP AV)	
		(XL5600, XL5600NTC AV, RS25)			XA6003039	DIAL SHEET	
	XC7391021	PATTERN SELECTING UNIT ASSY				(XL5022AV, XL5022NTP, XL5022NTP AV)	
		(XL5700, XL5700NTC AV, RS35)			XC7370024	DIAL SHEET (XL5600, XL5600NTC AV)	
	XA9838021	PATTERN SELECTION UNIT ASSY			XC7370026	DIAL SHEET (XL5700, XL5700NTC AV)	
		(PX200, PX200HC, PX220NTC, PX200NTC)			XC7370037	DIAL SHEET (RS-25)	
	XA9839021	PATTERN SELECTION UNIT ASSY			XC7370039	DIAL SHEET (RS-35)	
		(PX300, PX300HC, PX330NTC, PX300NTC)		8	XA4025021	BH CONNECTING LINK ASSY	
2	X57908021	TAPTITE, BIND S M4X10		9	060400416	SCREW, BIND M4X4	
	X57908051	TAPTITE,BIND S M4X10		10	048030346	RETAINING RING, E3	
		(XL5600, XL5600NTC AV, RS25)		11	XA5735022	DIAL SHEET	
3	XA5736021	PATTERN SELECTION DIAL				(XL5232, RXL5232, XL5340, RXL5340)	
	XA6371021	PATTERN SELECTION DIAL		12	XA4685021	BH KNOB SPACER	
		(PX200, PX200HC, PX220NTC, PX300,			XA4685051	BH KNOB SPACER	
		PX300HC, PX330NTC)				(XL5340, RXL5340)	
	XA6371022	PATTERN SELECTION DIAL (PX300NTC)			XC7433021	BH KNOB SPACER	
	XA6371024	PATTERN SELECTION DIAL (PX200NTC)				(XL5060, XL5060NTC, XL5070, XL5070NTC,	
	XC7343021	PATTERN SELECTION DIAL				XL5600, XL5600NTC AV, XL5700,	
		(XL5060, XL5060NTC, XL5070, XL5070NTC				XL5700NTC, RS25, RS35)	
		XL5600, XL5600NTC AV, XL5700, XL5700NTC					
		RS25, RS35)					
4	XA6372021	PATTERN DECORATION GEAR 1					
		(PX200, PX200HC, PX200NTC, PX220NTC,					
		PX300, PX300HC, PX300NTC, PX330NTC)					
5	XA5734021	MANUAL DIAL					
		(XL5232, RXL5232, XL5340, XL5300, RXL5340)					
	XC7339121	MANUAL DIAL					
		(XL5600, XL5600NTC AV, XL5700,					
		XL5700NTC AV, RS25, RS35)					


(7) PATTERN SELECTION MECHANISM with BH CONNECTING LINK ASSY

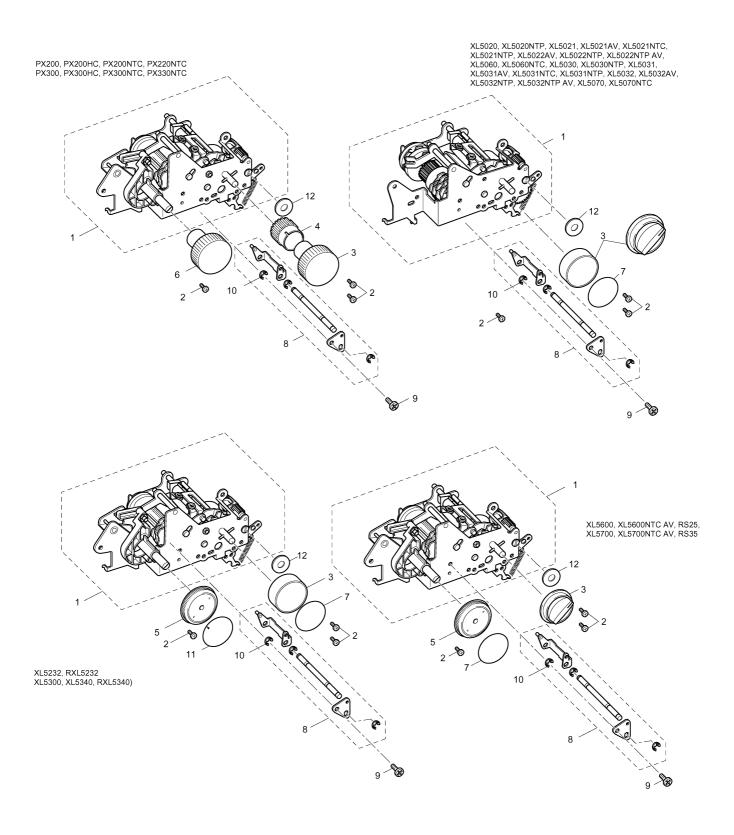


(8) BOBBIN WINDER / THREAD GUIDE / LAMP MECHANISM

No.	CODE.	NAME	REMARKS	No.	CODE.	NAME	REMARKS
		BOBBIN WINDER MECHANISM		14	X57984021	TAPTITE, BIND S M3X20	
1	XA3273121	BOBBIN WINDER HOLDER SUB ASSY				(XL5130), (RXL5130: U.S.A.),	
	XC7347021	BOBBIN WINDER HOLDER SUB ASSY				(XL5500: U.S.A., CAN), (XL5232),	
		(XL5050, XL5050NTC, XL5060, XL5060NTC,				(RXL5232: U.S.A.), (XL5600: U.S.A., CAN),	
		XL5070, XL5070NTC, XL5500, XL5500SE,				(XL5340), (XL5700: U.S.A., CAN),	
		XL5500NTC AV, XL5600, XL5600NTC AV,				(PX100, PX200, PX300: U.S.A., MEXICO)	
		XL5700, XL5700NTC AV, RS15. RS25, RS35)		15	XA1623021	TAPTITE, BIND S M3X10	
2	120448021	BOBBIN WINDER RUBBER BAND			XA1623051	TAPTITE, BIND S M3X10	
3	125928020	BOBBIN WINDER SHAFT SPRING				(RXL5130, RXL5232: SINGAPORE), (RXL5340)	
4	X59939021	BOBBIN WINDER SPRING				(RPX100)	
5	XA3133121	SS CHANGE HOLDER ASSY		16	XA4036021	LAMP HOLDER	
6	XA3136021	F DIAL SPRING				(XL5130), (RXL5130: U.S.A.),	
7	062400416	SCREW, PAN M4X4				(XL5500: U.S.A., CAN), (XL5232),	
8	X57913021	TAPTITE, BIND S M4X16				(RXL5232: U.S.A.), (XL5600: U.S.A., CAN),	
		THREAD GUIDE MECHANISM				(XL5340), (XL5700: U.S.A., CAN),	
9	XA5805021	THREAD GUARD ASSY				(PX100, PX200, PX300: U.S.A., MEXICO)	
	XC7349021	THREAD GUARD ASSY		17	060300616	SCREW, BIND M3X6	
		(XL5050, XL5050NTC, XL5060, XL5060NTC,				(XL5130), (RXL5130: U.S.A.),	
		XL5070, XL5070NTC, XL5500, XL5500SE,				(XL5500: U.S.A., CAN), (XL5232),	
		XL5500NTC AV, XL5600, XL5600NTC AV,				(RXL5232: U.S.A.), (XL5600: U.S.A., CAN),	
		XL5700, XL5700NTC AV, RS15, RS25, RS35)				(XL5340), (XL5700: U.S.A., CAN),	
	XA6374021	THREAD GUIDE ASSY (PX Series)				(PX100, PX200, PX300: U.S.A., MEXICO)	
10	X57908021	TAPTITE, BIND S M4X10		18	X53169020	BAND	
11	060400416	SCREW, BIND M 4X4			X53169050	BAND	
		LAMP MECHANISM				(XL5130, RXL5232, XL5232,	
12	XC0492021	ASSY : SEWING LAMP E12C#16				RXL5130, RXL5340, RPX100)	
		(XL5130), (RXL5130, RXL5232: U.S.A.),		19	XA7678021	CORD CRAMP	
		(XL5232), (XL5340), (XL5500, 5600, 5700:CAN),			XA7678051	CORD CRAMP	
		(PX100, PX200, PX300: U.S.A., MEXICO)				(RXL5232: SINGAPORE), (RXL5340), (RPX100)	
	XC7352021	ASSY : SEWING LAMP E12C#24		20	X57908021	TAPTITE, BIND S M4X10	
		(XL5500, XL5600, XL5700: U.S.A.)		21	XA8463021	CORD GUIDE	
	XA1064021	SEW-LIGHT ASSY					
	XA1064051	SEW-LIGHT ASSY					
		(RXL5130, RXL5232: SINGAPORE), (RXL5340),					
		(RPX100)					
13	X53061020	SEW-LIGHT BULB					
		(XL5130), (RXL5130: U.S.A.), (XL5232),					
		(RXL5232: U.S.A.), (XL5340),					
		(XL5500, 5600, 5700: U.S.A., CAN)					
		(PX100, PX200, PX300: U.S.A., MEXICO)					
	205336020	SEW-LIGHT BULB L-4					
	205336050	SEW-LIGHT BULB L-4					
		(RXL5130, RXL5232: SINGAPORE), (RXL5340),					
		(RPX100)					


(8) BOBBIN WINDER / THREAD GUIDE / LAMP MECHANISM

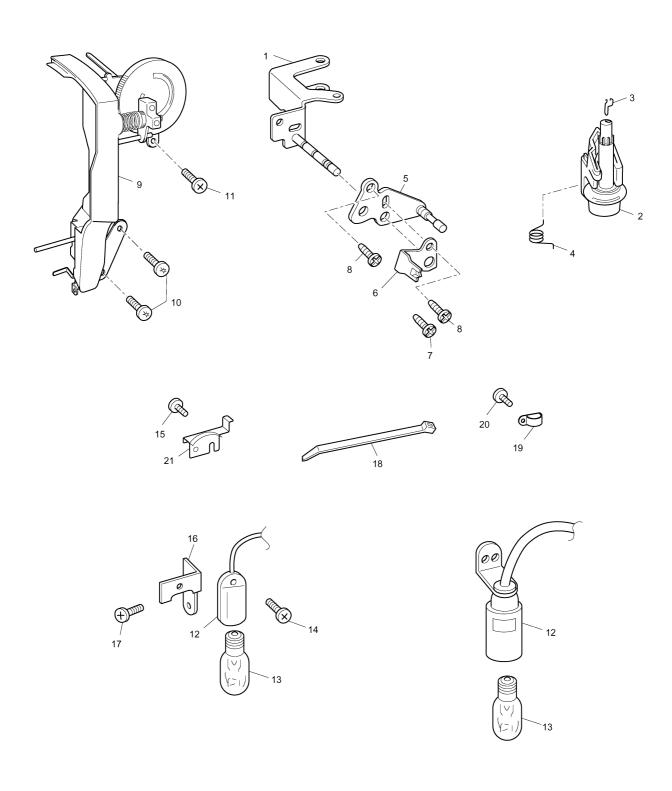


No.	CODE.	NAME	REMARKS	No.	CODE.	NAME	REMARKS
1	XA1196021	T BELT B163XXL4.8			XC7436021	MOTOR: NS-70 FDM230V (230V)	
2	XA3004021	BOLT.(S/P WASHER) M5X12				(XL5050), (XL5050NTC), (XL5060),	
	XA3004051	BOLT.(S/P WASHER) M5X12				(XL5060NTC), (XL5070), (XL5070NTC),	
		(RXL5130), (RXL5232), (RXL5340),				(XL5500, XL5600, XL5700: GER, U.K., FRA),	
		(XL5600: GER, U.K., FRA), (XL5600NTC AV)				(XL5500SE), (XL5500NTC AV),	
		(RS25), (RPX100)				(XL5600NTC AV), (XL5700 NTC AV),	
3	XA8786021	3P SOCKET BODY				(RS15), (RS25), (RS35)	
4	XA8787021	3P SOCKET COVER			XC7599021	MOTOR : NS-70 FDM220V (220V)	
5	052403006	SCREW, PAN (S/P WASHER) M4X30				(XL5500, XL5700: CHILE)	
6	214808020	CONNECTOR:#3		9	XA1265120	MOTER T-PULLEY A	
	214808050	CONNECTOR:#3		10	XA1266120	MOTER T-PULLEY B	
		(RXL5130, RXL5232, RXL5340, RPX100)			XC7355021	MOTOR T-PULLEY B	
7	XA1073021	PW SWITCH ASSY				(XL5050), (XL5050NTC), (XL5060),	
	XA1070021	PW SWITCH ASSY				(XL5060NTC), (XL5070), (XL5070NTC),	
		(XL5130), (XL5232), (XL5340),				(XL5500, XL5700: U.S.A., CHILE, GER, U.K.,	
		(RXL5130, RXL5232: U.S.A.),				FRA), (XL5500SE), (XL5500NTC AV),	
		(PX100, PX200, PX300: U.S.A., MEXICO)				(XL5600: U.S.A., GER, U.K., FRA),	
		(XL5500, XL5600, XL5700: U.S.A., CAN)				(XL5600NTC AV), (XL5700NTC AV)	
	XA1073051	PW SWITCH ASSY				(RS15), (RS25), (RS35)	
		(RXL5130, RXL5232: SINGAPORE)		11	138598021	SOCKET PIN	
		(RXL5340), (RPX100)			138598051	SOCKET PIN	
8	XA1071321	MOTOR : MM-BU1-9C (120V)				(RXL5130, RXL5232, RXL5340, RPX100)	
		(XL5130), (XL5500, XL5600, XL5700: CAN),		12	XC2138020	SPACER	
		(XL5232), (XL5340),				(XL5130), (RXL5130, RXL5232: U.S.A.),	
		(PX100, PX200, PX300: U.S.A., MEXICO)				(XL5232), (XL5340),	
	XA1071351	MOTOR : MM-BU1-9C (120V)				(XL5500, XL5600, XL5700: U.S.A., CAN),	
		(RXL5130, RXL5232: U.S.A.)				(PX100, PX200, PX300: U.S.A., MEXICO)	
	XA1429121	MOTOR : MM-251-51 (220V)		13	XC2139020	WASHER	
		(XL5300),				(XL5130), (RXL5130, RXL5232: U.S.A.),	
		(PX100: ARG, CHILE, CHINA),				(XL5232), (XL5340),	
		(PX200: ARG, CHILE, CHINA, IRAQ),				(XL5500, XL5600, XL5700: U.S.A., CAN),	
		(PX300: ARG, CHILE, CHINA, IRAQ),				(PX100, PX200, PX300: U.S.A., MEXICO)	
		(PX100HC, PX200HC, PX300HC: CHILE)		14	XC2137120	MOTOR SUPPORTER	
	XA1430121	MOTOR : MM-251-52 (230V)				(XL5130), (RXL5130, RXL5232: U.S.A.),	
	XA1430151	MOTOR : MM-251-52 (230V)				(XL5232), (XL5340),	
		(RXL5130, RXL5232: SINGAPORE),				(XL5500, XL5600, XL5700: U.S.A., CAN),	
		(RXL5340), (RPX100)				(PX100, PX200, PX300: U.S.A., MEXICO)	
	XA1431121	MOTOR : MM-251-53 (240V)		15	021400205	NUT, 2 M4	
		(PX300: NEW ZEALAND)		16	X57908021	TAPTITE, BIND S M4X10	
	XA2252121	MOTOR : MM-251-54 (220V)	040158			(XL5130), (RXL5130, RXL5232: U.S.A.),	
		(XL5010, XL5020: KOREA),				(XL5232), (XL5340),	
		(PX100, PX200, PX300: KOREA)				(XL5500, XL5600, XL5700: U.S.A., CAN),	
	XC7354021	MOTOR:HFA-07150 FDM (120V)				(PX100, PX200, PX300: U.S.A., MEXICO)	
		(XL5500, XL5600, XL5700: U.S.A.)					

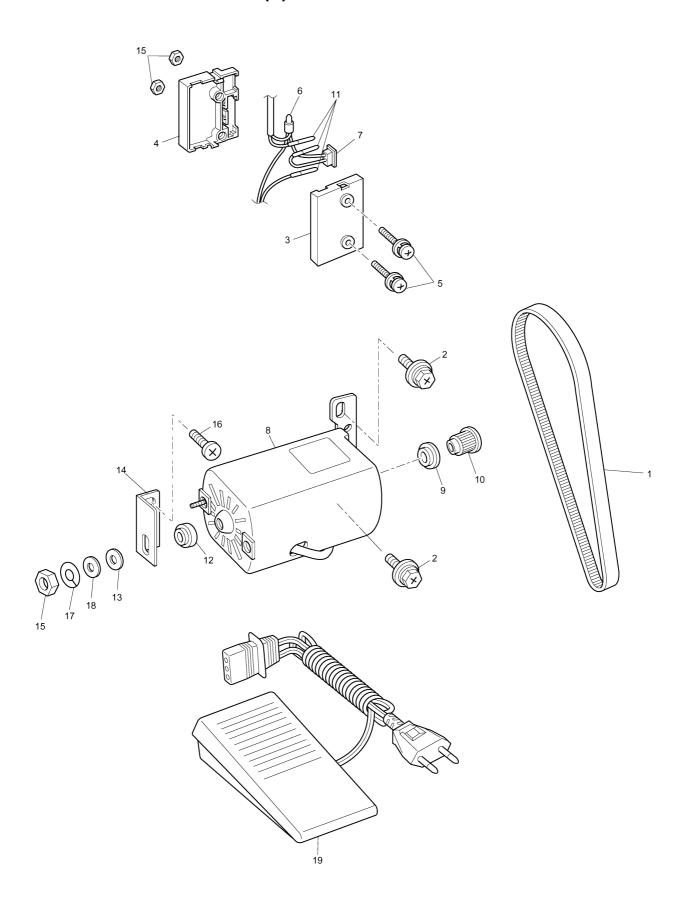


No.	CODE.	NAME	REMARKS	No.	CODE.	NAME	REMARKS
17	028040242	WASHER, SPRING 2-4			XC7438221	FOOT CONTROLLER:KD-2902	
		(XL5130), (RXL5130, RXL5232: U.S.A.),				(XL5050: GER, FRA, ITA, SWI, RUS, SING)	
		(XL5232), (XL5340),				(XL5060: GER, FRA, ITA, RUS, SING)	
		(XL5500, XL5600, XL5700: U.S.A., CANADA),				(XL5070: GER, FRA, SWI, RUS, SING)	
		(PX100, PX200, PX300: U.S.A., MEXICO)				(XL5500, XL5700: CHILE, GER, FRA)	
18	102707023	WASHER				(XL5500SE), (XL5600: GER, FRA),	
		(XL5130), (XL5232), (XL5340),				(RS15), (RS25), (RS35)	
		(XL5500, XL5600, XL5700: U.S.A., CANADA),			XC7456221	FOOT CONTROLLER:KD-2902UK	
		(PX100, PX200, PX300: U.S.A., MEXICO)				(XL5050, XL5060, XL5070, XL5500,	
	102707053	WASHER (RXL5130, RXL5232: U.S.A.)				XL5600, XL5700: U.K.), (XL5050NTC),	
19	XA6400151	FOOT CONTROLLER : FC-307-51				(XL5060NTC), (XL5070NTC), (XL5500NTC AV),	
		(RXL5130, RXL5232: SINGAPORE),				(XL5600NTC AV), (XL5700NTC AV),	
		(RXL5340), (RPX100)					
	XA6412121	FOOT CONTROLLER : FC-307-58					
		(XL5010, XL5020, XL5030, PX100, PX200,					
		PX300: IRELAND, U.K.), (XL5011), (XL5012AV),					
		(XL5010NTP), (XL5011NTC), (XL5012NTP),					
		(XL5012NTP AV), (XL5021), (XL5021AV),					
		(XL5020NTP), (XL5021NTC), (XL5022NTP),					
		(XL50222NTP AV), (XL5031), (XL5031AV),					
		(XL5030NTP), (XL5031NTC), (XL5032NTP),					
		(XL5032NTP AV), (PX100NTC),					
		(PX110NTC), (PX200NTC),					
		(PX220NTC), (PX300NTC),					
		(PX330NTC)					
	XA6414121	FOOT CONTROLLER : FC-307-59					
		(PX300: NEW ZEALAND)					
	XA6422121	FOOT CONTROLLER : FC-307-63					
	XA6424121	FOOT CONTROLLER : FC-307-64					
		(XL5010, XL5020, PX100, PX200,					
		PX300: KOREA)					
	XA6430121	FOOT CONTROLLER : FC-307-67					
		(PX100, PX200, PX300: CHINA)					
	XC0878121	FOOT CONTROLLER : FC-307-69					
		(PX100, PX200, PX300: ARGENTINE)					
	XC6659151	FOOT CONTROLLER : FC-317-21-LF					
		(RXL5130, RXL5232: U.S.A.)					
	XC6666121	FOOT CONTROLLER : FC-317-27-LF					
		(XL5130), (XL5232),					
		(XL5340),					
		(XL5500, XL5600, XL5700: CANADA),					
		(PX100, PX200, PX300: U.S.A., MEXICO)					
	XC7359021	FOOT CONTROLLER:KD-1902					
		(XL5500, XL5600, XL5700: U.S.A.)					

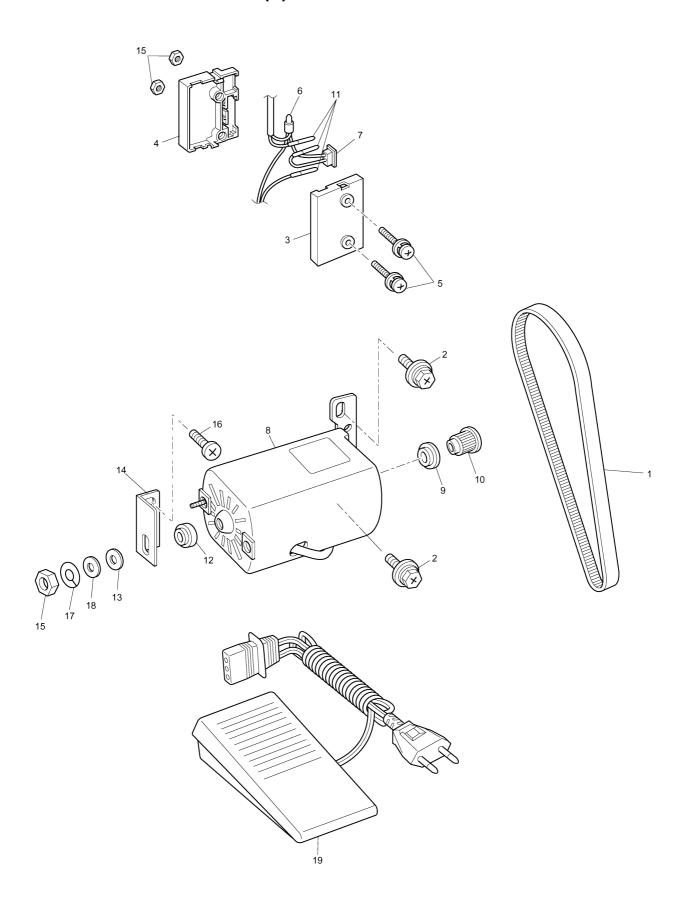


No.	CODE.	NAME	REMARKS	No.	CODE.	NAME	REMARKS
		ATTACHMENTS		9	X58358021	Z NEEDLE ASSY	
1	X55467021	SCREW DRIVER				(XL5012AV), (XL5022AV), (XL5021AV),	
	X55467051	SCREW DRIVER				(XL5022NTP AV), (XL5032AV), (XL5031AV),	
		(RXL5130, RXL5232, RXL5340, RPX100)				(XL5032NTP AV),	
2	X59370021	ZIPPER FOOT				(XL5130, XL5232: CANADA)	
	X59370051	ZIPPER FOOT			X58358051	Z NEEDLE ASSY	
		(RXL5130, RXL5232, RXL5340, RPX100)				(XL5500, XL5600: CANADA),	
3	X59374021	STRAIGHT STITCH PRESSER FOOT				(XL5600NTC AV), (XL5700NTC AV)	
	X59374051	STRAIGHT STITCH PRESSER FOOT		10	130920021	EXTRA SPOOL PIN	
		(RXL5130, RPX100)			130920051	EXTRA SPOOL PIN	
4	X54243001	SEAM RIPPER				(RXL5130, RXL5232, RXL5340, RPX100)	
		(EXCEPT: XL5130, RXL5130, XL5232,		11	XA3442121	FEED DOG COVER	
		XL5500: U.S.A., CAN, CHILE, RXL5232,				(XL5010), (XL5010NTP), (XL5011), (XL5011AV),	
		XL5600: U.S.A., CAN, XL5340, RXL5340				(XL5011NTC), (XL5011NTP), (XL5012),	
		XL5700: U.S.A., CAN, CHILE)				(XL5012AV), (XL5012NTP), (XL5012NTP AV),	
5	X52800120	BOBBIN				(XL5020), (XL5020NTP), (XL5021), (XL5021AV),	
	X52800150	BOBBIN				(XL5021NTC), (XL5021NTP), (XL5022AV),	
		(RXL5130, RXL5232, RXL5340, RPX100)				(XL5022NTP), (XL5022NTP AV), (XL5050),	
6	X55465021	OILER				(XL5050NTC AV), (XL5060), (XL5060NTC AV),	
		(XL5010, XL5010NTP, XL5011, XL5011AV,				(XL5030), (XL5030NTP), (XL5031), (XL5031AV),	
		XL5011NTC, XL5011NTP, XL5012, XL5012AV,				(XL5031NTC), (XL5031NTP), (XL5032),	
		XL5012NTP, XL5012NTP AV, XL5020, XL5030,				(XL5032AV), (XL5032NTP), (XL5032NTP AV),	
		XL5020NTP, XL5021, XL5021AV, XL5021NTC,				(XL5070), (XL5070NTP AV) (XL5130),	
		XL5021NTP, XL5022AV, XL5022NTP, XL5032,				(XL5500, XL5700: U.S.A., CAN, CHILE),	
		XL5022NTP AV, XL5030NTP, XL5031, PX100,				(XL5600: U.S.A., CAN),	
		XL5031AV, XL5031NTC, XL5031NTP,				(XL5340), (XL5300), (XL5232)	
		XL5032AV, XL5032NTP, XL5032NTP AV,			XA3442151	FEED DOG COVER	
		PX100HC, PX100NTC, PX110NTC, RPX100,				(RXL5130, RXL5232, RXL5340)	
		PX200, PX200HC, PX200NTC, PX220NTC,		12	XA4911121	BH PRESSER FOOT ASSY	
		PX300, PX300HC, PX300NTC, PX330NTC)				(XL5020), (XL5020NTP), (XL5021), (XL5021AV),	
	X55465051	OILER				(XL5021NTC), (XL5021NTP), (XL 5022AV),	
		(XL5050), (XL5050NTC), (XL5060), (XL5070),				(XL5022NTP), (XL5022NTP AV), (XL5060)	
		(XL5060NTC), (XL5070NTC), (XL5500SE),				(XL5060NTC), (XL5030), (XL5030NTP),	
		(XL5500, XL5600, XL5700: GER, U.K., FRA),				(XL5031), (XL5031AV), (XL5031NTC), (XL5032),	
		(XL5600NTC AV), (XL5700NTC AV),				(XL5031NTP), (XL5032AV), (XL5032NTP),	
		(RS15), (RS25), (RS35)				(XL5032NTP AV), (XL5070), (XL5070NTC),	
7		NEEDLE SET (3PCS)				(XL5232), (XL5600), (XL5300),	
	129583001	NEEDLE SET (3PCS)				(XL5600NTC AV), (RS25), (XL5340), (RXL5340),	
		(RXL5130, RXL5232, RXL5340, RPX100)				(XL5700: U.S.A., CAN, CHILE), (PX200),	
8	X57521021	NEEDLE PACKAGE (1PCE)				(PX200HC), (PX200NTC), (PX220NTC),	
	X57521001	NEEDLE PACKAGE (1PCE)				(PX300), (PX300HC), (PX300NTC), (PX330NTC)	
		(RXL5130), (RXL5232), (RXL5340), (RPX100),			XA4911151	BH PRESSER FOOT ASSY	
		(XL5600: GER, U.K., FRA),				(RXL5232), (RXL5340), (RS35),	
		(XL5600NTC AV), (RS25)				(XL5700: GER, U.K, FRA), (XL5700NTC AV)	

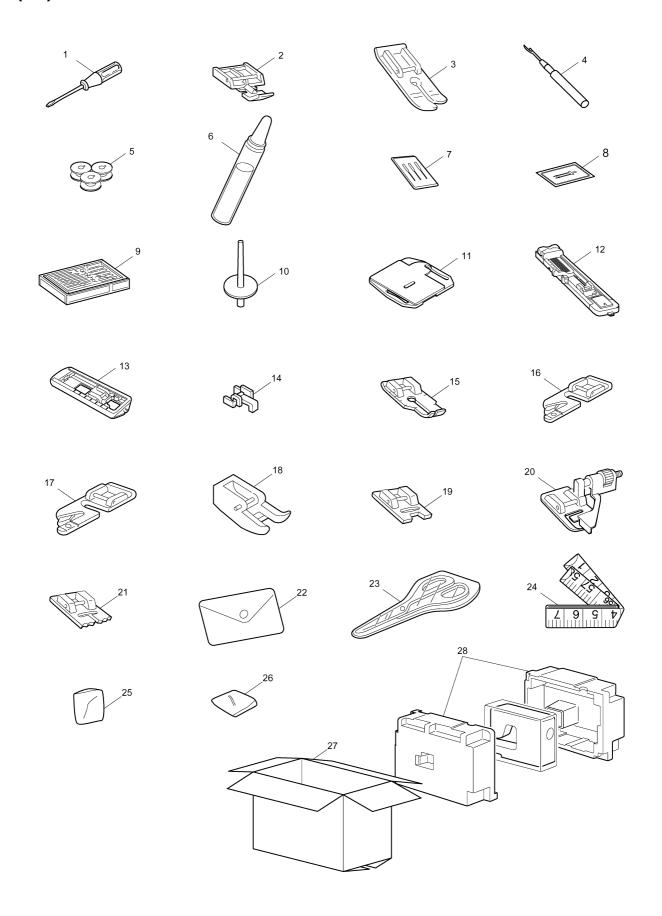

No.	CODE.	NAME	REMARKS	No.	CODE.	NAME	REMARKS
13	X59369321	BUTTON HOLE FOOT ASSY		23	XC1807121	SCISSORS	
		(XL5010), (XL5010NTP), (XL5011), (XL5011AV),				(XL5012AV), (XL5011AV), (XL5012NTP AV),	
		(XL5011NTC), (XL5011NTP),				(XL5022AV), (XL5021AV), (XL5022NTP AV),	
		(XL5012), (XL5012AV), (XL5012NTP),				(XL5032AV), (XL5031AV), (XL5032NTP AV),	
		(XL5012NTP AV), (XL5050), (XL5050NTC),				(XL5130, XL5500, XL5232, XL5600: CANADA),	
		(XL5130), (XL5500), (XL5500NTC AV),				(XL5500NTC AV), (XL5600NTC AV),	
		(XL5500SE), (RS15), (PX100), (PX100HC),				(XL5700NTC AV)	
		(PX100NTC), (PX110NTC), (PX150)		24	XA5772021	MEASURE	040158
	X59369351	BUTTON HOLE FOOT ASSY				(XL5012AV), (XL5011AV), (XL5012NTP AV),	
		(RPX100, RXL5130)				(XL5022AV), (XL5021AV), (XL5022NTP AV),	
14	X59375121	BUTTON SEWING FOOT				(XL5032AV), (XL5031AV), (XL5032NTP AV),	
	X59375151	BUTTON SEWING FOOT				(XL5130, XL5500, XL5232, XL5600: CANADA),	
		(RXL5130, RXL5232, RXL5340, RPX100)				(XL5500NTC AV), (XL5600NTC AV),	
	180083001	DARNING FOOT				(XL5700NTC AV)	
		(PX100HC, PX200HC, PX300HC: CHILE)		25	XA8547021	PIN CUSHIN	
15	XA3805051	1/4' QUILTING FOOT				(XL5012AV), (XL5022AV), (XL5032AV),	
		(XL5232), (RXL5232), (XL5340), (RXL5340),				(XL5031AV), (XL5032NTP AV),	
	XA3805021	1/4' QUILTING FOOT				(XL5130, XL5500, XL5232, XL5600: CANADA),	
		(XL5700: U.S.A., CAN, CHILE)				(XL5700NTC AV)	
16	122329001	NARROW HEMMER		26	264030021	BAG, 165X250	
		(XL5130, XL5232: CANADA)				(XL5012AV), (XL5022AV), (XL5032AV),	
17	X59371021	NARROW HEMMER FOOT				(XL5031AV), (XL5032NTP AV),	
		(XL5130: U.S.A.), (XL5600: U.S.A., CAN),				(XL5130, XL5500, XL5232, XL5600: CANADA),	
		(XL5500, XL5700: USA, CAN, CHILE),				(XL5700NTC AV)	
		(XL5340)			X53984027	DUST COVER ASSY	
18	X53189001	PRESSER FOOT ASSEMBLY			X53984057	DUST COVER ASSY (RPX100)	
		(XL5232, XL5500, XL5600: CANADA)			XC1103021	DUST COVER ASSEMBLY	
19	XA7875001	PEARL SEQUENCE FOOT				(XL5011NTC, XL5021NTC, XL5031NTC,	
		(XL5130, XL5500, XL5232, XL5600: CANADA)				PX100NTC, PX110NTC, PX200NTC,	
20	X59372021	BLIND STITCH FOOT				PX220NTC, PX300NTC, PX330NTC)	
		(XL5130: U.S.A.), (XL5340), (RS15), (RS25),			XC1103051	DUST COVER ASSEMBLY	
		(RS35), (XL5500), (XL5500NTC AV),				(XL5050NTC, XL5060NTC, XL5070NTC,	
		(XL5500SE), (XL5600), (XL5600NTC AV),				XL5500NTC AV, XL5600NTC AV,	
		(XL5700), (XL5700NTC AV), (PX100),				XL5700NTC AV)	
		(PX100HC), (PX100NTC), (PX110NTC),					
		(PX150)			T	PACKING MATERIALS	T
	X59372051	BLIND STITCH FOOT		27	X61361056	CARTON (XL5010)	
		(RPX100)			X61361060	CARTON (XL5010: RUSSIA, SINGAPORE)	
21	125905001	PIN TUCK PRESSER FOOT				CARTON (XL5010NTP)	
		(XL5340), (XL5700: U.S.A., CAN, CHILE)			X61361057	CARTON (XL5011)	
22	XC4487021	ACCESSORY BAG			X61361058	CARTON (XL5011AV)	
	XC4487051	ACCESSORY BAG			X61361088	CARTON (XL5011NTP)	
		(RXL5130, RXL5232,			X61361071	CARTON (XL5011NTC)	
		RXL5340, RPX100)			X61361069	CARTON (XL5012)	

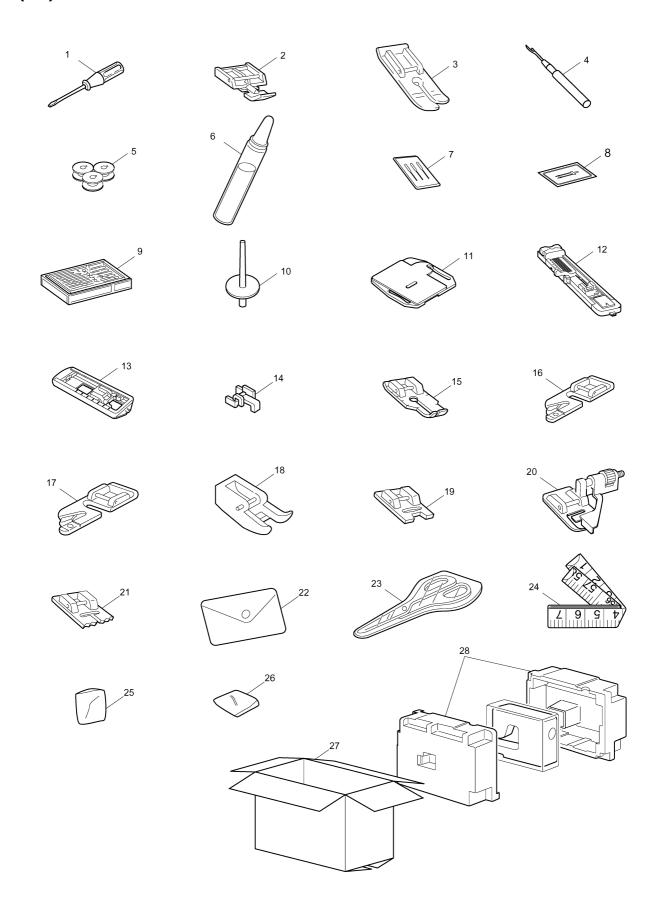


No.	CODE.	NAME	REMARKS	No.	CODE.	NAME	REMARKS
27	X61361086	CARTON (XL5012: SINGAPORE)				CARTON (XL5500: CHILE)	
		CARTON (XL5012AV)			XC7593034	CARTON (XL5500SE)	
	X61361078	CARTON (XL5012NTP)			XC7593035	CARTON (RS-15)	
		CARTON (XL5012NTP AV)			X61383031	CARTON (XL5600: U.S.A., CANADA)	
	X61361061	CARTON (XL5020)				CARTON (XL5600: GER, U.K, FRA)	
		CARTON (XL5020: RUSSIA, SINGAPORE)				CARTON (XL5600NTC AV)	
	X61578029	CARTON (XL5020: KOREA)			XC7593036	CARTON (RS-25)	
		CARTON (XL5020NTP)			X61383032	CARTON (XL5700: U.S.A., CANADA)	
	X61361062	CARTON (XL5021)				CARTON (XL5700: CHILE)	
	X61361063	CARTON (XL5021AV)				CARTON (XL5700NTC AV)	
	X61361073	CARTON (XL5021NTC)			XC7593037	CARTON (RS-35)	
	X61361089	CARTON (XL5021NTP)			X61361029	CARTON (PX100: U.S.A.)	
		CARTON (XL5022AV)			X61361046	CARTON	
		CARTON (XL5022NTP)				(PX100: ARG, CHILE, MEX, SPA, ITA)	
	XC7593031	CARTON (XL5022NTP AV)			X61361034	CARTON (PX100: CHINA)	
		CARTON (XL5030)				CARTON (PX100: KOREA)	
	X61361068	CARTON (XL5030: RUSSIA, SINGAPORE)				CARTON (PX100HC)	
		CARTON (XL5030NTP)			X61361083	CARTON (PX100NTC)	
	X61361066	CARTON (XL5031)			X61361096	CARTON (PX110NTC)	
		CARTON (XL5031AV)				CARTON (PX150)	
	X61361075	CARTON (XL5031NTC)			X61361047	CARTON (PX100: Other country)	
	X61361090	CARTON (XL5031NTP)				CARTON (PX200: U.S.A.)	
	X61361087	CARTON (XL5032)			X61361048	CARTON	
	X61361077	CARTON (XL5032AV)				(PX200: ARG, CHILE, MEX, SPA, POR, ITA)	
	X61361080	CARTON (XL5032NTP)			X61361085	CARTON (PX200: SINGAPORE)	
	XC7593032	CARTON (XL5032NTP AV)			X61361035	CARTON (PX200: CHINA)	
	X61383028	CARTON (XL5130)			X61578022	CARTON (PX200HC, PX200: KOREA)	
	X61383024	CARTON (XL5130: CANADA)			X61578027	CARTON (PX200:IRAQ)	
	X61383056	CARTON (RXL5130: U.S.A.)			X61361082	CARTON (PX200NTC)	
	XC5393052	CARTON (RXL5130: SINGAPORE)			XC7593033	CARTON (PX220NTC)	
	X61383025	CARTON (XL5232)			X61361049	CARTON (PX200: Other country)	
	X61383057	CARTON (RXL5232: U.S.A.)			X61361027	CARTON (PX300: U.S.A.)	
	XC5393051	CARTON (RXL5232: SINGAPORE)			X61361054	CARTON	
	X61383029	CARTON (XL5340)				(PX300: ARG, CHILE, MEX, SPA, ITA)	
	X61361021	CARTON (XL5300)			X61578022	CARTON (PX200HC, PX200: KOREA)	
	XC5393053	CARTON (RXL5340)			X61361084	CARTON (PX300: SINGAPORE)	
	X61361097	CARTON (XL5050)			X61361036	CARTON (PX300: CHINA)	
	XC7593027	CARTON (XL5050NTC)			X61578028	CARTON (PX300:IRAQ)	
	X61361098	CARTON (XL5060)			X61578021	CARTON (PX300HC)	
	XC7593028	CARTON (XL5060NTC)			X61361081	CARTON (PX300NTC)	
	X61361099	CARTON (XL5070)			X61361094	CARTON (PX330NTC)	
I	XC7593029	CARTON (XL5070NTC)		L	X61361055	CARTON (PX300: Other country)	
	X61383030	CARTON (XL5500: U.S.A., CANADA)					
	XC7593021	CARTON (XL5500: GER, U.K, FRA)					

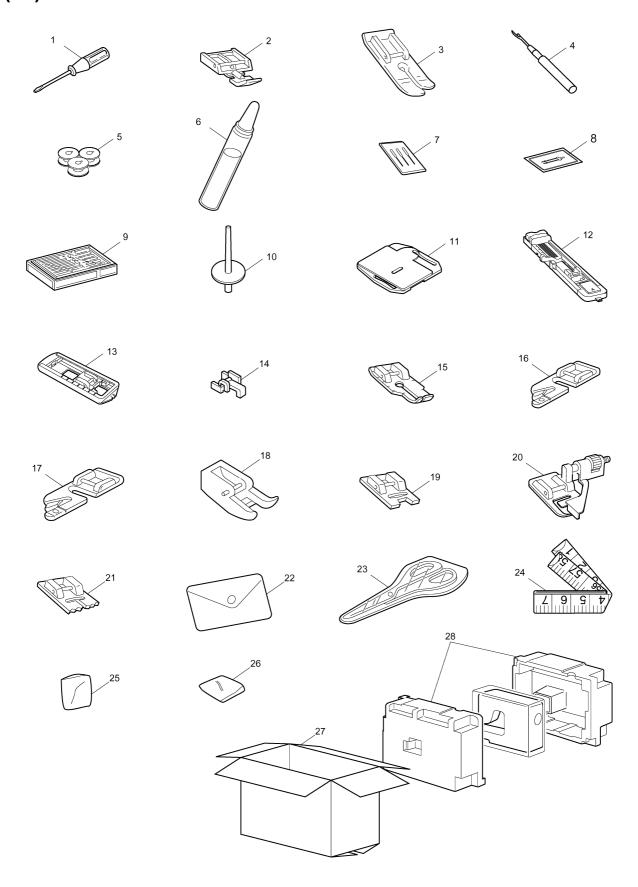

No.	CODE.	NAME	REMARKS
28	X61363021	457 POLYSTYRENE ASSY	_
		(XL50*0, XL5130, XL5232, XL5300, XL5340),	
		(PX100, PX200, PX300)	
	X61363022	457 POLYSTYRENE ASSY	
		(XL5010: KOREA), (PX300: KOREA)	
	X61363051	457 POLYSTYRENE ASSY	
		(RXL5130, RXL5232, RXL5340, RPX100)	
	XC7366021	POLYSTYRENE FOAM PAD ASSY,458	
		(XL5050, 5060, 5070, 5500, 5600, 5700)	
	X61570021	467 CASE POLY-STYRENE ASSY	
		(PX100HC, PX200HC, PX300HC),	
		(PX200, PX300: IRAQ)	
	X61570022	467 CASE POLY-STYRENE ASSY	
		(XL5020, PX100, PX200: KOREA)	
	X60853020	OVER CASE POLYSTYRENE	
		(PX100HC, PX200HC, PX300HC: SPAIN),	
		(PX200, PX300: IRAQ)	
	X60853021	OVER CASE POLYSTYRENE	
		(PX100, PX200: KOREA)	
	264030021	BAG, 165X250	
		(XL5232, XL5300, XL5340),	
		(XL5500, XL5600, XL5700: CANADA)	
	264030051	BAG, 165X250	
		(RXL5130, RXL5232, RXL5340, RPX100)	
	160670021	BAG, 150X350	
	160670051	BAG, 150X350	
		(RXL5130, RXL5232, RXL5340, RPX100)	
	X60439151	BAG, 630X630T	
		(RXL5130, RXL5232, RXL5340, RPX100)	
	X60439121	BAG, 630X630T	
	X57847021	PLUG LABEL	
	X57325021	LABEL	
	X60352020	ACCESSORY TABLE PRESSER D	
	X60726020	FOOT CONTROLLER BOX	
	X61181021	STYLOFOAM	
	LA6041001	SECURITY TAG	
	XC7193021	STICKER	
	XC7680021	STICKER (XL5500: CANADA)	
		PRINTED MATTERS	1
	194447011	INSTRUCTION BOOK	
		(IRE, U.K., SPA, POR, ITA, SWI, SIN)	
	194447012	INSTRUCTION BOOK	
		(GER, BEL, FRA, HOL, SWI)	

ο.	CODE.	NAME	REMARKS
	194447013	INSTRUCTION BOOK	
		(PX*: FIN, DEN, SWE)	
	194447014	INSTRUCTION BOOK	
		(AUSTRIA, RUSSIA), (XL5012: SIN)	
	194457012	INSTRUCTION BOOK	
		(PX*: GER, BEL, FRA, HOL, SWI)	
	194457013	INSTRUCTION BOOK	
		(PX*: FIN, DEN, SWE)	
	194457014	INSTRUCTION BOOK (PX*: AUSTRIA)	
		INSTRUCTION BOOK	
		(PX*:ITA, SWI, CHINA)	
	194457017	INSTRUCTION BOOK	
		(XL5130, RXL5130, XL5232,	
		RXL5232, XL5340, RXL5340)	
	194457111	INSTRUCTION BOOK (XL5300, PX Other)	
		INSTRUCTION BOOK (PX200, 300: IRAQ)	
		INSTRUCTION BOOK (PX330NTC)	
	XC7094051	INSTRUCTION BOOK	
		(RXL5130, RXL5232, RXL5340)	
	XC7132021	INSTRUCTION BOOK	
		(PX110NTC, PX220NTC, PX330NTC)	
	XC6752021	INSTRUCTION BOOK	
		(XL5050, XL5060, XL5070: U.K., RUS, SIN),	
		(XL5050NTC), (XL5060NTC), (XL5070NTC)	
	XC6758021	INSTRUCTION BOOK	
		(XL5050, XL5060, XL5070: FRA, SWI)	
	XC6885021	INSTRUCTION BOOK	
		(XL5500, XL5600, XL5700: CAN, FRA)	
	XC6884021	INSTRUCTION BOOK	
		(XL5500, XL5500SE, XL5600, XL5700: GER)	
	XC6886021	INSTRUCTION BOOK	
		(XL5500, XL5600, XL5700: FRA)	
	XC7137021	INSTRUCTION BOOK	
		(XL5050, XL5060, XL5070: FRA)	
	XC7144021	INSTRUCTION BOOK	
		(XL5050, XL5060, XL5070: ITA, SWI)	
	XC7439021	INSTRUCTION BOOK	
		(XL5050, XL5060, XL5070: GER, SWI)	
	XC7363021	INSTRUCTION BOOK	
		(XL5500, XL5600, XL5700: U.S.A., CAN, U.K.)	
		(XL5500NTC AV, 5600NTC AV, 5700NTC AV)	
	XC7364021	INSTRUCTION BOOK	
		(XL5500, XL5600, XL5700: U.S.A, CHILE)	
	XC8509021	INSTRUCTION BOOK (RS15, RS25, RS35)	

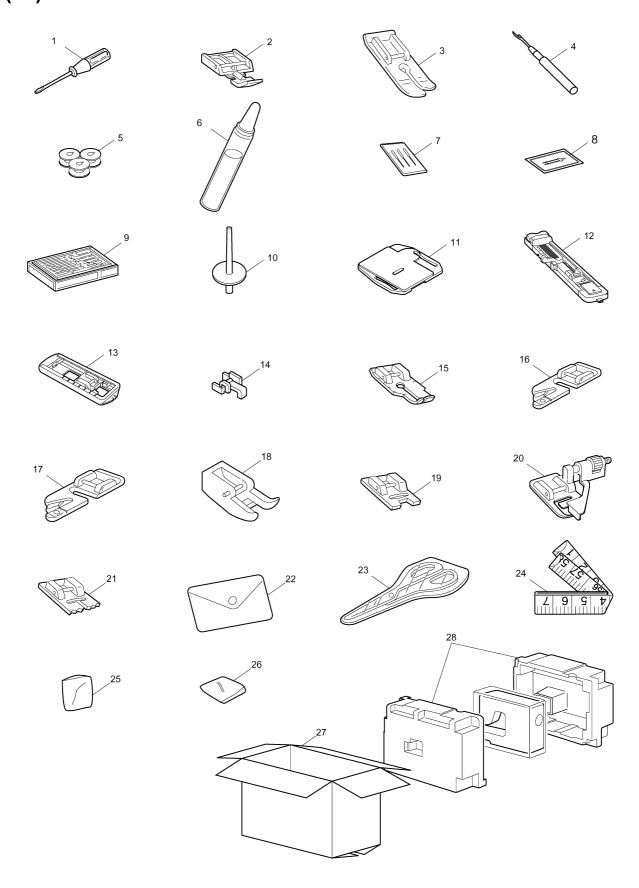

No.	CODE.	NAME	REMARKS	No.	CODE.	NAME	REMARKS
	130800021	BAG, 220X310			XC6860021	MANUAL	
	130800051	BAG, 220X310 (RXL5130,RXL5232,RXL5340)				(XL5050), (XL5050NTC), (XL5060),	
	UH385100	WARRANTY CARD EUR				(XL5060NTC), (XL5070), (XL5070NTC),	
	XC6402021	WARRANTY CARD (U.K.)				(XL5500: GER, FRA), (XL5500SE),	
	XC0380021	WARRANTY CARD				(XL5600: Except for U.S.A. CANADA),	
		(XL5130), (XL5232), (XL5340),				(XL5500NTC AV), (XL5600NTC AV),	
		(XL5500, 5600, XL5700: U.S.A.)				(XL5700: GER, U.K, FRA), (XL5700NTC AV),	
	XC0435021	WARRANTY CARD				(RS15, RS25, RS35)	
		(PX100, PX200, PX300: U.S.A.)			XC0021021	OPERATION MANUAL (FINLAND)	
	XC1153021	WARRANTY CARD			XC4028121	QUICK START GUIDE	
		(PX100, PX200, PX300: ARG)				(XL5011AV, XL5011NTC, XL5012NTP,	
	XA6351121	WARRANTY CARD (POR, ITA)				XL5012NTP AV, XL5020NTC, XL5021NTC,	
	XA8411121	WARRANTY CARD				XL5022NTP, XL5022NTP AV, XL5031NTC,	
		(PX100, PX200, PX300: CHINA)				XL5032NTP, XL5032NTP AV)	
	XC9286021	CONTACT SHEET	040204		XC8324021	QUICK START GUIDE	
		(XL5130, XL5232, XL5340, XL5500, XL5600,				(XL5050NTC, XL5060NTC, XL5070NTC,	
		XL5700: CANADA)				XL5500NTC AV, XL5600NTC AV,	
	181401165	INSERTION WARRANTY COUPON	DEL			XL5700NTC AV)	
		(XL5130, XL5232, XL5340, XL5500, XL5600,	040204		XC5407321	QUICK START GUIDE	
		XL5700: CANADA)				(PX100NTC, PX110NTC, PX200NTC,	
	181401172	INSERTION WARRANTY COUPON				PX220NTC, PX300NTC, PX330NTC)	
		(XL5130, XL5232, XL5340, XL5500, XL5600,			XC6911021	ACCINFO SHEET	
		XL5700: CANADA)				(XL5500, XL5600, XL5700: U.S.A.)	
	181401230	INSERTION WARRANTY COUPON					
		(XL5130, XL5232, XL5340, XL5500, XL5600,					
		XL5700: CANADA)					
	XA7201021	USER'S MANUAL					
		(XL5130: U.S.A., XL5340, XL5500, XL5500SE,					
		XL5500NTC AV, XL5600, XL5600NTC AV,					
		XL5700, XL5700NTC AV, RS15, RS25, RS35)					
	XC2067021	USER'S MANUAL					
		(XL5232, XL5340, XL5600: CANADA),					
		(XL5700: U.S.A, CANADA, CHILE)					
	XC2067051	USER'S MANUAL (RXL5232, RXL5340)					
	XC1885021	MANUAL					
		(XL5130, XL5500, XL5232, XL5600, XL5340,					
		XL5700: U.S.A, CANADA, CHILE)					
	XA7651021	MANUAL					
		(XL5130, XL5232, XL5500, XL5600: CANADA)					
	XA7876021	MANUAL					
		(XL5130, XL5232, XL5500, XL5600: CANADA)					
	XA9089021	MANUAL					
		(XL5340, XL5700: U.S.A., CAN, CHILE)					

