


D

C


B

A


Note: Remember that all the drill holes for the screws should be made smaller than 0.138" (as that is the size of the actual screw). This is to make sure we have enough material left to tap the holes for the screws to hold on to. J knows what drill bit size to use based on the screw size, so talk to him. The exact positions of where the holes go are here.

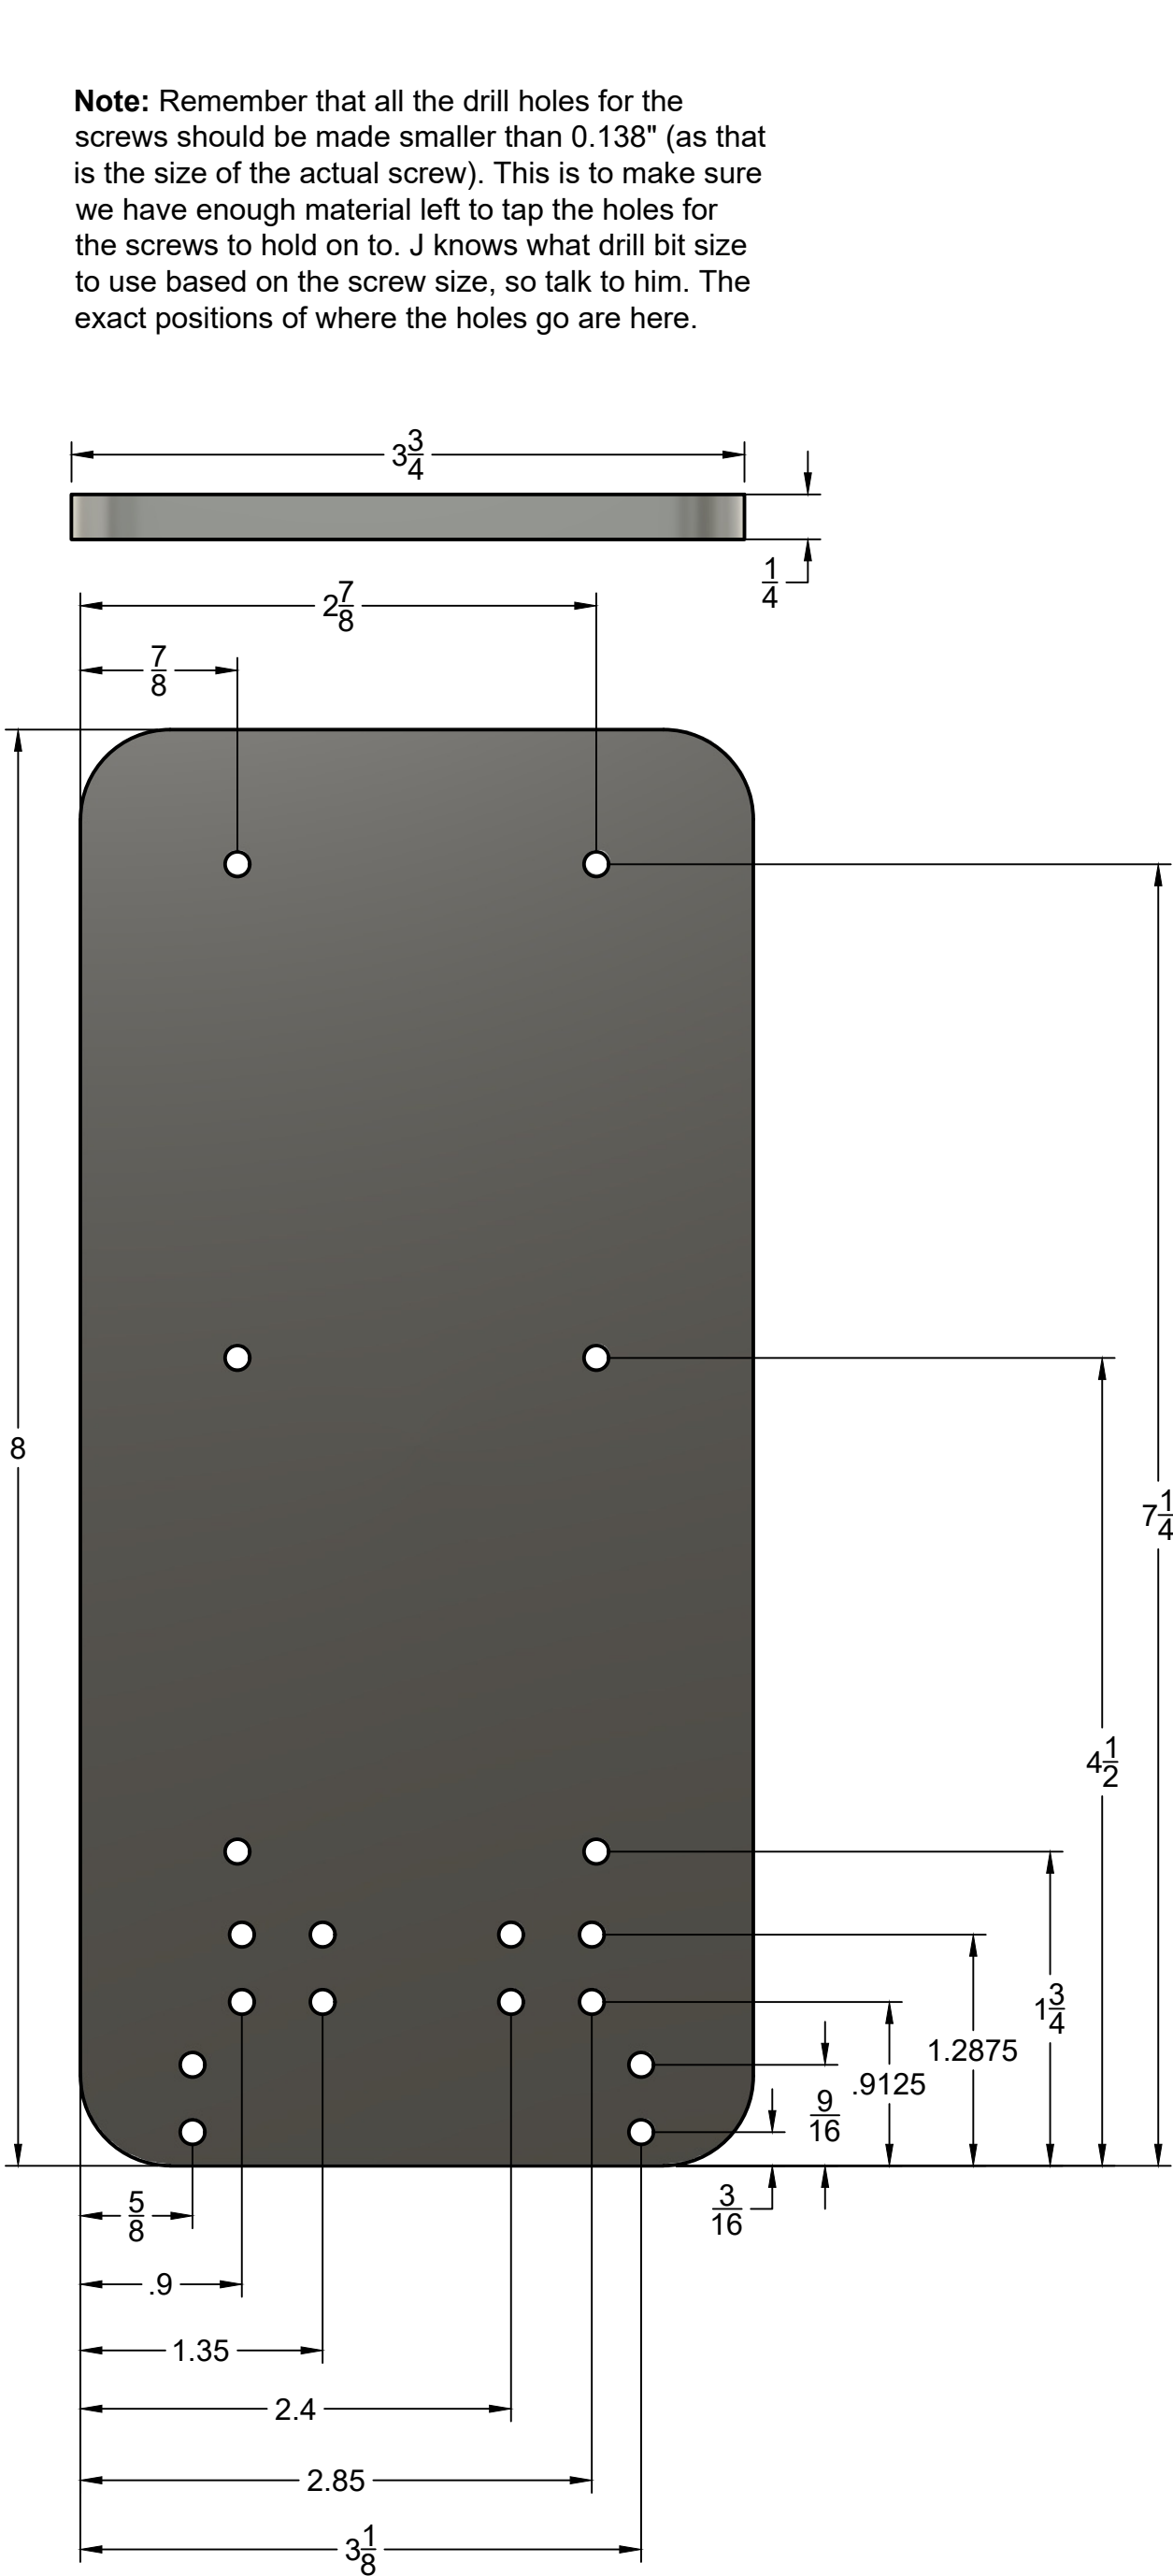


3

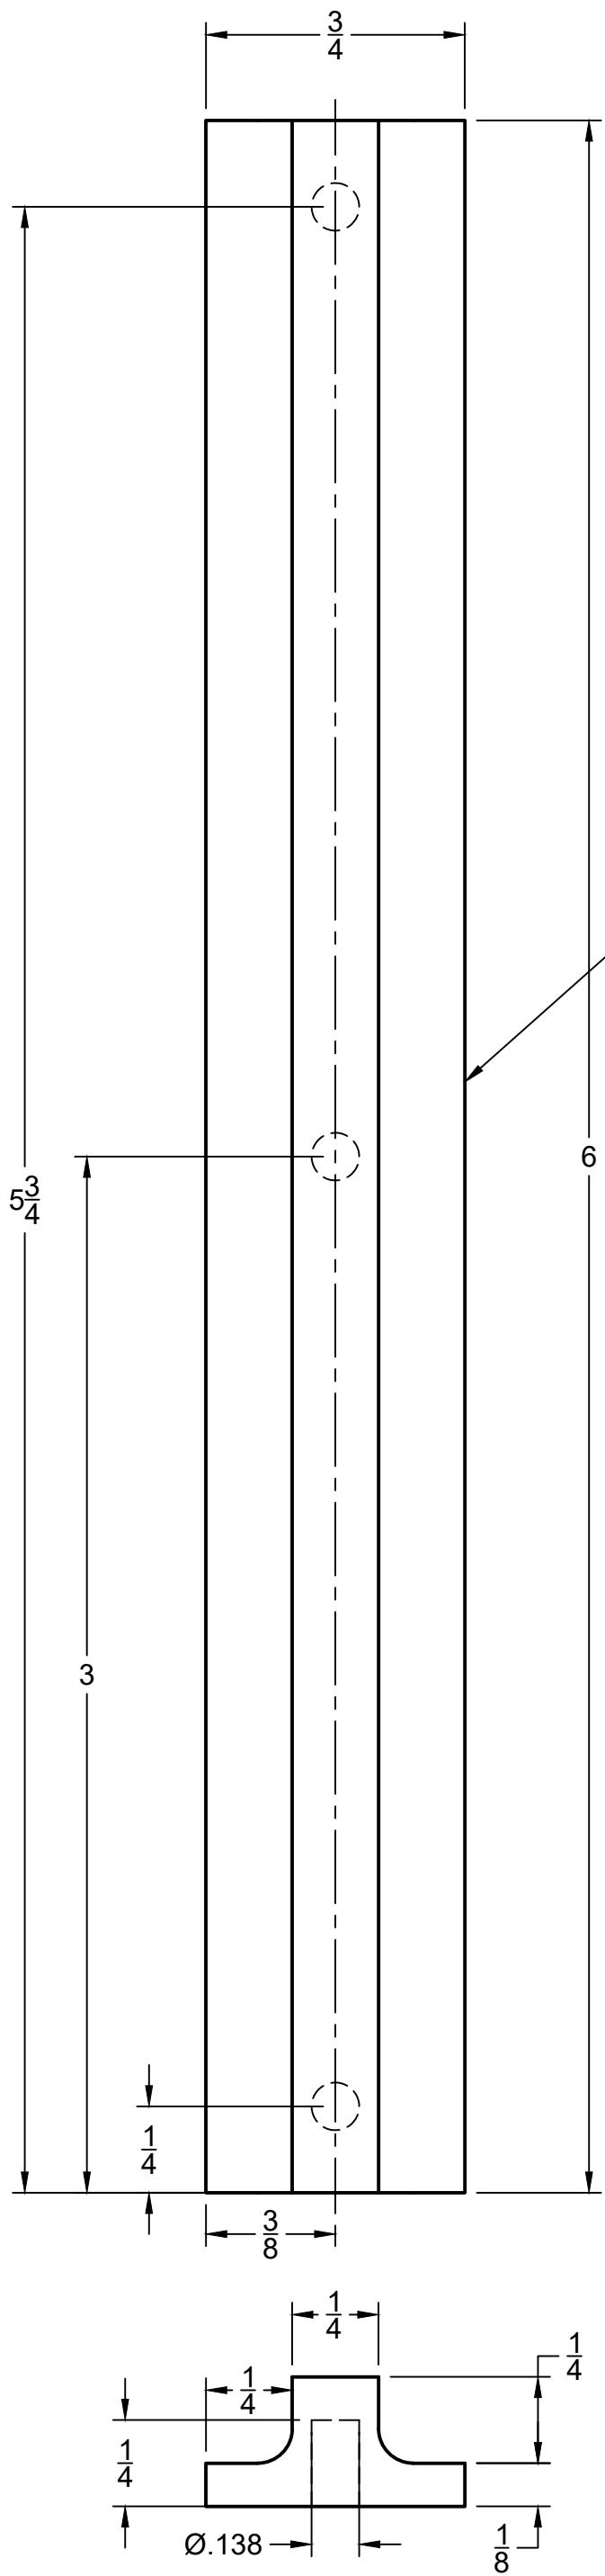

2

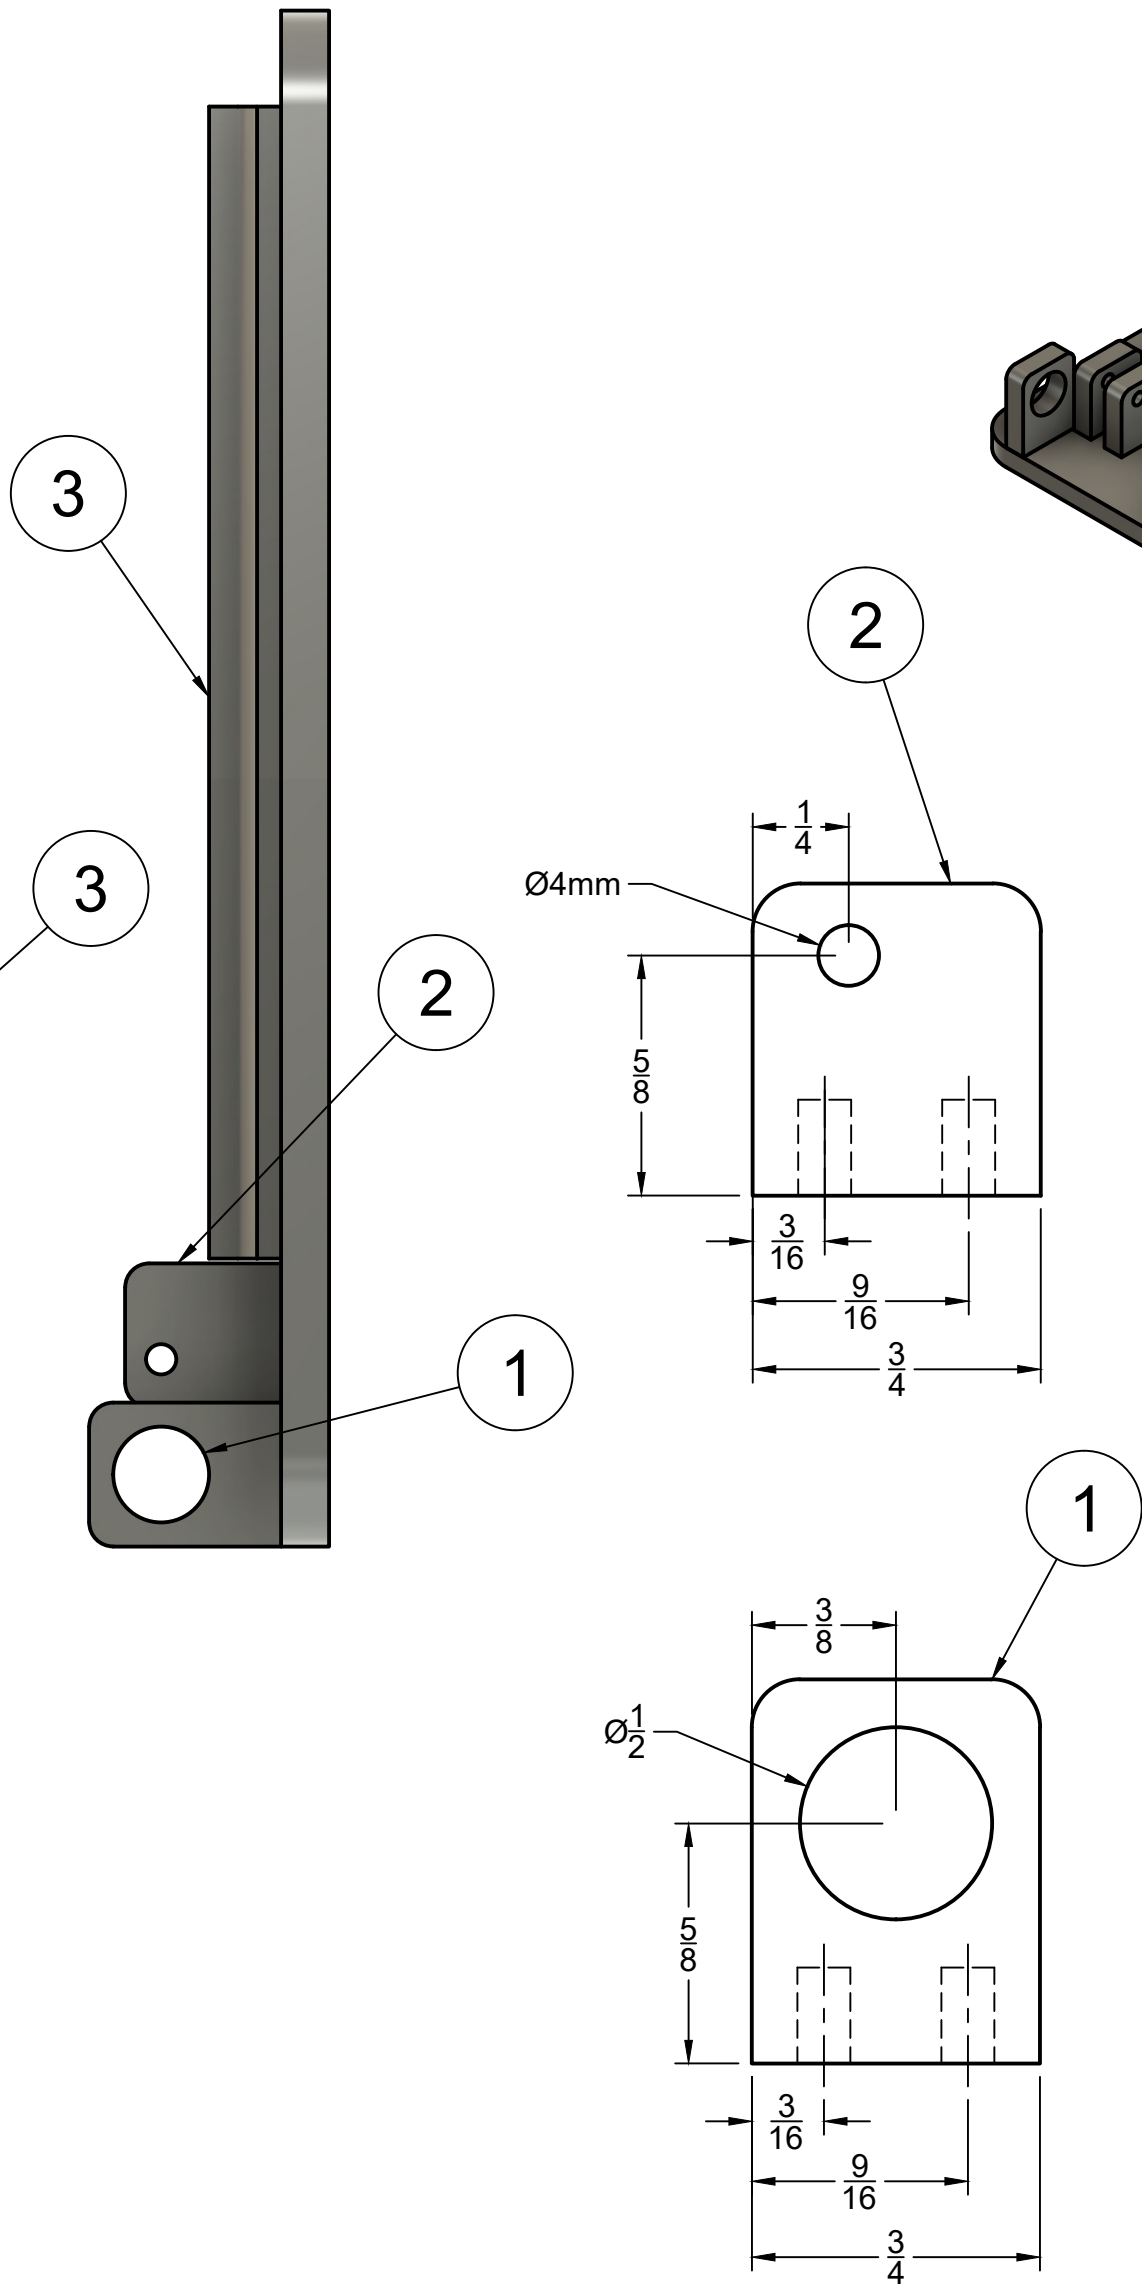

1

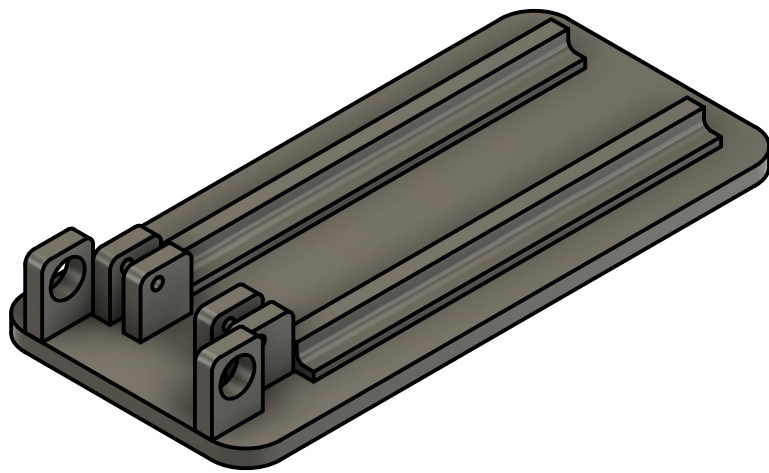

Note: For one of the pieces the hole should be 4mm but for its pair the **drill hole should be smaller** as it needs to be **tapped** in order for the shoulder screw to attach.

PROJECT E90 HFCV				
TITLE FINAL PEDAL Aluminum Pedal				
APPROVED	SIZE	CODE	DWG NO	REV
CHECKED	C			
DRAWN	Gabriel Salas	6/4/2025	SCALE 2:1	WEIGHT
			SHEET 1/1	

D

C

B

A