


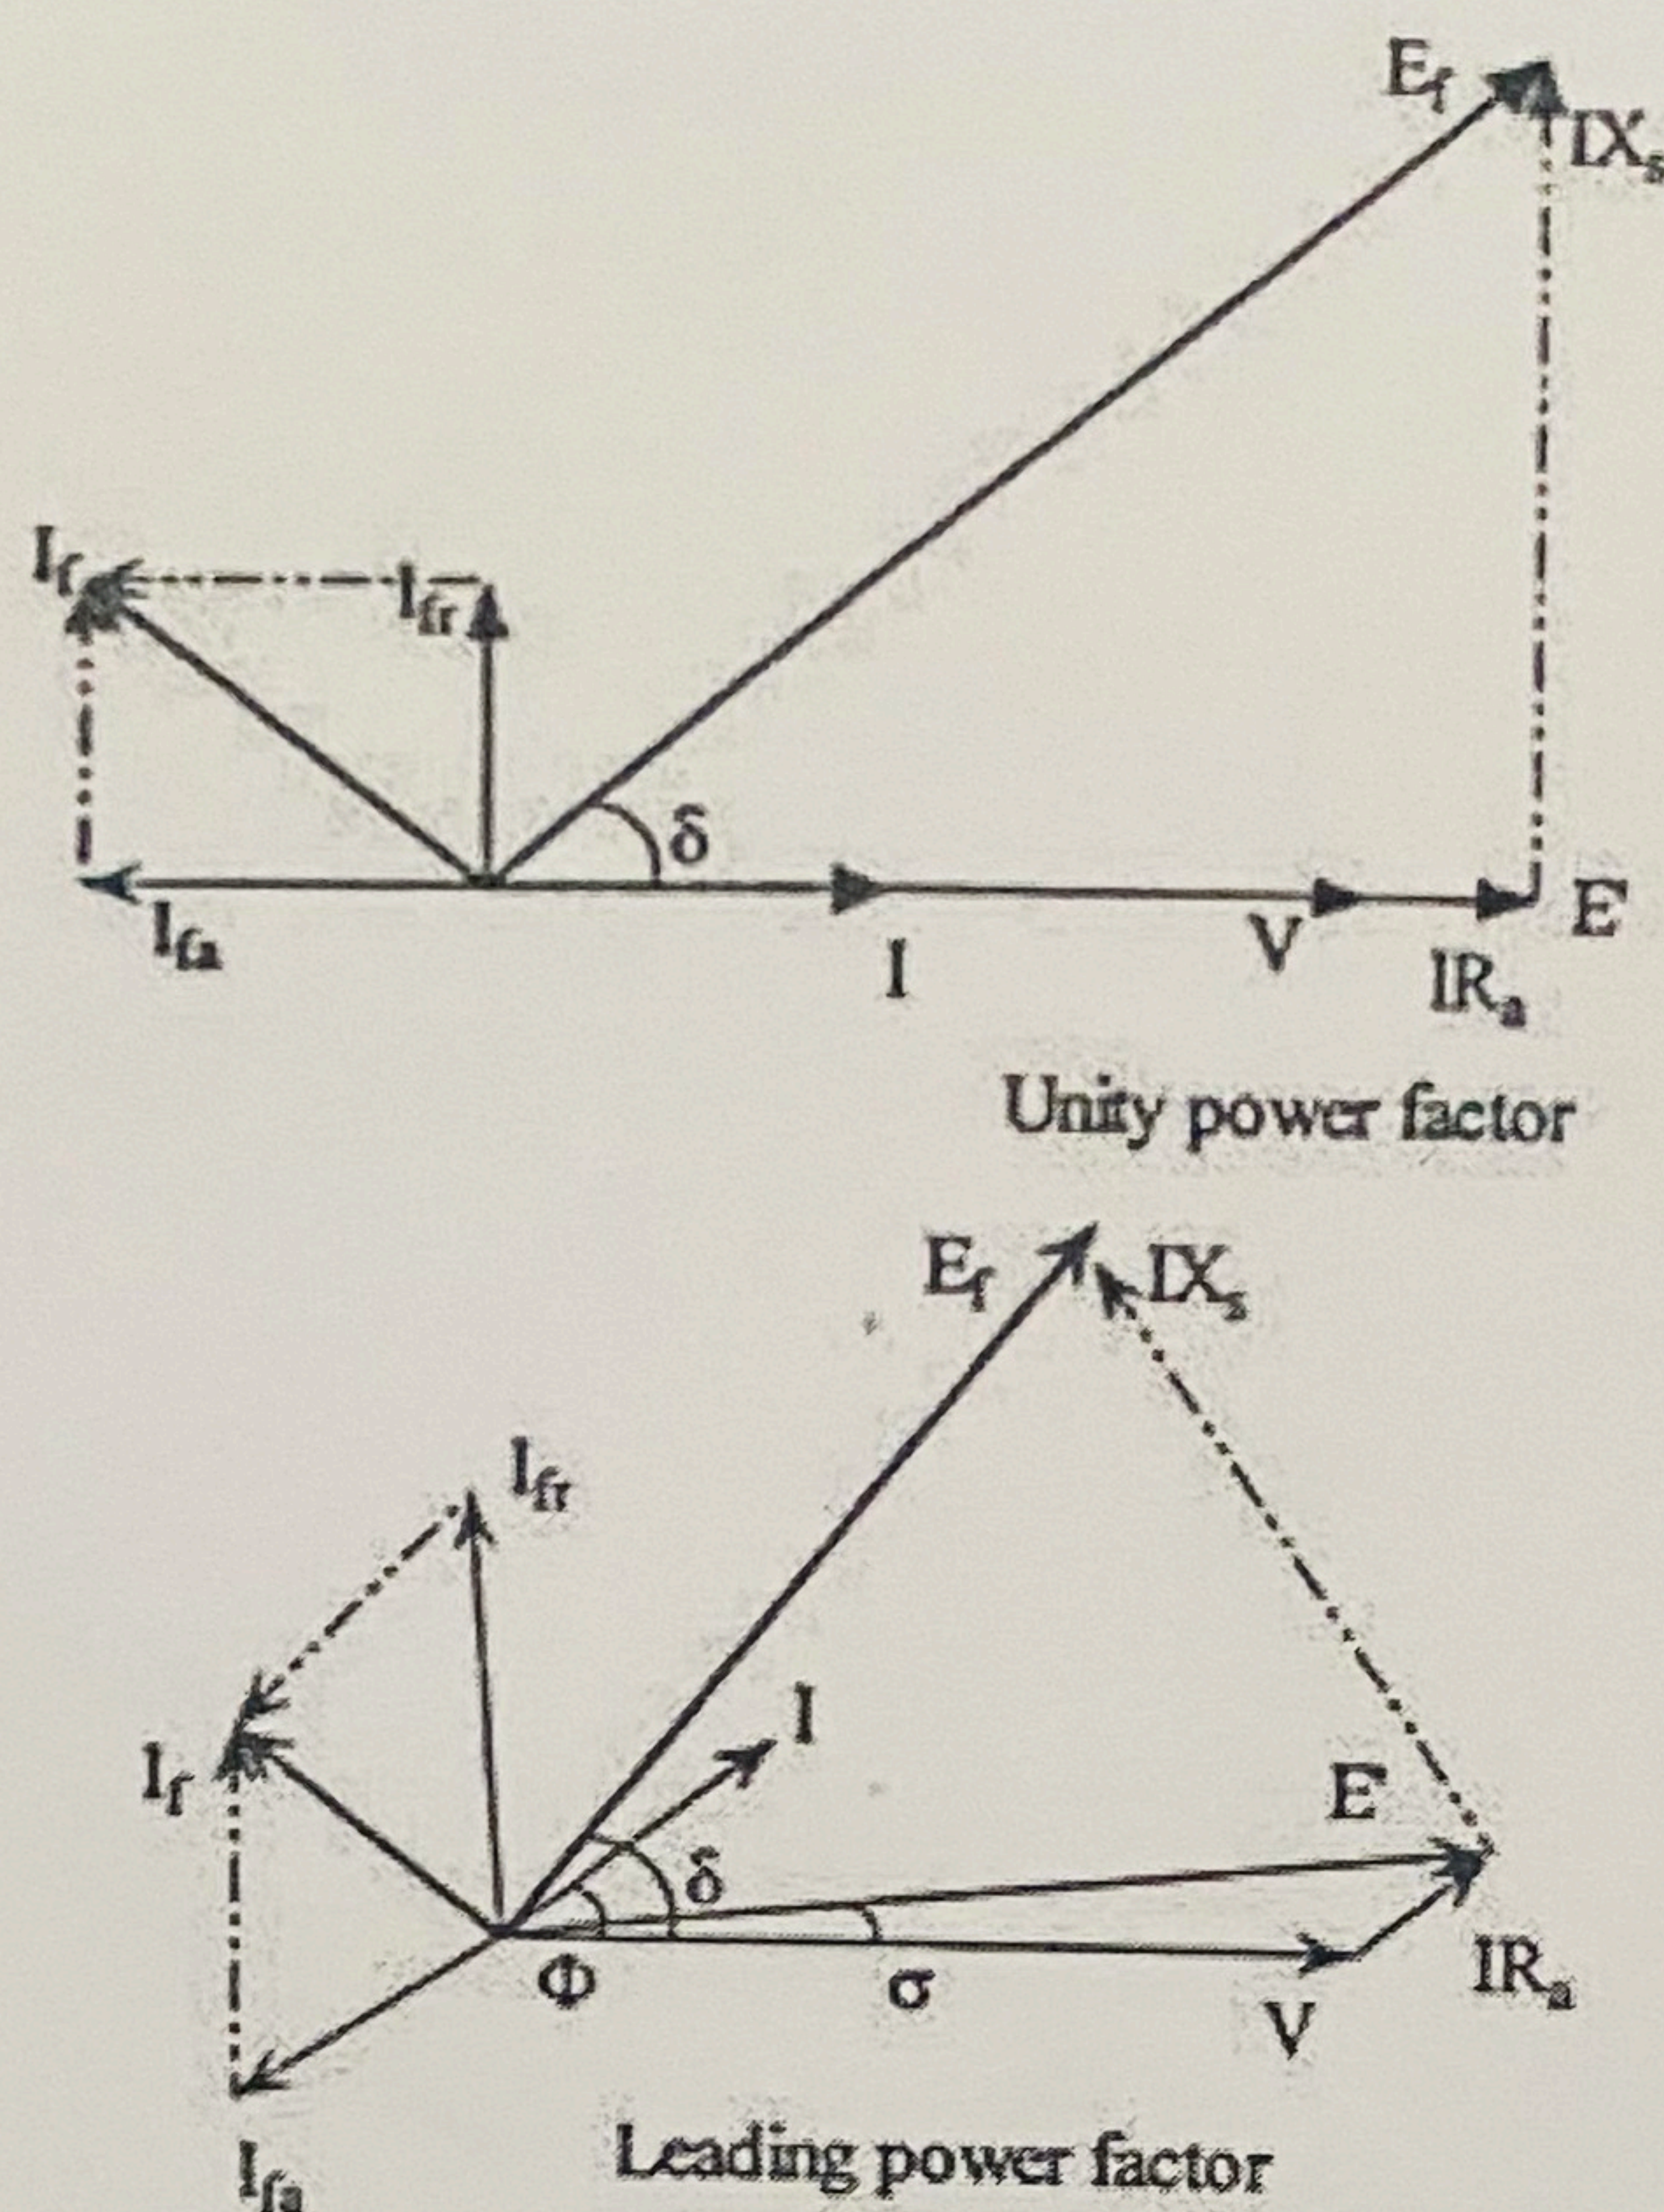

POTIER METHOD

The zero power factor curve can be used to determine leakage reactance X_l and armature reaction mmf I_{fa} . It is not necessary to plot full curve. Only two points F and A are sufficient. Point F on ZPF characteristics corresponds to field current to circulate full-load short circuit current during SC test. The point A corresponds to rated terminal voltage and rated armature current condition when the load is zero power factor lagging.

