

## 1C3603A143F

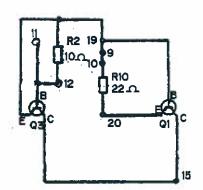

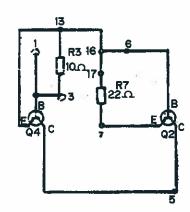

## TO TEST:

APPLY +12VDC THROUGH 100 OHM RESISTOR TO TB15(Q1C) AND COM TO TB20(Q1E). PLACE VOLTMETER ACROSS RESISTOR.

VOLTMETER SHOULD READ O VOLTS.

1000

APPLY +IVDC TO TB11(Q3B).

**VOLTMETER SHOULD READ +12 VOLTS.** 

## REPEAT FOR SECOND CIRCUIT

APPLY +12VDC THROUGH 100 OHM RESISTOR TO TB5(Q2C) AND COM TO TB7(Q2E). PLACE VOLTMETER ACROSS RESISTOR.

VOLTMETER SHOULD READ O VOLTS

100 D

APPLY +1VDC TO TB1(Q4B).

VOLTMETER SHOULD READ +12 VOLTS.

