


ECE4700J Computer Architecture

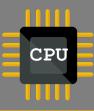

Course Review

Section II

Xinfei Guo xinfei.guo@sjtu.edu.cn


July 24th, 2024



The Memory (T5)



Memory Hierarchy Levels

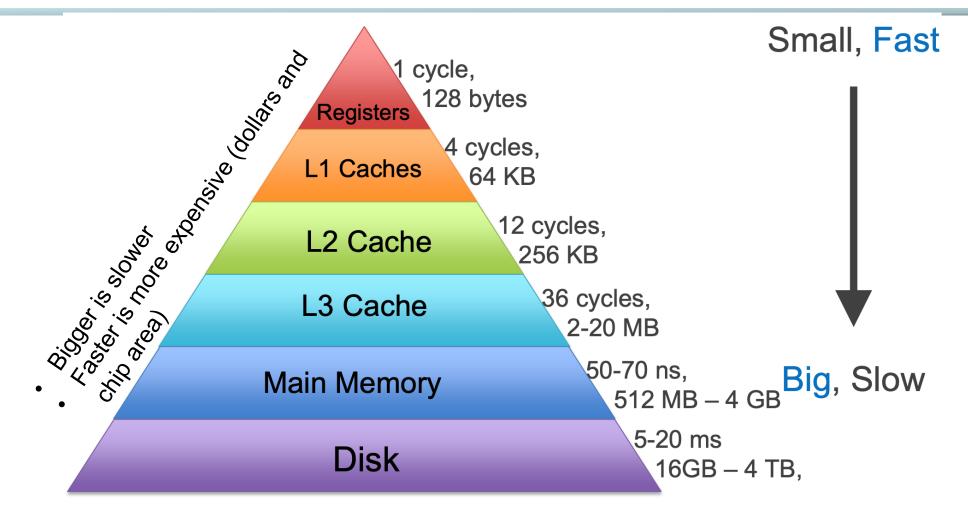

Intel Haswell Processor, 2013




Types of Memory

Volatile memory


- Static RAM (SRAM)
- Dynamic RAM (DRAM)

Non-volatile memory

- Read only memory (ROM)
 - Erasable programmable ROM (EPROM)
 - Electrically erasable programmable ROM (EEPROM)
- Non-volatile random-access memory (NVRAM)
 - Flash memory
- Mechanical storage
 - Hard drive, magnetic tape

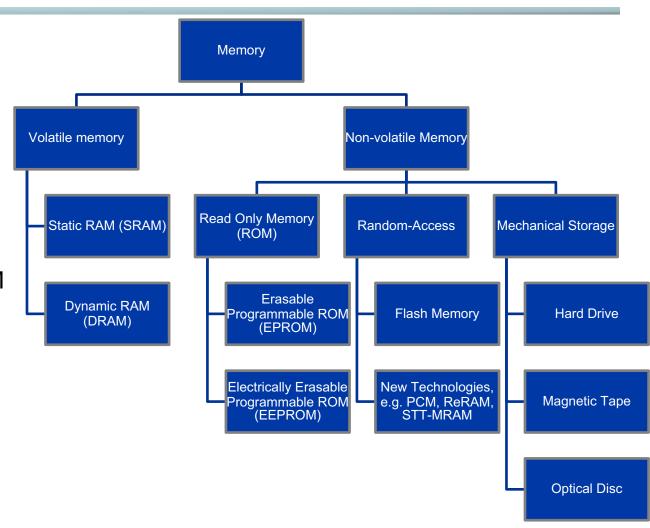

Concrete Memory Hierarchy

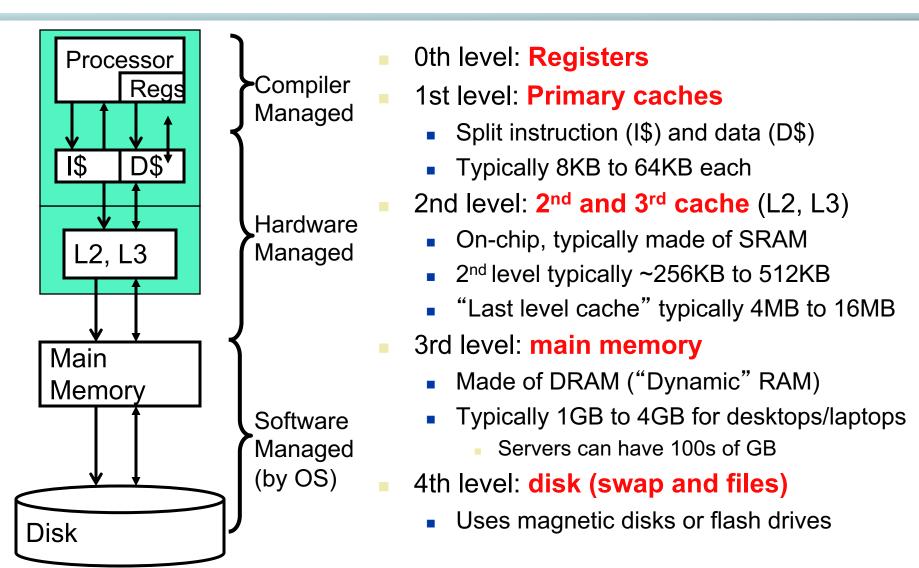



Memory Wall

- Originally theorized in 1994 by Wulf and McKee (U of Virginia)
- Processors are always waiting on memory, and CPU performance is therefore entirely limited by memory performance.

Hitting the Memory Wall: Implications of the Obvious

Wm. A. Wulf Sally A. McKee

Department of Computer Science University of Virginia {wulf | mckee}@virginia.edu

December 1994

This brief note points out something obvious — something the authors "knew" without really understanding. With apologies to those who did understand, we offer it to those others who, like us, missed the point.

We all know that the rate of improvement in microprocessor speed exceeds the rate of improvement in DRAM memory speed — each is improving exponentially, but the exponent for microprocessors is substantially larger than that for DRAMs. The difference between diverging exponentials also grows exponentially; so, although the disparity between processor and memory speed is already an issue, downstream someplace it will be a much bigger one. How big and how soon? The answers to these questions are what the authors had failed to appreciate.

To get a handle on the answers, consider an old friend — the equation for the average time to access memory, where t_c and t_m are the cache and DRAM access times and p is the probability of a cache hit:

$$t_{avg} = p \times t_c + (1-p) \times t_m$$

"We all know that the rate of improvement in microprocessor speed exceeds the rate of improvement in DRAM memory speed – each is improving exponentially, but the exponent for microprocessors is substantially larger than that for DRAMs.

The difference between diverging exponentials also grows exponentially; so, although the disparity between processor and memory speed is already an issue, downstream someplace it will be a much bigger one."







Techniques for Improving DRAM Performance

Row buffer

- To buffer recently accessed data without having to make another access
- Read and refresh several words and in parallel.
- The row buffer is essentially the sense amps at the bottom of each array.

Double data rate (DDR)

 Transfer data on the rising and falling clock edges to double the bandwidth.

DRAM banking


 Increase the number of parallel banks to improve bandwidth with simultaneous accesses.

Cache motivation

- Fortunately, most programs don't need access to all memory all of the time.
 - Accesses tend to exhibit locality of reference.
 - Temporal locality if an address is accessed, it is likely to be accessed again soon.
 - Spatial locality if an address is accessed, its neighbors are likely to be accessed soon.
 - Therefore, only a small number of addresses are likely to be accessed in the near future.
- Small memories are quick to access and can be placed near to the CPU.
 - If we can identify these locations likely to be accessed soon, then we can keep them in these memories.
- A cache stores copies of some memory locations for fast access when required.

Terminology

- Block/Line
- Set
- Way
- # of Set

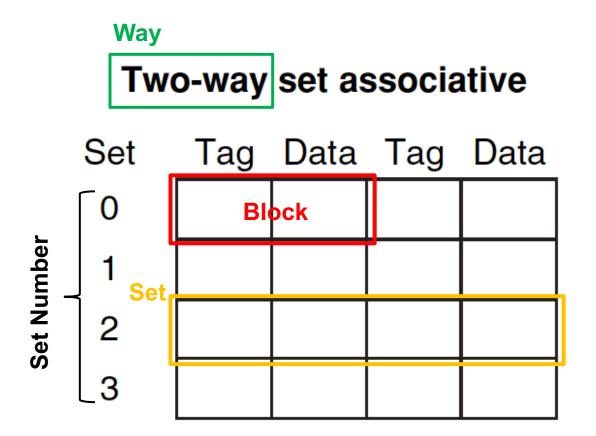

Each block can have multiple words.




Cache performance

- CPI_{ALUOps} does not include memory instructions
- AMAT = Average Memory Access Time

$$AMAT = HitTime + MissRate \times MissPenalty$$

$$= (HitTime_{Inst} + MissRate_{Inst} \times MissPenalty_{Inst}) +$$

$$(HitTime_{Data} + MissRate_{Data} \times MissPenalty_{Data})$$

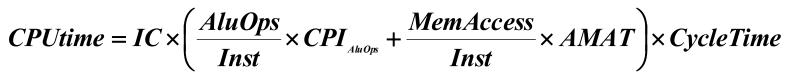

- For example:
 - An L1 cache with 1 ns hit latency and 5% miss rate
 - Combined with an L2 cache with a 10 ns hit latency and 1% miss rate
 - And 100 ns main memory latency

$$AMAT = 1 + 0.05 * (10 + 0.01 * 100) = 6.5 \text{ ns}$$



penalty

Review: "Three Cs" Model of Misses

- 1st C Compulsory (cold)
 - occur when a program is first started
- 2nd C − Conflict
 - miss that occurs because two distinct memory addresses map to the same cache location
- 3rd C Capacity
 - cache cannot contain all blocks needed for program execution

Effect of Cache Parameters on Performance

Bigger caches

Pros:

 Reduces capacity misses

Cons:

- Increases hit time
- More expensive
- Consumes more power

Larger cache blocks

Pros:

- Better spatial locality
- Reduces number of tags

Cons:

- Increases miss penalty
- Increases capacity misses
- Increases conflict misses

Higher associativity

Pros:

 Reduces conflict misses

Cons:


- Increases hit time
- Consumes more power


Miss Rate ABC: Associativity, Block size, Capacity




Important Tradeoffs

- Capacity and Performance
- Block Size and Performance
- Associativity and Performance

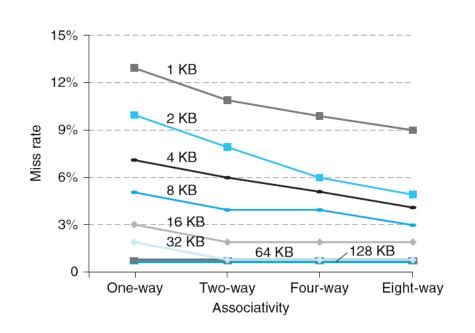


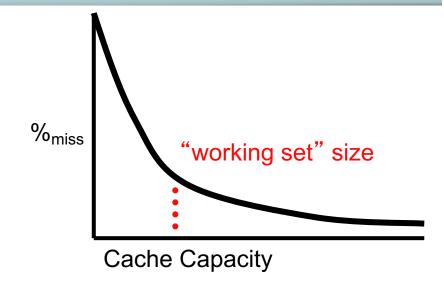

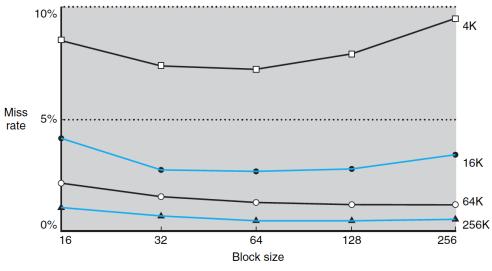


Reducing Conflict Misses: Victim Buffer

- Conflict misses: not enough associativity
 - High associativity is expensive, but also rarely needed
 - 3 blocks mapping to same 2-way set and accessed
- Victim buffer (VB): small fully-associative cache
 - Sits on I\$/D\$ miss path
 - Small (e.g., 8 entries) so very fast
 - Blocks kicked out of I\$/D\$ placed in VB
 - On miss, check VB: hit? Place block back in I\$/D\$
 - 8 extra ways, shared among all sets
 - Only a few sets will need it at any given time
 - Very effective in practice

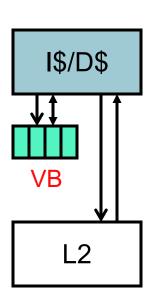

Hardware Prefetching

- Bring data into cache proactively/speculatively
 - If successful, reduces number of caches misses
- Key: anticipate upcoming miss addresses accurately
 - Can do in software or hardware
- Simple hardware prefetching: next block prefetching
 - Miss on address X → anticipate miss on X+block-size
 - + Works for insns: sequential execution
 - + Works for data: arrays
- Table-driven hardware prefetching
 - Use predictor to detect strides, common patterns
- Effectiveness determined by:
 - Timeliness: initiate prefetches sufficiently in advance
 - Coverage: prefetch for as many misses as possible
 - Accuracy: don't pollute with unnecessary data

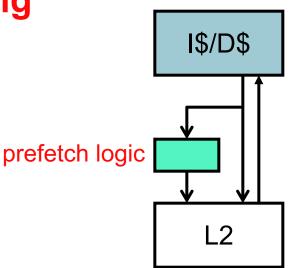

Compiler Optimizations to Reduce Miss Rate

- McFarling [1989] reduced misses by 75% in software on 8KB direct-mapped cache, 4 byte blocks
- Instructions
 - Reorder procedures in memory to reduce conflict misses
 - Profiling to look at conflicts (using tools they developed)
- Data
 - Loop interchange: Change nesting of loops to access data in memory order
 - Blocking: Improve temporal locality by accessing blocks of data repeatedly vs. going down whole columns or rows
 - Merging arrays: Improve spatial locality by single array of compound elements vs. 2 arrays
 - Loop fusion: Combine 2 independent loops that have same looping and some variable overlap



Write Propagation

- When to propagate new value to lower-level caches/memory?
- Option #1: Write-through: immediately
 - On hit, update cache
 - Immediately send the write to the next level
 - memory (or other processors) always have latest data
 - Simpler management of cache
- Option #2: Write-back: when block is replaced
 - Now we have multiple versions of the same block in various caches and in memory!
 - Requires additional "dirty" bit per block (updated with new values)
 - much lower bandwidth, since data often overwritten multiple times
 - Better tolerance to long-latency memory?





Write Allocate vs Non-Allocate

- What happens on write-miss?
- Write allocate: allocate new cache line in cache
 - Allocate cache block on miss by fetching corresponding memory block
 - Update cache block and then memory block
 - Commonly used (especially with write-back caches hoping subsequent writes will be captured in cache)
- Write non-allocate (or "write-around")
 - Simply send write data through to underlying memory/cache don't allocate new cache line!
 - potential more read miss
 - Commonly used in write through (write must still go to lower level memory)

Optimization Techniques

- Write Buffer for Write-Through
- Store buffer vs. writeback-buffer
- Non-blocking Cache
- Way Prediction

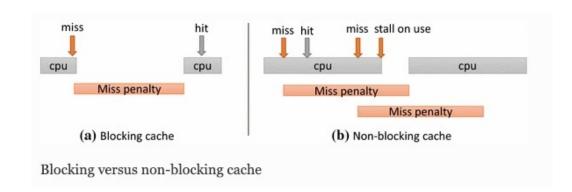

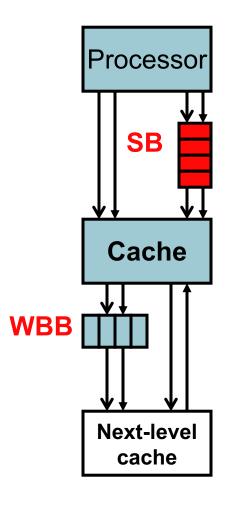

Summary (Basic Cache Optimization)

Technique	Hit time	Miss penalty	Miss rate	Hardware complexity	Comment
Larger block size		_	+	0	Trivial; Pentium 4 L2 uses 128 bytes
Larger cache size	-		+	1	Widely used, especially for L2 caches
Higher associativity	-		+	1	Widely used
Multilevel caches		+		2	Costly hardware; harder if L1 block size ≠ L2 block size; widely used
Read priority over writes		+		1	Widely used
Avoiding address translation during cache indexing	+			1	Widely used


Figure B.18 Summary of basic cache optimizations showing impact on cache performance and complexity for the techniques in this appendix. Generally a technique helps only one factor. + means that the technique improves the factor, – means it hurts that factor, and blank means it has no impact. The complexity measure is subjective, with 0 being the easiest and 3 being a challenge.

Summary (Advanced Cache Optimization)

Technique	Hit time	Band- width	Miss penalty	Miss rate	Power consumption	Hardware cost/ complexity	Comment	
Small and simple caches	+			_	+	0	Trivial; widely used	
Way-predicting caches	+				+	1	Used in Pentium 4	
Pipelined & banked caches	_	+				1	Widely used	
Nonblocking caches		+	+			3	Widely used	
Critical word first and early restart			+			2	Widely used	
Merging write buffer			+			1	Widely used with write through	
Compiler techniques to reduce cache misses				+		0	Software is a challenge, but many compilers handle common linear algebra calculations	
Hardware prefetching of instructions and data			+	+		2 instr., 3 data	Most provide prefetch instructions; modern high- end processors also automatically prefetch in hardware	
Compiler-controlled prefetching			+	+		3	Needs nonblocking cache; possible instruction overhead; in many CPUs	
HBM as additional level of cache		+/-	E	+	+	3	Depends on new packaging technology. Effects depend heavily on hit rate improvements	

Superscalar Memories

- Increasing issue width => wider caches
- Parallel cache access is harder than parallel FUs
 - fundamental difference: caches have state, FUs don't
 - one port affects future for other ports
- Several approaches used
 - true multi-porting
 - muliple cache copies
 - virtual multi-porting
 - Non-Uniform Cache Architecture (NUCA)

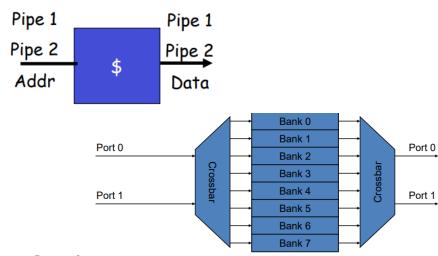



Latency vs. Bandwidth

- Bandwidth can be handled by "spending" more (hardware cost)
 - Wider buses, interfaces
 - Banking/interleaving, multiporting
- Ignoring cost, a well-designed system should never be bandwidth-limited
 - Can't ignore cost!
- Bandwidth improvement usually increases latency
 - No free lunch
- Hierarchies decrease bandwidth demand to lower levels
 - Serve as traffic filters: a hit in L1 is filtered from L2
- Parallelism puts more demand on bandwidth
- If average b/w demand is not met => infinite queues
 - Bursts are smoothed by queues
- If burst is much larger than average => long queue
 - Eventually increases delay to unacceptable levels



Inclusion versus Exclusion

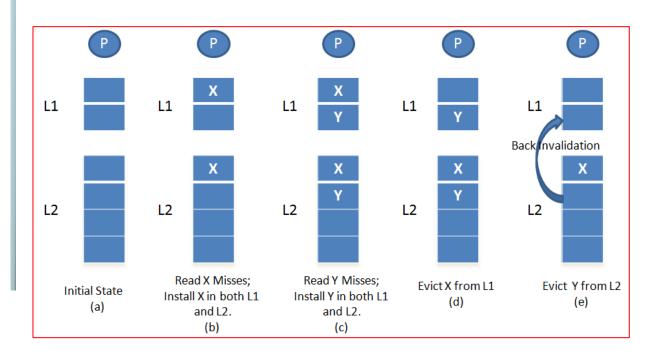

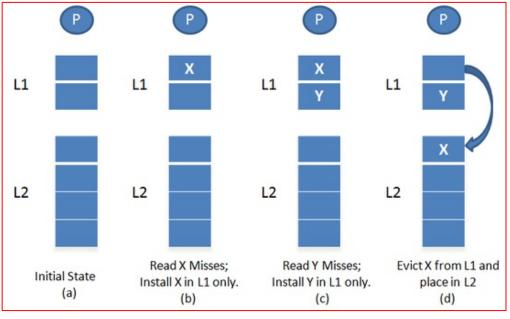

Inclusive Policy

Exclusive Policy




source: wiki

Split vs. Unified Caches

- Split I\$/D\$: insns and data in different caches
 - To minimize structural hazards and t_{access}
 - Larger unified I\$/D\$ would be slow, 2nd port even slower
 - Optimize I\$ and D\$ separately
 - Not writes for I\$, smaller reads for D\$
 - Why is 486 I/D\$ unified?
- Unified L2, L3: insns and data together
 - To minimize %_{miss}
 - Fewer capacity misses: unused insn capacity can be used for data
 - More conflict misses: insn/data conflicts
 - A much smaller effect in large caches
 - Insn/data structural hazards are rare: simultaneous I\$/D\$ miss
 - Go even further: unify L2, L3 of multiple cores in a multi-core



Overview of Memory Access Using an MMU

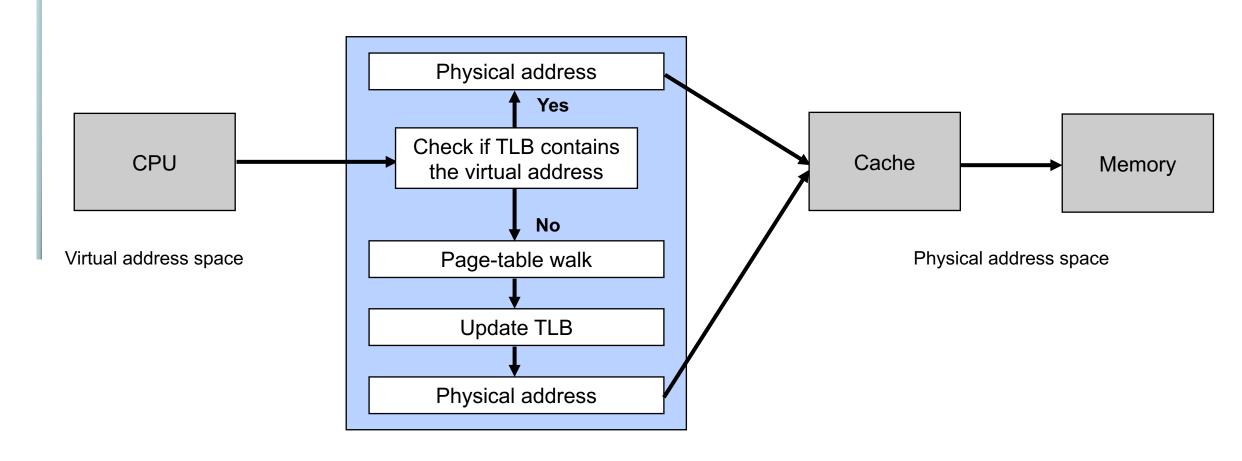


MMU (When OS is present)




Alternative: DMA

- Direct Memory Access (DMA)
- Until now CPU has sole control of main memory...
- But DMA
 - Allows I/O devices to directly read/write main memory
 - CPU sets up DMA request
 - for (i = 1 ... n)Device puts data on bus& RAM accepts it
 - Device interrupts CPU after done

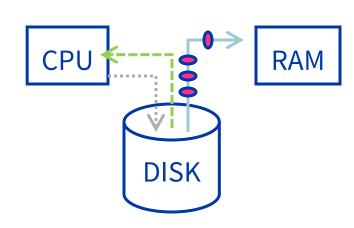




DMA Architecture

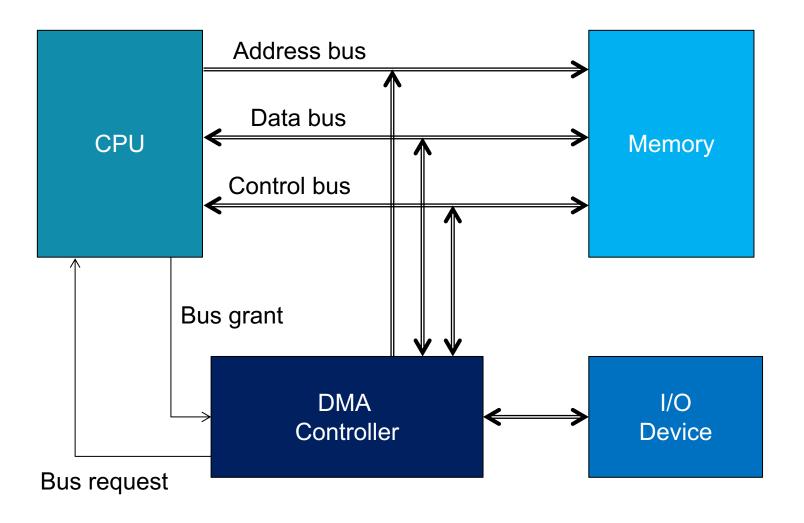

Memory Hierarchy Summary

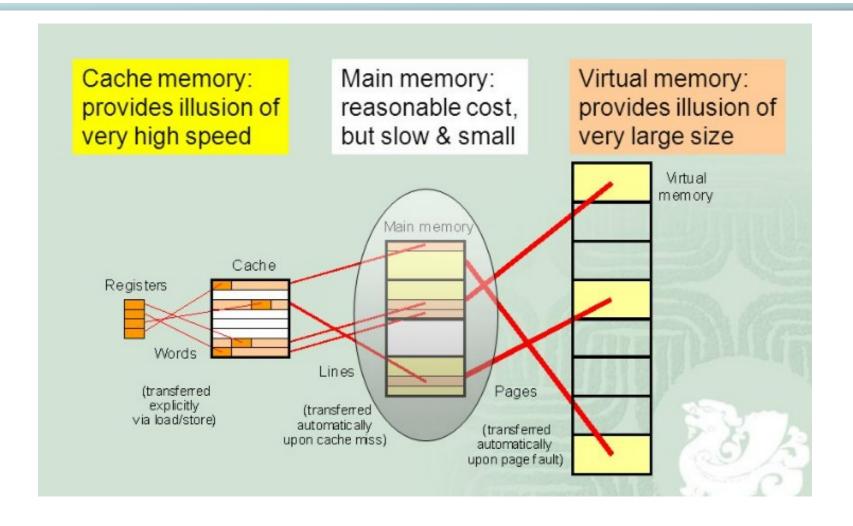

Data Movement in Cache





SIMD (T6)




SIMD Important Topics

- Flynn's Classification
- Concept of SIMD
- Vector Processor
 - Components of Vector Processors
 - Vector Chaining
 - Scatter and Gather
 - Strip Mining
 - Masked Operations
 - SIMD Extensions
- GPU

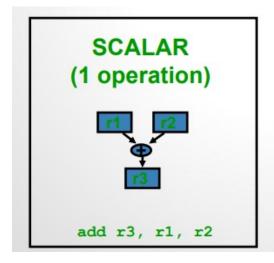

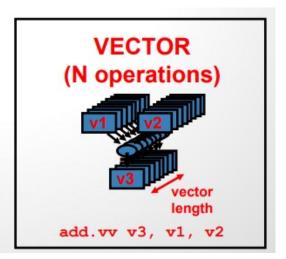


Flynn's Classification

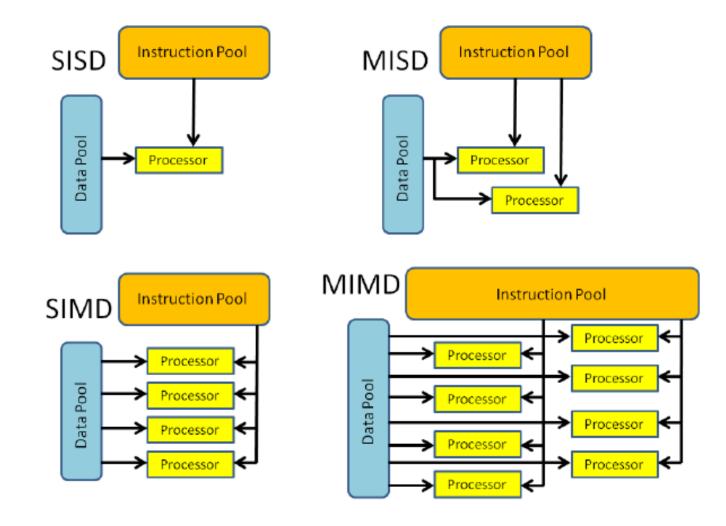



Vector Architectures


- All vector operations occur between vector registers
- If necessary, operands are fetched from main memory into a set of vector registers (load-store unit)
- Includes all vector machines since the late 1980s:
 - Convex, Cray, Fujitsu, Hitachi, NEC

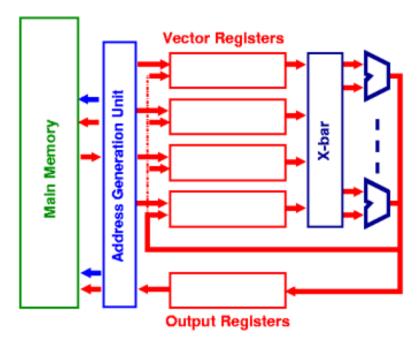

Packed SIMD Extensions


64b										
	32	2b		32b						
16	16b 16b			16	5b	16b				
8b	8b	8b	8b	8b	8b	8b	8b			

- Short vectors added to existing microprocessors ISAs, for multimedia
- Use existing 64-bit registers split into 2x32b or 4x16b or 8x8b
 - Lincoln Labs TX-2 from 1957 had 36b datapath split into 2x18b or 4x9b
 - Newer designs have wider registers
 - 128b for PowerPC Altivec, Intel SSE2/3/4
 - 256b for Intel AVX
- Single instruction operates on all elements within register

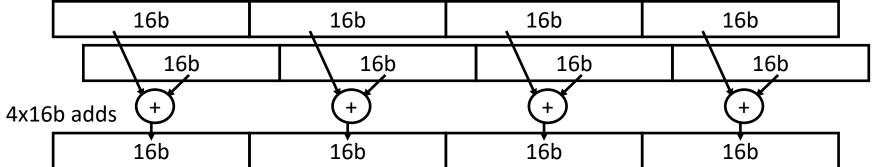

SIMD vs. SMT vs. SIMT

- In SIMD, elements of short vectors are processed in parallel.
- In SMT, instructions of several threads are run in parallel.
- SIMT is somewhere in between an interesting hybrid between vector processing and hardware threading.

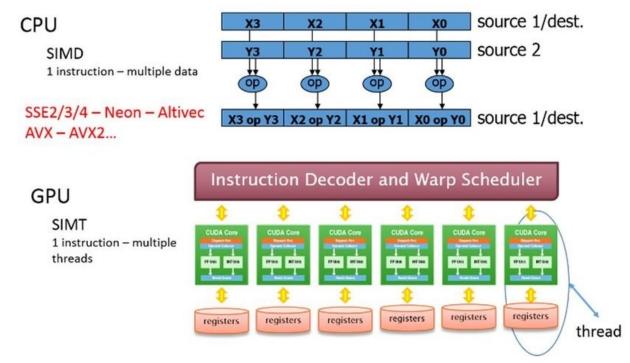

SIMT is generally used in Superscalar processors to implement SIMD. So technically, each core is scalar in nature but it still works similarly to an SIMD model by leveraging multiple threads to do the same task on various data sets.

GPU Architectures

- Processing is highly data-parallel
 - GPUs are highly multithreaded
 - Use thread switching to hide memory latency
 - Less reliance on multi-level caches
 - Graphics memory is wide and high-bandwidth
- Trend toward general purpose GPUs
 - Heterogeneous CPU/GPU systems
 - CPU for sequential code, GPU for parallel code
- Programming languages/APIs
 - DirectX, OpenGL
 - C for Graphics (Cg), High Level Shader Language (HLSL)
 - Compute Unified Device Architecture (CUDA)




GPU Design Principles

- CPU design is about making a single thread run as fast as possible.
 - Pipeline stalls and memory accesses are expensive in terms of latency.
 - So increased logic was added to reduce the probability/cost of stalls.
 - Use of large cache memories to avoid memory misses
- GPU design is about maximizing computation throughput.
 - Individual thread latency not considered important
 - GPUs avoid much of the complex CPU pipeline logic for extracting ILP.
 - Instead, each thread executes on a relatively simple core with performance obtained through parallelism.
 - Single instruction, multiple threads
- Computation hides memory and pipeline latencies.
- Wide and fast bandwidth-optimized memory systems



GPUs: Throughput Oriented Design

- Small caches
 - To boost memory throughput
- Simple control
 - No branch prediction
 - No data forwarding
- Energy efficient ALUs
 - Many, long latency but heavily pipelined for high throughput
- Require massive number of threads to tolerate latencies

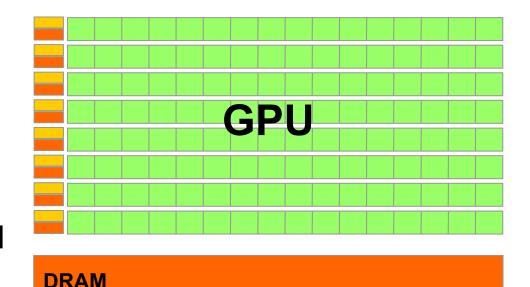




GPUs are SIMD Engines Underneath

- The instruction pipeline operates like a SIMD pipeline (e.g., an array processor)
- However, the programming is done using threads, NOT SIMD instructions
- Before we understand that, let's distinguish between
 - Programming Model (Software)vs.
 - Execution Model (Hardware)



CUDA

- NVIDIA CUDA (Compute Uniform Device Architecture) 2007
 - A way to run custom programs on the massively parallel architecture!
- OpenCL specification released 2008
- Both platforms expose synchronous execution of a massive number of threads

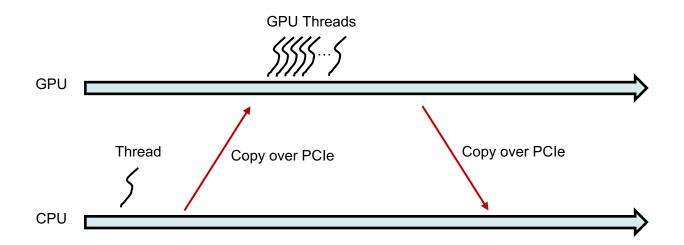


Multicore (T7)




Multicore

- Why, how and what?
 - Dennard Scaling
 - Multicore vs. SMT
- Distributed vs shared caches
- Cache Coherence

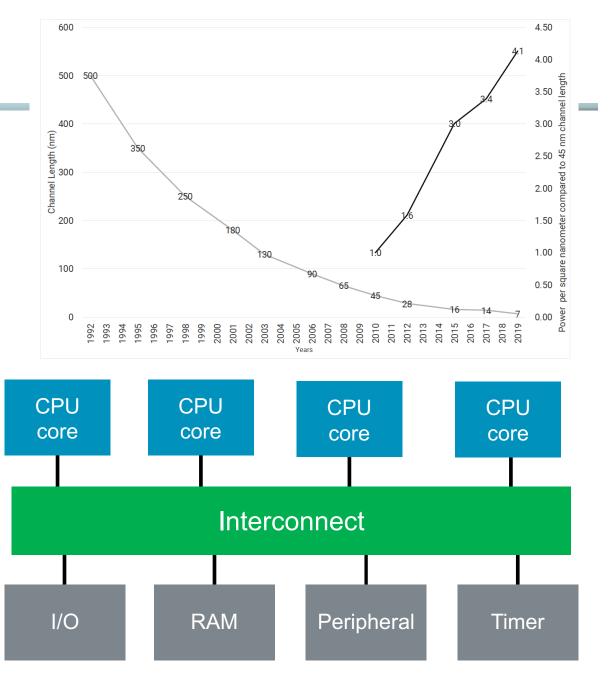


Why Multicore?

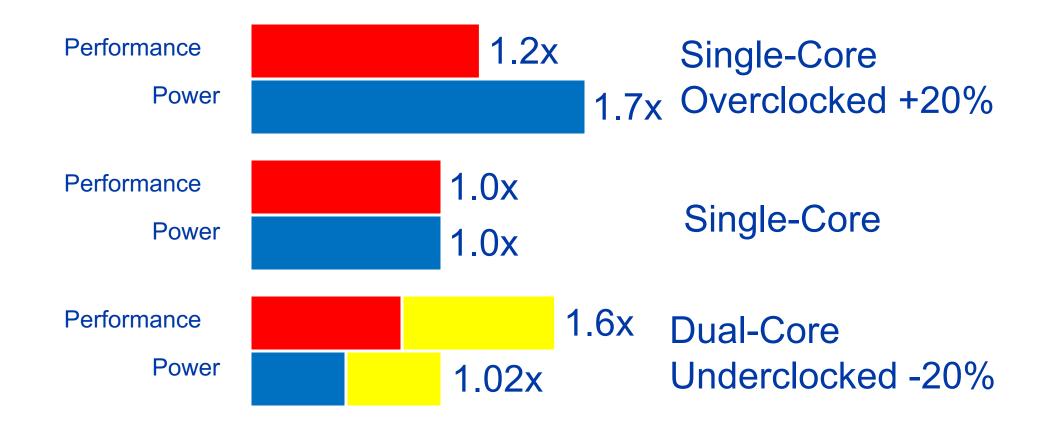


Standard Multithreading Picture


Time evolution of issue slots

Color = thread, white = no instruction (bubble)

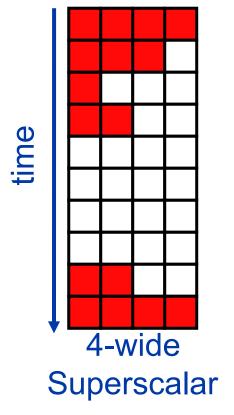


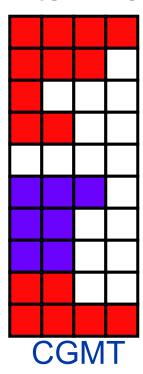

Switch to thread B on thread A L2 miss

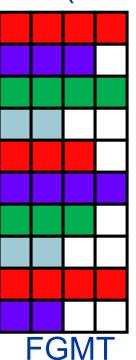

Switch threads every cycle

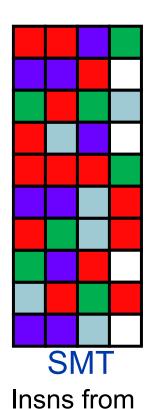

multiple

threads

coexist

CG: coarse grain FG: fine grain



Combining Multi-core and SMT


- Cores can be SMT-enabled (or not)
- The different combinations:
 - Single-core, non-SMT: standard uniprocessor
 - Single-core, with SMT
 - Multi-core, non-SMT
 - Multi-core, with SMT: our fish machines
- The number of SMT threads:
 - 2, 4, or sometimes 8 simultaneous threads
- Intel calls them "hyper-threads"



Approaches to Cache Coherence

- Software-based solutions
 - Mechanisms
 - Mark cache blocks/memory pages as cacheable/non-cacheable
 - Add "Flush" and "Invalidate" instructions
 - Could be done by compiler or runtime system
 - Difficult to get perfect
- Hardware solutions are far more common
 - Simple schemes rely on broadcast over a bus (Snooping Protocol)


Valid-Invalid (VI) Snooping Protocol

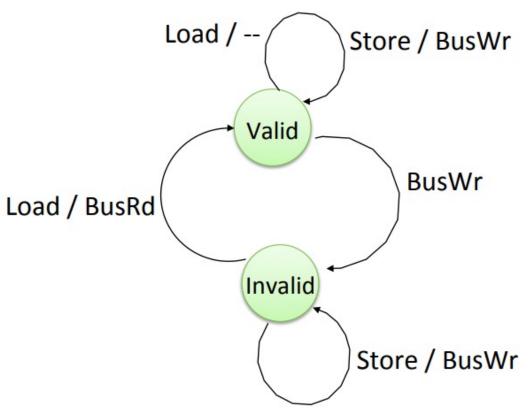

Actions: Ld, St, BusRd, BusWr

Write-through, no-write-allocate cache

1 bit of storage overhead per cache frame

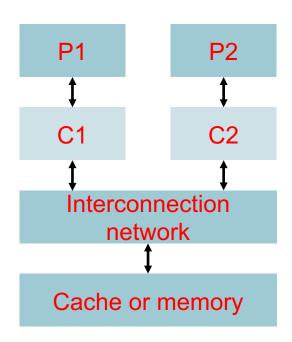

- If you load/store a block: transition to V
- If anyone else wants to read/write block:
 - Give it up: transition to I state
 - Write-back if your own copy is dirty




Modified-Shared-Invalid (MSI) Protocol

- Allows for many readers...
- Three states tracked per-block at each cache
 - Modified cache has the only copy; writable; dirty (read/write permission)
 - Dirty == memory is out of date
 - Shared cache has a read-only copy; clean (read-only permission)
 - Clean == memory is up to date
 - Invalid cache does not have a copy (blocked, no permission)
- Three processor actions
 - Load, Store, Evict
- Five bus messages
 - BusRd, BusRdX, BusInv, BusWB, BusReply
 - Could combine some of these




Memory Consistency vs Cache Coherence

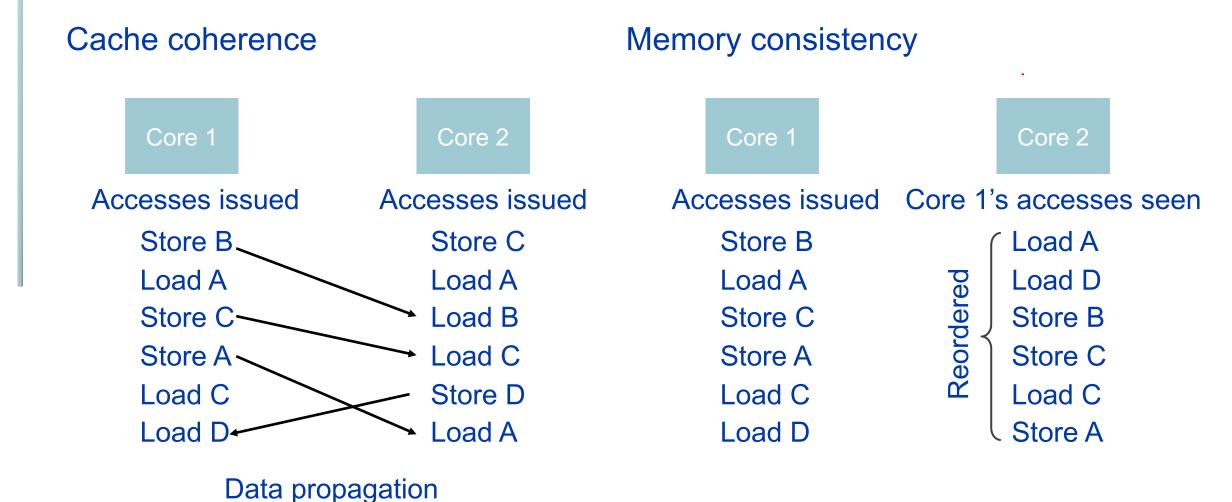




Dark Silicon

Multicore has hit the Utilization Wall

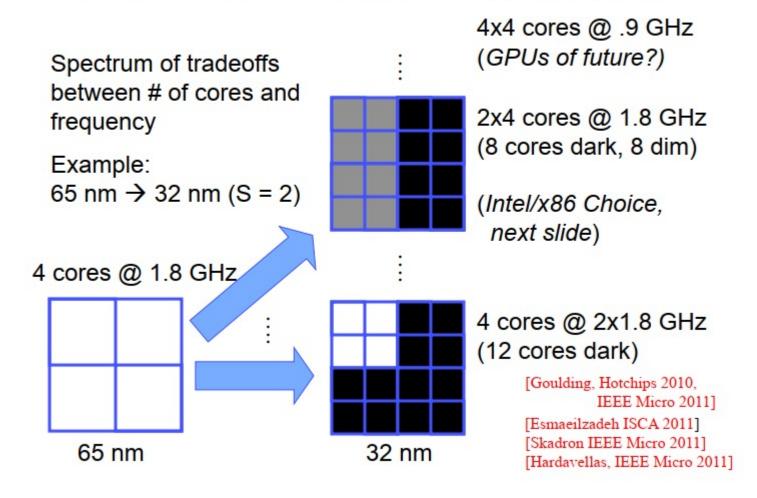




4 horsemen

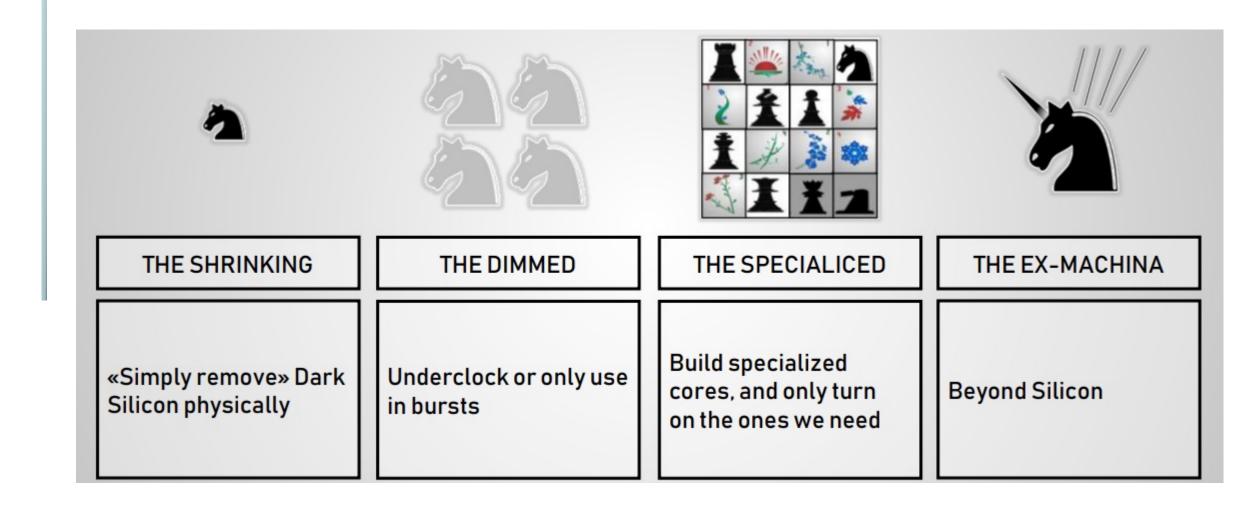

Roofline Model

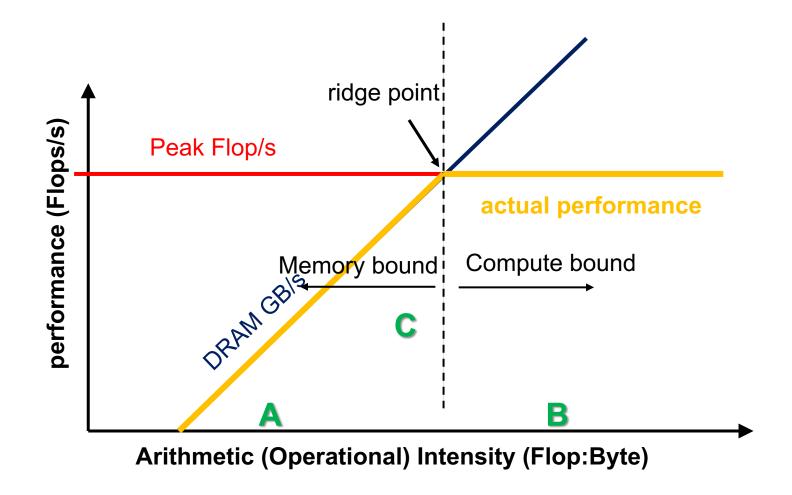



Specialized Architecture (T8)



Important Topics

- Why Specialized Architecture?
- Reconfigurable Computing
 - What is RC?
 - FPGAs
 - Basic architecture
 - Limitations
- DSAs
 - Motivation
 - Systolic Array



Processor vs ASIC

- Take longer to compute
 - slow
- Flexible
- Need instructions to determine what to do on each cycle
- Space is bounded

- Take shorter time to compute
 - fast
- Not Flexible
- No instruction
 - Same calculation every cycle
- Space unbounded


Temporal Computing

Spatial Computing



Slide Credit: Hayden So


Between Temporal & Spatial Computing

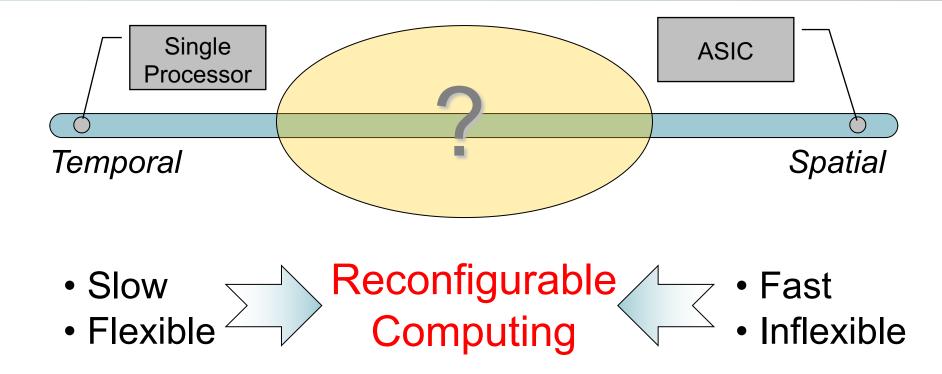


Spatial mapping of computation versus multiplexing of function units (as in processors) relieves pressure for memory capacity, BW, and promotes local communication patterns



FPGA Architecture

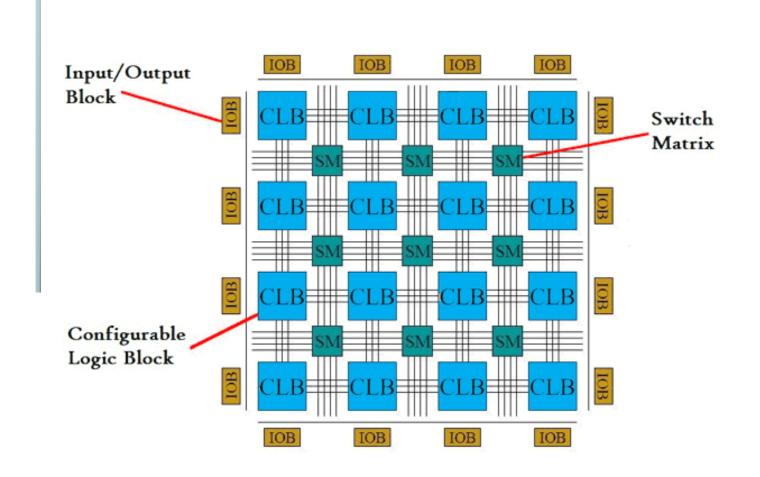

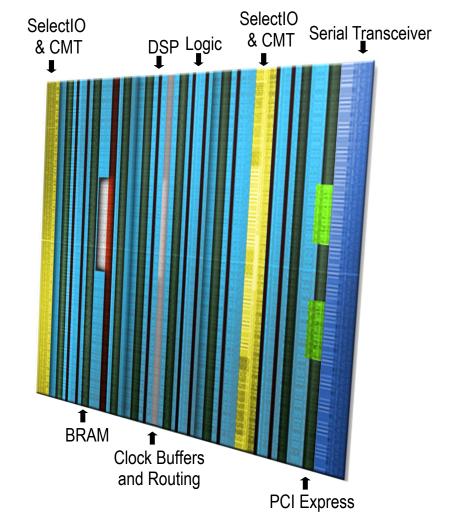





Guidelines for DSAs

- Use dedicated memories to minimize data movement
 - Hardware-controlled multi-level cache -> domain-specific software controlled scratch-pad
- Invest resources into more arithmetic units or bigger memories
 - Core optimization (OoO, speculation, threading, etc) -> more domainspecific FU/memory
- Use the easiest form of parallelism that matches the domain
 - MIMD -> SIMD or VLIW that matches domain
- Reduce data size and type to the simplest needed for the domain
 - General-purpose 32/64 integer/float -> domain-specific 8/16 int/float
- Use a domain-specific programming language
 - General-purpose C/C++/Fortran -> Domain-specific language (TensorFlow for DNN)



Systolic Array

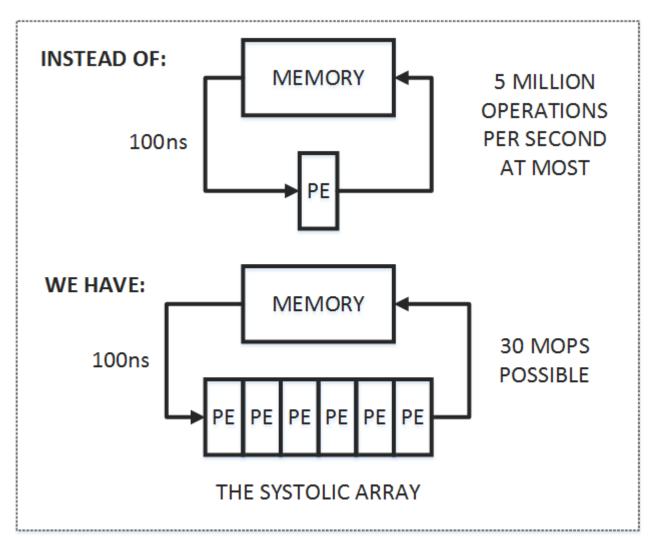

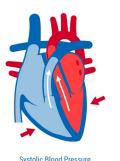

"脉动"

Memory: Heart

PEs: Cell

- Goal: design an accelerator that has
 - Simple, regular design (keep # unique parts small and regular)
 - High concurrency → high performance
 - Balanced computation and I/O (memory) bandwidth
- Idea: Replace a single processing element (PE) with a regular array of PEs and carefully orchestrate flow of data between the PEs
 - such that they collectively transform a piece of input data before outputting it to memory
- Benefit: Maximizes computation done on a single piece of data element brought from memory

Systolic Arrays: Pros and Cons

Advantages:

- Principled: Efficiently makes use of limited memory bandwidth, balances computation to I/O bandwidth availability
- Specialized (computation needs to fit PE organization/functions)
 - → improved efficiency, simple design, high concurrency/performance
 - → good to do more with less memory bandwidth requirement

Downsides:

- Specialized
- → not generally applicable because computation needs to fit the PE functions/organization

Thank you!

Good luck to your final exam!

