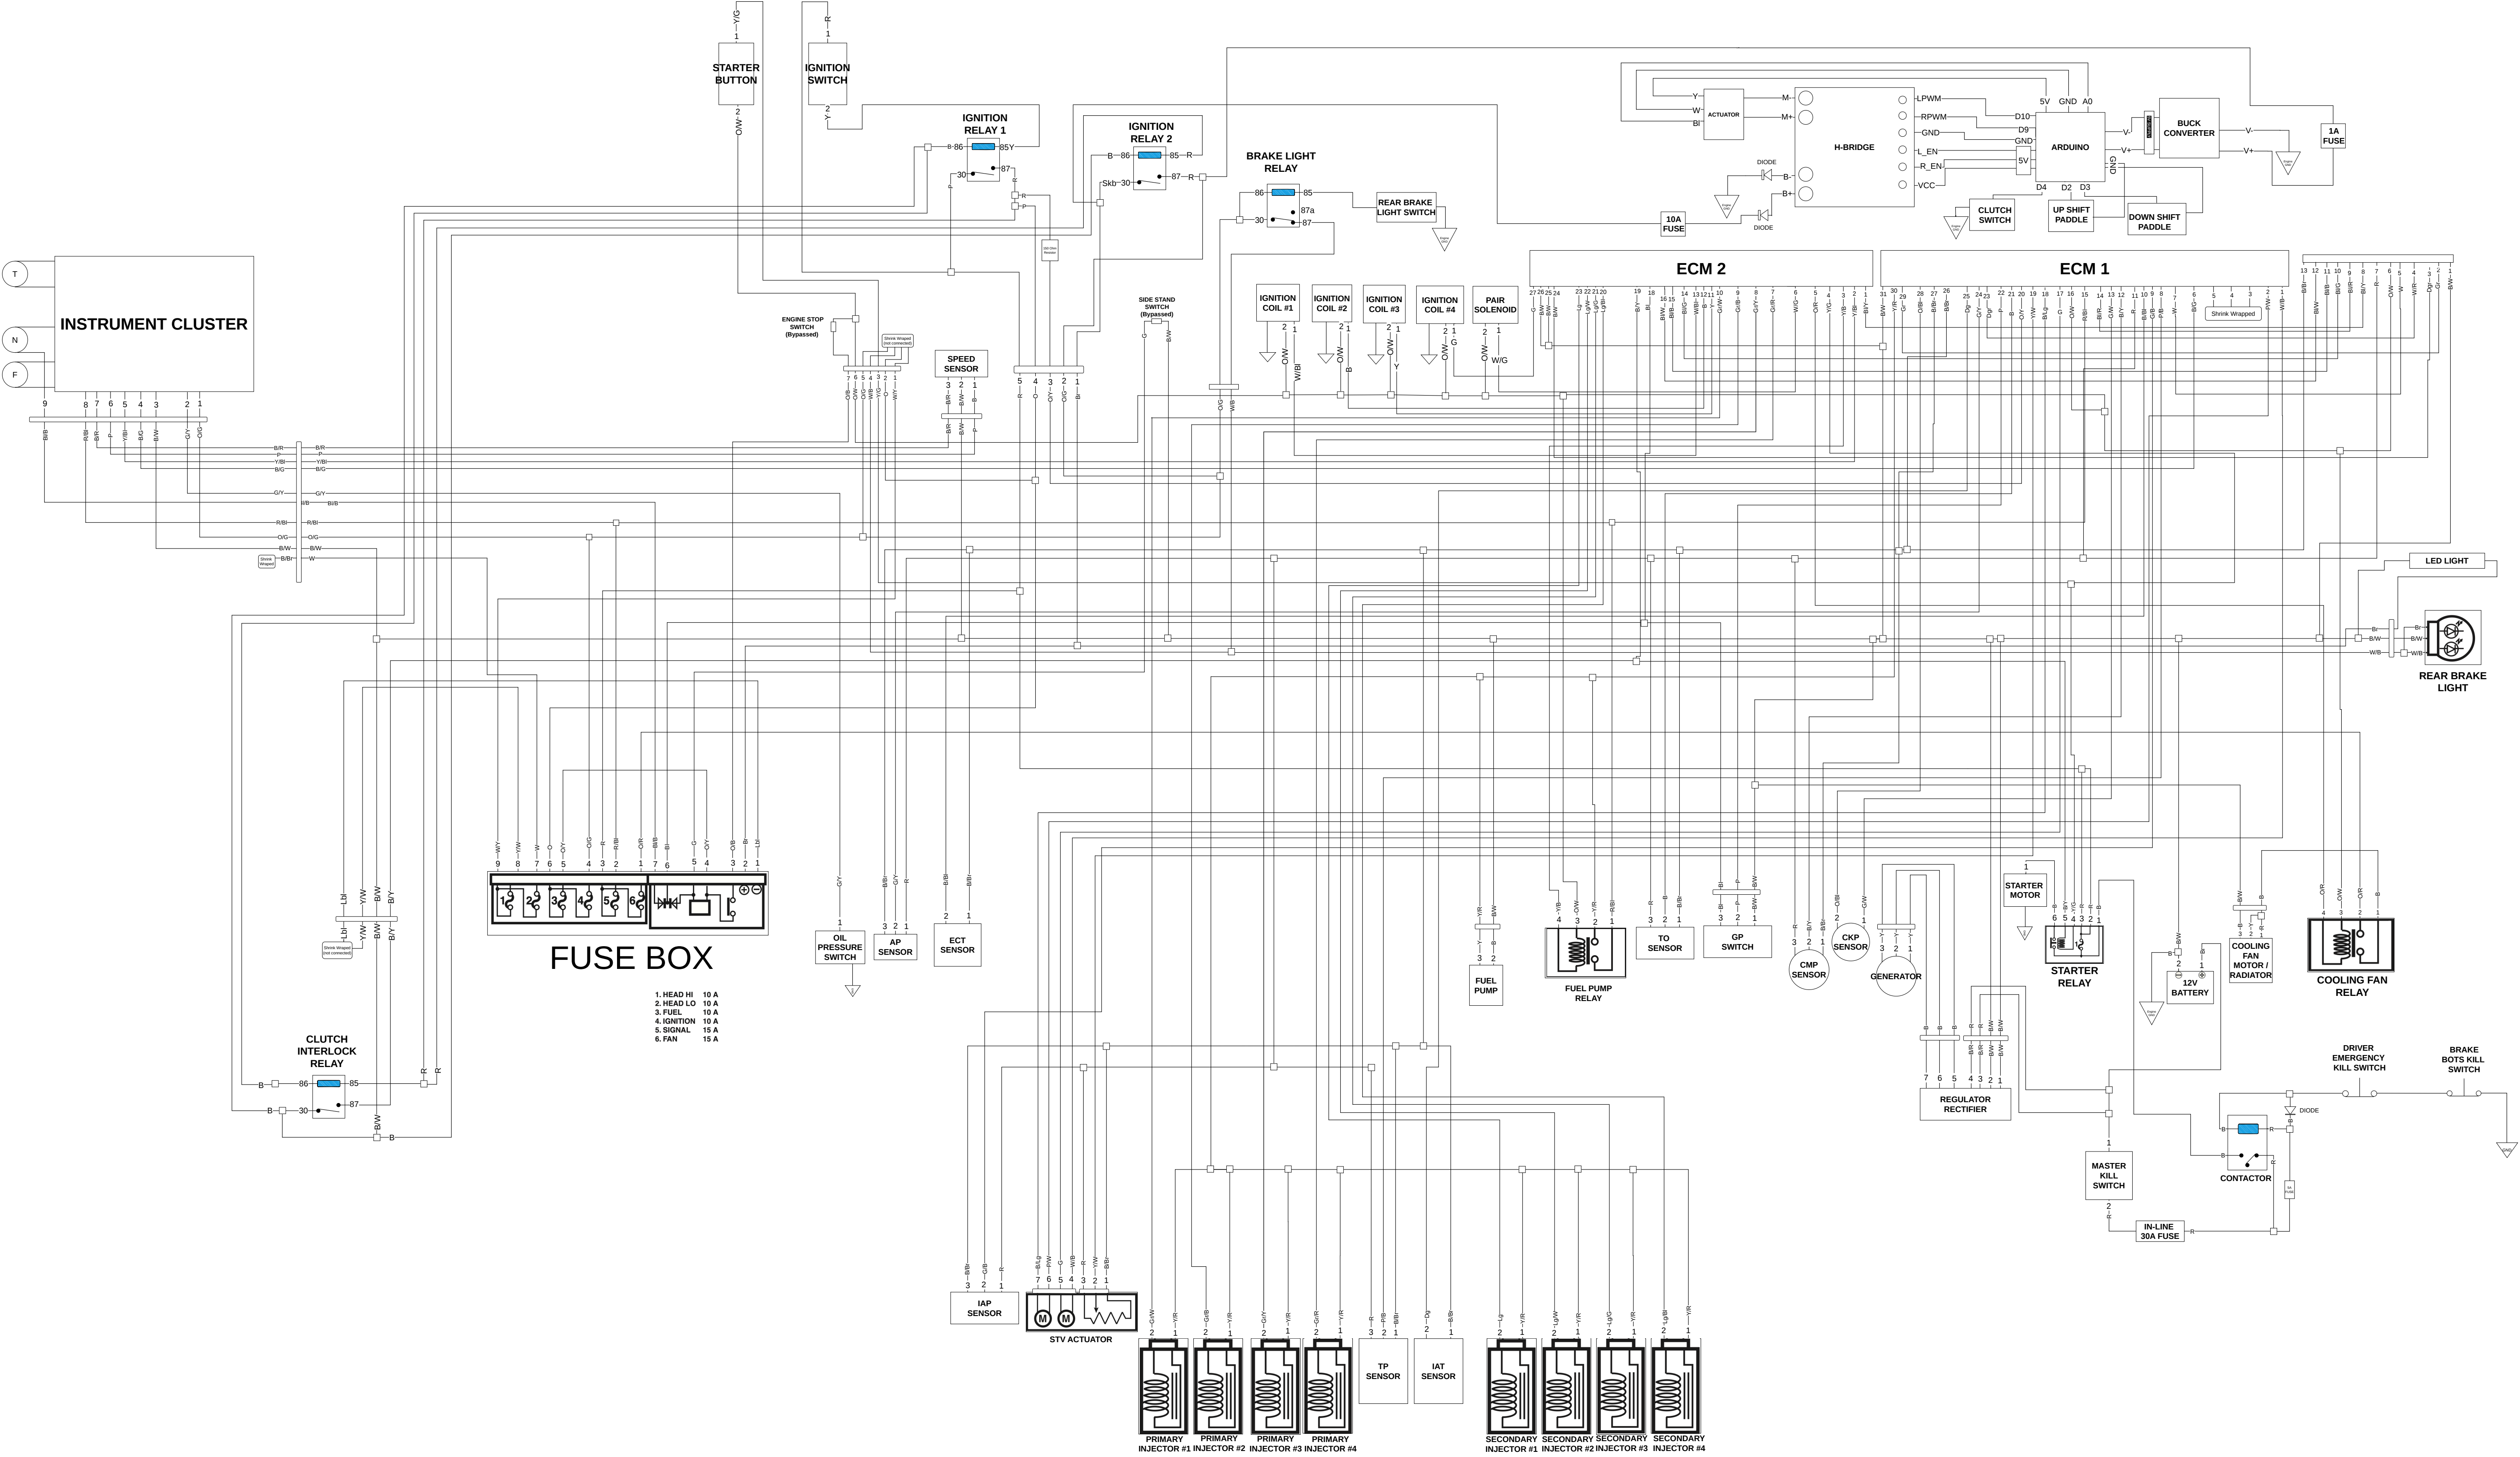
INSTRUMENT CLUSTER
T
N
F
STARTER BUTTON
IGNITION SWITCH
IGNITION RELAY 1
IGNITION RELAY 2
BRAKE LIGHT RELAY
REAR BRAKE LIGHT SWITCH
ACTUATOR
H-BRIDGE
ARDUINO
BUCK CONVERTER
1A FUSE
10A FUSE
DIODE
CLUTCH SWITCH
UP SHIFT PADDLE
DOWN SHIFT PADDLE
LPWM
RPWM
GND
L_EN
R_EN
VCC
5V
A0
D10
D9
D4
D2
D3
V-
V+
M-
M+
B-
B+
ECM 2
ECM 1
Shrink Wrapped
IGNITION COIL #1
IGNITION COIL #2
IGNITION COIL #3
IGNITION COIL #4
PAIR SOLENOID
SIDE STAND SWITCH (Bypassed)
ENGINE STOP SWITCH (Bypassed)
Shrink Wraped (not connected)
SPEED SENSOR
LED LIGHT
REAR BRAKE LIGHT
FUSE BOX
OIL PRESSURE SWITCH
AP SENSOR
ECT SENSOR
CLUTCH INTERLOCK RELAY
FUEL PUMP
FUEL PUMP RELAY
TO SENSOR
GP SWITCH
CMP SENSOR
CKP SENSOR
GENERATOR
STARTER MOTOR
STARTER RELAY
12V BATTERY
COOLING FAN MOTOR / RADIATOR
COOLING FAN RELAY
REGULATOR RECTIFIER
DRIVER EMERGENCY KILL SWITCH
BRAKE BOTS KILL SWITCH
CONTACTOR
MASTER KILL SWITCH
IN-LINE 30A FUSE
IAP SENSOR
STV ACTUATOR
PRIMARY INJECTOR #1
PRIMARY INJECTOR #2
PRIMARY INJECTOR #3
PRIMARY INJECTOR #4
TP SENSOR
IAT SENSOR
SECONDARY INJECTOR #1
SECONDARY INJECTOR #2
SECONDARY INJECTOR #3
SECONDARY INJECTOR #4

1. HEAD HI	10 A
2. HEAD LO	10 A
3. FUEL	10 A
4. IGNITION	10 A
5. SIGNAL	15 A
6. FAN	15 A