



Two timber workshops — pad foundations & 47×200 subfloor


Plinth/pad foundations on clay. 47×200 C24 treated box subfloor: 3 main beams + 2 end beams, joists between at 600 c/c, noggins from offcuts. Pads under the main beams only.

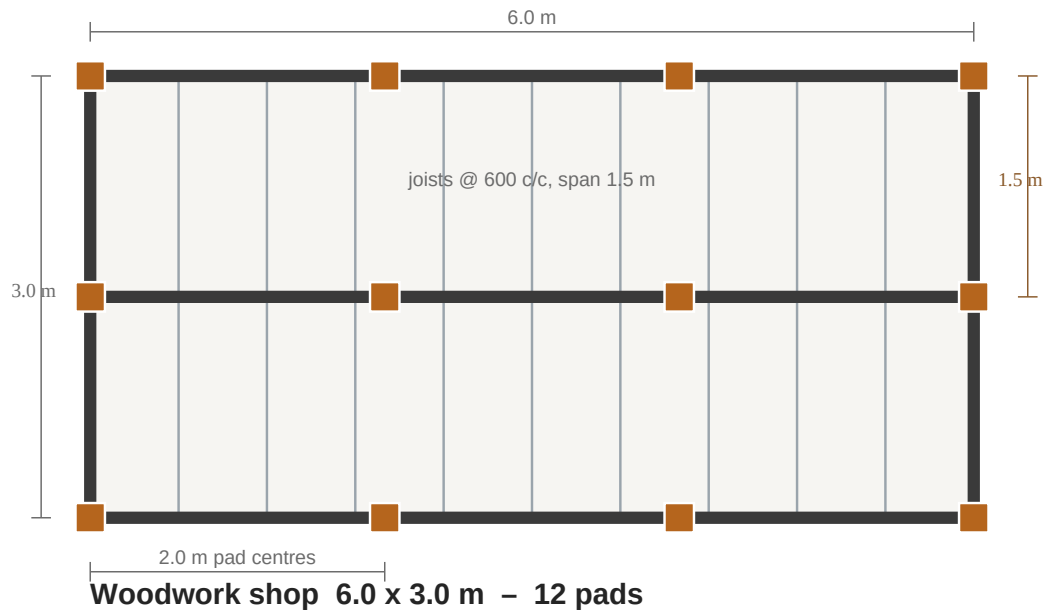

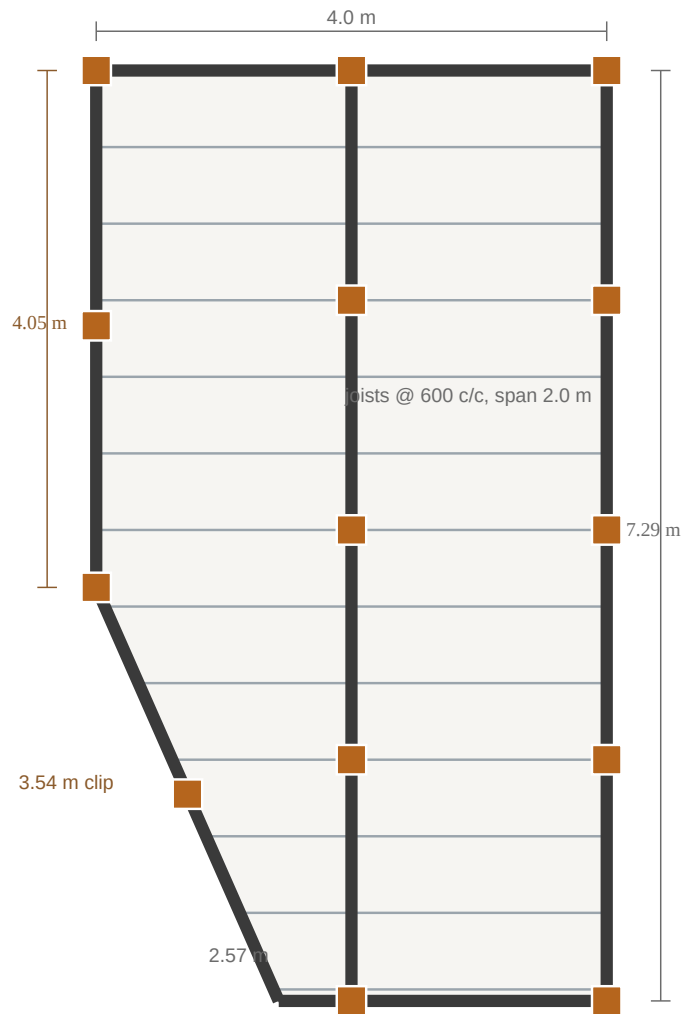

Office 4.0 x 7.29 m (clipped) – ~15 pads

Pier detail, take-off & notes

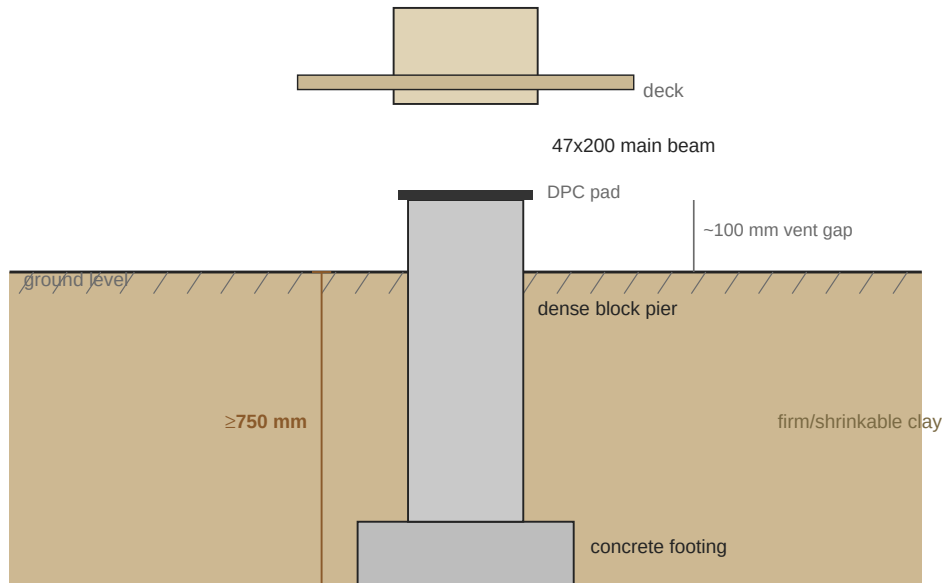

Pier section on clay – dig below the seasonal-movement zone

Timber take-off — 47×200 C24 treated, 4.8 m lengths

Member	Woodwork 6×3	Office 4×7.29
Main beams (3, run the length)	3 × 6.0 m	7.29 + 7.29 + 4.05 m + 3.54 m diag
End beams (2, run the width)	2 × 3.0 m	4.0 m + 2.57 m
Joists @ 600 c/c	~10 × 3.0 m	~13 × 4.0 m (clip shortens ~4)
Noggins	from joist offcuts	from joist offcuts
4.8 m lengths to buy	~17	~21
Pads (dense block on footing)	12	~15

≈ 38 lengths total of 47×200 C24 treated (4.8 m) — call it ~42 with contingency. ≈ 27 pads total.

Build notes

- **Pad depth is the critical one on your clay:** bottom of every pad ≥750 mm (below the seasonal shrink/swell zone), deeper if trees/hedges are within ~10 m. Concrete footing at the base, dense block pier up, DPC pad under the beam, ~100 mm vent gap under the timber.
- **Every pad dead level** with the others (string line / laser) — the floor is only as flat as the pads.
- **Join the main beams over a pad** — cut 4.0 m + 2.0 m so the joint lands on the 4.0 m pad.
- **Joists drop between the main beams** (flush, on hangers or nailed) so the whole floor is one ~200 mm layer — keeps the build-up low.
- **Height:** on pads under a 3 m cap, set the **walls to ~2.4 m, not 2.7 m** (H=270 on the tool drawing won't fit once the floor's raised + a roof goes on).

Setting-out guide for planning — verify final spans/pad sizes against the timber supplier's C24 span tables and your ground conditions before building.