



Oscilloscope: Shows the voltage passing through

analog write


0; 0V

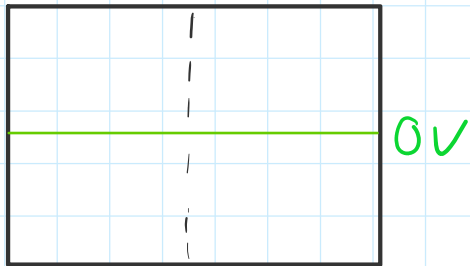

255; 5V

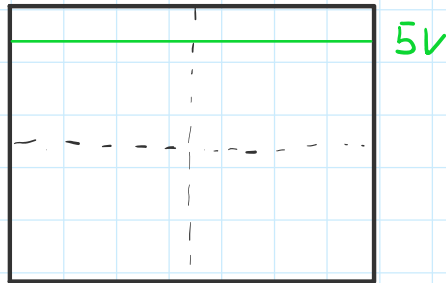


127; Should be $\sim 2.5V$

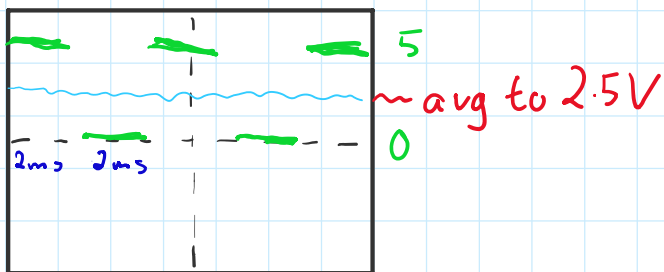

Period of 4ms

10; Should be 0.2V

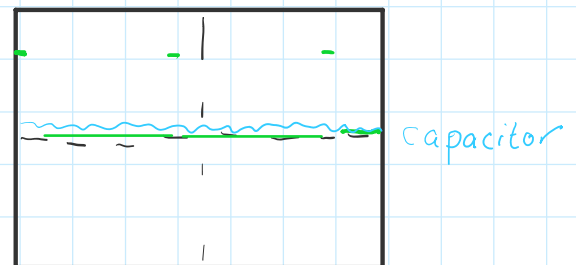

PWM works by alternating between slow & fast w/ a constant period.

This causes an average voltage. A capacitor smooths it out.