Allen-Bradley
by ROCKWELL AUTOMATION

Bul. 140MT-C3E-..., 140MT-D9E-..., 140MT-D9N-..., 140MT-D9T-..., 140MT-D9V-...
Publication 140MT-IN018D-MU-P - May 2025

en Installation instructions

Motor Protection Circuit Breaker

de Montageanweisung
fr Notice de montage
it Istruzioni di montaggio
zh 安装说明书
es Instrucciones de montaje
ru Инструкция по монтажу
pt Instruções de instalação
ko 설치 매뉴얼
ja インストレーションインストラクション

IEC/EN 60947-2,-4-1
GB/T 14048.2/.4
UL 60947-4-1
CAN/CSA-C22.2 No. 60947-4-1

At the end of its life, this equipment should be collected separately from any unsorted municipal waste.

en **ATTENTION! HAZARDOUS VOLTAGE!**
The installation and the operation of this device and any maintenance must be carried out by a qualified person in accordance with specific local standards and safety regulations. Before installing this device, read these operating instructions carefully. Do not touch live parts. To avoid damages to persons and material the devices have to be replaced in case of mechanical and/or electrical damage.
(Follow NFPA 70E requirements).

de **ACHTUNG! GEFÄHRLICHE SPANNUNG!**
Die Installation und der Betrieb dieses Geräts sowie jegliche Wartung müssen von einer qualifizierten Person gemäß den spezifischen örtlichen Normen und Sicherheitsvorschriften durchgeführt werden. Lesen Sie vor der Installation des Geräts diese Betriebsanleitung sorgfältig durch. Aktive Teile dürfen nicht berührt werden. Um Schäden an Personen und Material zu vermeiden, müssen die Geräte bei mechanischen und/oder elektrischen Schäden and den Geräten ersetzt werden.

fr **ATTENTION! TENSION DANGEREUSE!**
L'installation, l'utilisation et la maintenance de ce dispositif doivent être réalisées par du personnel qualifié conformément aux normes et réglementations de sécurité locales. Avant d'installer le dispositif, lisez attentivement ces directives d'utilisation. Ne touchez pas les pièces sous tension. Afin d'éviter les dommages causés aux personnes et aux biens, les dispositifs doivent être remplacés en cas de dommage mécanique et/ou électrique. (Respectez les exigences NFPA 70E).

it **ATTENZIONE! PERICOLO TENSIONE!**
L'installazione e il funzionamento di questo dispositivo e qualsiasi manutenzione devono essere eseguiti da una persona qualificata in conformità con le norme locali e di sicurezza specifiche. Prima di installare questo dispositivo, leggere attentamente queste istruzioni per l'uso. Non toccare le parti in tensione. Per evitare danni a persone e materiali, i dispositivi devono essere sostituiti in caso di danni meccanici e/o elettrici.

zh **注意！ 电压危险！**
本设备的安装和操作以及所有维护工作均必须由合格的人员按照当地的具体标准和安全守则进行。安装本设备前，请仔细阅读这些操作说明。请勿触摸带电部分。
为了避免人员伤害和材料损害，如果在出现机械和/或电气损坏，必须更换此设备。


es **¡ATENCIÓN! ¡VOLTAJE PELIGROSO!**
La instalación y operación de este dispositivo, así como cualquier mantenimiento, debe ser realizado por una persona cualificada de acuerdo con estándares locales y reglamentos de seguridad específicos. Antes de instalar este dispositivo, lea atentamente las instrucciones de uso. No toque piezas bajo tensión. Para evitar daños personales y materiales, los dispositivos deben reemplazarse en caso de fallo mecánico o eléctrico. (Siga los requisitos NFPA 70E).


ru **ВНИМАНИЕ! ОПАСНОЕ НАПРЯЖЕНИЕ!**
Установка и эксплуатация этого устройства, а также любое техническое обслуживание и ремонт должны выполняться квалифицированным специалистом согласно соответствующим местным стандартам и нормам техники безопасности. Перед установкой данного устройства внимательно прочтите настоящую инструкцию по эксплуатации. Не прикасайтесь к токоведущим частям. В случае возникновения механических и/или электрических повреждений необходимо заменять устройства во избежание травматизма персонала и повреждения материальной части.


pt **ATENÇÃO! TENSÃO PERIGOSA!**
A instalação e operação deste dispositivo e qualquer manutenção devem ser feitas por pessoal qualificado, de acordo com as normas locais e regulamentações de segurança. Antes de instalar este dispositivo, leia com atenção as instruções de operação. Não toque em peças energizadas. Para evitar danos a pessoas e materiais, os dispositivos devem ser substituídos em caso de dano mecânico e/ou elétrico.


ko **주의! 위험한 전압!**
이 장치의 설치 및 작동과 유지 보수는 유자격 직원이 지역 표준 및 안전 규정에 따라 수행해야 합니다. 이 장치를 설치하기 전에 사용자 매뉴얼을 주의 깊게 읽으십시오. 작동 중인 부품에 손을 대지 마십시오. 인적 및 물적 피해를 방지할 수 있도록 기계적 및/또는 전기적 손상이 발생하는 경우에 장치를 교체해야 합니다.

ja **注意！危険電圧！**
装置の取り付け、操作、保守は、地域の特定の規格や安全規制に従い、資格のある担当者が行う必要があります。この装置を設置する前に、これらの手順をよくお読みください。充電部に触れないでください。人や物への損害を避けるため、機械的または電気的な損傷がある場合は、装置を交換する必要があります (NFPA 70E要件に準拠) 。

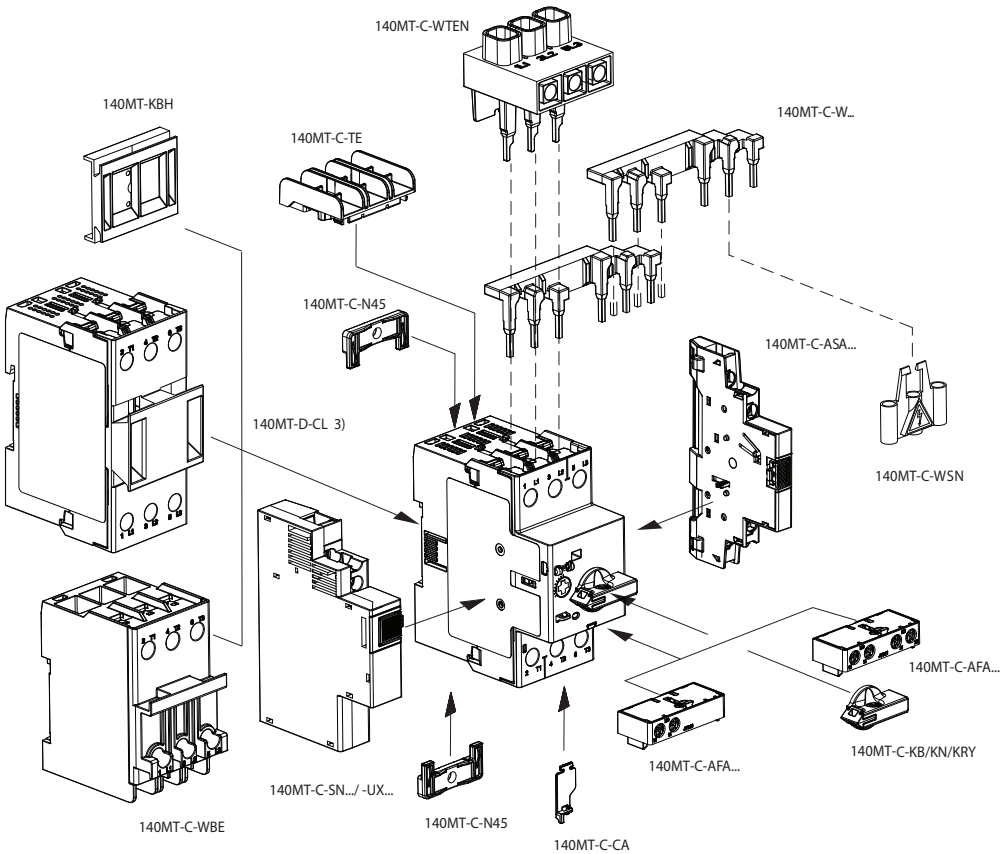


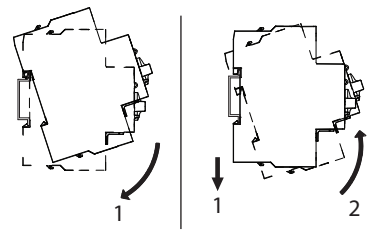


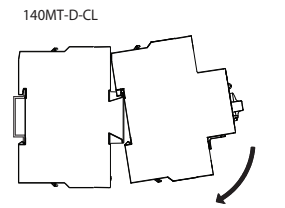

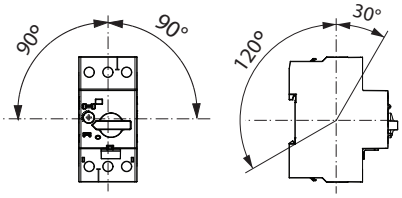


3) Mounting possible under or next to Circuit breaker

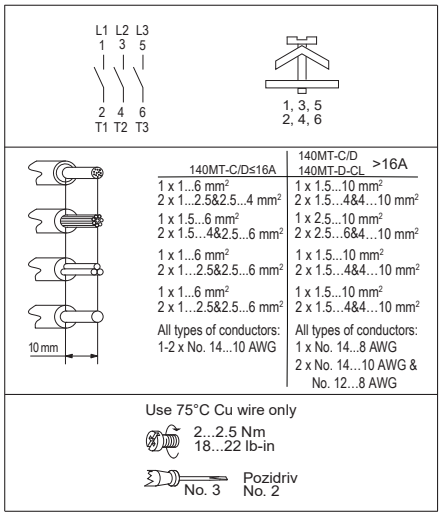

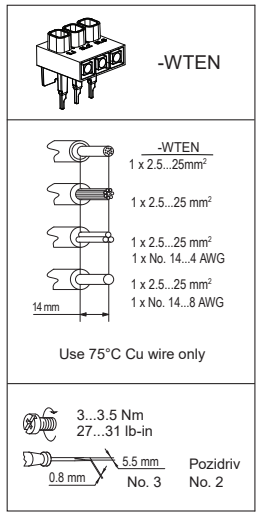

Steps for a proper connection

1. Prepare wires according to the instructions
2. Open terminal screws completely
3. Insert wires fully in the correct position
4. Tighten terminal screws with the required torque
5. Check for solid connection by pulling on all the wires

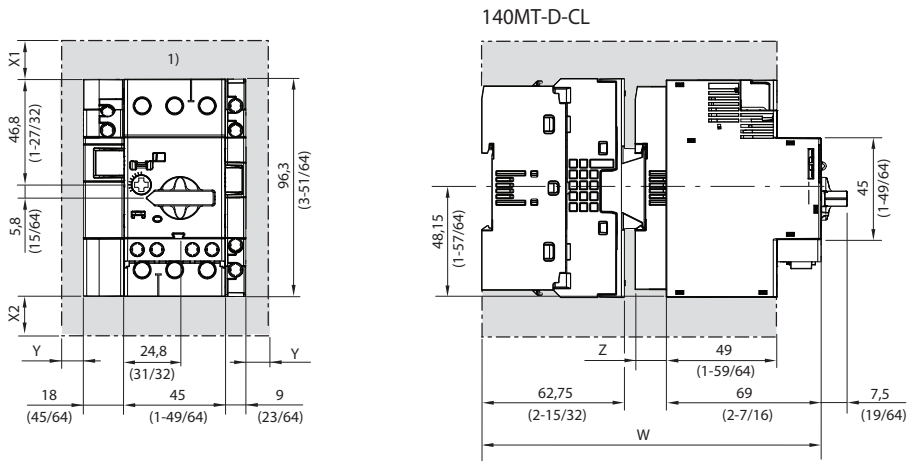


1) Minimum distance to grounded parts or walls (X1, X2, Y)
Minimaler Abstand gegen geerdete Teile oder Wände (X1, X2, Y)
Distance minimale envers pièces mises à terre ou parois (X1, X2, Y)
Distanza minimale per pezzi a massa o pareti (X1, X2, Y)
Distancia mínima a chasis o paredes (X1, X2, Y)
Минимальное расстояние до заземленных частей или стен (X1, X2, Y)
접지 된 부품 또는 벽까지의 최소 거리 (X1, X2, Y)
到接地部件或墙面的最小距离 (X1, X2, Y)

Voltage (V)	X1, X2 mm	inch	Y mm	inch
400	30	1-3/16	9	23/64
500	30	1-3/16	9	23/64
690	50	1-31/32	30	1-3/16

140MT -C*	140MT -D*
W mm (inch)	W mm (inch)
143,5 (5-21/32)	149,5 (5-57/64)
Z mm (inch)	Z mm (inch)
7,5 (19/64)	13,5 (17/32)


Wiring Diagrams for 1- or 2-Phase Application

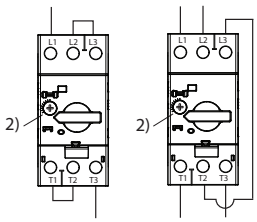


For 1- or 2-Phase Motor Application

2) Set to 105% of motor current.
Stellen Sie 105% des Motorstromes ein.
Régler à 105% de la valeur du courant moteur.
Regolare a 105% della corrente del motore
Ajustar a 105% de la corriente del motor.

WARNING: Do not set outside scale !
WARNUNG: Nicht ausserhalb Skala einstellen !
AVERTISSEMENT: Défense d'ajuster le courant en dehors de la plage indiquée !
AVVERTENZA: E vietato di regolare la corrente fuori dal campo di taratura !
ADVERTENCIA: !Prohibido de regular la corriente fuera del campo de la escala !
ПРЕДУПРЕЖДЕНИЕ: Выставлять уставку в пределах диапазона!

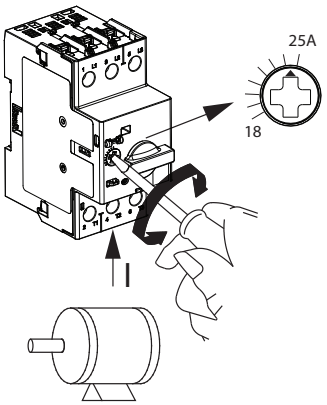

Mechanism test
Mechanismustest
Test de mecanismo
Test de mécanisme
Test meccanismo
메커니즘 테스트
Teste do mecanismo
Проверка механизма
机械装置测试

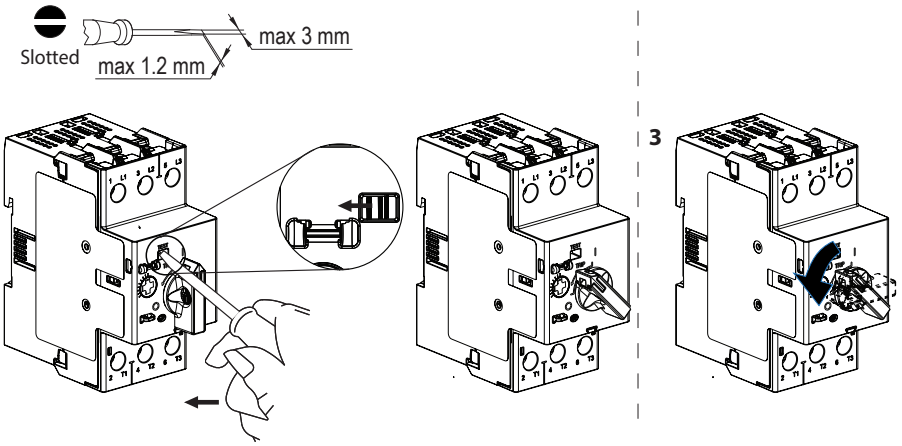

For UL Control Transformer Protection [3)]

- The device is to be installed only on the load side of branch circuit protection.
- Set the current adjustment not more than the rated input current of the control transformer.
- Use only in the specific supply voltage system as marked on the device.

Motor Protection / Circuit Breaker

This device meets the requirements of IEC 60947-2 as a circuit breaker. It is cULus listed (UL and CSA approved) as:
- A Manual Motor Controller with optional approvals for Group Motor, Motor Disconnect and Tap Conductor Protection.
- A Manual, Self-Protected Combination Motor Controller (Construction Typ. E).

All installations, commissioning and maintenance must be carried out by qualified personnel, taking local regulations into account.

140MT-D9V-...

VFD output frequency < 400Hz, PVM frequency fc < 4kHz VFD output frequency < 400Hz, PVM frequency fc < 4kHz
Current setting: VFD in = max. input current, VFD out = rated motor current.
For more details see technical specification.
3) Not applicable for 140MT-D9V*

140MT-D9N* do not provide thermal protection for themselves nor for downstream components. A separate protective device against thermal overload must be installed, e.g. an O/L relay as part of a starter combination. Refer to derating specification for heavy duty starting.

140MT-D9N* beinhalten weder für sich selbst noch für nachfolgende Komponenten thermischen Schutz. Gegen thermische Überlast muss ein externes Schutzorgan installiert sein, z.B. ein Überlastrelais als Teil einer Starterkombination. Siehe Derating-Spezifkation für Schweranläufe.

140MT-D9N* ne sont pas autoprotégés et ne comportent aucune protection contre les surcharges thermiques. Il faut donc prévoir des organes de protection externes comme par expl. des relais thermiques ou électroniques dans les ensembles démarreurs moteurs. Voir spécifications de derating pour démarrages difficiles.

140MT-D9N* non prevedono alcun tipo di protezione termica, né per se stessi né per i componenti a valle. Pertanto sarà necessario installare un dispositivo di protezione termica separato, quale ad esempio un relè di sovraccarico integrato nel gruppo di avviamento. Riferirsi alla tabella di declassamento per avviamenti gravosi.

140MT-D9N* carecen de protección térmica propia y para los componentes subsiguientes. Se debe instalar por separado un dispositivo de protección para sobrecargas térmicas, como por ejemplo, un relé de sobrecarga que forme parte de un arrancador de combinación. Consultar la desclasificación correspondiente para arranque duro.

140MT-D9N* не беспечивают защиту от перегрузки сами себя а так же компонентов подключенных ниже. Для защиты от перегрузки должно быть установлено дополнительное устройство защиты, например реле перегрузки в составе пускателя. При тяжелых пусках используйте таблицу снижения номинальных рабочих характеристик.

140MT-D9N* 는 제품 본체 및 하위 회로에 열동형 과전류 보호기능을 제공하지 않습니다. 별도의 과부하 보호 장치(예 : 스타터 조합의 일부인 과부하 계전기)를 추가 설치 해야 합니다. 기동 조건이 헤비듀티급에 해당되는 경우 정격보다 높은 사양의 제품으로 선정하십시오.

140MT-D9N* 不提供本体部份和下级元件的热保护。必须安装单独的热过 载保护装置，例如作为起动器組合的部分的过载继电器。对于重载起动，请参考降容说明。

Current range	class 10	class 20	class 30
0.16…10A	no	no	no
16…29A	no	no	1.41
32…40A	no	1.41	1.73

UL 60947-4-1 Short Circuit Ratings

Cat. No.	UL 60947-4-1 Manual Motor Controller and Self-Protected Combination Motor Controller					
	Group Motor Installation		Motor Disconnect		Self-Protected Combination Motor Controller and Tap Conductor Protection in Group Installation for Manual Motor Controller	
	Max. Short Circuit Current [kA]					
Allen-Bradley	480V	600V	480V	600V	480Y/277V	600Y/347V
140MT-C3E-A16…B16	65	50	65	50	65	50
140MT-C3E-B25...B40	65	30	65	30	65	30
140MT-C3E-B63...C10	65	30	65	30	65	—
140MT-C3E-C16	30	30	30	30	30	—
140MT-C3E-C20	30	30	30	10	—	—
140MT-C3E-C25	30	18	30	5	—	—
140MT-C3E-C29...C32	30	10	10	—	—	—

Minimum Enclosure Sizes				
140MT-C, 140MT-D	480V Group installation & Motor Disconnect	600V Group installation & Motor Disconnect	480Y/277V Type E	600Y/347V Type E
up to B63	166 x 68 x 125 mm 6.5 x 2.7 x 5 Inch	166 x 68 x 125 mm 6.5 x 2.7 x 5 Inch	166 x 68 x 125 mm 6.5 x 2.7 x 5 Inch	
C10 - C16			200 x 68 x 125 mm 7.9 x 2.7 x 5 inch	250 x 68 x 125 mm 10 x 2.7 x 5 inch
C20 - C32		250 x 68 x 125 mm 10 x 2.7 x 5 inch		NA
C36 - C40	250 x 175 x 150 mm 10 x 7 x 6 Inch			

Cat. No.	UL 60947-4-1 Manual Motor Controller and Self-Protected Combination Motor Controller					
	Group Motor Installation		Motor Disconnect		Self-Protected Combination Motor Controller and Tap Conductor Protection in Group Installation for Manual Motor Controller	
	Max. Short Circuit Current [kA]					
Allen-Bradley	480V	600V	480V	600V	480Y/277V	600Y/347V
140MT-D9E-A63…B16	65	50	65	50	65	50
140MT-D9E-B25...C16	65	30	65	30	65	30
140MT-D9E-C20	65	30	65	30	65	—
140MT-D9E-C25...C29	50	30	50	30	50	—
140MT-D9E-C32	50	30	30	18	30	—
140MT-D9E-C36...C40	30	30	30	18	30	—
140MT-D9N-A16…B16	65	50	65	50	—	—
140MT-D9N-B25...C20	65	30	65	30	—	—
140MT-D9N-C25…C29	50	30	50	30	—	—
140MT-D9N-C32	50	30	30	18	—	—
140MT-D9N-C36...C40	30	30	30	18	—	—
140MT-D9T-A16...B16	65	50	65	50	65	50
140MT-D9T-B25...C16	65	30	65	30	65	30
140MT-D9T-C20	65	30	65	30	65	—
140MT-D9T-C25	50	30	50	18	50	—
140MT-D9V-B16…C20	65	—	65	—	65	—
140MT-D9V-C25...C29	50	—	50	—	50	—
140MT-D9V-C32	50	—	30	—	30	—
140MT-D9V-C36...C40	30	—	30	—	30	—

UL 60947-4-1 Starter Overview

Combination SCCR	2-Comp. Starter	3-Comp. Starter	Grp. Inst.	Grp. Inst./ Disc.	Type F	Type C	Type E
UL 140MT + 100-C	x	-	Type 1/2	Type 1/2	Type 1/2	-	-
UL 140MT + 100-E	x	-	Type 1/2	Type 1/2	Type 1/2	-	-
UL 140MT + 100-K	x	-	Type 1/2	Type 1/2	Type 1/2	-	-
UL 140MT + 100-C + O/L Relay	-	x	Type 1/2	-	-	-	x
UL 140MT + 100-E + O/L Relay	-	x	Type 1/2	-	-	-	-
UL 140MT + 300- *O*930	x	-	Type 1/2	Type 1/2	Type 1/2	-	-
UL 140MT + 300- *O*930 + O/L Relay	-	x	Type 1/2	-	-	-	x
UL 140MT + 300- *O*93**	x	-	Type 1/2	Type 1/2	Type 1/2	-	-
UL 140MT + 300- *O*93** + O/L Relay	-	x	Type 1/2	-	-	-	x
Busbar adapter	Rating table for busbar adapters						
Jumper Wire	Connection Module and Jumper Wire crossreference Raiting table						

190/191: 100-C contactor suitable for Group Installation on load side of 140MT Manual Motor Controller, Short-circuit Coordination Type 1 only

MPCB	Motor Current Adjust range [A]	**Connection Module or wire jumpers 1)**	Reversing Power Wiring Kit 1)	Busbar adapter	Min. Contractor Size 2)	SCCR			
						480Vac	600Vac	Max. current rated	
						[A]	[A]	Fuse	Breaker
140MT-C3E-A16	0.10-0.16	140MT-C-PEC23 140MT-C-PNC23	105-PW23	3)	100-C09	65,000	50,000	450	450
140MT-C3E-A25	0.16-0.25					65,000	50,000	450	450
140MT-C3E-A40	0.25-0.40					65,000	50,000	450	450
140MT-C3E-A63	0.40-0.63					65,000	50,000	450	450
140MT-C3E-B10	0.63-1.0					65,000	50,000	450	450
140MT-C3E-B16	1.0-1.6					65,000	50,000	450	450
140MT-C3E-B25	1.6-2.5					65,000	30,000	450	450
140MT-C3E-B40	2.5-4.0					65,000	30,000	450	450
140MT-C3E-B63	4.0-6.3					65,000	30,000	450	450
140MT-C3E-C10	6.3-10					65,000	30,000	450	450
140MT-C3E-C16	10-16				100-C12	30,000	30,000	450	450
140MT-C3E-C16	10-16				100-C16	30,000	30,000	450	450
140MT-C3E-C20	14.5-20					30,000	30,000	450	450
140MT-C3E-C25	18-25				100-C23	30,000	18,000	450	450
140MT-C3E-C25	18-25	-	105-PW37		100-C30	30,000	18,000	450	450
140MT-C3E-C29	23-29				100-C30	30,000	10,000	450	450
140MT-C3E-C32	26.5-32				100-C37	30,000	10,000	450	450
140MT-D9E-A63	0.40-0.63	140MT-D-PEC23 140MT-D-PNC23	105-PW23	3)	100-C09	65,000	50,000	450	450
140MT-D9E-B10	0.63-1.0					65,000	50,000	450	450
140MT-D9E-B16	1.0-1.6					65,000	50,000	450	450
140MT-D9E-B25	1.6-2.5					65,000	50,000	450	450
140MT-D9E-B40	2.5-4.0					65,000	50,000	450	450
140MT-D9E-B63	4.0-6.3					65,000	50,000	450	450
140MT-D9E-C10	6.3-10					65,000	30,000	450	450
140MT-D9E-C16	10-16				100-C12	65,000	30,000	450	450
140MT-D9E-C16	10-16				100-C16	65,000	30,000	450	450
140MT-D9E-C20	14.5-20				100-C23	65,000	30,000	450	450
140MT-D9E-C25	18-25					30,000	30,000	450	450
140MT-D9E-C25	18-25	140MT-D-PEC37 140MT-D-PNC37	105-PW37		100-C30	30,000	30,000	450	450
140MT-D9E-C29	23-29					30,000	30,000	450	450
140MT-D9E-C32	26.5-32				100-C37	30,000	18,000	450	450
140MT-D9E-C36	30-36					30,000	18,000	450	450
140MT-D9E-C40	34-40					30,000	10,000	450	450
140MT-D9E-C40	34-40	-	105-PW43		100-C43	30,000	10,000	450	450
140MT-D9T-A63	0.40-0.63	140MT-D-PEC23 140MT-D-PNC23	105-PW23	3)	100-C09	65,000	50,000	450	450
140MT-D9T-B10	0.63-1.0					65,000	50,000	450	450
140MT-D9T-B16	1.0-1.6					65,000	30,000	450	450
140MT-D9T-B25	1.6-2.5					65,000	30,000	450	450
140MT-D9T-B40	2.5-4.0					65,000	30,000	450	450
140MT-D9T-B63	4.0-6.3					65,000	30,000	450	450
140MT-D9T-C10	6.3-10				100-C12	65,000	30,000	450	450
140MT-D9T-C16	10-16				100-C23	65,000	30,000	450	450
140MT-D9T-C20	14.5-20					50,000	30,000	450	450
140MT-D9T-C25	18-25	140MT-D-PEC37 140MT-D-PNC37	105-PW37		100-C30	50,000	30,000	450	450

1) May or may not be provided
2) Similar for other contactor configurations 100-C, 104-C, 100S-C, 104S-C
3) It can be used an additional Bus Bar Adapter in according of table "Bus Bar Adapter for "A-B" or "Allen-Bradley" (the lower max. SCCR from both tables in according to the electrical rating applies).

190/191: 100-C contactor suitable for Group Installation/Disconnect Means on load side of 140MT Manual Motor Controller, Short-circuit Coordination Type 1 only

MPCB	Motor Current Adjust range [A]	Connection Module or wire jumpers 1)	Reversing Power Wiring Kit 1)	Busbar adapter	Min. Contractor Size 2)	SCCR			
						480Vac	600Vac	Max. current rated	
						[A]	[A]	Fuse	Breaker
140MT-C3E-A16	0.10-0.16	140MT-C-PEC23 140MT-C-PNC23	105-PW23	3)	100-C09	65,000	50,000	450	450
140MT-C3E-A25	0.16-0.25					65,000	50,000	450	450
140MT-C3E-A40	0.25-0.40					65,000	50,000	450	450
140MT-C3E-A63	0.40-0.63					65,000	50,000	450	450
140MT-C3E-B10	0.63-1.0					65,000	50,000	450	450
140MT-C3E-B16	1.0-1.6					65,000	50,000	450	450
140MT-C3E-B25	1.6-2.5					65,000	30,000	450	450
140MT-C3E-B40	2.5-4.0					65,000	30,000	450	450
140MT-C3E-B63	4.0-6.3					65,000	30,000	450	450
140MT-C3E-C10	6.3-10					65,000	30,000	450	450
140MT-C3E-C16	10-16				100-C12	30,000	30,000	450	450
140MT-C3E-C16	10-16				100-C16	30,000	30,000	450	450
140MT-C3E-C20	14.5-20					30,000	10,000	450	450
140MT-C3E-C25	18-25				100-C23	10,000	5,000	450	450
140MT-C3E-C25	18-25	-	105-PW37		100-C30	30,000	5,000	450	450
140MT-C3E-C29	23-29				100-C30	10,000	-	450	450
140MT-C3E-C32	26.5-32				100-C37	10,000	-	450	450
140MT-D9E-A63	0.40-0.63	140MT-D-PEC23 140MT-D-PNC23	105-PW23	3)	100-C09	65,000	50,000	450	450
140MT-D9E-B10	0.63-1.0					65,000	50,000	450	450
140MT-D9E-B16	1.0-1.6					65,000	50,000	450	450
140MT-D9E-B25	1.6-2.5					65,000	50,000	450	450
140MT-D9E-B40	2.5-4.0					65,000	50,000	450	450
140MT-D9E-B63	4.0-6.3					65,000	50,000	450	450
140MT-D9E-C10	6.3-10					65,000	30,000	450	450
140MT-D9E-C16	10-16				100-C12	65,000	30,000	450	450
140MT-D9E-C16	10-16				100-C16	65,000	30,000	450	450
140MT-D9E-C20	14.5-20				100-C23	65,000	30,000	450	450
140MT-D9E-C25	18-25					30,000	30,000	450	450
140MT-D9E-C25	18-25	140MT-D-PEC37 140MT-D-PNC37	105-PW37		100-C30	30,000	30,000	450	450
140MT-D9E-C29	23-29					30,000	30,000	450	450
140MT-D9E-C32	26.5-32				100-C37	30,000	18,000	450	450
140MT-D9E-C36	30-36					30,000	18,000	450	450
140MT-D9E-C40	34-40					30,000	18,000	450	450
140MT-D9E-C40	34-40	-	105-PW43		100-C43	30,000	18,000	450	450
140MT-D9T-A63	0.40-0.63	140MT-D-PEC23 140MT-D-PNC23	105-PW23	3)	100-C09	65,000	50,000	450	450
140MT-D9T-B10	0.63-1.0					65,000	50,000	450	450
140MT-D9T-B16	1.0-1.6					65,000	30,000	450	450
140MT-D9T-B25	1.6-2.5					65,000	30,000	450	450
140MT-D9T-B40	2.5-4.0					65,000	30,000	450	450
140MT-D9T-B63	4.0-6.3					65,000	30,000	450	450
140MT-D9T-C10	6.3-10				100-C12	65,000	30,000	450	450
140MT-D9T-C16	10-16				100-C23	65,000	30,000	450	450
140MT-D9T-C20	14.5-20					50,000	30,000	450	450
140MT-D9T-C25	18-25	140MT-D-PEC37 140MT-D-PNC37	105-PW37		100-C30	50,000	30,000	450	450

1) May or may not be provided
2) Similar for other contactor configurations 100-C, 104-C, 100S-C, 104S-C
3) It can be used an additional Bus Bar Adapter in according of table "Bus Bar Adapter for "A-B" or "Allen-Bradley" (the lower max. SCCR from both tables in according to the electrical rating applies).

190/191: 140MT Combination Motor Controller as Type F combination with 100-C contactor, Short-circuit Coordination Type 1 only

MPCB	Motor Current Adjust range [A]	Connection Module or wire jumpers 1)	Reversing Power Wiring Kit 1)	Busbar adapter	Min. Contractor Size 2)	SCCR			
						480Vac	600Vac	Max. current rated	
						[A]	[A]	Fuse	Breaker
140MT-C3E-A16	0.10-0.16	140MT-C-PEC23 140MT-C-PNC23	105-PW23	3)	100-C09	65,000	50,000	450	450
140MT-C3E-A25	0.16-0.25					65,000	50,000	450	450
140MT-C3E-A40	0.25-0.40					65,000	50,000	450	450
140MT-C3E-A63	0.40-0.63					65,000	50,000	450	450
140MT-C3E-B10	0.63-1.0					65,000	50,000	450	450
140MT-C3E-B16	1.0-1.6					65,000	50,000	450	450
140MT-C3E-B25	1.6-2.5					65,000	30,000	450	450
140MT-C3E-B40	2.5-4.0					65,000	30,000	450	450
140MT-C3E-B63	4.0-6.3					65,000	-	450	450
140MT-C3E-C10	6.3-10					65,000	-	450	450
140MT-C3E-C16	10-16				100-C12	30,000	-	450	450
140MT-C3E-C16	10-16				100-C16	30,000	-	450	450
140MT-D9E-A63	0.40-0.63	140MT-D-PEC23 140MT-D-PNC23	105-PW23	3)	100-C09	65,000	50,000	450	450
140MT-D9E-B10	0.63-1.0					65,000	50,000	450	450
140MT-D9E-B16	1.0-1.6					65,000	50,000	450	450
140MT-D9E-B25	1.6-2.5					65,000	30,000	450	450
140MT-D9E-B40	2.5-4.0					65,000	30,000	450	450
140MT-D9E-B63	4.0-6.3					65,000	30,000	450	450
140MT-D9E-C10	6.3-10					65,000	30,000	450	450
140MT-D9E-C16	10-16				100-C12	65,000	30,000	450	450
140MT-D9E-C16	10-16				100-C16	65,000	30,000	450	450
140MT-D9E-C20	14.5-20				100-C23	65,000	-	450	450
140MT-D9E-C25	18-25					50,000	-	450	450
140MT-D9E-C29	23-29	140MT-D-PEC37 140MT-D-PNC37	105-PW37		100-C30	50,000	-	450	450
140MT-D9E-C32	26.5-32				100-C37	30,000	-	450	450
140MT-D9E-C36	30-36					30,000	-	450	450
140MT-D9E-C40	34-40					30,000	-	450	450
140MT-D9E-C40	34-40	-	105-PW43		100-C43	30,000	-	450	450
140MT-D9T-A63	0.40-0.63	140MT-D-PEC23 140MT-D-PNC23	105-PW23	3)	100-C09	65,000	50,000	450	450
140MT-D9T-B10	0.63-1.0					65,000	50,000	450	450
140MT-D9T-B16	1.0-1.6					65,000	30,000	450	450
140MT-D9T-B25	1.6-2.5					65,000	30,000	450	450
140MT-D9T-B40	2.5-4.0					65,000	30,000	450	450
140MT-D9T-B63	4.0-6.3					65,000	30,000	450	450
140MT-D9T-C10	6.3-10				100-C12	65,000	30,000	450	450
140MT-D9T-C16	10-16				100-C23	65,000	30,000	450	450
140MT-D9T-C20	14.5-20					50,000	30,000	450	450
140MT-D9T-C25	18-25	140MT-D-PEC37 140MT-D-PNC37	105-PW37		100-C30	50,000	30,000	450	450

1) May or may not be provided
2) Similar for other contactor configurations 100-C, 104-C, 100S-C, 104S-C
3) It can be used an additional Bus Bar Adapter in according of table "Bus Bar Adapter for "A-B" or "Allen-Bradley" (the lower max. SCCR from both tables in according to the electrical rating applies).

190/191: 100-C contactor suitable for Group Installation on load side of 140MT Manual Motor Controller, Short-circuit Coordination Type 2

MPCB	FLA range [A]	Connection Module or wire jumpers 1)	Reversing Power Wiring Kit 1)	Busbar adapter	Min. Contractor Size 2)	SCCR			
						480Vac	600Vac	Max. current rated	
						[A]	[A]	Fuse	Breaker
140MT-C3E-A16	0.10-0.16	140MT-C-PEC23 140MT-C-PNC23	105-PW23	3)	100-C09	65,000	50,000	450	450
140MT-C3E-A25	0.16-0.25					65,000	50,000	450	450
140MT-C3E-A40	0.25-0.40					65,000	50,000	450	450
140MT-C3E-A63	0.40-0.63					65,000	50,000	450	450
140MT-C3E-B10	0.63-1.0					65,000	50,000	450	450
140MT-C3E-B16	1.0-1.6					65,000	50,000	450	450
140MT-C3E-B25	1.6-2.5				100-C23	65,000	30,000	450	450
140MT-C3E-B40	2.5-4.0	-	105-PW37		100-C30	65,000	30,000	450	450
140MT-C3E-B63	4.0-6.3					65,000	5,000	450	450
140MT-C3E-C10	6.3-10					65,000	5,000	450	450
140MT-C3E-C16	10-16					30,000	5,000	450	450
140MT-C3E-C20	14.5-20					10,000	5,000	450	450
140MT-C3E-C25	18-25					10,000	5,000	450	450
140MT-C3E-C29	23-29					10,000	5,000	450	450
140MT-C3E-C32	26.5-32				100-C37	10,000	5,000	450	450
140MT-C3E-C32	26.5-32	-	105-PW43		100-C43	10,000	5,000	450	450
140MT-D9E-A63	0.40-0.63	140MT-D-PEC23 140MT-D-PNC23	105-PW23	3)	100-C09	65,000	50,000	450	450
140MT-D9E-B10	0.63-1.0					65,000	50,000	450	450
140MT-D9E-B16	1.0-1.6					65,000	50,000	450	450
140MT-D9E-B25	1.6-2.5				100-C23	65,000	30,000	450	450
140MT-D9E-B40	2.5-4.0					65,000	-	450	450
140MT-D9E-B40	2.5-4.0	140MT-D-PEC37 140MT-D-PNC37	105-PW37		100-C30	65,000	30,000	450	450
140MT-D9E-B63	4.0-6.3					65,000	30,000	450	450
140MT-D9E-C10	6.3-10					65,000	30,000	450	450
140MT-D9E-C16	10-16					65,000	30,000	450	450
140MT-D9E-C20	14.5-20					65,000	10,000	450	450
140MT-D9E-C25	18-25					65,000	10,000	450	450
140MT-D9E-C29	23-29					30,000	10,000	450	450
140MT-D9E-C32	26.5-32				100-C37	30,000	10,000	450	450
140MT-D9E-C36	30-36					30,000	10,000	450	450
140MT-D9E-C40	34-40					30,000	10,000	450	450
140MT-D9E-C40	34-40	-	105-PW43		100-C43	30,000	10,000	450	450
140MT-D9T-A63	0.40-0.63	140MT-D-PEC23 140MT-D-PNC23	105-PW23	3)	100-C09	65,000	50,000	450	450
140MT-D9T-B10	0.63-1.0					65,000	50,000	450	450
140MT-D9T-B16	1.0-1.6				100-C23	65,000	30,000	450	450
140MT-D9T-B25	1.6-2.5					65,000	-	450	450
140MT-D9T-B25	1.6-2.5	140MT-D-PEC37 140MT-D-PNC37	105-PW37		100-C30	65,000	30,000	450	450
140MT-D9T-B40	2.5-4.0					65,000	30,000	450	450
140MT-D9T-B63	4.0-6.3					65,000	30,000	450	450
140MT-D9T-C10	6.3-10					65,000	30,000	450	450
140MT-D9T-C16	10-16					65,000	10,000	450	450
140MT-D9T-C20	14.5-20					50,000	10,000	450	450
140MT-D9T-C25	18-25					50,000	10,000	450	450

1) May or may not be provided
2) Similar for other contactor configurations 100-C, 104-C, 100S-C, 104S-C
3) It can be used an additional Bus Bar Adapter in according of table "Bus Bar Adapter for "A-B" or "Allen-Bradley" (the lower max. SCCR from both tables in according to the electrical rating applies).

190/191: 100-C contactor suitable for Group Installation/Disconnect Means on load side of 140MT Manual Motor Controller, Short-circuit Coordination Type 2

MPCB	FLA range [A]	Connection Module or wire jumpers 1)	Reversing Power Wiring Kit 1)	Busbar adapter	Min. Contractor Size 2)	SCCR			
						480Vac	600Vac	Max. current rated	
						[A]	[A]	Fuse	Breaker
140MT-C3E-A16	0.10-0.16	140MT-C-PEC23 140MT-C-PNC23	105-PW23	3)	100-C09	65,000	50,000	450	450
140MT-C3E-A25	0.16-0.25					65,000	50,000	450	450
140MT-C3E-A40	0.25-0.40					65,000	50,000	450	450
140MT-C3E-A63	0.40-0.63					65,000	50,000	450	450
140MT-C3E-B10	0.63-1.0					65,000	50,000	450	450
140MT-C3E-B16	1.0-1.6					65,000	50,000	450	450
140MT-C3E-B25	1.6-2.5				100-C23	65,000	30,000	450	450
140MT-C3E-B40	2.5-4.0	-	105-PW37		100-C30	65,000	30,000	450	450
140MT-C3E-B63	4.0-6.3					65,000	5,000	450	450
140MT-C3E-C10	14.5-20					65,000	5,000	450	450
140MT-C3E-C16	10-16					30,000	5,000	450	450
140MT-C3E-C20	10-16					10,000	5,000	450	450
140MT-C3E-C25	18-25					10,000	5,000	450	450
140MT-C3E-C29	23-29					10,000	-	450	450
140MT-C3E-C32	26.5-32				100-C37	10,000	-	450	450
140MT-C3E-C32	26.5-32	-	105-PW43		100-C43	10,000	-	450	450
140MT-D9E-A63	0.40-0.63	140MT-D-PEC23 140MT-D-PNC23	105-PW23	3)	100-C09	65,000	50,000	450	450
140MT-D9E-B10	0.63-1.0					65,000	50,000	450	450
140MT-D9E-B16	1.0-1.6					65,000	50,000	450	450
140MT-D9E-B25	1.6-2.5				100-C23	65,000	30,000	450	450
140MT-D9E-B40	2.5-4.0					65,000	-	450	450
140MT-D9E-B40	2.5-4.0	140MT-D-PEC37 140MT-D-PNC37	105-PW37		100-C30	65,000	30,000	450	450
140MT-D9E-B63	4.0-6.3					65,000	30,000	450	450
140MT-D9E-C10	6.3-10					65,000	30,000	450	450
140MT-D9E-C16	10-16					65,000	30,000	450	450
140MT-D9E-C20	14.5-20					65,000	10,000	450	450
140MT-D9E-C25	18-25					65,000	10,000	450	450
140MT-D9E-C29	23-29					30,000	10,000	450	450
140MT-D9E-C32	26.5-32				100-C37	30,000	10,000	450	450
140MT-D9E-C36	30-36					30,000	10,000	450	450
140MT-D9E-C40	34-40					30,000	10,000	450	450
140MT-D9E-C40	34-40	-	105-PW43		100-C43	30,000	10,000	450	450
140MT-D9T-A63	0.40-0.63	140MT-D-PEC23 140MT-D-PNC23	105-PW23	3)	100-C09	65,000	50,000	450	450
140MT-D9T-B10	0.63-1.0					65,000	50,000	450	450
140MT-D9T-B16	1.0-1.6				100-C23	65,000	30,000	450	450
140MT-D9T-B25	1.6-2.5					65,000	-	450	450
140MT-D9T-B25	1.6-2.5	140MT-D-PEC37 140MT-D-PNC37	105-PW37		100-C30	65,000	30,000	450	450
140MT-D9T-B40	2.5-4.0					65,000	30,000	450	450
140MT-D9T-B63	4.0-6.3					65,000	30,000	450	450
140MT-D9T-C10	6.3-10					65,000	30,000	450	450
140MT-D9T-C16	10-16					65,000	10,000	450	450
140MT-D9T-C20	14.5-20					50,000	10,000	450	450
140MT-D9T-C25	18-25					50,000	10,000	450	450

1) May or may not be provided
2) Similar for other contactor configurations 100-C, 104-C, 100S-C, 104S-C
3) It can be used an additional Bus Bar Adapter in according of table "Bus Bar Adapter for "A-B" or "Allen-Bradley" (the lower max. SCCR from both tables in according to the electrical rating applies).

190/191: 140MT Combination Motor Controller as Type F combination with 100-C contactor, Short-circuit Coordination Type 2

MPCB	FLA range [A]	Connection Module or wire jumpers 1)	Reversing Power Wiring Kit 1)	Busbar adapter	Min. Contractor Size 2)	SCCR			
						480Vac	600Vac	Max. current rated	
						[A]	[A]	Fuse	Breaker
140MT-C3E-A16	0.10-0.16	140MT-C-PEC23 140MT-C-PNC23	105-PW23	3)	100-C09	65,000	50,000	450	450
140MT-C3E-A25	0.16-0.25					65,000	50,000	450	450
140MT-C3E-A40	0.25-0.40					65,000	50,000	450	450
140MT-C3E-A63	0.40-0.63					65,000	50,000	450	450
140MT-C3E-B10	0.63-1.0					65,000	50,000	450	450
140MT-C3E-B16	1.0-1.6					65,000	50,000	450	450
140MT-C3E-B25	1.6-2.5				100-C23	65,000	30,000	450	450
140MT-C3E-B40	2.5-4.0	-	105-PW37		100-C30	65,000	30,000	450	450
140MT-C3E-B63	4.0-6.3					65,000	-	450	450
140MT-C3E-C10	6.3-10					65,000	-	450	450
140MT-C3E-C16	10-16					30,000	-	450	450
140MT-D9E-A63	0.40-0.63	140MT-D-PEC23 140MT-D-PNC23	105-PW23	3)	100-C09	65,000	50,000	450	450
140MT-D9E-B10	0.63-1.0					65,000	50,000	450	450
140MT-D9E-B16	1.0-1.6					65,000	50,000	450	450
140MT-D9E-B25	1.6-2.5				100-C23	65,000	30,000	450	450
140MT-D9E-B40	2.5-4.0					65,000	-	450	450
140MT-D9E-B40	2.5-4.0	140MT-D-PEC37 140MT-D-PNC37	105-PW37		100-C30	65,000	30,000	450	450
140MT-D9E-B63	4.0-6.3					65,000	30,000	450	450
140MT-D9E-C10	6.3-10					65,000	30,000	450	450
140MT-D9E-C16	10-16					65,000	30,000	450	450
140MT-D9E-C20	14.5-20					65,000	-	450	450
140MT-D9E-C25	18-25					50,000	-	450	450
140MT-D9E-C29	23-29					50,000	-	450	450
140MT-D9E-C32	26.5-32				100-C37	30,000	-	450	450
140MT-D9E-C36	30-36					30,000	-	450	450
140MT-D9E-C40	34-40					30,000	-	450	450
140MT-D9E-C40	34-40	-	105-PW43		100-C43	30,000	-	450	450
140MT-D9T-A63	0.40-0.63	140MT-D-PEC23 140MT-D-PNC23	105-PW23	3)	100-C09	65,000	50,000	450	450
140MT-D9T-B10	0.63-1.0					65,000	50,000	450	450
140MT-D9T-B16	1.0-1.6				100-C23	65,000	30,000	450	450
140MT-D9T-B25	1.6-2.5					65,000	-	450	450
140MT-D9T-B25	1.6-2.5	140MT-D-PEC37 140MT-D-PNC37	105-PW37		100-C30	65,000	30,000	450	450
140MT-D9T-B40	2.5-4.0					65,000	30,000	450	450
140MT-D9T-B63	4.0-6.3					65,000	30,000	450	450
140MT-D9T-C10	6.3-10					65,000	30,000	450	450
140MT-D9T-C16	10-16					65,000	-	450	450
140MT-D9T-C20	14.5-20					50,000	-	450	450
140MT-D9T-C25	18-25					50,000	-	450	450

1) May or may not be provided
2) Similar for other contactor configurations 100-C, 104-C, 100S-C, 104S-C
3) It can be used an additional Bus Bar Adapter in according of table "Bus Bar Adapter for "A-B" or "Allen-Bradley" (the lower max. SCCR from both tables in according to the electrical rating applies).

190/191: 100-E contactor suitable for Group Installation on load side of 140MT Manual Motor Controller, Short-circuit coordination Type 1 only

MPCB	Motor Current Adjust range [A]	**Connection Module or wire jumpers 1)**	Reversing Power Wiring Kit 1)	Busbar adapter	Min. Contractor Size 2)	SCCR			
						480Vac	600Vac	Max. current rated	
						[A]	[A]	Fuse	Breaker
140MT-C3E-A16	0.10-0.16	140MT-C-PE16 140MT-C-PSE16	105-PW16	3)	100-E09	65,000	50,000	450	450
140MT-C3E-A25	0.16-0.25					65,000	50,000	450	450
140MT-C3E-A40	0.25-0.40					65,000	50,000	450	450
140MT-C3E-A63	0.40-0.63					65,000	50,000	450	450
140MT-C3E-B10	0.63-1.0					65,000	50,000	450	450
140MT-C3E-B16	1.0-1.6					65,000	50,000	450	450
140MT-C3E-B25	1.6-2.5					65,000	30,000	450	450
140MT-C3E-B40	2.5-4.0					65,000	30,000	450	450
140MT-C3E-B63	4.0-6.3					65,000	30,000	450	450
140MT-C3E-C10	6.3-10					65,000	30,000	450	450
140MT-C3E-C16	10-16				100-E12	30,000	30,000	450	450
140MT-C3E-C16	10-16				100-E16	30,000	30,000	450	450
140MT-C3E-C20	14.5-20					30,000	30,000	450	450
140MT-C3E-C25	18-25	140MT-C-PE38 140MT-C-PSE38	105-PW38		100-E26	30,000	18,000	450	450
140MT-C3E-C29	23-29				100-E30	30,000	10,000	450	450
140MT-C3E-C32	26.5-32				100-E38	30,000	10,000	450	450
140MT-D9E-A63	0.40-0.63	140MT-D-PE16 140MT-D-PSE16	105-PW16	3)	100-E09	65,000	50,000	450	450
140MT-D9E-B10	0.63-1.0					65,000	50,000	450	450
140MT-D9E-B16	1.0-1.6					65,000	50,000	450	450
140MT-D9E-B25	1.6-2.5					65,000	30,000	450	450
140MT-D9E-B40	2.5-4.0					65,000	30,000	450	450
140MT-D9E-B63	4.0-6.3					65,000	30,000	450	450
140MT-D9E-C10	6.3-10					65,000	30,000	450	450
140MT-D9E-C16	10-16				100-E12	65,000	30,000	450	450
140MT-D9E-C16	10-16				100-E16	65,000	30,000	450	450
140MT-D9E-C20	14.5-20	140MT-D-PE38 140MT-D-PSE38	105-PW38		100-E26	65,000	30,000	450	450
140MT-D9E-C25	18-25					50,000	30,000	450	450
140MT-D9E-C29	23-29				100-E30	50,000	30,000	450	450
140MT-D9E-C32	26.5-32				100-E38	50,000	30,000	450	450
140MT-D9E-C36	30-36					30,000	30,000	450	450
140MT-D9E-C36	30-36	-	105-PW65		100-E40	30,000	30,000	450	450
140MT-D9E-C40	34-40	140MT-D-PE38 140MT-D-PSE38	105-PW38		100-E38	30,000	30,000	450	450
140MT-D9E-C40	34-40	-	105-PW65		100-E40	30,000	30,000	450	450
140MT-D9T-A63	0.40-0.63	140MT-D-PE16 140MT-D-PSE16	105-PW16	3)	100-E09	65,000	50,000	450	450
140MT-D9T-B10	0.63-1.0					65,000	50,000	450	450
140MT-D9T-B16	1.0-1.6					65,000	30,000	450	450
140MT-D9T-B25	1.6-2.5					65,000	30,000	450	450
140MT-D9T-B40	2.5-4.0					65,000	30,000	450	450
140MT-D9T-B63	4.0-6.3					65,000	30,000	450	450
140MT-D9T-C10	6.3-10				100-E12	65,000	30,000	450	450
140MT-D9T-C16	10-16	140MT-D-PE38 140MT-D-PSE38	105-PW38		100-E26	65,000	30,000	450	450
140MT-D9T-C20	14.5-20					50,000	30,000	450	450
140MT-D9T-C25	18-25				100-E30	50,000	30,000	450	450

1) May or may not be provided
2) Similar for other contactor configurations 100-E, 104-E, 100S-E, 104S-E
3) It can be used an additional Bus Bar Adapter in according of table "Bus Bar Adapter for "A-B" or "Allen-Bradley" (the lower max. SCCR from both tables in according to the electrical rating applies).

190/191: 100-E contactor suitable for Group Installation/Disconnect Means on load side of 140MT Manual Motor Short-circuit coordination Type 1 only

MPCB	Motor Current Adjust range [A]	Connection Module or wire jumpers 1)	Reversing Power Wiring Kit 1)	Busbar adapter	Min. Contractor Size 2)	SCCR			
						480Vac	600Vac	Max. current rated	
						[A]	[A]	Fuse	Breaker
140MT-C3E-A16	0.10-0.16	140MT-C-PE16 140MT-C-PSE16	105-PW16	3)	100-E09	65,000	50,000	450	450
140MT-C3E-A25	0.16-0.25					65,000	50,000	450	450
140MT-C3E-A40	0.25-0.40					65,000	50,000	450	450
140MT-C3E-A63	0.40-0.63					65,000	50,000	450	450
140MT-C3E-B10	0.63-1.0					65,000	50,000	450	450
140MT-C3E-B16	1.0-1.6					65,000	50,000	450	450
140MT-C3E-B25	1.6-2.5					65,000	30,000	450	450
140MT-C3E-B40	2.5-4.0					65,000	30,000	450	450
140MT-C3E-B63	4.0-6.3					65,000	30,000	450	450
140MT-C3E-C10	6.3-10					65,000	30,000	450	450
140MT-C3E-C16	10-16				100-E12	30,000	30,000	450	450
140MT-C3E-C16	10-16				100-E16	30,000	30,000	450	450
140MT-C3E-C20	14.5-20					30,000	10,000	450	450
140MT-C3E-C25	18-25	140MT-C-PE38 140MT-C-PSE38	105-PW38		100-E26	10,000	5,000	450	450
140MT-C3E-C29	23-29				100-E30	10,000	-	450	450
140MT-C3E-C32	26.5-32				100-E38	10,000	-	450	450
140MT-D9E-A63	0.40-0.63	140MT-D-PE16 140MT-D-PSE16	105-PW16	3)	100-E09	65,000	50,000	450	450
140MT-D9E-B10	0.63-1.0					65,000	50,000	450	450
140MT-D9E-B16	1.0-1.6					65,000	50,000	450	450
140MT-D9E-B25	1.6-2.5					65,000	30,000	450	450
140MT-D9E-B40	2.5-4.0					65,000	30,000	450	450
140MT-D9E-B63	4.0-6.3					65,000	30,000	450	450
140MT-D9E-C10	6.3-10					65,000	30,000	450	450
140MT-D9E-C16	10-16				100-E12	65,000	30,000	450	450
140MT-D9E-C16	10-16				100-E16	65,000	30,000	450	450
140MT-D9E-C20	14.5-20	140MT-D-PE38 140MT-D-PSE38	105-PW38		100-E26	65,000	30,000	450	450
140MT-D9E-C25	18-25					65,000	30,000	450	450
140MT-D9E-C29	23-29				100-E30	30,000	30,000	450	450
140MT-D9E-C32	26.5-32				100-E38	30,000	18,000	450	450
140MT-D9E-C36	30-36					30,000	18,000	450	450
140MT-D9E-C36	30-36	-	105-PW65		100-E40	30,000	18,000	450	450
140MT-D9E-C40	34-40	140MT-D-PE38 140MT-D-PSE38	105-PW38		100-E38	30,000	18,000	450	450
140MT-D9E-C40	34-40	-	105-PW65		100-E40	30,000	18,000	450	450
140MT-D9T-A63	0.40-0.63	140MT-D-PE16 140MT-D-PSE16	105-PW16	3)	100-E09	65,000	50,000	450	450
140MT-D9T-B10	0.63-1.0					65,000	50,000	450	450
140MT-D9T-B16	1.0-1.6					65,000	30,000	450	450
140MT-D9T-B25	1.6-2.5					65,000	30,000	450	450
140MT-D9T-B40	2.5-4.0					65,000	30,000	450	450
140MT-D9T-B63	4.0-6.3					65,000	30,000	450	450
140MT-D9T-C10	6.3-10				100-E12	65,000	30,000	450	450
140MT-D9T-C16	10-16	140MT-D-PE38 140MT-D-PSE38	105-PW38		100-E26	65,000	30,000	450	450
140MT-D9T-C20	14.5-20					50,000	30,000	450	450
140MT-D9T-C25	18-25				100-E30	50,000	30,000	450	450

1) May or may not be provided
2) Similar for other contactor configurations 100-E, 104-E, 100S-E, 104S-E
3) It can be used an additional Bus Bar Adapter in according of table "Bus Bar Adapter for "A-B" or "Allen-Bradley" (the lower max. SCCR from both tables in according to the electrical rating applies).

190/191: 140MT Combination Motor Controller as Type F combination with 100-E contactor,
Short-circuit coordination Type 1 only

MPCB	Motor Current Adjust range [A]	**Connection Module or wire jumpers 1)**	Reversing Power Wiring Kit 1)	Busbar adapter	Min. Contractor Size 2)	SCCR			
						480Vac	600Vac	Max. current rated	
						[A]	[A]	Fuse	Breaker
140MT-C3E-A16	0.10-0.16	140MT-C-PE16 140MT-C-PSE16	105-PW16	3)	100-E09	65,000	50,000	450	450
140MT-C3E-A25	0.16-0.25					65,000	50,000	450	450
140MT-C3E-A40	0.25-0.40					65,000	50,000	450	450
140MT-C3E-A63	0.40-0.63					65,000	50,000	450	450
140MT-C3E-B10	0.63-1.0					65,000	50,000	450	450
140MT-C3E-B16	1.0-1.6					65,000	50,000	450	450
140MT-C3E-B25	1.6-2.5					65,000	30,000	450	450
140MT-C3E-B40	2.5-4.0					65,000	30,000	450	450
140MT-C3E-B63	4.0-6.3					65,000	-	450	450
140MT-C3E-C10	6.3-10					65,000	-	450	450
140MT-C3E-C16	10-16				100-E12	30,000	-	450	450
140MT-C3E-C16	10-16				100-E16	30,000	-	450	450
140MT-D9E-A63	0.40-0.63	140MT-D-PE16 140MT-D-PSE16	105-PW16	3)	100-E09	65,000	50,000	450	450
140MT-D9E-B10	0.63-1.0					65,000	50,000	450	450
140MT-D9E-B16	1.0-1.6					65,000	50,000	450	450
140MT-D9E-B25	1.6-2.5					65,000	50,000	450	450
140MT-D9E-B40	2.5-4.0					65,000	50,000	450	450
140MT-D9E-B63	4.0-6.3					65,000	50,000	450	450
140MT-D9E-C10	6.3-10					65,000	50,000	450	450
140MT-D9E-C16	10-16				100-E12	65,000	30,000	450	450
140MT-D9E-C16	10-16				100-E16	65,000	30,000	450	450
140MT-D9E-C20	14.5-20	140MT-D-PE38 140MT-D-PSE38	105-PW38		100-E26	65,000	-	450	450
140MT-D9E-C25	18-25					65,000	-	450	450
140MT-D9E-C29	23-29				100-E30	30,000	-	450	450
140MT-D9E-C32	26.5-32				100-E38	30,000	-	450	450
140MT-D9E-C36	30-36					30,000	-	450	450
140MT-D9E-C36	30-36	-	105-PW65		100-E40	30,000	-	450	450
140MT-D9E-C40	34-40	140MT-D-PE38 140MT-D-PSE38	105-PW38		100-E38	30,000	-	450	450
140MT-D9E-C40	34-40	-	105-PW65		100-E40	30,000	-	450	450
140MT-D9T-A63	0.40-0.63	140MT-D-PE16 140MT-D-PSE16	105-PW16	3)	100-E09	65,000	50,000	450	450
140MT-D9T-B10	0.63-1.0					65,000	50,000	450	450
140MT-D9T-B16	1.0-1.6					65,000	30,000	450	450
140MT-D9T-B25	1.6-2.5					65,000	30,000	450	450
140MT-D9T-B40	2.5-4.0					65,000	30,000	450	450
140MT-D9T-B63	4.0-6.3					65,000	30,000	450	450
140MT-D9T-C10	6.3-10				100-E12	65,000	30,000	450	450
140MT-D9T-C16	10-16	140MT-D-PE38 140MT-D-PSE38	105-PW38		100-E26	65,000	-	450	450
140MT-D9T-C20	14.5-20					50,000	-	450	450
140MT-D9T-C25	18-25				100-E30	50,000	-	450	450

1) May or may not be provided
2) Similar for other contactor configurations 100-E, 104-E, 100S-E, 104S-E
3) It can be used an additional Bus Bar Adapter in according of table "Bus Bar Adapter for "A-B" or "Allen-Bradley" (the lower max. SCCR from both tables in according to the electrical rating applies).

190/191: 100-E contactor suitable for Group Installation on load side of 140MT Manual Motor Controller, Short-circuit coordination Type 2

MPCB	Motor Current Adjust range [A]	Connection Module or wire jumpers 1)	Reversing Power Wiring Kit 1)	Busbar adapter	Contractor Size 2)	SCCR			
						480Vac	600Vac	Max. current rated	
						[A]	[A]	Fuse	Breaker
140MT-C3E-A16	0.10-0.16	140MT-C-PE16 140MT-C-PSE16	105-PW16	3)	100-E09	65,000	50,000	450	450
140MT-C3E-A25	0.16-0.25					65,000	50,000	450	450
140MT-C3E-A40	0.25-0.40					65,000	50,000	450	450
140MT-C3E-A63	0.40-0.63					65,000	50,000	450	450
140MT-C3E-B10	0.63-1.0					65,000	50,000	450	450
140MT-C3E-B16	1.0-1.6					65,000	50,000	450	450
140MT-C3E-B25	1.6-2.5	140MT-C-PE38 140MT-C-PSE38	105-PW38		100-E26	65,000	30,000	450	450
140MT-C3E-B40	2.5-4.0					65,000	30,000	450	450
140MT-C3E-B63	4.0-6.3					65,000	-	450	450
					100-E30	65,000	5,000	450	450
140MT-C3E-C10	6.3-10				100-E26	30,000	-	450	450
					100-E30	65,000	5,000	450	450
140MT-C3E-C16	10-16					30,000	-	450	450
140MT-D9E-A63	0.40-0.63	140MT-C-PE16 140MT-C-PSE16	105-PW16		100-E09	65,000	50,000	450	450
140MT-D9E-B10	0.63-1.0					65,000	50,000	450	450
140MT-D9E-B16	1.0-1.6					65,000	50,000	450	450
140MT-D9E-B25	1.6-2.5	140MT-D-PE38 140MT-D-PSE38	105-PW38		100-E26	65,000	30,000	450	450
140MT-D9E-B40	2.5-4.0					65,000	-	450	450
					100-E30	65,000	30,000	450	450
140MT-D9E-B63	4.0-6.3				100-E26	65,000	-	450	450
					100-E30	65,000	30,000	450	450
140MT-D9E-C10	6.3-10				100-E26	65,000	-	450	450
					100-E30	65,000	30,000	450	450
140MT-D9E-C16	10-16				100-E26	65,000	-	450	450
					100-E30	65,000	30,000	450	450
140MT-D9E-C20	14.5-20				100-E26	65,000	-	450	450
					100-E30	65,000	10,000	450	450
140MT-D9E-C25	18-25				100-E26	50,000	-	450	450
					100-E30	50,000	10,000	450	450
140MT-D9E-C29	23-29				100-E26	50,000	-	450	450
		-	105-PW65		100-E40	30,000	10,000	450	450
140MT-D9E-C32	26.5-32	140MT-D-PE38 140MT-D-PSE38	105-PW38		100-E38	30,000	-	450	450
		-	105-PW65		100-E40	30,000	10,000	450	450
140MT-D9E-C36	30-36	140MT-D-PE38 140MT-D-PSE38	105-PW38		100-E38	30,000	-	450	450
		-	105-PW65		100-E40	30,000	10,000	450	450
140MT-D9E-C40	34-40	140MT-D-PE38 140MT-D-PSE38	105-PW38		100-E38	30,000	-	450	450
		-	105-PW65		100-E40	30,000	10,000	450	450
140MT-D9T-A63	0.40-0.63	140MT-D-PE16 140MT-D-PSE16	105-PW16		100-E09	65,000	50,000	450	450
140MT-D9T-B10	0.63-1.0					65,000	50,000	450	450
140MT-D9T-B16	1.0-1.6	140MT-D-PE38 140MT-D-PSE38	105-PW38		100-E26	65,000	30,000	450	450
140MT-D9T-B25	1.6-2.5					65,000	-	450	450
					100-E30	65,000	30,000	450	450
140MT-D9T-B40	2.5-4.0				100-E26	65,000	-	450	450
					100-E30	65,000	30,000	450	450
140MT-D9T-B63	4.0-6.3			3)	100-E26	65,000	-	450	450
					100-E30	65,000	30,000	450	450
140MT-D9T-C10	6.3-10				100-E26	65,000	-	450	450
					100-E30	65,000	30,000	450	450
140MT-D9T-C16	10-16				100-E26	65,000	-	450	450
					100-E30	65,000	10,000	450	450
140MT-D9T-C20	14.5-20				100-E26	50,000	-	450	450
					100-E30	50,000	10,000	450	450
140MT-D9T-C25	18-25				100-E26	50,000	-	450	450
		-	105-PW65		100-E40	30,000	10,000	450	450

1) May or may not be provided
2) Similar for other contactor configurations 100-E, 104-E, 100S-E, 104S-E
3) It can be used an additional Bus Bar Adapter in according of table "Bus Bar Adapter for "A-B" or "Allen-Bradley" (the lower max. SCCR from both tables in according to the electrical rating applies).

190/191: 100-E contactor suitable for Group Installation/Disconnect Means on load side of 140MT Manual Motor Controller, Short-circuit coordination Type 2

MPCB	Motor Current Adjust range [A]	Connection Module or wire jumpers 1)	Reversing Power Wiring Kit 1)	Busbar adapter	Contractor Size 2)	SCCR			
						480Vac	600Vac	Max. current rated	
						[A]	[A]	Fuse	Breaker
140MT-C3E-A16	0.10-0.16	140MT-C-PE16 140MT-C-PSE16	105-PW16	3)	100-E09	65,000	50,000	450	450
140MT-C3E-A25	0.16-0.25					65,000	50,000	450	450
140MT-C3E-A40	0.25-0.40					65,000	50,000	450	450
140MT-C3E-A63	0.40-0.63					65,000	50,000	450	450
140MT-C3E-B10	0.63-1.0					65,000	50,000	450	450
140MT-C3E-B16	1.0-1.6					65,000	50,000	450	450
140MT-C3E-B25	1.6-2.5	140MT-C-PE38 140MT-C-PSE38	105-PW38		100-E26	65,000	30,000	450	450
140MT-C3E-B40	2.5-4.0					65,000	30,000	450	450
140MT-C3E-B63	4.0-6.3					65,000	-	450	450
					100-E30	65,000	5,000	450	450
140MT-C3E-C10	6.3-10				100-E26	30,000	-	450	450
					100-E30	65,000	5,000	450	450
140MT-C3E-C16	10-16					30,000	-	450	450
140MT-D9E-A63	0.40-0.63	140MT-C-PE16 140MT-C-PSE16	105-PW16	3)	100-E09	65,000	50,000	450	450
140MT-D9E-B10	0.63-1.0					65,000	50,000	450	450
140MT-D9E-B16	1.0-1.6					65,000	50,000	450	450
140MT-D9E-B25	1.6-2.5	140MT-D-PE38 140MT-D-PSE38	105-PW38		100-E26	65,000	30,000	450	450
140MT-D9E-B40	2.5-4.0					65,000	-	450	450
					100-E30	65,000	30,000	450	450
140MT-D9E-B63	4.0-6.3				100-E26	65,000	-	450	450
					100-E30	65,000	30,000	450	450
140MT-D9E-C10	6.3-10				100-E26	65,000	-	450	450
					100-E30	65,000	30,000	450	450
140MT-D9E-C16	10-16				100-E26	65,000	-	450	450
					100-E30	65,000	30,000	450	450
140MT-D9E-C20	14.5-20				100-E26	65,000	-	450	450
					100-E30	65,000	10,000	450	450
140MT-D9E-C25	18-25				100-E26	50,000	-	450	450
					100-E30	50,000	10,000	450	450
140MT-D9E-C29	23-29				100-E26	50,000	-	450	450
		-	105-PW65		100-E40	30,000	10,000	450	450
140MT-D9E-C32	26.5-32	140MT-D-PE38 140MT-D-PSE38	105-PW38		100-E38	30,000	-	450	450
		-	105-PW65		100-E40	30,000	10,000	450	450
140MT-D9E-C36	30-36	140MT-D-PE38 140MT-D-PSE38	105-PW38		100-E38	30,000	-	450	450
		-	105-PW65		100-E40	30,000	10,000	450	450
140MT-D9E-C40	34-40	140MT-D-PE38 140MT-D-PSE38	105-PW38		100-E38	30,000	-	450	450
		-	105-PW65		100-E40	30,000	10,000	450	450
140MT-D9T-A63	0.40-0.63	140MT-D-PE16 140MT-D-PSE16	105-PW16	3)	100-E09	65,000	50,000	450	450
140MT-D9T-B10	0.63-1.0					65,000	50,000	450	450
140MT-D9T-B16	1.0-1.6	140MT-D-PE38 140MT-D-PSE38	105-PW38		100-E26	65,000	30,000	450	450
140MT-D9T-B25	1.6-2.5					65,000	-	450	450
					100-E30	65,000	30,000	450	450
140MT-D9T-B40	2.5-4.0				100-E26	65,000	-	450	450
					100-E30	65,000	30,000	450	450
140MT-D9T-B63	4.0-6.3				100-E26	65,000	-	450	450
					100-E30	65,000	30,000	450	450
140MT-D9T-C10	6.3-10				100-E26	65,000	-	450	450
					100-E30	65,000	30,000	450	450
140MT-D9T-C16	10-16				100-E26	65,000	-	450	450
					100-E30	65,000	10,000	450	450
140MT-D9T-C20	14.5-20				100-E26	50,000	-	450	450
					100-E30	50,000	10,000	450	450
140MT-D9T-C25	18-25				100-E26	50,000	-	450	450
		-	105-PW65		100-E40	30,000	10,000	450	450

1) May or may not be provided
2) Similar for other contactor configurations 100-E, 104-E, 100S-E, 104S-E
3) It can be used an additional Bus Bar Adapter in according of table "Bus Bar Adapter for "A-B" or "Allen-Bradley" (the lower max. SCCR from both tables in according to the electrical rating applies).

190/191: 140MT Combination Motor Controller as Type F combination with 100-E contactor,
Short-circuit coordination Type 2

MPCB	Motor Current Adjust range [A]	**Connection Module or wire jumpers 1)**	Reversing Power Wiring Kit 1)	Busbar adapter	Contractor Size 2)	SCCR			
						480Vac	600Vac	Max. current rated	
						[A]	[A]	Fuse	Breaker
140MT-C3E-A16	0.10-0.16	140MT-C-PE16 140MT-C-PSE16	105-PW16	3)	100-E09	65,000	50,000	450	450
140MT-C3E-A25	0.16-0.25					65,000	50,000	450	450
140MT-C3E-A40	0.25-0.40					65,000	50,000	450	450
140MT-C3E-A63	0.40-0.63					65,000	50,000	450	450
140MT-C3E-B10	0.63-1.0					65,000	50,000	450	450
140MT-C3E-B16	1.0-1.6					65,000	50,000	450	450
140MT-C3E-B25	1.6-2.5	140MT-C-PE38 140MT-C-PSE38	105-PW38		100-E26	65,000	30,000	450	450
140MT-C3E-B40	2.5-4.0					65,000	30,000	450	450
140MT-C3E-B63	4.0-6.3					65,000	-	450	450
140MT-C3E-C10	6.3-10					65,000	-	450	450
140MT-C3E-C16	10-16				100-E30	30,000	-	450	450
140MT-D9E-A63	0.40-0.63	140MT-C-PE16 140MT-C-PSE16	105-PW16	3)	100-E09	65,000	50,000	450	450
140MT-D9E-B10	0.63-1.0					65,000	50,000	450	450
140MT-D9E-B16	1.0-1.6					65,000	50,000	450	450
140MT-D9E-B25	1.6-2.5	140MT-D-PE38 140MT-D-PSE38	105-PW38		100-E26	65,000	30,000	450	450
140MT-D9E-B40	2.5-4.0					65,000	-	450	450
					100-E30	65,000	30,000	450	450
140MT-D9E-B63	4.0-6.3				100-E26	65,000	-	450	450
					100-E30	65,000	30,000	450	450
140MT-D9E-C10	6.3-10				100-E26	65,000	-	450	450
					100-E30	65,000	30,000	450	450
140MT-D9E-C16	10-16				100-E26	65,000	-	450	450
					100-E30	65,000	30,000	450	450
140MT-D9E-C20	14.5-20				100-E26	65,000	-	450	450
140MT-D9E-C25	18-25					65,000	-	450	450
140MT-D9E-C29	23-29					50,000	-	450	450
140MT-D9E-C32	26.5-32				100-E38	50,000	-	450	450
140MT-D9E-C36	30-36					50,000	-	450	450
140MT-D9E-C40	34-40					30,000	-	450	450
		-	105-PW65		100-E40	30,000	-	450	450
140MT-D9T-A63	0.40-0.63	140MT-D-PE16 140MT-D-PSE16	105-PW16	3)	100-E09	65,000	50,000	450	450
140MT-D9T-B10	0.63-1.0					65,000	50,000	450	450
140MT-D9T-B16	1.0-1.6	140MT-D-PE38 140MT-D-PSE38	105-PW38		100-E26	65,000	30,000	450	450
140MT-D9T-B25	1.6-2.5					65,000	-	450	450
					100-E30	65,000	30,000	450	450
140MT-D9T-B40	2.5-4.0				100-E26	65,000	-	450	450
					100-E30	65,000	30,000	450	450
140MT-D9T-B63	4.0-6.3				100-E26	65,000	-	450	450
					100-E30	65,000	30,000	450	450
140MT-D9T-C10	6.3-10				100-E26	65,000	-	450	450
					100-E30	65,000	30,000	450	450
140MT-D9T-C16	10-16				100-E26	65,000	-	450	450
140MT-D9T-C20	14.5-20					50,000	-	450	450
140MT-D9T-C25	18-25					50,000	-	450	450

1) May or may not be provided
2) Similar for other contactor configurations 100-E, 104-E, 100S-E, 104S-E
3) It can be used an additional Bus Bar Adapter in according of table "Bus Bar Adapter for "A-B" or "Allen-Bradley" (the lower max. SCCR from both tables in according to the electrical rating applies).

190/191: 100-K contactor suitable for Group Installation on load side of 140MT Manual Motor Controller, Short-circuit coordination Type 1 only

MPCB	Motor Current Adjust range [A]	**Connection Module or wire jumpers 1)**	Reversing Power Wiring Kit 1)	Busbar adapter	Min. Contractor Size 2)	SCCR			
						480Vac	600Vac	Max. current rated	
						[A]	[A]	Fuse	Breaker
140MT-C3E-A16	0.10-0.16	140MT-C-PEK12	100-KPR	3)	100-K05	65,000	50,000	450	450
140MT-C3E-A25	0.16-0.25					65,000	50,000	450	450
140MT-C3E-A40	0.25-0.40					65,000	50,000	450	450
140MT-C3E-A63	0.40-0.63					65,000	50,000	450	450
140MT-C3E-B10	0.63-1.0					65,000	50,000	450	450
140MT-C3E-B16	1.0-1.6					65,000	50,000	450	450
140MT-C3E-B25	1.6-2.5					65,000	30,000	450	450
140MT-C3E-B40	2.5-4.0					65,000	30,000	450	450
140MT-C3E-B63	4.0-6.3					65,000	30,000	450	450
140MT-C3E-B63	4.0-6.3				100-K09	65,000	30,000	450	450
140MT-C3E-C10	6.3-10					65,000	30,000	450	450
140MT-C9E-C10	6.3-10				100-K12	65,000	30,000	450	450
140MT-C9E-C16	10-16					30,000	30,000	450	450
140MT-D9E-A63	0.40-0.63	-	100-KPR	3)	100-K05	65,000	50,000	450	450
140MT-D9E-B10	0.63-1.0					65,000	50,000	450	450
140MT-D9E-B16	1.0-1.6					65,000	50,000	450	450
140MT-D9E-B25	1.6-2.5					65,000	30,000	450	450
140MT-D9E-B40	2.5-4.0					65,000	30,000	450	450
140MT-D9E-B63	4.0-6.3					65,000	30,000	450	450
140MT-D9E-C10	6.3-10				100-K09	65,000	30,000	450	450
						65,000	30,000	450	450
140MT-D9E-C16	10-16				100-K12	65,000	30,000	450	450
						65,000	30,000	450	450

1) May or may not be provided
2) Similar for other contactor configuration 104-K
3) It can be used an additional Bus Bar Adapter in according of table "Bus Bar Adapter for "A-B" or "Allen-Bradley" (the lower max. SCCR from both tables in according to the electrical rating applies).

190/191: 100-K contactor suitable for Group Installation/Disconnect Means on load side of 140MT Manual Motor Controller, Short-circuit coordination Type 1 only

MPCB	Motor Current Adjust range [A]	**Connection Module or wire jumpers 1)**	Reversing Power Wiring Kit 1)	Busbar adapter	Min. Contractor Size 2)	SCCR			
						480Vac	600Vac	Max. current rated	
						[A]	[A]	Fuse	Breaker
140MT-C3E-A16	0.10-0.16	140MT-C-PEK12	100-KPR	3)	100-K05	65,000	50,000	450	450
140MT-C3E-A25	0.16-0.25					65,000	50,000	450	450
140MT-C3E-A40	0.25-0.40					65,000	50,000	450	450
140MT-C3E-A63	0.40-0.63					65,000	50,000	450	450
140MT-C3E-B10	0.63-1.0					65,000	50,000	450	450
140MT-C3E-B16	1.0-1.6					65,000	50,000	450	450
140MT-C3E-B25	1.6-2.5					65,000	30,000	450	450
140MT-C3E-B40	2.5-4.0					65,000	30,000	450	450
140MT-C3E-B63	4.0-6.3					65,000	30,000	450	450
140MT-C3E-B63	4.0-6.3				100-K09	65,000	30,000	450	450
140MT-C3E-C10	6.3-10					65,000	30,000	450	450
140MT-C9E-C10	6.3-10				100-K12	65,000	30,000	450	450
140MT-C9E-C16	10-16					30,000	30,000	450	450
140MT-D9E-A63	0.40-0.63	-	100-KPR	3)	100-K05	65,000	50,000	450	450
140MT-D9E-B10	0.63-1.0					65,000	50,000	450	450
140MT-D9E-B16	1.0-1.6					65,000	50,000	450	450
140MT-D9E-B25	1.6-2.5					65,000	30,000	450	450
140MT-D9E-B40	2.5-4.0					65,000	30,000	450	450
140MT-D9E-B63	4.0-6.3					65,000	30,000	450	450
140MT-D9E-C10	6.3-10				100-K09	65,000	30,000	450	450
						65,000	30,000	450	450
140MT-D9E-C16	10-16				100-K12	65,000	30,000	450	450
						65,000	30,000	450	450

1) May or may not be provided
2) Similar for other contactor configuration 104-K
3) It can be used an additional Bus Bar Adapter in according of table "Bus Bar Adapter for "A-B" or "Allen-Bradley" (the lower max. SCCR from both tables in according to the electrical rating applies).

190/191: 140MT Combination Motor Controller as Type F combination with 100-K contactor, Short-circuit coordination Type 1 only

MPCB	Motor Current Adjust range [A]	Connection Module or wire jumpers 1)	Reversing Power Wiring Kit 1)	Busbar adapter	Min. Contractor Size 2)	SCCR			
						480Vac	600Vac	Max. current rated	
						[A]	[A]	Fuse	Breaker
140MT-C3E-A16	0.10-0.16	140MT-C-PEK12	100-KPR	3)	100-K05	65,000	50,000	450	450
140MT-C3E-A25	0.16-0.25					65,000	50,000	450	450
140MT-C3E-A40	0.25-0.40					65,000	50,000	450	450
140MT-C3E-A63	0.40-0.63					65,000	50,000	450	450
140MT-C3E-B10	0.63-1.0					65,000	50,000	450	450
140MT-C3E-B16	1.0-1.6					65,000	50,000	450	450
140MT-C3E-B25	1.6-2.5					65,000	30,000	450	450
140MT-C3E-B40	2.5-4.0					65,000	30,000	450	450
140MT-C3E-B63	4.0-6.3					65,000	-	450	450
140MT-C3E-B63	4.0-6.3				100-K09	65,000	-	450	450
140MT-C3E-C10	6.3-10					65,000	-	450	450
140MT-C9E-C10	6.3-10				100-K12	65,000	-	450	450
140MT-C9E-C16	10-16					30,000	-	450	450
140MT-D9E-A63	0.40-0.63	-	100-KPR	3)	100-K05	65,000	50,000	450	450
140MT-D9E-B10	0.63-1.0					65,000	50,000	450	450
140MT-D9E-B16	1.0-1.6					65,000	50,000	450	450
140MT-D9E-B25	1.6-2.5					65,000	30,000	450	450
140MT-D9E-B40	2.5-4.0					65,000	30,000	450	450
140MT-D9E-B63	4.0-6.3					65,000	30,000	450	450
140MT-D9E-C10	6.3-10				100-K09	65,000	30,000	450	450
						65,000	30,000	450	450
140MT-D9E-C16	10-16				100-K12	65,000	30,000	450	450
						65,000	30,000	450	450

1) May or may not be provided
2) Similar for other contactor configuration 104-K
3) It can be used an additional Bus Bar Adapter in according of table "Bus Bar Adapter for "A-B" or "Allen-Bradley" (the lower max. SCCR from both tables in according to the electrical rating applies).

190/191: 100-K contactor suitable for Group Installation on load side of 140MT Manual Motor Controller, Short-circuit coordination Type 2

MPCB	Motor Current Adjust range [A]	Connection Module or wire jumpers 1)	Reversing Power Wiring Kit 1)	Busbar adapter	Min. Contractor Size 2)	SCCR			
						480Vac	600Vac	Max. current rated	
						[A]	[A]	Fuse	Breaker
140MT-C3E-A16	0.10-0.16	140MT-C-PEK12	100-KPR	3)	100-K05	50,000	30,000	450	450
140MT-C3E-A25	0.16-0.25					50,000	30,000	450	450
140MT-C3E-A40	0.25-0.40					50,000	30,000	450	450
140MT-C3E-A63	0.40-0.63					50,000	30,000	450	450
140MT-C3E-B10	0.63-1.0					50,000	30,000	450	450
140MT-C3E-B16	1.0-1.6					50,000	30,000	450	450
140MT-C3E-B25	1.6-2.5				100-K09	50,000	-	450	450
140MT-D9E-A63	0.40-0.63	-	100-KPR	3)	100-K05	65,000	50,000	450	450
140MT-D9E-B10	0.63-1.0					65,000	50,000	450	450
140MT-D9E-B16	1.0-1.6					65,000	50,000	450	450
140MT-D9E-B25	1.6-2.5				100-K09	50,000	-	450	450

1) May or may not be provided
2) Similar for other contactor configuration 104-K
3) It can be used an additional Bus Bar Adapter in according of table "Bus Bar Adapter for "A-B" or "Allen-Bradley" (the lower max. SCCR from both tables in according to the electrical rating applies).

190/191: 100-K contactor suitable for Group Installation/Disconnect Means on load side of 140MT Manual Motor Controller, Short-circuit coordination Type 2

MPCB	Motor Current Adjust range [A]	Connection Module or wire jumpers 1)	Reversing Power Wiring Kit 1)	Busbar adapter	Min. Contractor Size 2)	SCCR			
						480Vac	600Vac	Max. current rated	
						[A]	[A]	Fuse	Breaker
140MT-C3E-A16	0.10-0.16	140MT-C-PEK12	100-KPR	3)	100-K05	50,000	30,000	450	450
140MT-C3E-A25	0.16-0.25					50,000	30,000	450	450
140MT-C3E-A40	0.25-0.40					50,000	30,000	450	450
140MT-C3E-A63	0.40-0.63					50,000	30,000	450	450
140MT-C3E-B10	0.63-1.0					50,000	30,000	450	450
140MT-C3E-B16	1.0-1.6					50,000	30,000	450	450
140MT-C3E-B25	1.6-2.5				100-K09	50,000	-	450	450
140MT-D9E-A63	0.40-0.63	-	100-KPR	3)	100-K05	65,000	50,000	450	450
140MT-D9E-B10	0.63-1.0					65,000	50,000	450	450
140MT-D9E-B16	1.0-1.6					65,000	50,000	450	450
140MT-D9E-B25	1.6-2.5				100-K09	50,000	-	450	450

1) May or may not be provided
2) Similar for other contactor configuration 104-K
3) It can be used an additional Bus Bar Adapter in according of table "Bus Bar Adapter for "A-B" or "Allen-Bradley" (the lower max. SCCR from both tables in according to the electrical rating applies).

190/191: 140MT Combination Motor Controller as Type F combination with 100-K contactor, Short-circuit coordination Type 2

MPCB	Motor Current Adjust range [A]	Connection Module or wire jumpers 1)	Reversing Power Wiring Kit 1)	Busbar adapter	Min. Contractor Size 2)	SCCR 480Vac [A]	SCCR 600Vac [A]	Max. current rated Fuse	Max. current rated Breaker
140MT-C3E-A16	0.10-0.16	140MT-C-PEK12	100-KPR	3)	100-K05	50,000	-	450	450
140MT-C3E-A25	0.16-0.25					50,000	-	450	450
140MT-C3E-A40	0.25-0.40					50,000	-	450	450
140MT-C3E-A63	0.40-0.63					50,000	-	450	450
140MT-C3E-B10	0.63-1.0					50,000	-	450	450
140MT-C3E-B16	1.0-1.6					50,000	-	450	450
140MT-C3E-B25	1.6-2.5				100-K09	50,000	-	450	450
140MT-D9E-A63	0.40-0.63	-	100-KPR	3)	100-K05	65,000	50,000	450	450
140MT-D9E-B10	0.63-1.0					65,000	50,000	450	450
140MT-D9E-B16	1.0-1.6					65,000	50,000	450	450
140MT-D9E-B25	1.6-2.5				100-K09	50,000	-	450	450

1) May or may not be provided
2) Similar for other contactor configuration 104-K
3) It can be used an additional Bus Bar Adapter in according of table "Bus Bar Adapter for "A-B" or "Allen-Bradley" (the lower max. SCCR from both tables in according to the electrical rating applies).

190/191: 3-Component starter, 100-C contactor suitable for Group Installation on load side of 140MT Manual Motor Controller, Level of S.C. Coordination Type 1

MPCB	Motor Current Adjust range [A]	Connection Module or wire jumpers 11)	Reversing Power Wiring Kit 11)	Min. Contactor Size 12)	O/L Relay: Direct mount Trip Class 10, 20	O/L Relay: Direct mount Trip Class 10, 15, 20, 30	O/L Relay: Pass mount Trip Class 10, 20	O/L Relay: Pass mount Trip Class 10, 15, 20, 30	O/L Relay: Direct mount Trip Class 5...30			Busbar adapter	SCCR 480Vac [A]	SCCR 600Vac [A]	Max. current rated Fuse	Max. current rated Breaker
140MT-D9N-A63	0.63	140MT-D-PNC23	105-PW23	100-C09	1)	2)	-	-	7)	9)	10)	13)	65,000	30,000	450	450
140MT-D9N-B10	1.0						5)	6)					65,000	30,000	450	450
140MT-D9N-B16	1.6												65,000	30,000	450	450
140MT-D9N-B25	2.5												65,000	30,000	450	450
140MT-D9N-B40	4.0												65,000	30,000	450	450
140MT-D9N-B63	6.3												65,000	30,000	450	450
140MT-D9N-C10	10												65,000	30,000	450	450
140MT-D9N-C16	16			100-C12									65,000	30,000	450	450
140MT-D9N-C16	16			100-C16									65,000	30,000	450	450
140MT-D9N-C20	20			100-C23									65,000	30,000	450	450
140MT-D9N-C25	25												50,000	30,000	450	450
140MT-D9N-C29	29	140MT-D-PNC37	105-PW37	100-C30	3)	4)			8)				50,000	30,000	450	450
140MT-D9N-C32	32												30,000	30,000	450	450

1) 193-1EEAB, 193-1EEBB, 193-1EECB, 193-1EEDB, 193-1EEEB
2) 193-1EFAB, 193-1EFBB, 193-1EFCB, 193-1EFDB, 193-1EFEB
3) 193-1EEED, 193-1EEFD
4) 193-1EFED, 193-1EFFD
5) 193-1EECP, 193-1EEDP, 193-1EEEP, 193-1EEFP
6) 193-1EFCP, 193-1EFDP, 193-1EFEP, 193-1EFFP
7) 193-ESM-*-30A-C23
8) 193-ESM-*-30A-C55, 193-ESM-*-60A-C55
9) 193-ESM-*-30A-T, 193-ESM-*-60A-T: DIN Rail / Panel mount Power terminals
10) 193-ESM-*-30A-P, 193-ESM-*-60A-P: DIN Rail/ Panel mount Pass through
11) May or may not be provided
12) Similar for other contactor configurations 100-C, 104-C, 100S-C, 104S-C
13) It can be used an additional Bus Bar Adapter in according of table "Bus Bar Adapter for "A-B" or "Allen-Bradley" (the lower max. SCCR from both tables in according to the electrical rating applies).

190/191: 3-Component starter, 100-C contactor suitable for Group Installation on load side of 140MT Manual Motor Controller, Level of S.C. Coordination Type 2

MPCB	Motor Current Adjust range [A]	Connection Module or wire jumpers 11)	Reversing Power Wiring Kit 11)	Contactor Size 12)	O/L Relay: Direct mount Trip Class 10, 20	O/L Relay: Direct mount Trip Class 10, 15, 20, 30	O/L Relay: Pass through Trip Class 10, 20	O/L Relay: Pass through Trip Class 10, 15, 20, 30	O/L Relay: Direct mount Trip Class 5...30			Busbar adapter	SCCR 480Vac [A]	SCCR 600Vac [A]	Max. current rated Fuse	Max. current rated Breaker
140MT-D9N-A63	0.63	140MT-D-PNC23	105-PW23	100-C23	1)	2)	-	-	7)	9)	10)	13)	65,000	30,000	450	450
140MT-D9N-B10	1.0						5)	6)					65,000	30,000	450	450
140MT-D9N-B16	1.6												65,000	30,000	450	450
140MT-D9N-B25	2.5												65,000	30,000	450	450
140MT-D9N-B40	4.0	140MT-D-PNC37	105-PW37	100-C30	3)	4)							65,000	30,000	450	450
140MT-D9N-B63	6.3												65,000	30,000	450	450
140MT-D9N-C10	10												65,000	30,000	450	450
140MT-D9N-C16	16												65,000	30,000	450	450
140MT-D9N-C20	20												65,000	10,000	450	450
140MT-D9N-C25	25												50,000	10,000	450	450
140MT-D9N-C29	29												50,000	10,000	450	450
140MT-D9N-C32	32								8)				30,000	10,000	450	450
140MT-D9N-C32	32			100-C37									30,000	10,000	450	450

1) 193-1EEAB, 193-1EEBB, 193-1EECB, 193-1EEDB, 193-1EEEB
2) 193-1EFAB, 193-1EFBB, 193-1EFCB, 193-1EFDB, 193-1EFEB
3) 193-1EEED, 193-1EEFD
4) 193-1EFED, 193-1EFFD
5) 193-1EECP, 193-1EEDP, 193-1EEEP, 193-1EEFP
6) 193-1EFCP, 193-1EFDP, 193-1EFEP, 193-1EFFP
7) 193-ESM-*-30A-C23
8) 193-ESM-*-30A-C55, 193-ESM-*-60A-C55
9) 193-ESM-*-30A-T, 193-ESM-*-60A-T: DIN Rail / Panel mount Power terminals
10) 193-ESM-*-30A-P, 193-ESM-*-60A-P: DIN Rail/ Panel mount Pass through
11) May or may not be provided
12) Similar for other contactor configurations 100-C, 104-C, 100S-C, 104S-C
13) It can be used an additional Bus Bar Adapter in according of table "Bus Bar Adapter for "A-B" or "Allen-Bradley" (the lower max. SCCR from both tables in according to the electrical rating applies).

190/191: 140MT Combination Motor Controller as Type E combination with 100-C contactor

MPCB	Motor Current Adjust range [A]	Connection Module or wire jumpers 11)	Reversing Power Wiring Kit 11)	Contactor Size 12)	O/L Relay							Busbar adapter	SCCR			
					Direct mount Trip Class		Pass through Trip Class		Direct mount Trip Class				480Vac	600Vac	Max. current rated	
					10, 20	10, 15, 20, 30	10, 20	10, 15, 20, 30	5...30				[A]	[A]	Fuse	Breaker
140MT-D9N-A63	0.63	140MT-D-PNC23	105-PW23	100-C23	1)	2)	-	-	7)	9)	10)	13)	65,000	30,000	450	450
140MT-D9N-B10	1.0						5)	6)					65,000	30,000	450	450
140MT-D9N-B16	1.6												65,000	30,000	450	450
140MT-D9N-B25	2.5												65,000	30,000	450	450
140MT-D9N-B40	4.0	140MT-D-PNC37	105-PW37	100-C30	-	-			8)				65,000	30,000	450	450
140MT-D9N-B63	6.3				3)	4)							65,000	30,000	450	450
140MT-D9N-C10	10												65,000	30,000	450	450
140MT-D9N-C16	16												65,000	30,000	450	450

1) 193-1EEAB, 193-1EEBB, 193-1EECB, 193-1EEDB, 193-1EEEB
2) 193-1EFAB, 193-1EFBB, 193-1EFCB, 193-1EFDB, 193-1EFEB
3) 193-1EEED, 193-1EEFD
4) 193-1EFED, 193-1EFFD
5) 193-1EECP, 193-1EEDP, 193-1EEEP, 193-1EEFP
6) 193-1EFCP, 193-1EFDP, 193-1EFEP, 193-1EFFP
7) 193-ESM-*-30A-C23
8) 193-ESM-*-30A-C55, 193-ESM-*-60A-C55
9) 193-ESM-*-30A-T, 193-ESM-*-60A-T: DIN Rail / Panel mount Power terminals
10) 193-ESM-*-30A-P, 193-ESM-*-60A-P: DIN Rail/ Panel mount Pass through
11) May or may not be provided
12) Similar for other contactor configurations 100-C, 104-C, 100S-C, 104S-C
13) It can be used an additional Bus Bar Adapter in according of table "Bus Bar Adapter for "A-B" or "Allen-Bradley" (the lower max. SCCR from both tables in according to the electrical rating applies).

190/191: 3-Component starter, 100-E contactor suitable for Group Installation on load side of 140MT Manual Motor Controller, Level of S.C. Coordination Type 1

MPCB	Motor Current Adjust range [A]	Connection Module or wire jumpers 9)	Reversing Power Wiring Kit 9)	Min. Contactor Size 10)	O/L Relay				Busbar adapter	SCCR			
					Direct mount Trip Class		Pass mount Trip Class			480Vac	600Vac	Max. current rated	
					10, 20	10, 15, 20, 30	10, 20	10, 15, 20, 30		[A]	[A]	Fuse	Breaker
140MT-D9N-A63	0.63	-	105-PW16	100-E09	1)	2)	-	-	11)	65,000	30,000	450	450
140MT-D9N-B10	1.0						7)	8)		65,000	30,000	450	450
140MT-D9N-B16	1.6									65,000	30,000	450	450
140MT-D9N-B25	2.5									65,000	30,000	450	450
140MT-D9N-B40	4.0									65,000	30,000	450	450
140MT-D9N-B63	6.3									65,000	30,000	450	450
140MT-D9N-C10	10									65,000	30,000	450	450
140MT-D9N-C16	16			100-E12						65,000	30,000	450	450
140MT-D9N-C16	16			100-E16						65,000	30,000	450	450
140MT-D9N-C20	20	-	105-PW38	100-E26	3)	4)				65,000	30,000	450	450
140MT-D9N-C25	25									50,000	30,000	450	450
140MT-D9N-C29	29			100-E30						50,000	30,000	450	450
140MT-D9N-C32	32									30,000	30,000	450	450
140MT-D9N-C32	32			100-E38						30,000	30,000	450	450
140MT-D9N-C32	32	-	105-PW65	100-E40	5)	6)				30,000	30,000	450	450

1) 193-1EEAF, 193-1EEBF, 193-1EECF, 193-1EEDF, 193-1EEEF
2) 193-1EFAF, 193-1EFBF, 193-1EFCF, 193-1EFDF, 193-1EFEF
3) 193-1EEEG, 193-1EEFG
4) 193-1EFEG, 193-1EFFG
5) 193-1EEQH
6) 193-1EFQH
7) 193-ESM-*-30A-C23
8) 193-1EFCP, 193-1EFDP, 193-1EFEP, 193-1EFFP
9) May or may not be provided
10) Similar for other configurations 104-E, 100S-E and 104S-E
11) It can be used an additional Bus Bar Adapter in according of table "Bus Bar Adapter for "A-B" or "Allen-Bradley" (the lower max. SCCR from both tables in according to the electrical rating applies).

190/191: 3-Component starter, 100-E contactor suitable for Group Installation on load side of 140MT Manual Motor Controller, Level of S.C. Coordination Type 2

MPCB	Motor Current Adjust range [A]	Connection Module or wire jumpers 11)	Reversing Power Wiring Kit 11)	Min. Contactor Size 12)	O/L Relay				Busbar adapter	SCCR			
					Direct mount Trip Class		Pass mount Trip Class			480Vac	600Vac	Max. current rated	
					10, 20	10, 15, 20, 30	10, 20	10, 15, 20, 30		[A]	[A]	Fuse	Breaker
140MT-D9N-A63	0.63	-	105-PW16	100-E12	1)	2)	-	-	13)	65,000	30,000	450	450
140MT-D9N-B10	1.0		105-PW38	100-E26	3)	4)	7)	8)		65,000	30,000	450	450
140MT-D9N-B16	1.6									65,000	30,000	450	450
140MT-D9N-B25	2.5									65,000	30,000	450	450
140MT-D9N-B40	4.0			100-E30	5)	6)				65,000	30,000	450	450
140MT-D9N-B63	6.3									65,000	30,000	450	450
140MT-D9N-C10	10									65,000	30,000	450	450
140MT-D9N-C16	16									65,000	30,000	450	450
140MT-D9N-C16	16									65,000	30,000	450	450
140MT-D9N-C20	20									65,000	30,000	450	450
140MT-D9N-C25	25									50,000	30,000	450	450
140MT-D9N-C29	29									50,000	30,000	450	450
140MT-D9N-C32	32									30,000	30,000	450	450
140MT-D9N-C32	32			100-E38						30,000	30,000	450	450
140MT-D9N-C32	32		105-PW65	100-E40	7)	8)				30,000	30,000	450	450

1) 193-1EEAF, 193-1EEBF
2) 193-1EFAF, 193-1EFBF
3) 193-1EECG
4) 193-1EFCG
5) 193-1EEEG, 193-1EEFG
6) 193-1EFEG, 193-1EFFG
7) 193-1EEQH
8) 193-1EFQH
9) May or may not be provided
10) 193-1EFCP, 193-1EFDP, 193-1EFEP, 193-1EFFP
11) May or may not be provided
12) Similar for other configurations 104-E, 100S-E and 104S-E
13) It can be used an additional Bus Bar Adapter in according of table "Bus Bar Adapter for "A-B" or "Allen-Bradley" (the lower max. SCCR from both tables in according to the electrical rating applies).

190/191: 300-*O*930, 305-*O*930 contactor suitable for Group Installation on load side of 140MT Manual Motor Controller, Short-circuit coordination Type 1 only

MPCB	Motor Current Adjust range [A]	**Connection Module or wire jumpers 1)**	Reversing Power Wiring Kit 1)	Busbar adapter	Min. Contractor Size 2)	SCCR			
						480Vac	600Vac	Max. current rated	
						[A]	[A]	Fuse	Breaker
140MT-C3E-A16	0.10-0.16	140MT-C-PEC23 140MT-C-PNC23	105-PW23	2)	300-AO*930	65,000	50,000	450	450
140MT-C3E-A25	0.16-0.25					65,000	50,000	450	450
140MT-C3E-A40	0.25-0.40					65,000	50,000	450	450
140MT-C3E-A63	0.40-0.63					65,000	50,000	450	450
140MT-C3E-B10	0.63-1.0					65,000	50,000	450	450
140MT-C3E-B16	1.0-1.6					65,000	50,000	450	450
140MT-C3E-B25	1.6-2.5					65,000	30,000	450	450
140MT-C3E-B40	2.5-4.0					65,000	30,000	450	450
140MT-C3E-B63	4.0-6.3					65,000	30,000	450	450
140MT-C3E-C10	6.3-10					65,000	30,000	450	450
140MT-C3E-C16	10-16					30,000	30,000	450	450
140MT-C3E-C20	14.5-20					30,000	30,000	450	450
140MT-C3E-C25	18-25	-	105-PW37		300-BO*930	30,000	18,000	450	450
140MT-C3E-C29	23-29					30,000	10,000	450	450
140MT-C3E-C32	26.5-32		105-PW43		300-CO*930	30,000	10,000	450	450
140MT-D9E-A63	0.40-0.63	140MT-D-PEC23 140MT-D-PNC23	105-PW23	2)	300-AO*930	65,000	50,000	450	450
140MT-D9E-B10	0.63-1.0					65,000	50,000	450	450
140MT-D9E-B16	1.0-1.6					65,000	50,000	450	450
140MT-D9E-B25	1.6-2.5					65,000	30,000	450	450
140MT-D9E-B40	2.5-4.0					65,000	30,000	450	450
140MT-D9E-B63	4.0-6.3					65,000	30,000	450	450
140MT-D9E-C10	6.3-10					65,000	30,000	450	450
140MT-D9E-C16	10-16					65,000	30,000	450	450
140MT-D9E-C20	14.5-20	140MT-D-PEC37 140MT-D-PNC37	105-PW37		300-BO*930	50,000	30,000	450	450
140MT-D9E-C25	18-25					50,000	30,000	450	450
140MT-D9E-C29	23-29					50,000	30,000	450	450
140MT-D9E-C32	26.5-32	-	105-PW43		300-CO*930	30,000	30,000	450	450
140MT-D9E-C36	30-36					30,000	30,000	450	450
140MT-D9E-C40	34-40					30,000	30,000	450	450
140MT-D9T-A63	0.40-0.63	140MT-D-PEC23 140MT-D-PNC23	105-PW23	2)	300-AO*930	65,000	50,000	450	450
140MT-D9T-B10	0.63-1.0					65,000	50,000	450	450
140MT-D9T-B16	1.0-1.6					65,000	30,000	450	450
140MT-D9T-B25	1.6-2.5					65,000	30,000	450	450
140MT-D9T-B25	1.6-2.5					65,000	30,000	450	450
140MT-D9T-B40	2.5-4.0					65,000	30,000	450	450
140MT-D9T-B63	4.0-6.3					65,000	30,000	450	450
140MT-D9T-C10	6.3-10					65,000	30,000	450	450
140MT-D9T-C16	10-16	140MT-D-PEC37 140MT-D-PNC37	105-PW37		300-BO*930	65,000	30,000	450	450
140MT-D9T-C20	14.5-20					50,000	30,000	450	450
140MT-D9T-C25	18-25					50,000	30,000	450	450

1) May or may not be provided
2) It can be used an additional Bus Bar Adapter in according of table "Bus Bar Adapter for "A-B" or "Allen-Bradley" (the lower max. SCCR from both tables in according to the electrical rating applies)
3) similar for other configurations 305-*O*930

190/191: 300-*O*930, 305-*O*930 contactor suitable for Group Installation/Disconnect Means on load side of 140MT Manual Motor Controller, Short-circuit coordination Type 1 only

MPCB	Motor Current Adjust range [A]	Connection Module or wire jumpers 1)	Reversing Power Wiring Kit 1)	Busbar adapter	Min. Contractor Size 2)	SCCR			
						480Vac	600Vac	Max. current rated	
						[A]	[A]	Fuse	Breaker
140MT-C3E-A16	0.10-0.16	140MT-C-PEC23 140MT-C-PNC23	105-PW23	2)	300-AO*930	65,000	50,000	450	450
140MT-C3E-A25	0.16-0.25					65,000	50,000	450	450
140MT-C3E-A40	0.25-0.40					65,000	50,000	450	450
140MT-C3E-A63	0.40-0.63					65,000	50,000	450	450
140MT-C3E-B10	0.63-1.0					65,000	50,000	450	450
140MT-C3E-B16	1.0-1.6					65,000	50,000	450	450
140MT-C3E-B25	1.6-2.5					65,000	30,000	450	450
140MT-C3E-B40	2.5-4.0					65,000	30,000	450	450
140MT-C3E-B63	4.0-6.3					65,000	30,000	450	450
140MT-C3E-C10	6.3-10					65,000	30,000	450	450
140MT-C3E-C16	10-16					30,000	30,000	450	450
140MT-C3E-C20	14.5-20					30,000	10,000	450	450
140MT-C3E-C25	18-25	-	105-PW37		300-BO*930	30,000	5,000	450	450
140MT-C3E-C29	23-29					10,000	-	450	450
140MT-C3E-C32	26.5-32		105-PW43		300-CO*930	10,000	-	450	450
140MT-D9E-A63	0.40-0.63	140MT-D-PEC23 140MT-D-PNC23	105-PW23	2)	300-AO*930	65,000	50,000	450	450
140MT-D9E-B10	0.63-1.0					65,000	50,000	450	450
140MT-D9E-B16	1.0-1.6					65,000	50,000	450	450
140MT-D9E-B25	1.6-2.5					65,000	30,000	450	450
140MT-D9E-B40	2.5-4.0					65,000	30,000	450	450
140MT-D9E-B63	4.0-6.3					65,000	30,000	450	450
140MT-D9E-C10	6.3-10					65,000	30,000	450	450
140MT-D9E-C16	10-16					65,000	30,000	450	450
140MT-D9E-C20	14.5-20	140MT-D-PEC37 140MT-D-PNC37	105-PW37		300-BO*930	50,000	30,000	450	450
140MT-D9E-C25	18-25					50,000	30,000	450	450
140MT-D9E-C29	23-29					50,000	30,000	450	450
140MT-D9E-C32	26.5-32	-	105-PW43		300-CO*930	30,000	18,000	450	450
140MT-D9E-C36	30-36					30,000	18,000	450	450
140MT-D9E-C40	34-40					30,000	18,000	450	450
140MT-D9T-A63	0.40-0.63	140MT-D-PEC23 140MT-D-PNC23	105-PW23	2)	300-AO*930	65,000	50,000	450	450
140MT-D9T-B10	0.63-1.0					65,000	50,000	450	450
140MT-D9T-B16	1.0-1.6					65,000	30,000	450	450
140MT-D9T-B25	1.6-2.5					65,000	30,000	450	450
140MT-D9T-B25	1.6-2.5					65,000	30,000	450	450
140MT-D9T-B40	2.5-4.0					65,000	30,000	450	450
140MT-D9T-B63	4.0-6.3					65,000	30,000	450	450
140MT-D9T-C10	6.3-10					65,000	30,000	450	450
140MT-D9T-C16	10-16	140MT-D-PEC37 140MT-D-PNC37	105-PW37		300-BO*930	50,000	30,000	450	450
140MT-D9T-C20	14.5-20					50,000	30,000	450	450
140MT-D9T-C25	18-25					50,000	30,000	450	450

1) May or may not be provided
2) It can be used an additional Bus Bar Adapter in according of table "Bus Bar Adapter for "A-B" or "Allen-Bradley" (the lower max. SCCR from both tables in according to the electrical rating applies)
3) similar for other configurations 305-*O*930

190/191: 140MT Combination Motor Controller as Type F combination with 300-*O*930, 305-*O*930 contactor, Short-circuit coordination Type 1 only

MPCB	Motor Current Adjust range [A]	Connection Module or wire jumpers 1)	Reversing Power Wiring Kit 1)	Busbar adapter	Min. Contractor Size 2)	SCCR			
						480Vac	600Vac	Max. current rated	
						[A]	[A]	Fuse	Breaker
140MT-C3E-A16	0.10-0.16	140MT-C-PEC23 140MT-C-PNC23	105-PW23	2)	300-AO*930	65,000	50,000	450	450
140MT-C3E-A25	0.16-0.25					65,000	50,000	450	450
140MT-C3E-A40	0.25-0.40					65,000	50,000	450	450
140MT-C3E-A63	0.40-0.63					65,000	50,000	450	450
140MT-C3E-B10	0.63-1.0					65,000	50,000	450	450
140MT-C3E-B16	1.0-1.6					65,000	50,000	450	450
140MT-C3E-B25	1.6-2.5					65,000	30,000	450	450
140MT-C3E-B40	2.5-4.0					65,000	30,000	450	450
140MT-C3E-B63	4.0-6.3					65,000	-	450	450
140MT-C3E-C10	6.3-10					65,000	-	450	450
140MT-C3E-C16	10-16					30,000	-	450	450
140MT-D9E-A63	0.40-0.63	140MT-D-PEC23 140MT-D-PNC23	105-PW23	2)	300-AO*930	65,000	50,000	450	450
140MT-D9E-B10	0.63-1.0					65,000	50,000	450	450
140MT-D9E-B16	1.0-1.6					65,000	50,000	450	450
140MT-D9E-B25	1.6-2.5					65,000	30,000	450	450
140MT-D9E-B40	2.5-4.0					65,000	30,000	450	450
140MT-D9E-B63	4.0-6.3					65,000	30,000	450	450
140MT-D9E-C10	6.3-10					65,000	30,000	450	450
140MT-D9E-C16	10-16					65,000	30,000	450	450
140MT-D9E-C20	14.5-20	140MT-D-PEC37 140MT-D-PNC37	105-PW37		300-BO*930	50,000	-	450	450
140MT-D9E-C25	18-25					50,000	-	450	450
140MT-D9E-C29	23-29					50,000	-	450	450
140MT-D9E-C32	26.5-32	-	105-PW43		300-CO*930	30,000	-	450	450
140MT-D9E-C36	30-36					30,000	-	450	450
140MT-D9E-C40	34-40					30,000	-	450	450
140MT-D9T-A63	0.40-0.63	140MT-D-PEC23 140MT-D-PNC23	105-PW23	2)	300-AO*930	65,000	50,000	450	450
140MT-D9T-B10	0.63-1.0					65,000	50,000	450	450
140MT-D9T-B16	1.0-1.6					65,000	30,000	450	450
140MT-D9T-B25	1.6-2.5					65,000	30,000	450	450
140MT-D9T-B25	1.6-2.5					65,000	30,000	450	450
140MT-D9T-B40	2.5-4.0					65,000	30,000	450	450
140MT-D9T-B63	4.0-6.3					65,000	30,000	450	450
140MT-D9T-C10	6.3-10					65,000	30,000	450	450
140MT-D9T-C16	10-16	140MT-D-PEC37 140MT-D-PNC37	105-PW37		300-BO*930	50,000	-	450	450
140MT-D9T-C20	14.5-20					50,000	-	450	450
140MT-D9T-C25	18-25					50,000	-	450	450

1) May or may not be provided
2) It can be used an additional Bus Bar Adapter in according of table "Bus Bar Adapter for "A-B" or "Allen-Bradley" (the lower max. SCCR from both tables in according to the electrical rating applies)
3) similar for other configurations 305-*O*930

190/191: 300-*O*930, 305-*O*930 contactor suitable for Group Installation on load side of 140MT Manual Motor Controller
Short-circuit coordination Type 2

MPCB	FLA range [A]	Connection Module or wire jumpers 1)	Reversing Power Wiring Kit 1)	Busbar adapter	Contractor Size 2)	SCCR 480Vac [A]	SCCR 600Vac [A]	SCCR Max. current rated Fuse	SCCR Max. current rated Breaker
140MT-C3E-A16	0.10-0.16	140MT-C-PEC23 140MT-C-PNC23	105-PW23	2)	300-AO*930	65,000	50,000	450	450
140MT-C3E-A25	0.16-0.25					65,000	50,000	450	450
140MT-C3E-A40	0.25-0.40					65,000	50,000	450	450
140MT-C3E-A63	0.40-0.63					65,000	50,000	450	450
140MT-C3E-B10	0.63-1.0					65,000	50,000	450	450
140MT-C3E-B16	1.0-1.6					65,000	50,000	450	450
140MT-C3E-B25	1.6-2.5	140MT-C-PEC37 140MT-C-PNC37	105-PW37		300-BO*930	65,000	30,000	450	450
140MT-C3E-B40	2.5-4.0					65,000	30,000	450	450
140MT-C3E-B63	4.0-6.3					65,000	5,000	450	450
140MT-C3E-C10	6.3-10					65,000	5,000	450	450
140MT-C3E-C16	10-16					30,000	5,000	450	450
140MT-C3E-C20	14.5-20					10,000	5,000	450	450
140MT-C3E-C20	14.5-20	-	105-PW43		300-CO*930	10,000	5,000	450	450
140MT-C3E-C25	18-25	140MT-C-PEC37 140MT-C-PNC37	105-PW37		300-BO*930	10,000	5,000	450	450
140MT-C3E-C25	18-25	-	105-PW43		300-CO*930	10,000	5,000	450	450
140MT-C3E-C29	23-29	140MT-C-PEC37 140MT-C-PNC37	105-PW37		300-BO*930	10,000	5,000	450	450
140MT-C3E-C29	23-29	-	105-PW43		300-CO*930	10,000	5,000	450	450
140MT-C3E-C32	26.5-32					10,000	5,000	450	450
140MT-D9E-A63	0.40-0.63	140MT-D-PEC23 140MT-D-PNC23	105-PW23	2)	300-AO*930	65,000	50,000	450	450
140MT-D9E-B10	0.63-1.0					65,000	50,000	450	450
140MT-D9E-B16	1.0-1.6					65,000	50,000	450	450
140MT-D9E-B25	1.6-2.5	140MT-D-PEC37 140MT-D-PNC37	105-PW37		300-BO*930	65,000	30,000	450	450
140MT-D9E-B40	2.5-4.0					65,000	30,000	450	450
140MT-D9E-B63	4.0-6.3					65,000	30,000	450	450
140MT-D9E-C10	6.3-10					65,000	30,000	450	450
140MT-D9E-C16	10-16					65,000	30,000	450	450
140MT-D9E-C20	14.5-20					65,000	10,000	450	450
140MT-D9E-C25	18-25					50,000	10,000	450	450
140MT-D9E-C29	23-29					50,000	10,000	450	450
140MT-D9E-C32	26.5-32	-	105-PW43		300-CO*930	30,000	10,000	450	450
140MT-D9E-C36	30-36					30,000	10,000	450	450
140MT-D9E-C40	34-40					30,000	10,000	450	450
140MT-D9T-A63	0.40-0.63	140MT-D-PEC23 140MT-D-PNC23	105-PW23	2)	300-AO*930	65,000	50,000	450	450
140MT-D9T-B10	0.63-1.0					65,000	50,000	450	450
140MT-D9T-B16	1.0-1.6	140MT-D-PEC37 140MT-D-PNC37	105-PW37		300-BO*930	65,000	30,000	450	450
140MT-D9T-B25	1.6-2.5					65,000	30,000	450	450
140MT-D9T-B25	1.6-2.5					65,000	30,000	450	450
140MT-D9T-B40	2.5-4.0					65,000	30,000	450	450
140MT-D9T-B63	4.0-6.3					65,000	30,000	450	450
140MT-D9T-C10	6.3-10					65,000	30,000	450	450
140MT-D9T-C16	10-16					65,000	10,000	450	450
140MT-D9T-C20	14.5-20					50,000	10,000	450	450
140MT-D9T-C25	18-25					50,000	10,000	450	450

1) May or may not be provided
2) It can be used an additional Bus Bar Adapter in according of table "Bus Bar Adapter for "A-B" or "Allen-Bradley" (the lower max. SCCR from both tables in according to the electrical rating applies)
3) similar for other configurations 305-*O*930
- Ratings are also valid for Reversing Starters

190/191: 300-*O*930, 305-*O*930 contactor suitable for Group Installation/Disconnect Means on load side of 140MT Manual Motor Controller
Short-circuit coordination Type 2

MPCB	FLA range [A]	Connection Module or wire jumpers 1)	Reversing Power Wiring Kit 1)	Busbar adapter	Contractor Size 2)	SCCR			
						480Vac	600Vac	Max. current rated	
						[A]	[A]	Fuse	Breaker
140MT-C3E-A16	0.10-0.16	140MT-C-PEC23 140MT-C-PNC23	105-PW23	2)	300-AO*930	65,000	50,000	450	450
140MT-C3E-A25	0.16-0.25					65,000	50,000	450	450
140MT-C3E-A40	0.25-0.40					65,000	50,000	450	450
140MT-C3E-A63	0.40-0.63					65,000	50,000	450	450
140MT-C3E-B10	0.63-1.0					65,000	50,000	450	450
140MT-C3E-B16	1.0-1.6					65,000	50,000	450	450
140MT-C3E-B25	1.6-2.5	140MT-C-PEC37 140MT-C-PNC37	105-PW37		300-BO*930	65,000	30,000	450	450
140MT-C3E-B40	2.5-4.0					65,000	30,000	450	450
140MT-C3E-B63	4.0-6.3					65,000	5,000	450	450
140MT-C3E-C10	6.3-10					65,000	5,000	450	450
140MT-C3E-C16	10-16					30,000	5,000	450	450
140MT-C3E-C20	14.5-20					10,000	5,000	450	450
140MT-C3E-C20	14.5-20	-	105-PW43		300-CO*930	10,000	-	450	450
140MT-C3E-C25	18-25	140MT-C-PEC37 140MT-C-PNC37	105-PW37		300-BO*930	10,000	5,000	450	450
140MT-C3E-C25	18-25	-	105-PW43		300-CO*930	10,000	-	450	450
140MT-C3E-C29	23-29	140MT-C-PEC37 140MT-C-PNC37	105-PW37		300-BO*930	10,000	-	450	450
140MT-C3E-C29	23-29	-	105-PW43		300-CO*930	10,000	-	450	450
140MT-C3E-C32	26.5-32					10,000	-	450	450
140MT-D9E-A63	0.40-0.63	140MT-D-PEC23 140MT-D-PNC23	105-PW23		300-AO*930	65,000	50,000	450	450
140MT-D9E-B10	0.63-1.0					65,000	50,000	450	450
140MT-D9E-B16	1.0-1.6					65,000	50,000	450	450
140MT-D9E-B25	1.6-2.5	140MT-D-PEC37 140MT-D-PNC37	105-PW37		300-BO*930	65,000	30,000	450	450
140MT-D9E-B40	2.5-4.0					65,000	30,000	450	450
140MT-D9E-B63	4.0-6.3					65,000	30,000	450	450
140MT-D9E-C10	6.3-10					65,000	30,000	450	450
140MT-D9E-C16	10-16					65,000	30,000	450	450
140MT-D9E-C20	14.5-20					65,000	10,000	450	450
140MT-D9E-C25	18-25					50,000	10,000	450	450
140MT-D9E-C29	23-29					50,000	10,000	450	450
140MT-D9E-C32	26.5-32	-	105-PW43		300-CO*930	30,000	10,000	450	450
140MT-D9E-C36	30-36					30,000	10,000	450	450
140MT-D9E-C40	34-40					30,000	10,000	450	450
140MT-D9T-A63	0.40-0.63	140MT-D-PEC23 140MT-D-PNC23	105-PW23		300-AO*930	65,000	50,000	450	450
140MT-D9T-B10	0.63-1.0					65,000	50,000	450	450
140MT-D9T-B16	1.0-1.6	140MT-D-PEC37 140MT-D-PNC37	105-PW37		300-BO*930	65,000	30,000	450	450
140MT-D9T-B25	1.6-2.5					65,000	30,000	450	450
140MT-D9T-B25	1.6-2.5					65,000	30,000	450	450
140MT-D9T-B40	2.5-4.0					65,000	30,000	450	450
140MT-D9T-B63	4.0-6.3					65,000	30,000	450	450
140MT-D9T-C10	6.3-10					65,000	30,000	450	450
140MT-D9T-C16	10-16					65,000	10,000	450	450
140MT-D9T-C20	14.5-20					50,000	10,000	450	450
140MT-D9T-C25	18-25					50,000	10,000	450	450

1) May or may not be provided
2) It can be used an additional Bus Bar Adapter in according of table "Bus Bar Adapter for "A-B" or "Allen-Bradley" (the lower max. SCCR from both tables in according to the electrical rating applies)
3) similar for other configurations 305-*O*930
- Ratings are also valid for Reversing Starters

190/191: 140MT Combination Motor Controller as Type F combination with 300-*O*930, 305-*O*930 contactor
Short-circuit coordination Type 2

MPCB	FLA range [A]	Connection Module or wire jumpers 1)	Reversing Power Wiring Kit 1)	Busbar adapter	Contractor Size 2)	SCCR 480Vac [A]	SCCR 600Vac [A]	SCCR Max. current rated Fuse	SCCR Max. current rated Breaker
140MT-C3E-A16	0.10-0.16	140MT-C-PEC23 140MT-C-PNC23	105-PW23	2)	300-AO*930	65,000	50,000	450	450
140MT-C3E-A25	0.16-0.25					65,000	50,000	450	450
140MT-C3E-A40	0.25-0.40					65,000	50,000	450	450
140MT-C3E-A63	0.40-0.63					65,000	50,000	450	450
140MT-C3E-B10	0.63-1.0					65,000	50,000	450	450
140MT-C3E-B16	1.0-1.6					65,000	50,000	450	450
140MT-C3E-B25	1.6-2.5	-	105-PW37		300-BO*930	65,000	30,000	450	450
140MT-C3E-B40	2.5-4.0					65,000	30,000	450	450
140MT-C3E-B63	4.0-6.3					65,000	-	450	450
140MT-C3E-C10	6.3-10					65,000	-	450	450
140MT-C3E-C16	10-16					30,000	-	450	450
140MT-D9E-A63	0.40-0.63	140MT-D-PEC23 140MT-D-PNC23	105-PW23	2)	300-AO*930	65,000	50,000	450	450
140MT-D9E-B10	0.63-1.0					65,000	50,000	450	450
140MT-D9E-B16	1.0-1.6					65,000	50,000	450	450
140MT-D9E-B25	1.6-2.5	140MT-D-PEC37 140MT-D-PNC37	105-PW37		300-BO*930	65,000	30,000	450	450
140MT-D9E-B40	2.5-4.0					65,000	30,000	450	450
140MT-D9E-B63	4.0-6.3					65,000	30,000	450	450
140MT-D9E-C10	6.3-10					65,000	30,000	450	450
140MT-D9E-C16	10-16					65,000	30,000	450	450
140MT-D9E-C20	14.5-20					65,000	-	450	450
140MT-D9E-C25	18-25					50,000	-	450	450
140MT-D9E-C29	23-29					50,000	-	450	450
140MT-D9E-C32	26.5-32	-	105-PW43		300-CO*930	30,000	-	450	450
140MT-D9E-C36	30-36					30,000	-	450	450
140MT-D9E-C40	34-40					30,000	-	450	450
140MT-D9T-A63	0.40-0.63	140MT-D-PEC23 140MT-D-PNC23	105-PW23	2)	300-AO*930	65,000	50,000	450	450
140MT-D9T-B10	0.63-1.0					65,000	50,000	450	450
140MT-D9T-B16	1.0-1.6	140MT-D-PEC37 140MT-D-PNC37	105-PW37		300-BO*930	65,000	30,000	450	450
140MT-D9T-B25	1.6-2.5					65,000	30,000	450	450
140MT-D9T-B25	1.6-2.5					65,000	30,000	450	450
140MT-D9T-B40	2.5-4.0					65,000	30,000	450	450
140MT-D9T-B63	4.0-6.3					65,000	30,000	450	450
140MT-D9T-C10	6.3-10					65,000	30,000	450	450
140MT-D9T-C16	10-16					65,000	-	450	450
140MT-D9T-C20	14.5-20					50,000	-	450	450
140MT-D9T-C25	18-25					50,000	-	450	450

1) May or may not be provided
2) It can be used an additional Bus Bar Adapter in according of table "Bus Bar Adapter for "A-B" or "Allen-Bradley" (the lower max. SCCR from both tables in according to the electrical rating applies)
3) similar for other configurations 305-*O*930
- Ratings are also valid for Reversing Starters

190/191: 3-Component starter, 300-*O*930, 305-*O*930 contactor suitable for Group Installation on load side of 140MT Manual Motor Controller, Level of S.C. Coordination Type 1

MPCB	Motor Current Adjust range [A]	Connection Module or wire jumpers 12)	Reversing Power Wiring Kit 12)	Min. Contactor Size 13)	O/L Relay: Direct mount Trip Class 10, 20	O/L Relay: Direct mount Trip Class 10, 15, 20, 30	O/L Relay: Pass mount Trip Class 10, 20	O/L Relay: Pass mount Trip Class 10, 15, 20, 30	O/L Relay: Direct mount Trip Class 5...30	Busbar adapter	SCCR 480Vac [A]	SCCR 600Vac [A]	SCCR Max. current rated Fuse	SCCR Max. current rated Breaker
140MT-D9N-A63	0.63	140MT-D-PNC23	105-PW23	300-AO*930	1)	2)	-	-	7)	11)	65,000	30,000	450	450
140MT-D9N-B10	1.0						5)	6)			65,000	30,000	450	450
140MT-D9N-B16	1.6										65,000	30,000	450	450
140MT-D9N-B25	2.5										65,000	30,000	450	450
140MT-D9N-B40	4.0										65,000	30,000	450	450
140MT-D9N-B63	6.3										65,000	30,000	450	450
140MT-D9N-C10	10								9)		65,000	30,000	450	450
140MT-D9N-C16	16								10)		65,000	30,000	450	450
140MT-D9N-C20	20	140MT-D-PNC37	105-PW37	300-BO*930	3)	4)			8)		65,000	30,000	450	450
140MT-D9N-C25	25										50,000	30,000	450	450
140MT-D9N-C29	29										50,000	30,000	450	450
140MT-D9N-C32	32										30,000	30,000	450	450

1) 193-1EEAB, 193-1EEBB, 193-1EECB, 193-1EEDB, 193-1EEEB
2) 193-1EFAB, 193-1EFBB, 193-1EFCB, 193-1EFDB, 193-1EFEB
3) 193-1EEED, 193-1EEFD
4) 193-1EFED, 193-1EFFD
5) 193-1EECP, 193-1EEDP, 193-1EEEP, 193-1EEFP
6) 193-1EFCP, 193-1EFDP, 193-1EFEP, 193-1EFFP
7) 193-ESM-*-30A-C23
8) 193-ESM-*-30A-C55, 193-ESM-*-60A-C55
9) 193-ESM-*-30A-T, 193-ESM-*-60A-T: DIN Rail / Panel mount Power terminals
10) 193-ESM-*-30A-P, 193-ESM-*-60A-P: DIN Rail/ Panel mount Pass through
11) It can be used an additional Bus Bar Adapter in according of table "Bus Bar Adapter for "A-B" or "Allen-Bradley" (the lower max. SCCR from both tables in according to the electrical rating applies)
12) May or may not be provided
13) similar for other configurations 305-*O*930

190/191: 3-Component starter, 300-*O*930, 305-*O*930 contactor suitable for Group Installation on load side of 140MT Manual Motor Controller, Level of S.C. Coordination Type 2

<table>
<tr><th rowspan="4">MPCB</th><th rowspan="4">Motor Current Adjust range [A]</th><th rowspan="4">Connection Module or wire jumpers 12)</th><th rowspan="4">Reversing Power Wiring Kit 12)</th><th rowspan="4">Min. Contactor Size 13)</th><th colspan="6">O/L Relay</th><th rowspan="4">Busbar adapter</th><th colspan="4">SCCR</th></tr>
<tr><th colspan="2">Direct mount Trip Class</th><th colspan="2">Pass mount Trip Class</th><th colspan="2">Direct mount Trip Class</th><th rowspan="2">480Vac</th><th rowspan="2">600Vac</th><th colspan="2">Max. current rated</th></tr>
<tr><th>10, 20</th><th>10, 15, 20, 30</th><th>10, 20</th><th>10, 15, 20, 30</th><th colspan="2">5...30</th><th>[A]</th><th>[A]</th><th>Fuse</th><th>Breaker</th></tr>
<tr><td>140MT-D9N-A63</td><td>0.63</td><td rowspan="12">140MT-D-PNC37</td><td rowspan="12">105-PW37</td><td rowspan="12">300-BO*930</td><td rowspan="4">1)</td><td rowspan="4">2)</td><td>-</td><td>-</td><td rowspan="2">7)</td><td rowspan="12"></td><td rowspan="12">11)</td><td>65,000</td><td>30,000</td><td>450</td><td>450</td></tr>
<tr><td>140MT-D9N-B10</td><td>1.0</td><td rowspan="11">5)</td><td rowspan="11">6)</td><td>65,000</td><td>30,000</td><td>450</td><td>450</td></tr>
<tr><td>140MT-D9N-B16</td><td>1.6</td><td>65,000</td><td>30,000</td><td>450</td><td>450</td></tr>
<tr><td>140MT-D9N-B25</td><td>2.5</td><td>65,000</td><td>30,000</td><td>450</td><td>450</td></tr>
<tr><td>140MT-D9N-B40</td><td>4.0</td><td rowspan="8">3)</td><td rowspan="8">4)</td><td rowspan="8">8)</td><td rowspan="11">9)</td><td rowspan="11">10)</td><td>65,000</td><td>30,000</td><td>450</td><td>450</td></tr>
<tr><td>140MT-D9N-B63</td><td>6.3</td><td>65,000</td><td>30,000</td><td>450</td><td>450</td></tr>
<tr><td>140MT-D9N-C10</td><td>10</td><td>65,000</td><td>30,000</td><td>450</td><td>450</td></tr>
<tr><td>140MT-D9N-C16</td><td>16</td><td>65,000</td><td>30,000</td><td>450</td><td>450</td></tr>
<tr><td>140MT-D9N-C20</td><td>20</td><td>65,000</td><td>10,000</td><td>450</td><td>450</td></tr>
<tr><td>140MT-D9N-C25</td><td>25</td><td>50,000</td><td>10,000</td><td>450</td><td>450</td></tr>
<tr><td>140MT-D9N-C29</td><td>29</td><td>50,000</td><td>10,000</td><td>450</td><td>450</td></tr>
<tr><td>140MT-D9N-C32</td><td>32</td><td>30,000</td><td>10,000</td><td>450</td><td>450</td></tr>
</table>

1) 193-1EEAB, 193-1EEBB, 193-1EECB, 193-1EEDB, 193-1EEEB
2) 193-1EFAB, 193-1EFBB, 193-1EFCB, 193-1EFDB, 193-1EFEB
3) 193-1EEED, 193-1EEFD
4) 193-1EFED, 193-1EFFD
5) 193-1EECP, 193-1EEDP, 193-1EEEP, 193-1EEFP
6) 193-1EFCP, 193-1EFDP, 193-1EFEP, 193-1EFFP
7) 193-ESM-*-30A-C23
8) 193-ESM-*-30A-C55, 193-ESM-*-60A-C55
9) 193-ESM-*-30A-T, 193-ESM-*-60A-T: DIN Rail / Panel mount Power terminals
10) 193-ESM-*-30A-P, 193-ESM-*-60A-P: DIN Rail/ Panel mount Pass through
11) It can be used an additional Bus Bar Adapter in according of table "Bus Bar Adapter for "A-B" or "Allen-Bradley" (the lower max. SCCR from both tables in according to the electrical rating applies)
12) May or may not be provided
13) similar for other configurations 305-*O*930

190/191: 140MT Combination Motor Controller as Type E combination with 300-*O*930, 305-*O*930 contactor

<table>
<tr><th rowspan="4">MPCB</th><th rowspan="4">Motor Current Adjust range [A]</th><th rowspan="4">Connection Module or wire jumpers 8)</th><th rowspan="4">Reversing Power Wiring Kit 8)</th><th rowspan="4">Min. Contactor Size 9)</th><th colspan="6">O/L Relay</th><th rowspan="4">Busbar adapter</th><th colspan="4">SCCR</th></tr>
<tr><th colspan="2">Direct mount Trip Class</th><th colspan="2">Pass mount Trip Class</th><th colspan="2">Direct mount Trip Class</th><th rowspan="2">480Vac</th><th rowspan="2">600Vac</th><th colspan="2">Max. current rated</th></tr>
<tr><th>10, 20</th><th>10, 15, 20, 30</th><th>10, 20</th><th>10, 15, 20, 30</th><th colspan="2">5...30</th><th>[A]</th><th>[A]</th><th>Fuse</th><th>Breaker</th></tr>
<tr><td>140MT-D9N-A63</td><td>0.63</td><td rowspan="10">140MT-D-PNC37</td><td rowspan="10">105-PW37</td><td rowspan="10">300-BO*930</td><td rowspan="4">-</td><td rowspan="4">-</td><td>-</td><td>-</td><td rowspan="3"></td><td rowspan="3"></td><td rowspan="3"></td><td rowspan="10">10)</td><td>65,000</td><td>30,000</td><td>450</td><td>450</td></tr>
<tr><td>140MT-D9N-B10</td><td>1.0</td><td rowspan="9">3)</td><td rowspan="9">4)</td><td>65,000</td><td>30,000</td><td>450</td><td>450</td></tr>
<tr><td>140MT-D9N-B16</td><td>1.6</td><td>65,000</td><td>30,000</td><td>450</td><td>450</td></tr>
<tr><td>140MT-D9N-B25</td><td>2.5</td><td rowspan="8">5)</td><td rowspan="8">6)</td><td rowspan="8">7)</td><td>65,000</td><td>30,000</td><td>450</td><td>450</td></tr>
<tr><td>140MT-D9N-B40</td><td>4.0</td><td>65,000</td><td>30,000</td><td>450</td><td>450</td></tr>
<tr><td>140MT-D9N-B63</td><td>6.3</td><td rowspan="3">1)</td><td rowspan="3">2)</td><td>65,000</td><td>30,000</td><td>450</td><td>450</td></tr>
<tr><td>140MT-D9N-C10</td><td>10</td><td>65,000</td><td>30,000</td><td>450</td><td>450</td></tr>
<tr><td>140MT-D9N-C16</td><td>16</td><td>65,000</td><td>30,000</td><td>450</td><td>450</td></tr>
</table>

1) 193-1EEED, 193-1EEFD
2) 193-1EFED, 193-1EFFD
3) 193-1EECP, 193-1EEDP, 193-1EEEP, 193-1EEFP, 193-1EEGP
4) 193-1EFCP, 193-1EFDP, 193-1EFEP, 193-1EFFP, 193-1EFGP
5) 193-ESM-*-30A-C55, 193-ESM-*-60A-C55
6) 193-ESM-*-30A-T, 193-ESM-*-60A-T, 193-ESM-*-100A-T, 193-ESM-*-200A-T: DIN Rail / Panel mount Power terminals
7) 193-ESM-*-30A-P, 193-ESM-*-60A-P, 193-ESM-*-100A-P, 193-ESM-*-200A-P: DIN Rail/ Panel mount Pass through
8) May or may not be provided
9) similar for other configurations 305-*O*930
10) It can be used an additional Bus Bar Adapter in according of table "Bus Bar Adapter for "A-B" or "Allen-Bradley" (the lower max. SCCR from both tables in according to the electrical rating applies)

190/191: 300(S)-*O*93**, 305-*O*23** contactor suitable for Group Installation on load side of 140MT Manual Motor Controller
Short-circuit coordination Type 1 only

MPCB	Motor Current Adjust range [A]	Connection Module or wire jumpers 1)	Reversing Power Wiring Kit 1)	Busbar adapter	Min. Contractor Size 2)	SCCR			
						480Vac	600Vac	Max. current rated	
						[A]	[A]	Fuse	Breaker
140MT-C3E-A16	0.10-0.16	140MT-C-PE16 140MT-C-PSE16	105-PW16	3)	300-TO*93**	65,000	50,000	450	450
140MT-C3E-A25	0.16-0.25					65,000	50,000	450	450
140MT-C3E-A40	0.25-0.40					65,000	50,000	450	450
140MT-C3E-A63	0.40-0.63					65,000	50,000	450	450
140MT-C3E-B10	0.63-1.0					65,000	50,000	450	450
140MT-C3E-B16	1.0-1.6					65,000	50,000	450	450
140MT-C3E-B25	1.6-2.5					65,000	30,000	450	450
140MT-C3E-B40	2.5-4.0					65,000	30,000	450	450
140MT-C3E-B63	4.0-6.3					65,000	30,000	450	450
140MT-C3E-C10	6.3-10					65,000	30,000	450	450
140MT-C3E-C16	10-16				300-AO*93**	30,000	30,000	450	450
140MT-C3E-C20	14.5-20	140MT-C-PE38 140MT-C-PSE38	105-PW38		300-BO*93**	30,000	18,000	450	450
140MT-C3E-C25	18-25					30,000	18,000	450	450
140MT-C3E-C29	23-29	-	105-PW65		300-CO*93**	30,000	10,000	450	450
140MT-C3E-C32	26.5-32					30,000	10,000	450	450
140MT-D9E-A63	0.40-0.63	140MT-D-PE16 140MT-D-PSE16	105-PW16	3)	300-TO*93**	65,000	50,000	450	450
140MT-D9E-B10	0.63-1.0					65,000	50,000	450	450
140MT-D9E-B16	1.0-1.6					65,000	50,000	450	450
140MT-D9E-B25	1.6-2.5					65,000	30,000	450	450
140MT-D9E-B40	2.5-4.0					65,000	30,000	450	450
140MT-D9E-B63	4.0-6.3					65,000	30,000	450	450
140MT-D9E-C10	6.3-10					65,000	30,000	450	450
140MT-D9E-C16	10-16				300-AO*93**	65,000	30,000	450	450
140MT-D9E-C20	14.5-20	140MT-D-PE38 140MT-D-PSE38	105-PW38		300-BO*93**	65,000	30,000	450	450
140MT-D9E-C25	18-25					50,000	30,000	450	450
140MT-D9E-C29	23-29	-	105-PW65		300-CO*93**	30,000	30,000	450	450
140MT-D9E-C32	26.5-32					30,000	30,000	450	450
140MT-D9E-C36	30-36					30,000	30,000	450	450
140MT-D9E-C40	34-40					30,000	30,000	450	450
140MT-D9T-A63	0.40-0.63	140MT-D-PE16 140MT-D-PSE16	105-PW16	3)	300-TO*93**	65,000	50,000	450	450
140MT-D9T-B10	0.63-1.0					65,000	50,000	450	450
140MT-D9T-B16	1.0-1.6					65,000	30,000	450	450
140MT-D9T-B25	1.6-2.5					65,000	30,000	450	450
140MT-D9T-B25	1.6-2.5					65,000	30,000	450	450
140MT-D9T-B40	2.5-4.0					65,000	30,000	450	450
140MT-D9T-B63	4.0-6.3					65,000	30,000	450	450
140MT-D9T-C10	6.3-10				300-AO*93**	65,000	30,000	450	450
140MT-D9T-C16	10-16	140MT-D-PE38 140MT-D-PSE38	105-PW38		300-BO*93**	65,000	30,000	450	450
140MT-D9T-C20	14.5-20					50,000	30,000	450	450
140MT-D9T-C25	18-25	-	105-PW65		300-CO*93**	30,000	30,000	450	450

1) May or may not be provided
2) similar for other contactor configurations 300S-*O*93**, 305-*O*23**
3) It can be used an additional Bus Bar Adapter in according of table "Bus Bar Adapter for "A-B" or "Allen-Bradley" (the lower max. SCCR from both tables in according to the electrical rating applies)
* = place holder for coil code
** = place holder for auxiliary contact configuration (10 or 11)
- Ratings also valid for REV Starters, reversers only per wire

190/191: 300(S)-*O*93**, 305-*O*23** contactor suitable for Group Installation/Disconnect Means on load side of 140MT Manual Motor Short-circuit coordination Type 1 only

Cat.-No.	FLA range [A]	Connection Module or wire jumpers 1)	Reversing Power Wiring Kit 1)	Busbar adapter	Min. Contractor Size 2)	SCCR			
						480Vac	600Vac	Max. current rated	
						[A]	[A]	Fuse	Breaker
140MT-C3E-A16	0.10-0.16	140MT-C-PE16 140MT-C-PSE16	105-PW16	3)	300-TO*93**	65,000	50,000	450	450
140MT-C3E-A25	0.16-0.25					65,000	50,000	450	450
140MT-C3E-A40	0.25-0.40					65,000	50,000	450	450
140MT-C3E-A63	0.40-0.63					65,000	50,000	450	450
140MT-C3E-B10	0.63-1.0					65,000	50,000	450	450
140MT-C3E-B16	1.0-1.6					65,000	50,000	450	450
140MT-C3E-B25	1.6-2.5					65,000	30,000	450	450
140MT-C3E-B40	2.5-4.0					65,000	30,000	450	450
140MT-C3E-B63	4.0-6.3					65,000	30,000	450	450
140MT-C3E-C10	6.3-10					65,000	30,000	450	450
140MT-C3E-C16	10-16				300-AO*93**	30,000	30,000	450	450
140MT-C3E-C20	14.5-20	140MT-C-PE38 140MT-C-PSE38	105-PW38		300-BO*93**	30,000	10,000	450	450
140MT-C3E-C25	18-25					10,000	5,000	450	450
140MT-C3E-C29	23-29	-	105-PW65		300-CO*93**	10,000	-	450	450
140MT-C3E-C32	26.5-32					10,000	-	450	450
140MT-D9E-A63	0.40-0.63	140MT-D-PE16 140MT-D-PSE16	105-PW16	3)	300-TO*93**	65,000	50,000	450	450
140MT-D9E-B10	0.63-1.0					65,000	50,000	450	450
140MT-D9E-B16	1.0-1.6					65,000	50,000	450	450
140MT-D9E-B25	1.6-2.5					65,000	30,000	450	450
140MT-D9E-B40	2.5-4.0					65,000	30,000	450	450
140MT-D9E-B63	4.0-6.3					65,000	30,000	450	450
140MT-D9E-C10	6.3-10					65,000	30,000	450	450
140MT-D9E-C16	10-16				300-AO*93**	65,000	30,000	450	450
140MT-D9E-C20	14.5-20	140MT-D-PE38 140MT-D-PSE38	105-PW38		300-BO*93**	65,000	30,000	450	450
140MT-D9E-C25	18-25					50,000	30,000	450	450
140MT-D9E-C29	23-29	-	105-PW65		300-CO*93**	30,000	18,000	450	450
140MT-D9E-C32	26.5-32					30,000	18,000	450	450
140MT-D9E-C36	30-36					30,000	18,000	450	450
140MT-D9E-C40	34-40					30,000	18,000	450	450
140MT-D9T-A63	0.40-0.63	140MT-D-PE16 140MT-D-PSE16	105-PW16	3)	300-TO*93**	65,000	50,000	450	450
140MT-D9T-B10	0.63-1.0					65,000	50,000	450	450
140MT-D9T-B16	1.0-1.6					65,000	30,000	450	450
140MT-D9T-B25	1.6-2.5					65,000	30,000	450	450
140MT-D9T-B25	1.6-2.5					65,000	30,000	450	450
140MT-D9T-B40	2.5-4.0					65,000	30,000	450	450
140MT-D9T-B63	4.0-6.3					65,000	30,000	450	450
140MT-D9T-C10	6.3-10				300-AO*93**	65,000	30,000	450	450
140MT-D9T-C16	10-16	140MT-D-PE38 140MT-D-PSE38	105-PW38		300-BO*93**	65,000	30,000	450	450
140MT-D9T-C20	14.5-20					50,000	30,000	450	450
140MT-D9T-C25	18-25	-	105-PW65		300-CO*93**	30,000	18,000	450	450

1) May or may not be provided
2) similar for other contactor configurations 300S-*O*93**, 305-*O*23**
3) It can be used an additional Bus Bar Adapter in according of table "Bus Bar Adapter for "A-B" or "Allen-Bradley" (the lower max. SCCR from both tables in according to the electrical rating applies)
* = place holder for coil code
** = place holder for auxiliary contact configuration (10 or 11)
- Ratings also valid for REV Starters, reversers only per wire

190/191: 140MT Combination Motor Controller as Type F combination with 300(S)-*O*93**, 305-*O*23** contactor
Short-circuit coordination Type 1 only

Cat.-No.	FLA range [A]	Connection Module or wire jumpers 1)	Reversing Power Wiring Kit 1)	Busbar adapter	Min. Contractor Size 2)	SCCR			
						480Vac	600Vac	Max. current rated	
						[A]	[A]	Fuse	Breaker
140MT-C3E-A16	0.10-0.16	140MT-C-PE16 140MT-C-PSE16	105-PW16	3)	300-TO*93**	65,000	50,000	450	450
140MT-C3E-A25	0.16-0.25					65,000	50,000	450	450
140MT-C3E-A40	0.25-0.40					65,000	50,000	450	450
140MT-C3E-A63	0.40-0.63					65,000	50,000	450	450
140MT-C3E-B10	0.63-1.0					65,000	50,000	450	450
140MT-C3E-B16	1.0-1.6					65,000	50,000	450	450
140MT-C3E-B25	1.6-2.5					65,000	30,000	450	450
140MT-C3E-B40	2.5-4.0					65,000	30,000	450	450
140MT-C3E-B63	4.0-6.3					65,000	-	450	450
140MT-C3E-C10	6.3-10					65,000	-	450	450
140MT-C3E-C16	10-16				300-AO*93**	30,000	-	450	450
140MT-D9E-A63	0.40-0.63	140MT-D-PE16 140MT-D-PSE16	105-PW16	3)	300-TO*93**	65,000	50,000	450	450
140MT-D9E-B10	0.63-1.0					65,000	50,000	450	450
140MT-D9E-B16	1.0-1.6					65,000	50,000	450	450
140MT-D9E-B25	1.6-2.5					65,000	30,000	450	450
140MT-D9E-B40	2.5-4.0					65,000	30,000	450	450
140MT-D9E-B63	4.0-6.3					65,000	30,000	450	450
140MT-D9E-C10	6.3-10					65,000	30,000	450	450
140MT-D9E-C16	10-16				300-AO*93**	65,000	30,000	450	450
140MT-D9E-C20	14.5-20	140MT-D-PE38 140MT-D-PSE38	105-PW38		300-BO*93**	65,000	-	450	450
140MT-D9E-C25	18-25					50,000	-	450	450
140MT-D9E-C29	23-29	-	105-PW65		300-CO*93**	30,000	-	450	450
140MT-D9E-C32	26.5-32					30,000	-	450	450
140MT-D9E-C36	30-36					30,000	-	450	450
140MT-D9E-C40	34-40					30,000	-	450	450
140MT-D9T-A63	0.40-0.63	140MT-D-PE16 140MT-D-PSE16	105-PW16	3)	300-TO*93**	65,000	50,000	450	450
140MT-D9T-B10	0.63-1.0					65,000	50,000	450	450
140MT-D9T-B16	1.0-1.6					65,000	30,000	450	450
140MT-D9T-B25	1.6-2.5					65,000	30,000	450	450
140MT-D9T-B25	1.6-2.5					65,000	30,000	450	450
140MT-D9T-B40	2.5-4.0					65,000	30,000	450	450
140MT-D9T-B63	4.0-6.3					65,000	30,000	450	450
140MT-D9T-C10	6.3-10				300-AO*93**	65,000	30,000	450	450
140MT-D9T-C16	10-16	140MT-D-PE38 140MT-D-PSE38	105-PW38		300-BO*93**	65,000	-	450	450
140MT-D9T-C20	14.5-20					50,000	-	450	450
140MT-D9T-C25	18-25	-	105-PW65		300-CO*93**	30,000	-	450	450

1) May or may not be provided
2) similar for other contactor configurations 300S-*O*93**, 305-*O*23**
3) It can be used an additional Bus Bar Adapter in according of table "Bus Bar Adapter for "A-B" or "Allen-Bradley" (the lower max. SCCR from both tables in according to the electrical rating applies)
* = place holder for coil code
** = place holder for auxiliary contact configuration (10 or 11)
- Ratings also valid for REV Starters, reversers only per wire

190/191: 300(S)-*O*93**, 305-*O*23** contactor suitable for Group Installation on load side of 140MT Manual Motor Controller
Short-circuit coordination Type 2

MPCB	Motor Current Adjust range [A]	Connection Module or wire jumpers 1)	Reversing Power Wiring Kit 1)	Busbar adapter	Contractor Size 2)	SCCR			
						480Vac	600Vac	Max. current rated	
						[A]	[A]	Fuse	Breaker
140MT-C3E-A16	0.10-0.16	140MT-C-PE16 140MT-C-PSE16	105-PW16	3)	300-TO*93**	65,000	50,000	450	450
140MT-C3E-A25	0.16-0.25					65,000	50,000	450	450
140MT-C3E-A40	0.25-0.40					65,000	50,000	450	450
140MT-C3E-A63	0.40-0.63					65,000	50,000	450	450
140MT-C3E-B10	0.63-1.0					65,000	50,000	450	450
140MT-C3E-B16	1.0-1.6					65,000	50,000	450	450
140MT-C3E-B25	1.6-2.5	140MT-C-PEC38 140MT-C-PNC38	105-PW38		300-BO*93**	65,000	30,000	450	450
140MT-C3E-B40	2.5-4.0					65,000	30,000	450	450
140MT-C3E-B63	4.0-6.3					65,000	-	450	450
140MT-C3E-B63	4.0-6.3	-	105-PW65		300-CO*93**	65,000	5,000	450	450
140MT-C3E-C10	6.3-10	140MT-C-PEC37 140MT-C-PNC37	105-PW38		300-BO*93**	65,000	-	450	450
140MT-C3E-C10	6.3-10	-	105-PW65		300-CO*93**	65,000	5,000	450	450
140MT-C3E-C16	10-16				300-CO*93**	30,000	-	450	450
140MT-D9E-A63	0.40-0.63	140MT-D-PE16 140MT-D-PSE16	105-PW16		300-TO*93**	65,000	50,000	450	450
140MT-D9E-B10	0.63-1.0					65,000	50,000	450	450
140MT-D9E-B16	1.0-1.6					65,000	50,000	450	450
140MT-D9E-B25	1.6-2.5	140MT-D-PE38 140MT-D-PSE38	105-PW38		300-BO*93**	65,000	30,000	450	450
140MT-D9E-B40	2.5-4.0					65,000	-	450	450
140MT-D9E-B40	2.5-4.0	-	105-PW65		300-CO*93**	65,000	30,000	450	450
140MT-D9E-B63	4.0-6.3	140MT-D-PE38 140MT-D-PSE38	105-PW38		300-BO*93**	65,000	-	450	450
140MT-D9E-B63	4.0-6.3	-	105-PW65		300-CO*93**	65,000	30,000	450	450
140MT-D9E-C10	6.3-10	140MT-D-PE38 140MT-D-PSE38	105-PW38		300-BO*93**	65,000	-	450	450
140MT-D9E-C10	6.3-10	-	105-PW65		300-CO*93**	65,000	30,000	450	450
140MT-D9E-C16	10-16	140MT-D-PE38 140MT-D-PSE38	105-PW38		300-BO*93**	65,000	-	450	450
140MT-D9E-C16	10-16	-	105-PW65		300-CO*93**	65,000	30,000	450	450
140MT-D9E-C20	14.5-20	140MT-D-PE38 140MT-D-PSE38	105-PW38		300-BO*93**	65,000	-	450	450
140MT-D9E-C20	14.5-20	-	105-PW65		300-CO*93**	30,000	10,000	450	450
140MT-D9E-C25	18-25	140MT-D-PEC38 140MT-D-PNC38	105-PW38		300-BO*93**	50,000	-	450	450
140MT-D9E-C25	18-25	-	105-PW65		300-CO*93**	30,000	10,000	450	450
140MT-D9E-C29	23-29	140MT-D-PE38 140MT-D-PSE38	105-PW38		300-BO*93**	50,000	-	450	450
140MT-D9E-C29	23-29	-	105-PW65		300-CO*93**	30,000	10,000	450	450
140MT-D9E-C32	26.5-32					30,000	10,000	450	450
140MT-D9E-C36	30-36					30,000	10,000	450	450
140MT-D9E-C40	34-40					30,000	10,000	450	450
140MT-D9T-A63	0.40-0.63	140MT-D-PE16 140MT-D-PSE16	105-PW16		300-TO*93**	65,000	50,000	450	450
140MT-D9T-B10	0.63-1.0					65,000	50,000	450	450
140MT-D9T-B16	1.0-1.6	140MT-D-PE38 140MT-D-PSE38	105-PW38		300-BO*93**	65,000	30,000	450	450
140MT-D9T-B25	1.6-2.5					65,000	-	450	450
140MT-D9T-B25	1.6-2.5	-	105-PW65		300-CO*93**	65,000	30,000	450	450
140MT-D9T-B40	2.5-4.0	140MT-D-PE38 140MT-D-PSE38	105-PW38		300-BO*93**	65,000	-	450	450
140MT-D9T-B40	2.5-4.0	-	105-PW65		300-CO*93**	65,000	30,000	450	450
140MT-D9T-B63	4.0-6.3	140MT-D-PE38 140MT-D-PSE38	105-PW38		300-BO*93**	65,000	-	450	450
140MT-D9T-B63	4.0-6.3	-	105-PW65		300-CO*93**	65,000	30,000	450	450
140MT-D9T-C10	6.3-10	140MT-D-PE38 140MT-D-PSE38	105-PW38		300-BO*93**	65,000	-	450	450
140MT-D9T-C10	6.3-10	-	105-PW65		300-CO*93**	65,000	30,000	450	450
140MT-D9T-C16	10-16	140MT-D-PE38 140MT-D-PSE38	105-PW38		300-BO*93**	65,000	-	450	450
140MT-D9T-C16	10-16	-	105-PW38		300-CO*93**	30,000	10,000	450	450
140MT-D9T-C20	14.5-20	140MT-D-PE38 140MT-D-PSE38	105-PW38		300-BO*93**	50,000	-	450	450
140MT-D9T-C20	14.5-20	-	105-PW65		300-CO*93**	30,000	10,000	450	450
140MT-D9T-C25	18-25	140MT-D-PE38 140MT-D-PSE38	105-PW38		300-BO*93**	50,000	-	450	450
140MT-D9T-C25	18-25	-	105-PW65		300-CO*93**	30,000	10,000	450	450

1) May or may not be provided
2) similar for other contactor configurations 300S-*O*93**, 305-*O*23**
3) It can be used an additional Bus Bar Adapter in according of table "Bus Bar Adapter for "A-B" or "Allen-Bradley" (the lower max. SCCR from both tables in according to the electrical rating applies)
* = place holder for coil code
** = place holder for auxiliary contact configuration (10 or 11)
- Ratings also valid for REV Starters, reversers only per wire

190/191: 300(S)-*O*93**, 305-*O*23** contactor suitable for Group Installation/Disconnect Means on load side of 140MT Manual Motor Controller
Short-circuit coordination Type 2

MPCB	Motor Current Adjust range [A]	Connection Module or wire jumpers 1)	Reversing Power Wiring Kit 1)	Busbar adapter	Contractor Size 2)	SCCR			
						480Vac	600Vac	Max. current rated	
						[A]	[A]	Fuse	Breaker
140MT-C3E-A16	0.10-0.16	140MT-C-PE16 140MT-C-PSE16	105-PW16	3)	300-TO*93**	65,000	50,000	450	450
140MT-C3E-A25	0.16-0.25					65,000	50,000	450	450
140MT-C3E-A40	0.25-0.40					65,000	50,000	450	450
140MT-C3E-A63	0.40-0.63					65,000	50,000	450	450
140MT-C3E-B10	0.63-1.0					65,000	50,000	450	450
140MT-C3E-B16	1.0-1.6					65,000	50,000	450	450
140MT-C3E-B25	1.6-2.5	140MT-C-PEC38 140MT-C-PNC38	105-PW38		300-BO*93**	65,000	30,000	450	450
140MT-C3E-B40	2.5-4.0					65,000	30,000	450	450
140MT-C3E-B63	4.0-6.3					65,000	-	450	450
140MT-C3E-B63	4.0-6.3	-	105-PW65		300-CO*93**	65,000	5,000	450	450
140MT-C3E-C10	6.3-10	140MT-C-PEC37 140MT-C-PNC37	105-PW38		300-BO*93**	65,000	-	450	450
140MT-C3E-C10	6.3-10	-	105-PW65		300-CO*93**	65,000	5,000	450	450
140MT-C3E-C16	10-16				300-CO*93**	30,000	-	450	450
140MT-D9E-A63	0.40-0.63	140MT-D-PE16 140MT-D-PSE16	105-PW16	3)	300-TO*93**	65,000	50,000	450	450
140MT-D9E-B10	0.63-1.0					65,000	50,000	450	450
140MT-D9E-B16	1.0-1.6					65,000	50,000	450	450
140MT-D9E-B25	1.6-2.5	140MT-D-PE38 140MT-D-PSE38	105-PW38		300-BO*93**	65,000	30,000	450	450
140MT-D9E-B40	2.5-4.0					65,000	-	450	450
140MT-D9E-B40	2.5-4.0	-	105-PW65		300-CO*93**	65,000	30,000	450	450
140MT-D9E-B63	4.0-6.3	140MT-D-PE38 140MT-D-PSE38	105-PW38		300-BO*93**	65,000	-	450	450
140MT-D9E-B63	4.0-6.3	-	105-PW65		300-CO*93**	65,000	30,000	450	450
140MT-D9E-C10	6.3-10	140MT-D-PE38 140MT-D-PSE38	105-PW38		300-BO*93**	65,000	-	450	450
140MT-D9E-C10	6.3-10	-	105-PW65		300-CO*93**	65,000	30,000	450	450
140MT-D9E-C16	10-16	140MT-D-PE38 140MT-D-PSE38	105-PW38		300-BO*93**	65,000	-	450	450
140MT-D9E-C16	10-16	-	105-PW65		300-CO*93**	65,000	30,000	450	450
140MT-D9E-C20	14.5-20	140MT-D-PE38 140MT-D-PSE38	105-PW38		300-BO*93**	65,000	-	450	450
140MT-D9E-C20	14.5-20	-	105-PW65		300-CO*93**	30,000	10,000	450	450
140MT-D9E-C25	18-25	140MT-D-PEC38 140MT-D-PNC38	105-PW38		300-BO*93**	50,000	-	450	450
140MT-D9E-C25	18-25	-	105-PW65		300-CO*93**	30,000	10,000	450	450
140MT-D9E-C29	23-29	140MT-D-PE38 140MT-D-PSE38	105-PW38		300-BO*93**	50,000	-	450	450
140MT-D9E-C29	23-29	-	105-PW65		300-CO*93**	30,000	10,000	450	450
140MT-D9E-C32	26.5-32					30,000	10,000	450	450
140MT-D9E-C36	30-36					30,000	10,000	450	450
140MT-D9E-C40	34-40					30,000	10,000	450	450
140MT-D9T-A63	0.40-0.63	140MT-D-PE16 140MT-D-PSE16	105-PW16	3)	300-TO*93**	65,000	50,000	450	450
140MT-D9T-B10	0.63-1.0					65,000	50,000	450	450
140MT-D9T-B16	1.0-1.6	140MT-D-PE38 140MT-D-PSE38	105-PW38		300-BO*93**	65,000	30,000	450	450
140MT-D9T-B25	1.6-2.5					65,000	-	450	450
140MT-D9T-B25	1.6-2.5	-	105-PW65		300-CO*93**	65,000	30,000	450	450
140MT-D9T-B40	2.5-4.0	140MT-D-PE38 140MT-D-PSE38	105-PW38		300-BO*93**	65,000	-	450	450
140MT-D9T-B40	2.5-4.0	-	105-PW65		300-CO*93**	65,000	30,000	450	450
140MT-D9T-B63	4.0-6.3	140MT-D-PE38 140MT-D-PSE38	105-PW38		300-BO*93**	65,000	-	450	450
140MT-D9T-B63	4.0-6.3	-	105-PW65		300-CO*93**	65,000	30,000	450	450
140MT-D9T-C10	6.3-10	140MT-D-PE38 140MT-D-PSE38	105-PW38		300-BO*93**	65,000	-	450	450
140MT-D9T-C10	6.3-10	-	105-PW65		300-CO*93**	65,000	30,000	450	450
140MT-D9T-C16	10-16	140MT-D-PE38 140MT-D-PSE38	105-PW38		300-BO*93**	65,000	-	450	450
140MT-D9T-C16	10-16	-	105-PW38		300-CO*93**	30,000	10,000	450	450
140MT-D9T-C20	14.5-20	140MT-D-PE38 140MT-D-PSE38	105-PW38		300-BO*93**	50,000	-	450	450
140MT-D9T-C20	14.5-20	-	105-PW65		300-CO*93**	30,000	10,000	450	450
140MT-D9T-C25	18-25	140MT-D-PE38 140MT-D-PSE38	105-PW38		300-BO*93**	50,000	-	450	450
140MT-D9T-C25	18-25	-	105-PW65		300-CO*93**	30,000	10,000	450	450

1) May or may not be provided
2) similar for other contactor configurations 300S-*O*93**, 305-*O*23**
3) It can be used an additional Bus Bar Adapter in according of table "Bus Bar Adapter for "A-B" or "Allen-Bradley" (the lower max. SCCR from both tables in according to the electrical rating applies)
* = place holder for coil code
** = place holder for auxiliary contact configuration (10 or 11)
- Ratings also valid for REV Starters, reversers only per wire

190/191: 140MT Combination Motor Controller as Type F combination with 300(S)-*O*93**, 305-*O*23** contactor
Short-circuit coordination Type 2

MPCB	Motor Current Adjust range [A]	Connection Module or wire jumpers 1)	Reversing Power Wiring Kit 1)	Busbar adapter	Contractor Size 2)	SCCR			
						480Vac	600Vac	Max. current rated	
						[A]	[A]	Fuse	Breaker
140MT-C3E-A16	0.10-0.16	140MT-C-PE16 140MT-C-PSE16	105-PW16	3)	300-TO*93**	65,000	50,000	450	450
140MT-C3E-A25	0.16-0.25					65,000	50,000	450	450
140MT-C3E-A40	0.25-0.40					65,000	50,000	450	450
140MT-C3E-A63	0.40-0.63					65,000	50,000	450	450
140MT-C3E-B10	0.63-1.0					65,000	50,000	450	450
140MT-C3E-B16	1.0-1.6					65,000	50,000	450	450
140MT-C3E-B25	1.6-2.5	140MT-C-PEC38 140MT-C-PNC38	105-PW38		300-BO*93**	65,000	30,000	450	450
140MT-C3E-B40	2.5-4.0					65,000	30,000	450	450
140MT-C3E-B63	4.0-6.3					65,000	-	450	450
140MT-C3E-C10	6.3-10					65,000	-	450	450
140MT-C3E-C16	10-16	-	105-PW65		300-CO*93**	30,000	-	450	450
140MT-D9E-A63	0.40-0.63	140MT-D-PE16 140MT-D-PSE16	105-PW16		300-TO*93**	65,000	50,000	450	450
140MT-D9E-B10	0.63-1.0					65,000	50,000	450	450
140MT-D9E-B16	1.0-1.6					65,000	50,000	450	450
140MT-D9E-B25	1.6-2.5	140MT-D-PE38 140MT-D-PSE38	105-PW38		300-BO*93**	65,000	30,000	450	450
140MT-D9E-B40	2.5-4.0					65,000	-	450	450
140MT-D9E-B40	2.5-4.0	-	105-PW65		300-CO*93**	65,000	30,000	450	450
140MT-D9E-B63	4.0-6.3	140MT-D-PE38 140MT-D-PSE38	105-PW38		300-BO*93**	65,000	-	450	450
140MT-D9E-B63	4.0-6.3	-	105-PW65		300-CO*93**	65,000	30,000	450	450
140MT-D9E-C10	6.3-10	140MT-D-PE38 140MT-D-PSE38	105-PW38		300-BO*93**	65,000	-	450	450
140MT-D9E-C10	6.3-10	-	105-PW65	3)	300-CO*93**	65,000	30,000	450	450
140MT-D9E-C16	10-16	140MT-D-PE38 140MT-D-PSE38	105-PW38		300-BO*93**	65,000	-	450	450
140MT-D9E-C16	10-16	-	105-PW65		300-CO*93**	65,000	30,000	450	450
140MT-D9E-C20	14.5-20	140MT-D-PEC38 140MT-D-PNC38	105-PW38		300-BO*93**	65,000	-	450	450
140MT-D9E-C25	18-25					50,000	-	450	450
140MT-D9E-C25	18-25	-	105-PW65		300-CO*93**	30,000	-	450	450
140MT-D9E-C29	23-29	140MT-D-PE38 140MT-D-PSE38	105-PW38		300-BO*93**	50,000	-	450	450
140MT-D9E-C29	23-29	-	105-PW65		300-CO*93**	30,000	-	450	450
140MT-D9E-C32	26.5-32					30,000	-	450	450
140MT-D9E-C36	30-36					30,000	-	450	450
140MT-D9E-C40	34-40					30,000	-	450	450
140MT-D9T-A63	0.40-0.63	140MT-D-PE16 140MT-D-PSE16	105-PW16		300-TO*93**	65,000	50,000	450	450
140MT-D9T-B10	0.63-1.0					65,000	50,000	450	450
140MT-D9T-B16	1.0-1.6	140MT-D-PE38 140MT-D-PSE38	105-PW38		300-BO*93**	65,000	30,000	450	450
140MT-D9T-B25	1.6-2.5					65,000	-	450	450
140MT-D9T-B25		-	105-PW65		300-CO*93**	65,000	30,000	450	450
140MT-D9T-B40	2.5-4.0	140MT-D-PE38 140MT-D-PSE38	105-PW38		300-BO*93**	65,000	-	450	450
140MT-D9T-B40		-	105-PW65		300-CO*93**	65,000	30,000	450	450
140MT-D9T-B63	4.0-6.3	140MT-D-PE38 140MT-D-PSE38	105-PW38		300-BO*93**	65,000	-	450	450
140MT-D9T-B63		-	105-PW65		300-CO*93**	65,000	30,000	450	450
140MT-D9T-C10	6.3-10	140MT-D-PE38 140MT-D-PSE38	105-PW38		300-BO*93**	65,000	-	450	450
140MT-D9T-C10		-	105-PW65		300-CO*93**	65,000	30,000	450	450
140MT-D9T-C16	10-16	140MT-D-PE38 140MT-D-PSE38	105-PW38		300-BO*93**	65,000	-	450	450
140MT-D9T-C20	14.5-20					50,000	-	450	450
140MT-D9T-C25	18-25					50,000	-	450	450
140MT-D9T-C25	18-25	-	105-PW65		300-CO*93**	30,000	-	450	450

1) May or may not be provided
2) similar for other contactor configurations 300S-*O*93**, 305-*O*23**
3) It can be used an additional Bus Bar Adapter in according of table "Bus Bar Adapter for "A-B" or "Allen-Bradley" (the lower max. SCCR from both tables in according to the electrical rating applies)
* = place holder for coil code
** = place holder for auxiliary contact configuration (10 or 11)
- Ratings also valid for REV Starters, reversers only per wire

190/191: 3-Component starter, 300(S)-*O*93**, 305-*O*23** contactor suitable for Group Installation on load side of 140MT Manual Motor Controller Level of S.C. Coordination Type 1

MPCB	Motor Current Adjust range [A]	Connection Module or wire jumpers 9)	Reversing Power Wiring Kit 9)	Min. Contactor Size 10)	O/L Relay				Busbar adapter	SCCR			
					Direct mount Trip Class		Pass mount Trip Class			480Vac	600Vac	Max. current rated	
					10, 20	10, 15, 20, 30	10, 20	10, 15, 20, 30		[A]	[A]	Fuse	Breaker
140MT-D9N-A63	0.63	-	105-PW16	300-TO*93**	1)	2)	-	-	11)	65,000	30,000	450	450
140MT-D9N-B10	1.0						7)	8)		65,000	30,000	450	450
140MT-D9N-B16	1.6									65,000	30,000	450	450
140MT-D9N-B25	2.5									65,000	30,000	450	450
140MT-D9N-B40	4.0									65,000	30,000	450	450
140MT-D9N-B63	6.3									65,000	30,000	450	450
140MT-D9N-C10	10									65,000	30,000	450	450
140MT-D9N-C16	16			300-AO*93**						65,000	30,000	450	450
140MT-D9N-C16	16		105-PW38	300-BO*93**	3)	4)				65,000	30,000	450	450
140MT-D9N-C20	20	-								65,000	30,000	450	450
140MT-D9N-C25	25									50,000	30,000	450	450
140MT-D9N-C29	29		105-PW65	300-CO*93**	5)	6)				50,000	30,000	450	450
140MT-D9N-C32	32									30,000	30,000	450	450

1) 193-1EEAF, 193-1EEBF, 193-1EECF, 193-1EEDF, 193-1EEEF
2) 193-1EFAB, 193-1EFBB, 193-1EFCB, 193-1EFDB, 193-1EFEB
3) 193-1EEEG, 193-1EEFG
4) 193-1EFEG, 193-1EFFG
5) 193-1EEQH
6) 193-1EFQH
7) 193-1EECP, 193-1EEDP, 193-1EEEP, 193-1EEFP
8) 193-1EFCP, 193-1EFDP, 193-1EFEP, 193-1EFFP
9) May or may not be provided
10) Similar for other configurations 300S-*O*93**, 305-*O*23**
11) It can be used an additional Bus Bar Adapter in according of table "Bus Bar Adapter for "A-B" or "Allen-Bradley" (the lower max. SCCR from both tables in according to the electrical rating applies)
= Place holder for coil code
** = Place holder for auxiliary contact configuration (10 or 11)

190/191: 3-Component starter, 300-*O*93**, 305-*O*23** contactor suitable for Group Installation on load side of 140MT Manual Motor Controller Level of S.C. Coordination Type 2

MPCB	Motor Current Adjust range [A]	Connection Module or wire jumpers 9)	Reversing Power Wiring Kit 9)	Min. Contactor Size 10)	O/L Relay				Busbar adapter	SCCR			
					Direct mount Trip Class		Pass mount Trip Class			480Vac	600Vac	Max. current rated	
					10, 20	10, 15, 20, 30	10, 20	10, 15, 20, 30		[A]	[A]	Fuse	Breaker
140MT-D9N-A63	0.63	-	105-PW16	300-AO*93**	1)	2)	-	-	11)	65,000	30,000	450	450
140MT-D9N-B10	1.0		105-PW38	300-BO*93**	3)	4)	7)	8)		65,000	30,000	450	450
140MT-D9N-B16	1.6									65,000	30,000	450	450
140MT-D9N-B25	2.5									65,000	30,000	450	450
140MT-D9N-B40	4.0		105-PW65	300-CO*93**	-	-				65,000	30,000	450	450
140MT-D9N-B63	6.3									65,000	30,000	450	450
140MT-D9N-C10	10									65,000	30,000	450	450
140MT-D9N-C16	16				5)	6)				65,000	30,000	450	450
140MT-D9N-C20	20									65,000	10,000	450	450
140MT-D9N-C25	25									50,000	10,000	450	450
140MT-D9N-C29	29									50,000	10,000	450	450
140MT-D9N-C32	32									30,000	10,000	450	450

1) 193-1EEAF, 193-1EEBF
2) 193-1EFAF, 193-1EFBF
3) 193-1EECG
4) 193-1EFCG
5) 193-1EEQH
6) 193-1EFQH
7) 193-1EECP, 193-1EEDP, 193-1EEEP, 193-1EEFP
8) 193-1EFCP, 193-1EFDP, 193-1EFEP, 193-1EFFP
9) May or may not be provided
10) Similar for other configurations 300S-*O*93**, 305-*O*23**
11) It can be used an additional Bus Bar Adapter in according of table "Bus Bar Adapter for "A-B" or "Allen-Bradley" (the lower max. SCCR from both tables in according to the electrical rating applies)
= Place holder for coil code
** = Place holder for auxiliary contact configuration (10 or 11)

Table: Bus Bar Adapter for “A-B” or “Allen-Bradley”

A-B Cat.-No.:	UL (value with OPD – Overcurrent Protection Device)			
	480V		600V	
	Max. Rating [A]	Max. SCCR rms sym. (kA)	Max. Rating [A]	Max. SCCR rms sym. (kA)
Standard Mounting Module cULus Listed				
141A-FM45SS25	32	65	32	30
141A-FS45S25	32	65	32	30
141A-GS45RR16	-	-	-	-
141A-GS54RR16	-	-	-	-
141A-GS45RR25	25	65	25	30
141A-GS54RR25	24	65	30	30
141A-GS54RR45	65	100	65	7.5
141A-GS63RR45	65	100	65	7.5
141A-GS45R	-	-	-	-
141A-GS54R	-	-	-	-
141A-GM45RS25	25	65	25	5
141A-GM54RS25	24	65	30	5
141A-GM54RS45	65	100	65	7.5
141A-GM63RS45	65	100	65	7.5
141A-GM45S	24	65	30	5
141A-GM54S	24	65	30	5
141A-GM63S	24	65	30	5
ISO Mounting Module cULus Listed				
141A-SS45RR25	25	65	25	30
141A-SS54RR25	25	65	25	30
141A-SS54RR45	32	65	32	30
141A-SS63RR45	32	65	32	30
141A-SS45R	45	65	45	18
141A-SS54R	-	-	-	-
141A-SM45RS25	45	65	45	18
141A-SM54RS25	45	65	45	18
141A-SM54RS45	45	65	45	18
141A-SM63RS45	45	65	45	18
141A-SM45S	45	65	45	18
141A-SM54S	45	65	45	18
141A-SM63S	45	65	45	18
Panel Mounting Module cULus Listed				
141A-WS45RR	-	-	-	-
141A-WS54RR	-	-	-	-
141A-WM45RR	-	-	-	-
141A-WM54RR	-	-	-	-
141A-WL54RR	-	-	-	-
Crossboard Mounting Module cULus Listed				
141C-45R	-	-	-	-
141C-45R16	12	65	12	kA
141C-45R25	25	65	25	65
141C-45R32	30	65	30	65
141C-45R45	45	65	45	65
141C-18S	-	-	-	-
141C-18S63L1	63	65	63	65
141C-18S63L2	63	65	63	65
141C-18S63L3	63	65	63	65
141C-VN16	48	50	48	50
141C-VN50	100	100	100	65
Adapter complete without ratings are no electrical connections. Used only for mechanical connection to other modules.				

Table: Jumper Wire for “A-B” or “Allen-Bradley”

Connection Module	Jumper Wire
140MT-C-PE16	105°C, 600V; 12 AWG
140MT-C-PE38	105°C, 600V; 8 AWG
140MT-C-PEC23	105°C, 600V; 10 AWG
140MT-C-PEK12	105°C, 600V; 12 AWG
140MT-C-PNC23	105°C, 600V; 10 AWG
140MT-C-PSE16	105°C, 600V; 12 AWG
140MT-C-PSE38	105°C, 600V; 8 AWG
140MT-D-PE16	105°C, 600V; 12 AWG
140MT-D-PE38	105°C, 600V; 8 AWG
140MT-D-PEC23	105°C, 600V; 10 AWG
140MT-D-PEC37	105°C, 600V; 8 AWG
140MT-D-PNC23	105°C, 600V; 10 AWG
140MT-D-PNC37	105°C, 600V; 8 AWG
140MT-D-PSE16	105°C, 600V; 12 AWG
140MT-D-PSE38	105°C, 600V; 8 AWG


Ex relevant Information

Explosion Application Cat. No. Type Range: Bul. 140MT-C3E-..., 140MT-D9E-..., 140MT-D9T-..., 140MT-D9V-...
(140MT-D9N-... is not usable for Ex Applications)
The Ex protection function of the 140MT-C / D devices (Circuit breaker with contactors as starters outside the Ex zone with connection to the Ex zone) is a thermally delayed release device with phase failure protection so that the motor starter acts as a safety device (protective device for indirect temperature monitoring) to protect motors to avoid impermissible temperatures can be used.

Possible Type of Ignition in according to the Zone:
- For Mining: db, eb and pxb
- For Gas: db, eb and pxb
- For Dust: tb and pxb

I (M2)
II (2) GD
[Ex eb Mb]
[Ex eb Gb]

Multiple of current setting limits for ambient air temperature compensate time-delay overload relays:

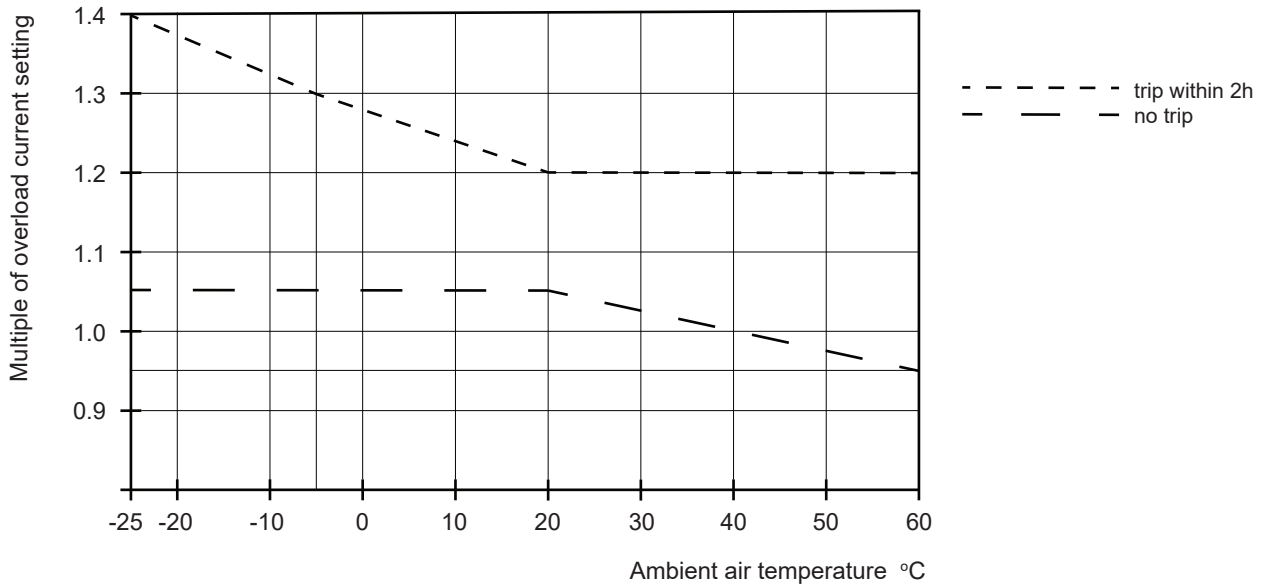

Ex Ambient Specifications:
- Operation at Ta = -25 °C up to +60 °C
- Storage at T= -40 °C up to +80 °C
- SIL 1 necessary requirements for the environment e.g. overvoltage category

Ex Installation and Maintenance:
- Use 60079-14 (for dust additional 61241-14) for Project engineering, selection and installation
- Use 60079-17 for Inspection and maintenance
- No repairing of the 140MT-C/D devices allowed (Because Ex protection function is no longer guaranteed!)
- Where automatic restarting after a failure is not permitted, the user must take suitable measures to prevent restarting.
- With the aid of the device's test function, the tripping mechanism can be tested in the de-energized state.
- The cable type and the conductor cross section of the current leads must be selected so that the thermal limiting temperature for the connecting cables is not exceeded.
- It could be proved in all cases that the motors are safely switched off.

European ATEX and UKEx Hazardous Location Approval. The following applies to products marked II (2) GD and I (M2): Are Equipment Group I and II, Equipment Category 1G, 2G, 1D, 2D and M2 and comply with the Essential Health and Safety Requirements relating to the design and construction of such equipment given in Annex II to EU Directive 2014/34/EU and in SI 2016 No. 1107. See the EU and UK declarations of conformity, safety instruction and certificates on link below. Safety device intended for use outside potentially explosive atmospheres caused by gases, vapors, mist, (coal) dust, and methane are likely to occur in normal operation, but required for contributing the safe functioning (also during expected malfunctions) of equipment and protective systems with respect to the risk of explosion. Such locations correspond to Zone 1, Zone 21 and Mining classification according to ATEX directive 2014/34/EU and SI 2016 No. 1107.

Не предназначено для применения во взрывоопасных зонах. Только для общепромышленного применения.

ATEX/UKEx/IECEx:
https://rok.auto/certifications

Warnings

WARNING: The opening of the branch-circuit protective device may be an indication that a fault current has been interrupted. To reduce the risk of fire or electric shock, current-carrying parts and other components of the controller shall be examined and replaced if damaged.
AVERTISSEMENT — Le déclenchement du dispositif de protection de la dérivation peut signifier qu'un courant de fuite a été interrompu. Pour réduire les risques d'incendie et de choc électrique, les pièces porteuses de courant et autres pièces de la commande doivent être examinées et remplacées au besoin.
WARNING: To maintain overcurrent, short-circuit, and ground-fault protection, the manufacturer's instructions for selection of overload and short-circuit protection must be followed to reduce the risk of fire or electric shock.
AVERTISSEMENT — Pour assurer une protection continue contre les surintensités, les courts-circuits et les fuites à la terre, les instructions du fabricant relatives à la sélection d'une protection contre la surcharge et les courts-circuits doivent être respectées afin de réduire le risque d'incendie et ou de choc électrique.
WARNING: When an overload or a fault current interruption occurs, circuits must be checked to determine the cause of the interruption. When a fault condition exists, the current-carrying components should be examined and replaced when damaged, and the integral current sensors must be replaced to reduce the risk of fire or electric shock.
AVERTISSEMENT — En cas d'intervention due à une surcharge ou un courant de défaut, les circuits doivent être vérifiés pour déterminer la cause de l'interruption. En condition de défaut, les composants porteurs de courant devraient être examinés et remplacés au besoin, et les capteurs de courant intégrés doivent être remplacés afin de réduire le risque d'incendie et ou de choc électrique.

Transport, Storage, Installation and operation according to this document, product catalog and product standard. Follow national/local regulations.
제품의 운반, 보관, 설치 및 사용은 이 문서 및 제품 카탈로그와 제품 표준에 따라서 하십시오. 해당 국가/로컬의 법규를 따르십시오.
The product has no serviceable parts. Replace if faulty.
이 제품은 수리가 가능한 부품을 포함하고있지 않습니다. 이상이 있을시 제품을 교체하십시오.
Check regularly the tightness of all terminals and bus bar connections.
모든 연결단자 및 부스바 연결부분의 체결상태를 정기적으로 점검 하십시오.

ОСТОРОЖНО! Опасное напряжение!
Монтаж и ввод в эксплуатацию данного прибора, а также любые работы по техобслуживанию, должны производиться квалифицированными специалистами. При этом необходимо соблюдать местные нормы и правила техники безопасности. Перед тем, как производить монтаж прибора необходимо ознакомиться с данным руководством. Не прикасаться к деталям, которые находятся под напряжением чтобы исключить получения травм и нанесения материального ущерба. Должны быть приняты меры для предотвращения повреждения устройств. В случае наличия механических и/или электрических повреждений приборы бракуются. Данное руководство не охватывает всю подробную информацию к типоряду и не может учитывать каждый отдельный случай применения изделия.
Техническое обслуживание
Техническое обслуживание включает в себя периодический внешний осмотр, очистку от пыли, протяжку резьбовых соединений. При внешнем осмотре проверить выключатель на отсутствие механических повреждений.
Характеристики температуры окружающей среды
Температура эксплуатации -25 °C … +60 °C
Температура хранения -40 °C … +80 °C
Средний срок службы изделия
Средний срок службы устанавливается 20 лет при соблюдении потребителем условий эксплуатации, транспортировки и хранения.
Сведения об утилизации
После окончания эксплуатации выключатели подлежат разборке и сортировке на цветные и черные металлы. Применяемые в конструкции выключателей материалы не содержат взрыво- и пожароопасных токсичных и вредных веществ и подлежат утилизации в установленном в регионах порядке. Утилизируемые материалы не являются опасными для окружающей среды.
Сведения о маркировке
На изделие наносится товарный знак "Allen-Bradley", наименование продукции, код даты изготовления и Единый знак обращения продукции на рынке государств- членов ЕАЭС.
Сведения о производителе
Rockwell Automation, Inc., 1201 South 2nd Street, Milwaukee, WI 53204, USA, Телефон: +1-414-382-2000, факс: +7-414-382-4444 на заводе-изготовителе Rockwell Automation Sp. z o.o., ul. Rożdzieńska 49, 40-382 Katowice, Польша (код места производства 1170 или 1270 указан на изделии).

For Technical Support, visit rok.auto/support.
Rockwell Automation maintains current product environmental compliance information on its website at rok.auto/pec.
Product certificates are located in the Rockwell Automation Literature Library: rok.auto/certifications.
Rockwell Otomayson Ticaret A.Ş., Kar Plaza İş Merkezi E Blok Kat:6 34752 İçerenköy, İstanbul, Tel: +90 (216) 5698400 EEE Yönetmeliğine Uygundur

Connect with us.

rockwellautomation.com — expanding **human possibility**®

AMERICAS: Rockwell Automation, 1201 South Second Street, Milwaukee, WI 53204-2496 USA, Tel: (1) 414.382.2000, Fax: (1) 414.382.4444
EUROPE/MIDDLE EAST/AFRICA: Rockwell Automation NV, Pegasus Park, De Kleetlaan 12a, 1831 Diegem, Belgium, Tel: (32) 2 663 0600, Fax: (32) 2 663 0640
ASIA PACIFIC: Rockwell Automation, Level 14, Core F, Cyberport 3, 100 Cyberport Road, Hong Kong, Tel: (852) 2887 4788, Fax: (852) 2508 1846
UNITED KINGDOM: Rockwell Automation Ltd. Pitfield, Kiln Farm Milton Keynes, MK11 3DR, United Kingdom, Tel: (44)(1908) 838-800, Fax: (44)(1908) 261-917

Publication 140MT-IN018D-MU-P - May 2025 | Supersedes Publication 140MT-IN018C-MU-P - October 2024
Copyright © 2025 Rockwell Automation, Inc. All Rights Reserved. Printed in USA.

PN-650007
DIR 10006443768 (Version 03)