




1. a sinusoid is a spinning phasor

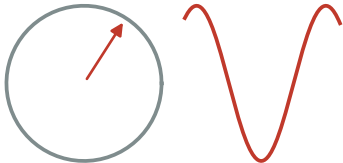


2. every signal is a sum of sinusoids




3. short in time = wide in frequency

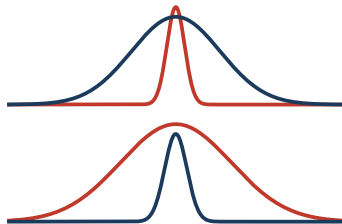

4. an LTI system smears with $h(t)$

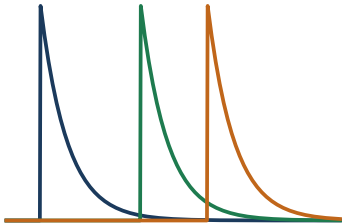

5. strip the carrier: complex envelope

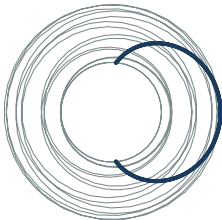

6. the FFT sees through a window

