CyberBrick RC Setup Guide

Guide by Jonas_2603 | MakerWorld profile

M1A2 Abrams SEP v3 — Model setup manual



Open the M1A2 Abrams SEP v3 RC Tank on MakerWorld

CyberBrick RC Setup Guide

Version 1.0 | M1A2 Abrams SEP v3 tank | Illustrated desktop setup manual


A beginner-friendly clean setup and recovery workflow using the CyberBrick Desktop application and the matching MakerWorld project. Screenshots reflect the supplied desktop interface; labels may change in later versions.

Before you begin: Fully charge the correct batteries for the remote and tank; use a known USB-C **data** cable; keep both boards accessible; keep tracks off the ground for testing. Never use an unsuitable battery or force a connector. Confirm the model-specific wiring and power requirements in its assembly guide.


Important distinction: USB flashing is a useful clean-install/recovery path, but is not necessarily required for every new board. If both boards already connect and accept the correct RC project, you may begin with Step 3. For a fresh clean setup or suspected incorrect firmware, use Steps 1–2.

Step 1: Open the USB Update Tool

Launch CyberBrick Desktop. Open the profile menu on the Home screen, select Settings, then USB Update Tool.

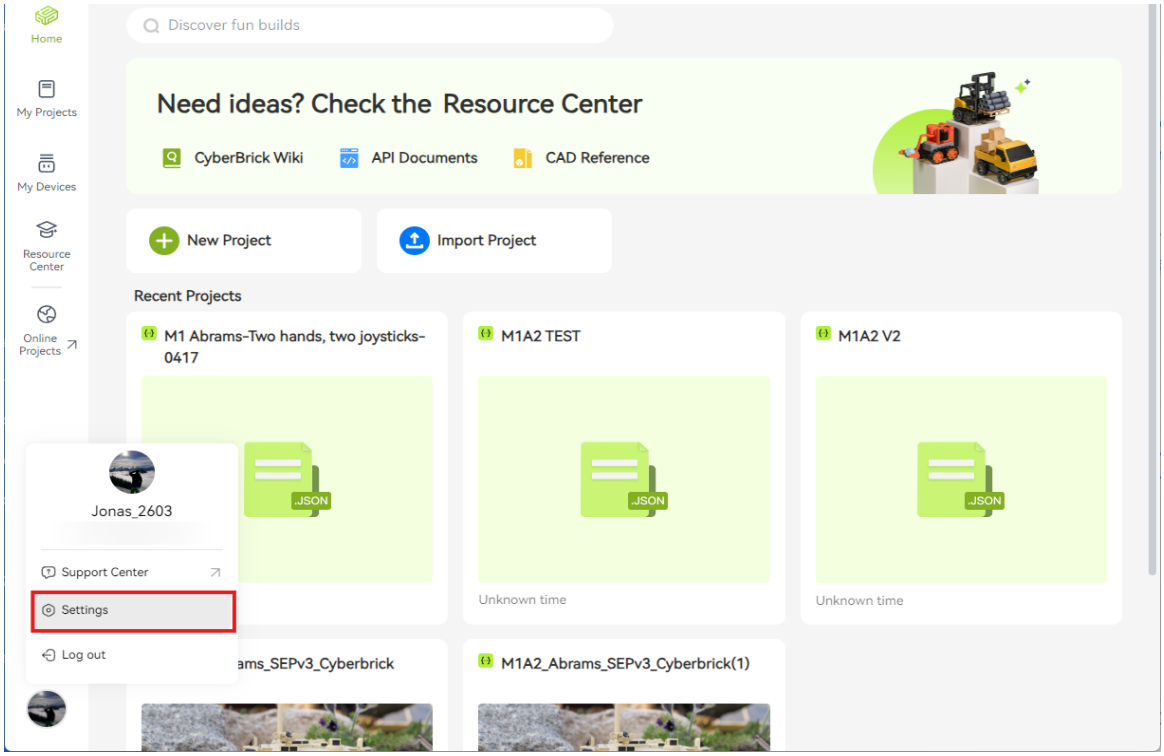

Screenshot 1 — Open the profile menu and select Settings.

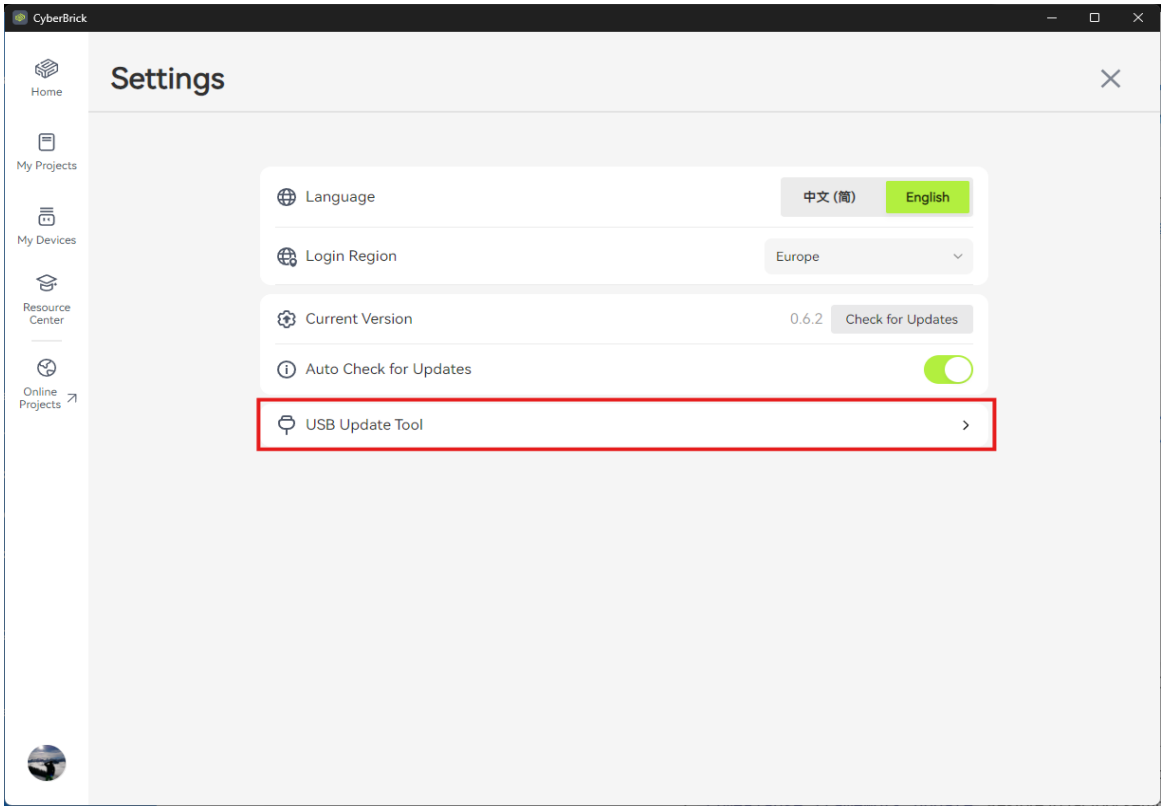

Screenshot 2 — Open USB Update Tool.

Step 2: Flash the RC framework (clean-install route)

Connect **only one CyberBrick controller core at a time** to the computer with a USB-C data cable. Follow the official wired firmware procedure exactly, selecting the **RC framework** appropriate for the hardware. Wait for a clear success message before unplugging. Repeat for the second board.


Official instructions: Bambu Lab wired firmware guide. This guide is authoritative for the flashing buttons and sequence; do not guess recovery key combinations or use unrelated ESP32 firmware.

Safety: Never unplug the USB-C cable or interrupt power while firmware is being written. If flashing fails, retry only according to the official recovery instructions.


Step 3: Add the transmitter and receiver to My Devices

Connect the first board individually via USB-C. In CyberBrick Desktop, open **My Devices** → **Add Device**. Select the detected board and complete any prompts. Repeat for the other board, again connecting it individually.

Identify which physical board will be the **transmitter (remote)** and which will be the **receiver (tank)**.

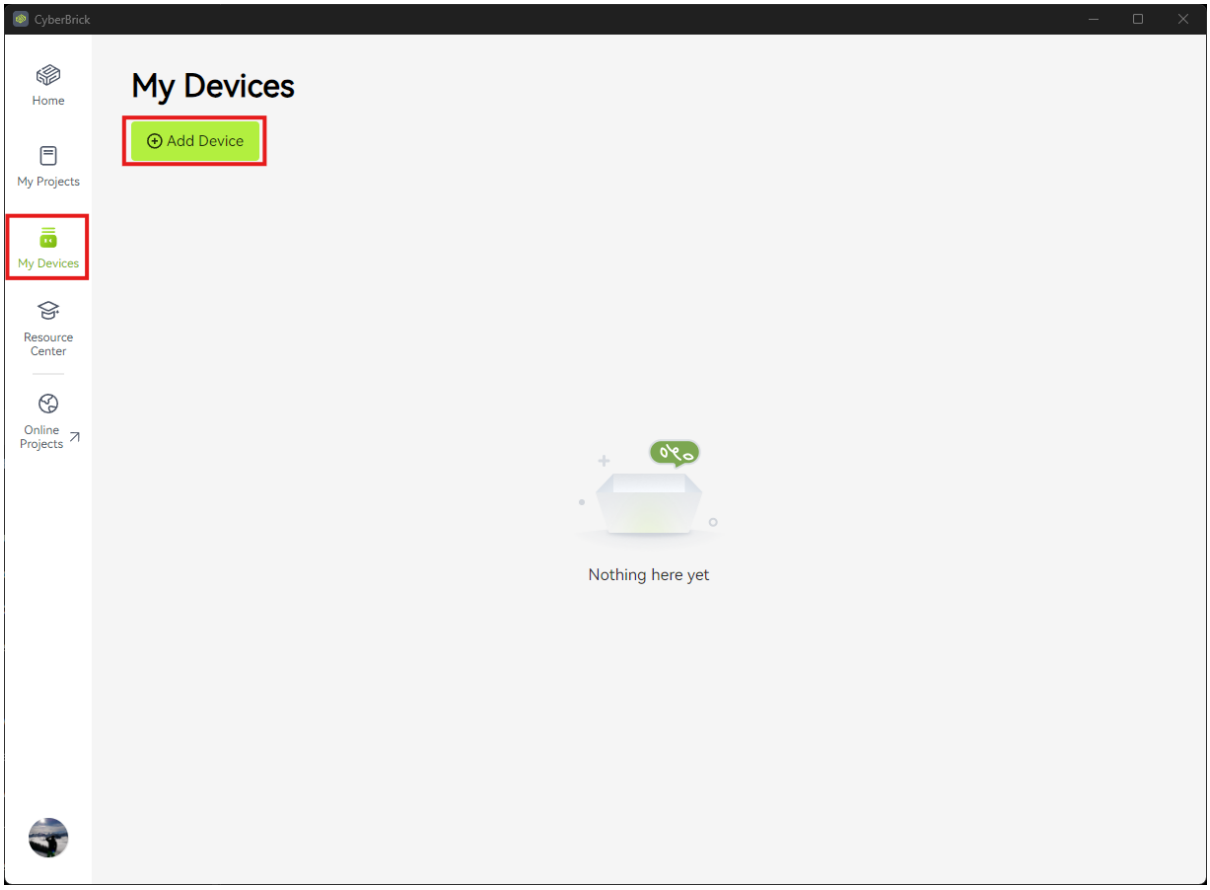

Screenshot 3 — Open My Devices and choose Add Device.

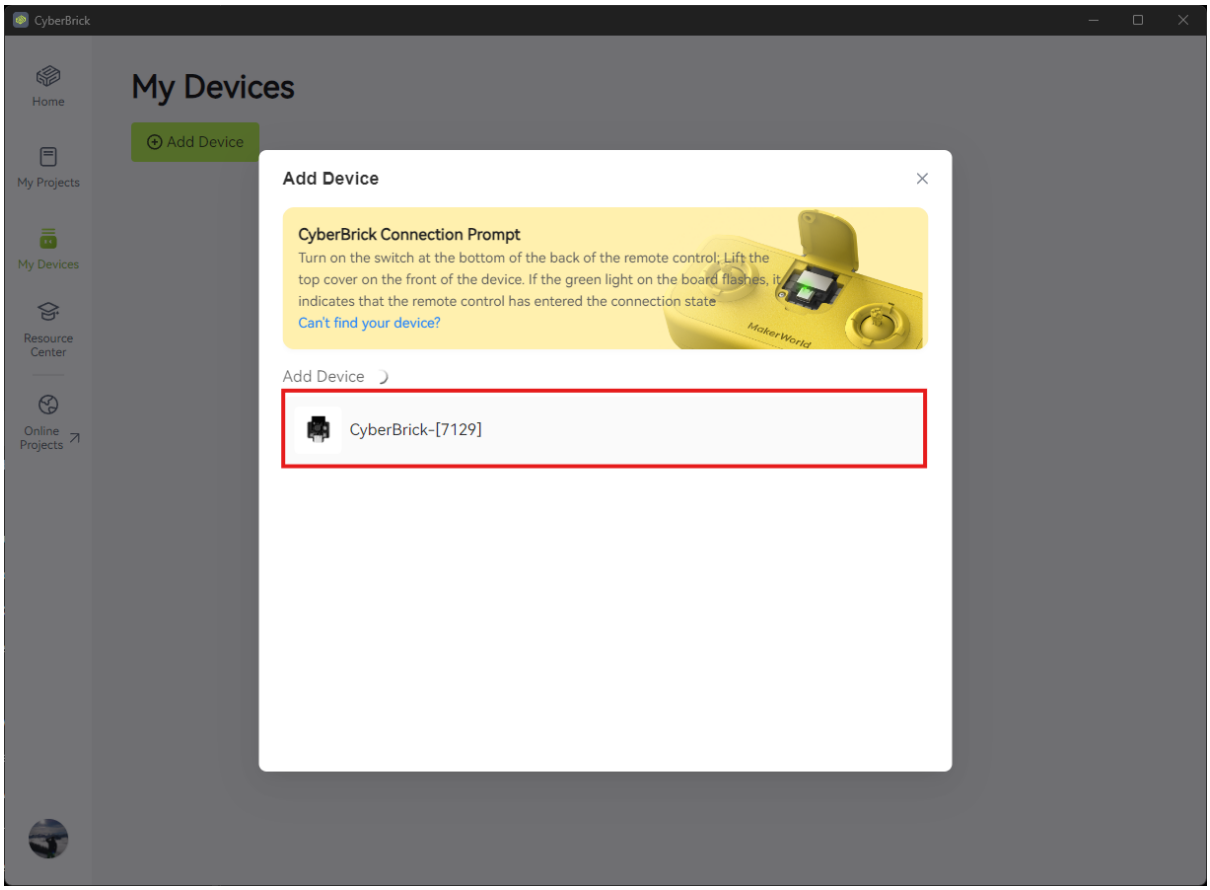

Screenshot 4 — Choose the board detected in the Add Device dialog.

Step 4: Check for firmware updates

For each registered board, allow the application to finish connecting and run any offered **official** firmware updates. Wait until the board reports that it is up to date, then disconnect USB-C.

Do not assume both boards have the same firmware status; check each one separately.


Step 5: Power both boards and connect by Bluetooth

Power the remote and receiver using their **correct, charged** batteries. Enable Bluetooth on your computer. Keep both boards nearby and accessible.

Bluetooth connects each board to CyberBrick Desktop for configuration; it is **not** the connection that must stay open while driving.

Step 6: Verify both boards in My Devices

Open **My Devices** again and connect both boards. Verify that both appear and are available before opening the tank project. If a board is missing, check power, Bluetooth permissions, and whether another device is already connected.

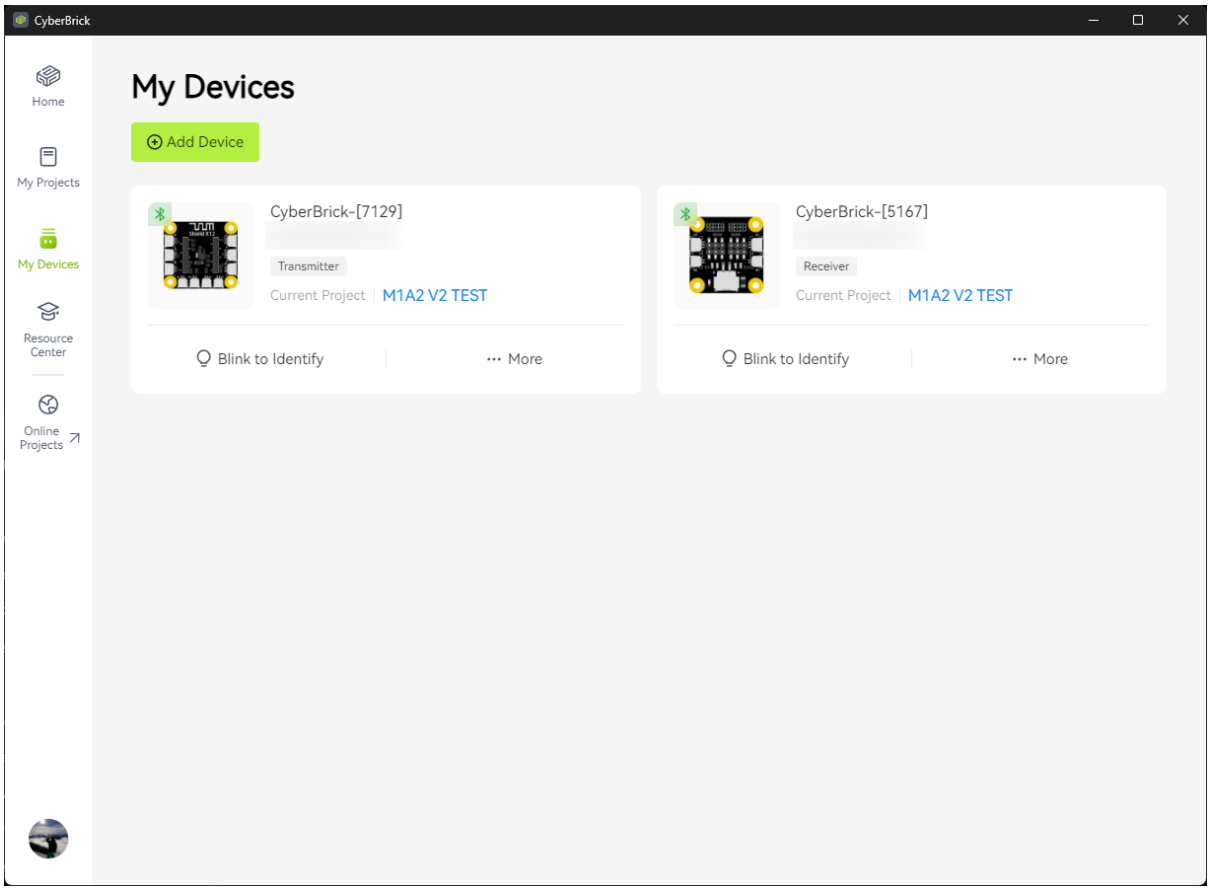


Screenshot 5 — Both registered boards shown under My Devices.

Step 7: Open the exact tank project from MakerWorld

Go to your **M1A2 Abrams SEP v3 CyberBrick** MakerWorld project page. Under **CyberBrick Files**, click **Open in CyberBrick Desktop**.

Use the configuration provided with **this exact model**, not one from another tank version.


Open M1A2 Abrams tank model on MakerWorld

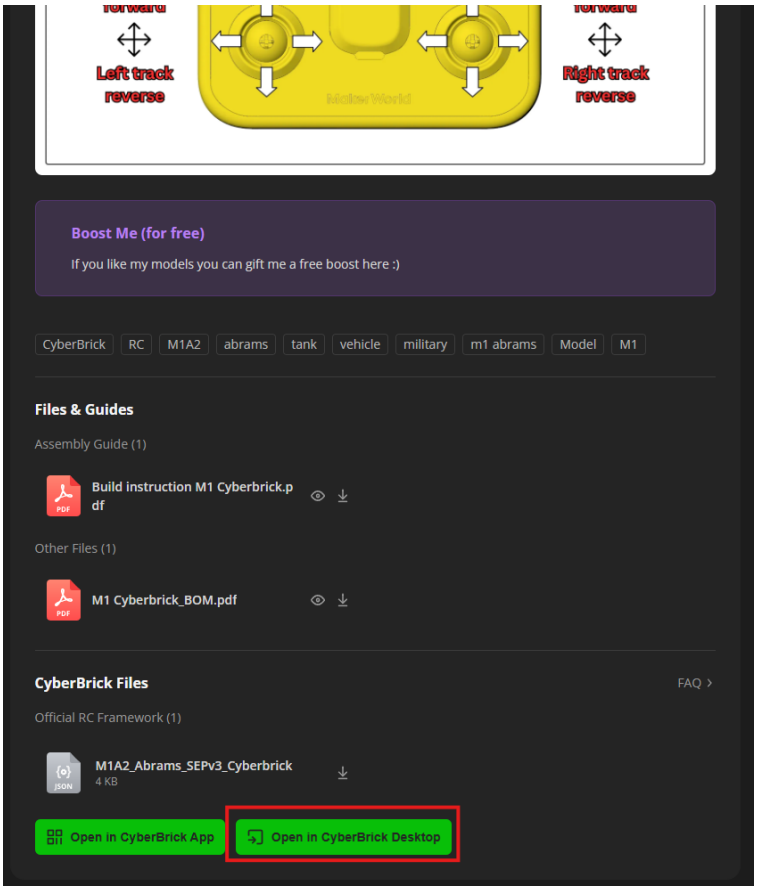

Screenshot 6 — On MakerWorld, choose Open in CyberBrick Desktop.

Step 8: Start sending the project


CyberBrick Desktop opens the project configuration. Check that it contains **Remote** and **M1_Tank_Receiver**. Click **Send to Device**.

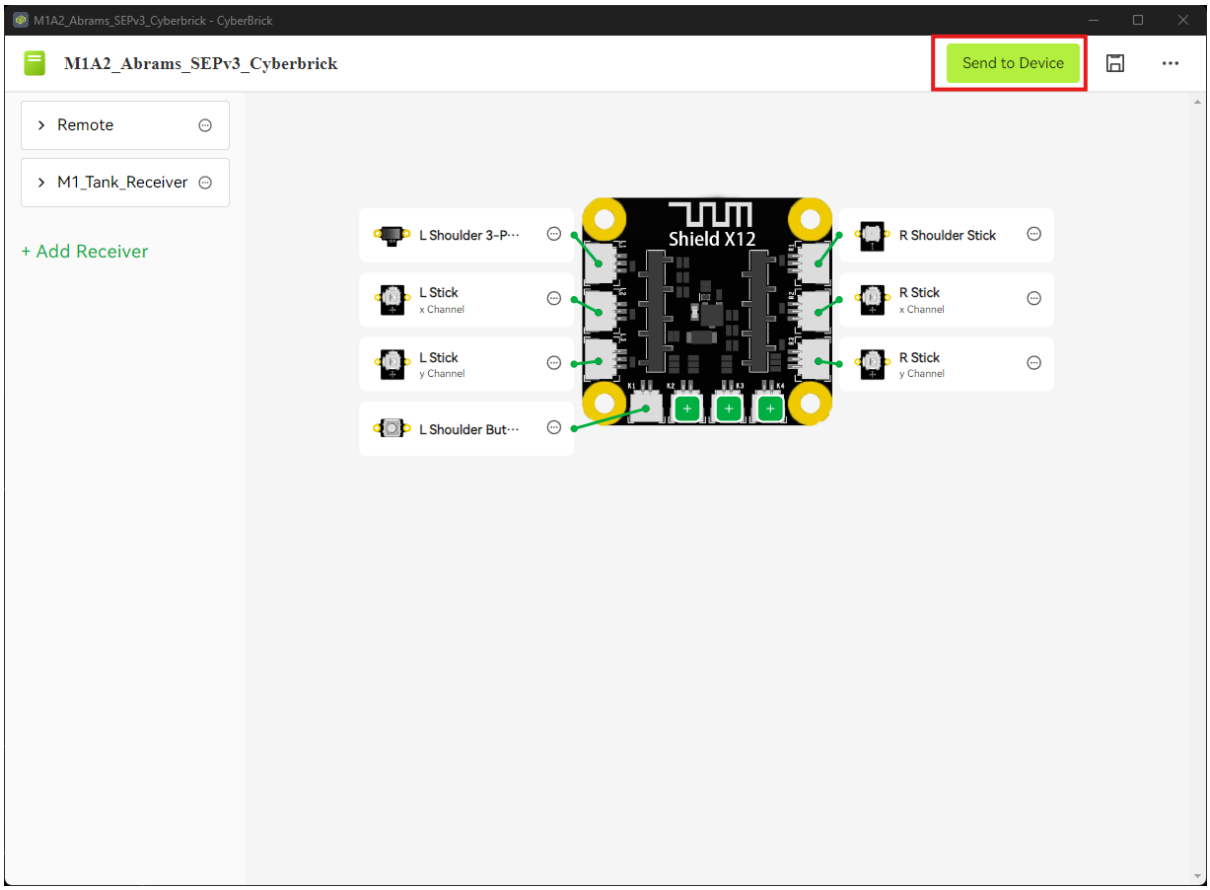

Screenshot 7 — Open the project and click Send to Device.

Step 9: Open the device selectors

On the assignment page, click **+ Select Device** under **Remote / Transmitter**. The receiver also needs a device assignment.

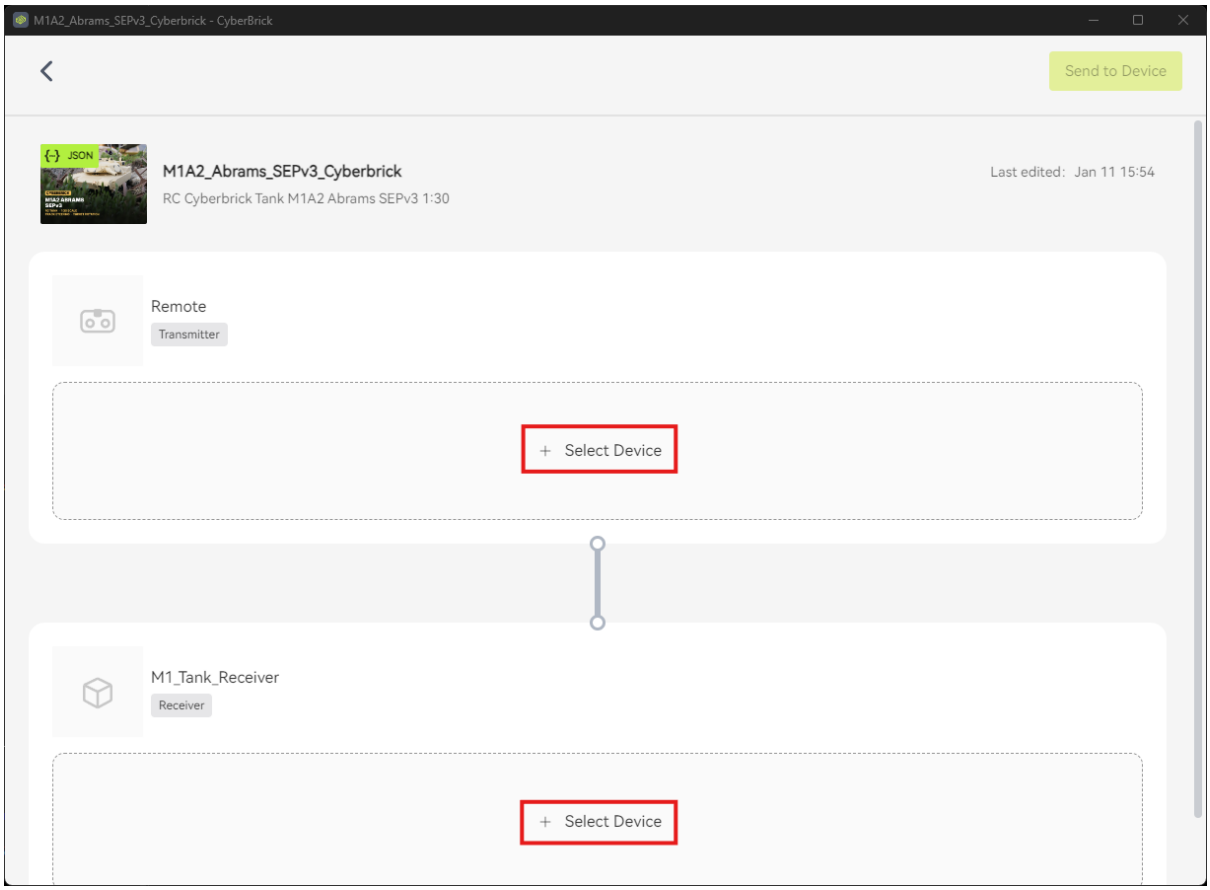


Screenshot 8 — Choose Select Device for transmitter and receiver.

Step 10: Assign the correct boards

Choose your actual remote controller board as **Transmitter**. The receiver may populate automatically; otherwise click **+ Select Device** under **M1_Tank_Receiver** and choose the tank board.


Double-check both assignments. Use **Blink to Identify** if you are uncertain which physical board is which. Do not accidentally assign the same board to both roles.

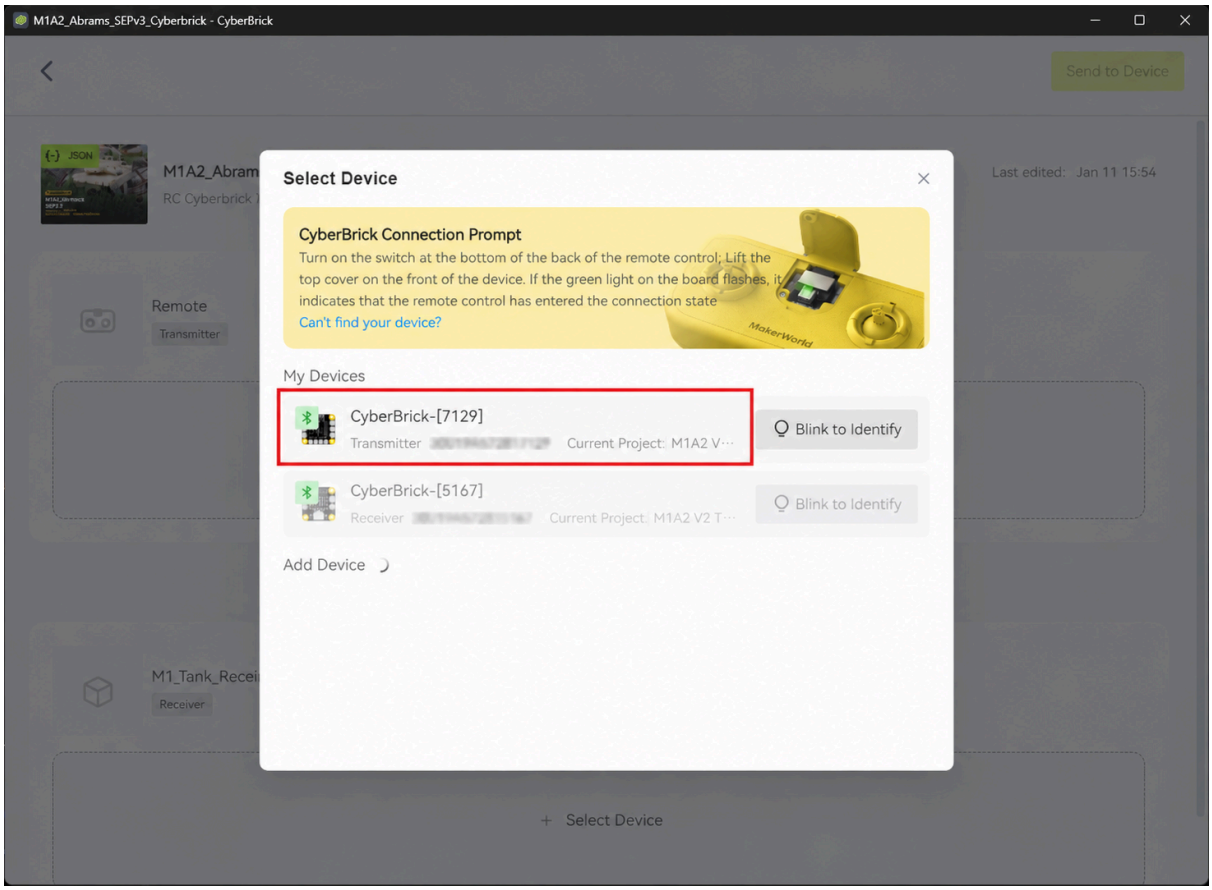

Screenshot 9 — Select the correct transmitter board from My Devices.

Step 11: Send the configuration and pair

Once the correct transmitter and receiver appear in their respective slots, click **Send to Device**. This workflow uploads the project and includes the pairing operation.

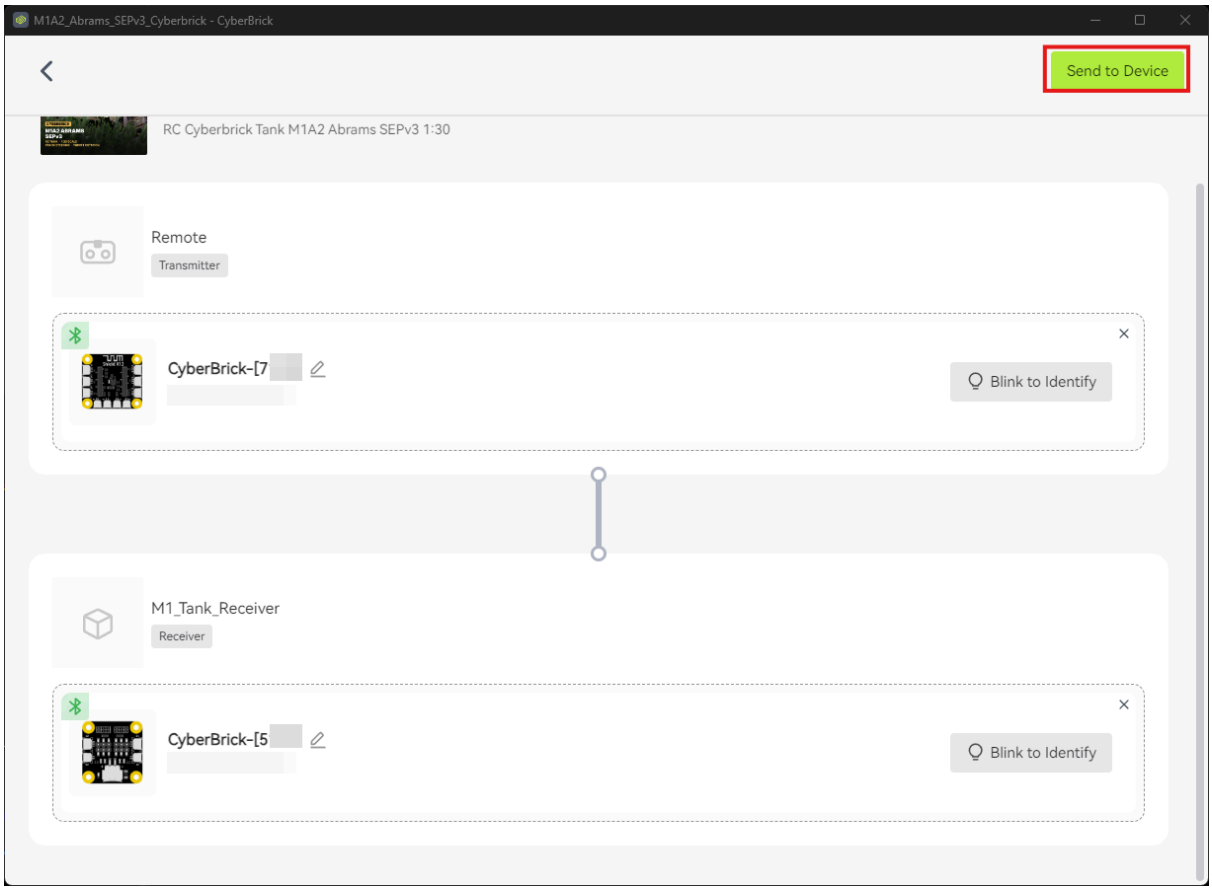


Screenshot 10 — Check both boards are assigned, then click Send to Device.

Step 12: Wait for every operation to finish

Leave both devices powered and connected. The software may process transmitter firmware/software, receiver firmware/software, and **Upload config & Pair device** in sequence. This can take several minutes.

Do not disconnect USB, Bluetooth, or battery power while the process is running. A progress percentage on one board is not confirmation that the entire job is finished.

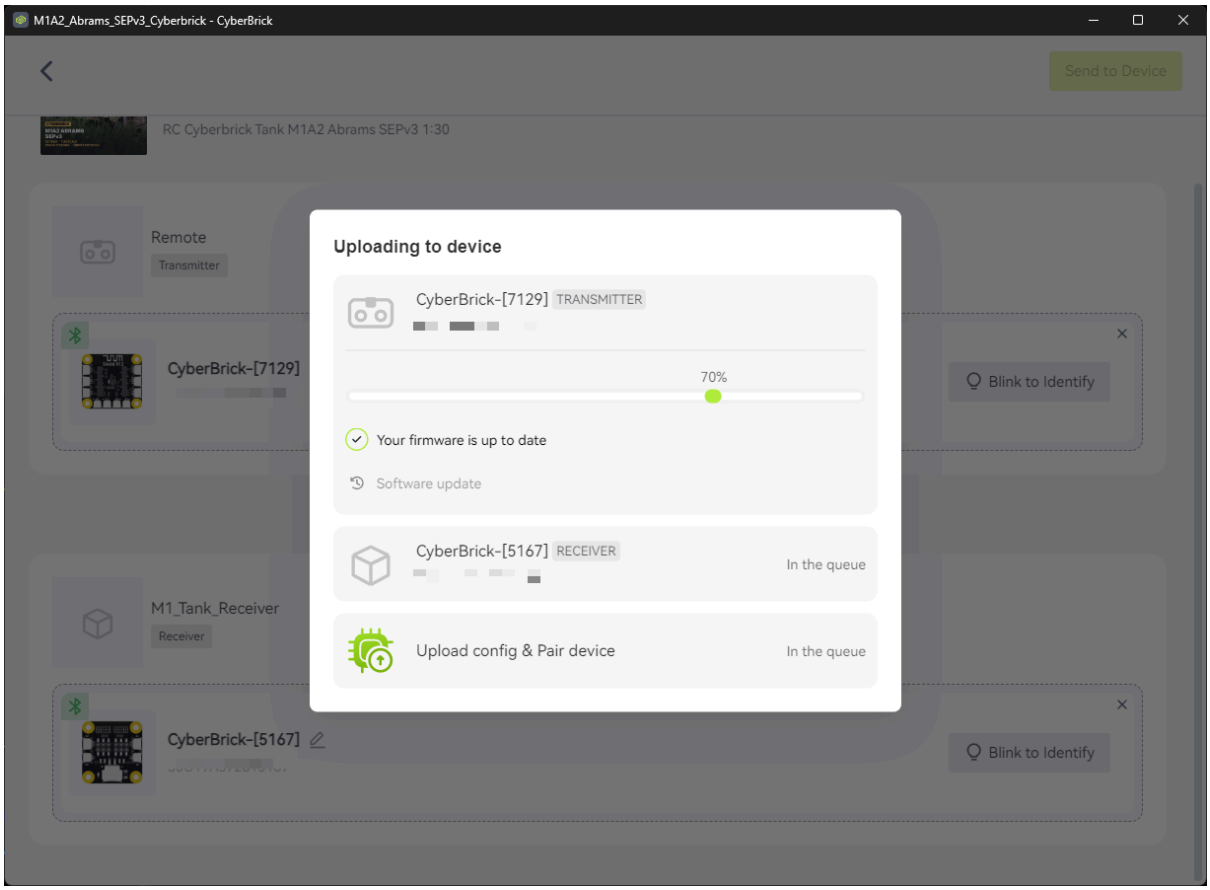


Screenshot 11 — Wait while firmware, software and pairing/configuration upload complete.

Step 13: Confirm success, then perform a safe test

Check for green success indicators for **Transmitter**, **Receiver**, and **Upload config & Pair device**. Only then click **Close**.

For the first test, place the tank on a stand with both tracks clear of the surface. Switch on the remote and tank, gently test both tracks and release the sticks to confirm the motors stop. If controls behave unexpectedly, power down immediately and check the configuration and wiring.

Once the transmitter and receiver are paired and running their uploaded project, the computer and CyberBrick Desktop do not need to remain connected for normal RC operation.

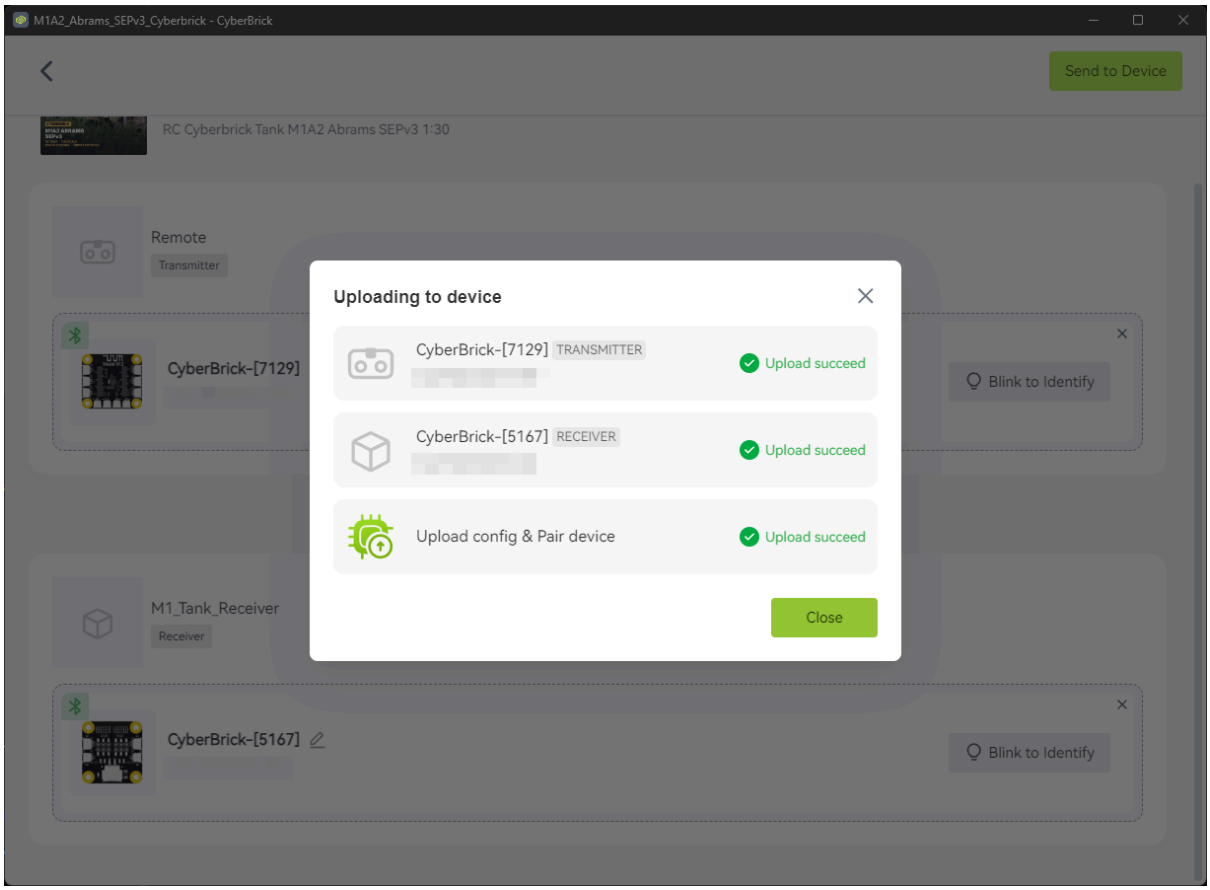

Screenshot 12 — All three operations report Upload succeed.

Quick troubleshooting

• **Board not found:** Confirm a data-capable USB-C cable or charged battery, Bluetooth permission, and that the board is not connected to another device.

• **Wrong device assignment:** Use Blink to Identify, then reselect transmitter and receiver.

• **Upload interrupted:** Recharge batteries, reconnect both boards, and retry from the application; do not improvise low-level flashing steps.

• **Both uploads succeeded but tank does not move:** Check power supply, motor wiring, model-specific receiver ports, and RC pairing. Test with tracks raised.

• **Receiver USB-C becomes inaccessible after assembly:** Complete the setup and first functional test before permanently enclosing it.

References and verification notes

Official wired flashing instructions:
https://wiki.bambulab.com/en/cyberbrick/troubleshooting/wired-firmware-guide

Official Maker's Supply CyberBrick User's Manual:
https://3d.nice-cdn.com/upload/file/Maker_s_Supply_CyberBrick_User_s_Manual.pdf

Bambu Lab community desktop-app discussion:
https://forum.bambulab.com/t/cyberbrick-desktop-app-manual-instructions-anything/220577