
Installation Instruction

Wide Spread Lavatory/Bath Tub Faucet

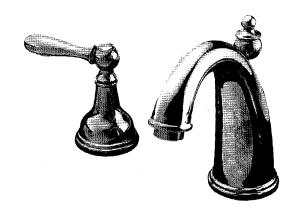




AW 0707 00202

Before Your Installation

Check to make sure you have the following parts indicated below:

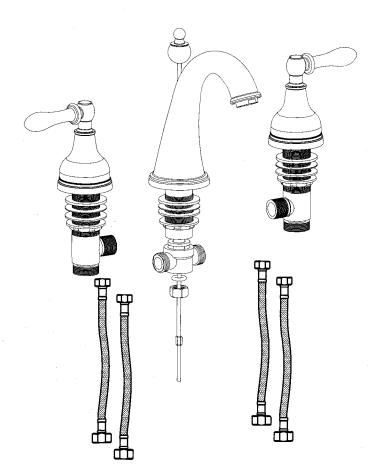

Tools You Will Need







Anaerobic adhesive (supplied) Phillips screwdriver

Adjustable wrench




Small spanner



Small spanner (Supplied)


Replacement Parts

Keep this manual for ordering replacement parts.

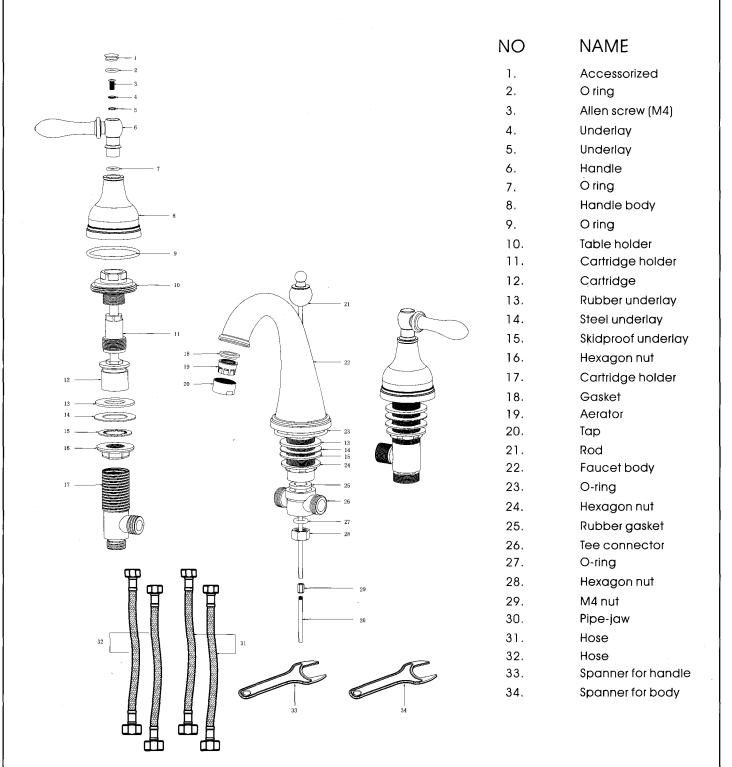

Faucet Installation Procedures



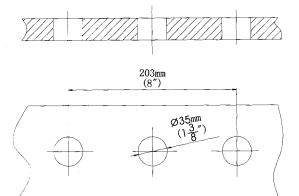

Step2







Step3




Step4

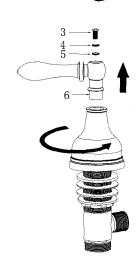

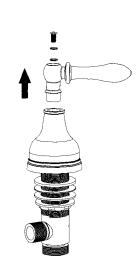

Step 5









Step 6






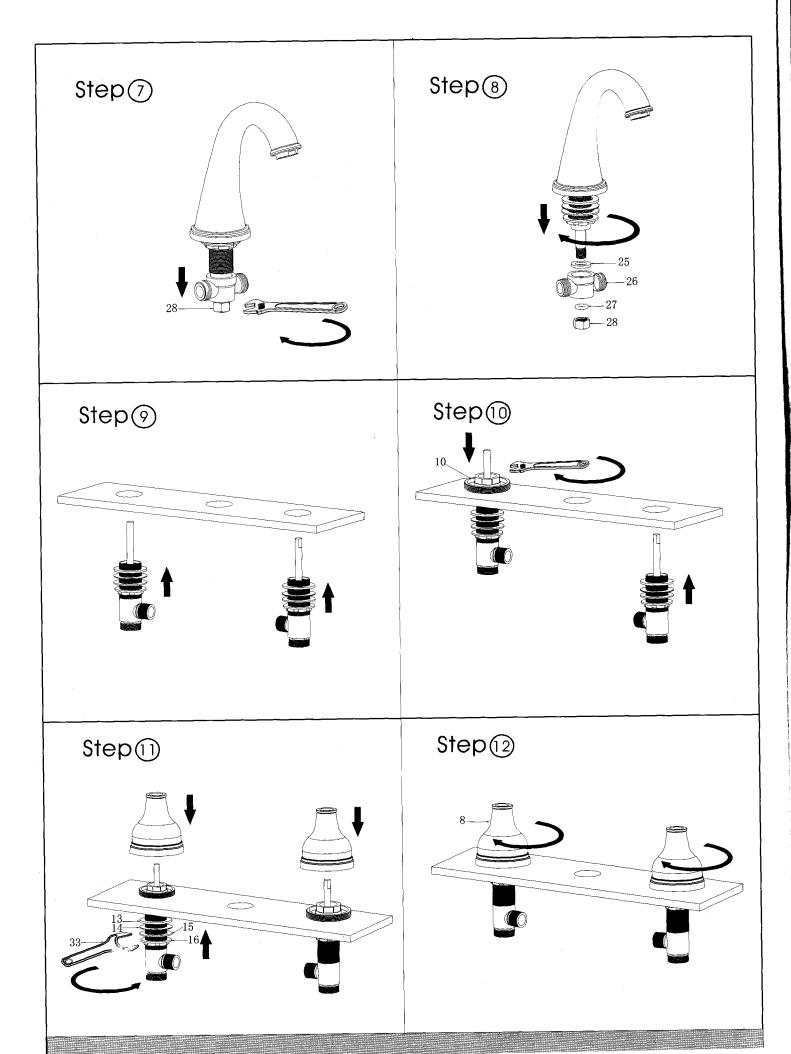


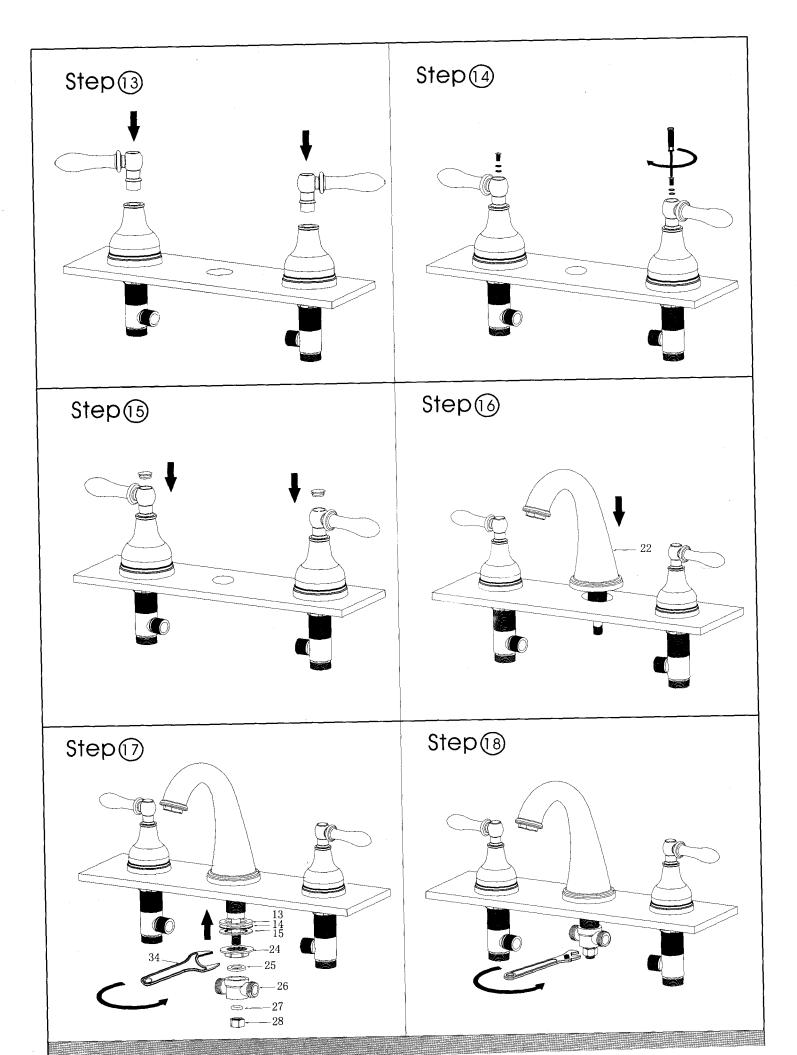


Step(9)

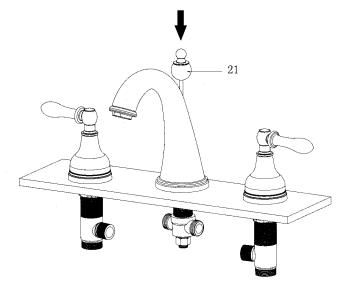


Step20

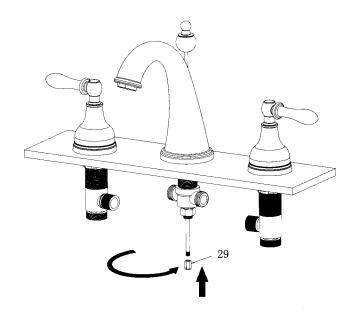

Step(2)

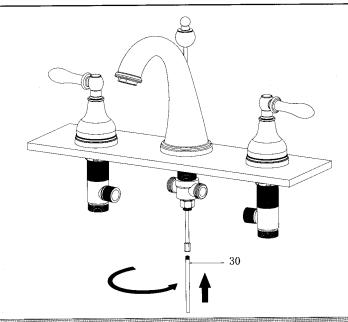

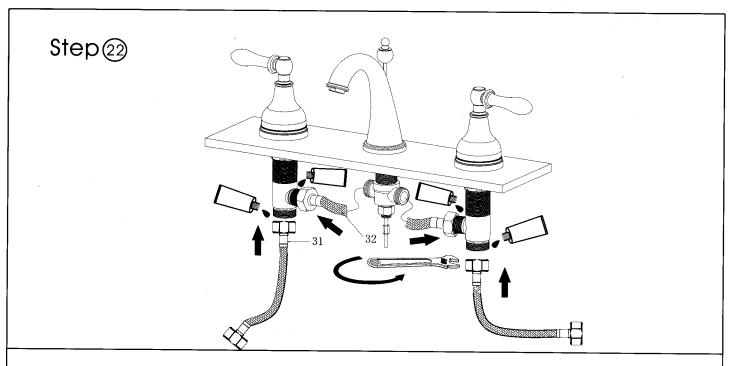

Step23

