Installation Instruction

8" Wide Spread Lavatory Faucet






N 0707 02801

Before Your Installation

Check to make sure you have the following parts indicated below

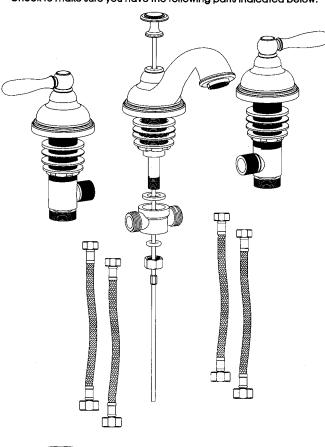

Tools You Will Need







Anaerobic adhesive (supplied)

Phillips screwdrive

Adjustable wrench



Spanner (Supplied)




Hexagon Wrench (Supplied)






Replacement Parts

Keep this manual for ordering replacement parts.

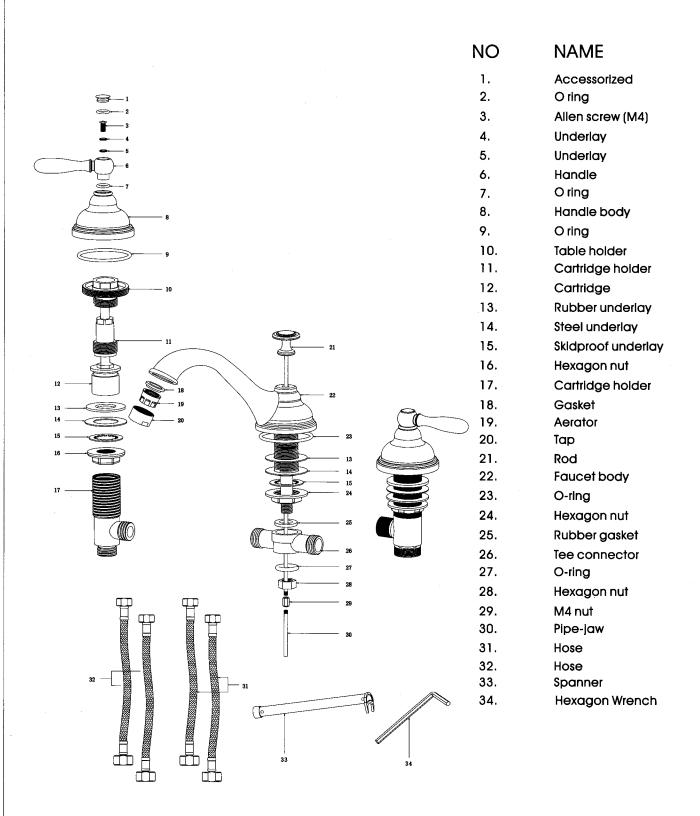

Faucet Installation Procedures

Step 1

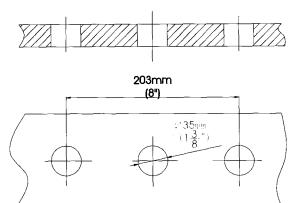


 ${\tt Step 2}$







Step 3





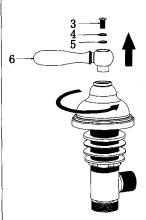

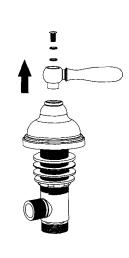


Step 5









Step 6

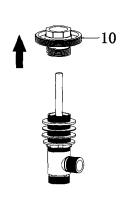




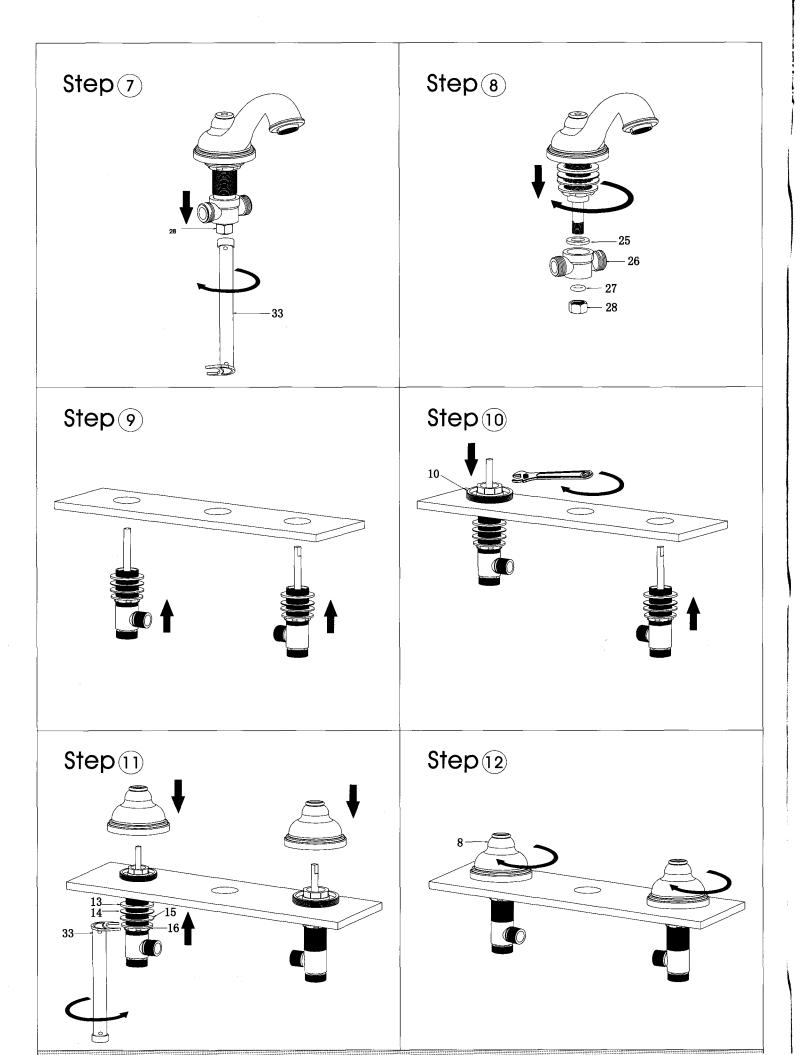


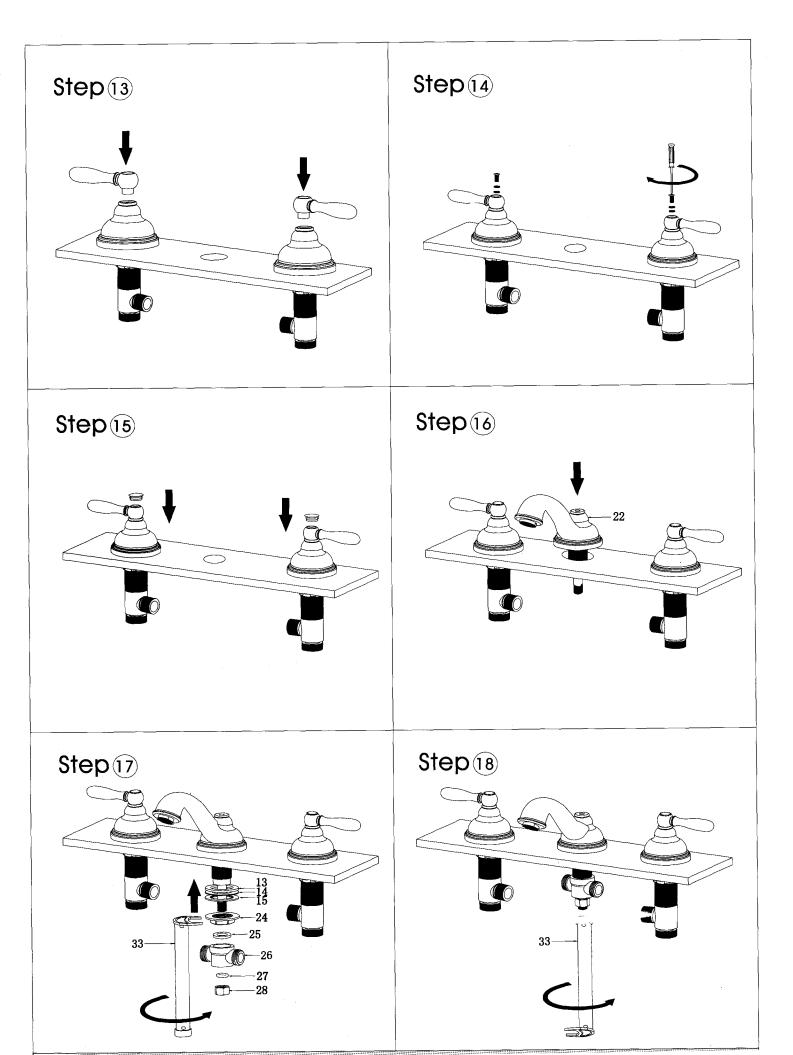


Step 19

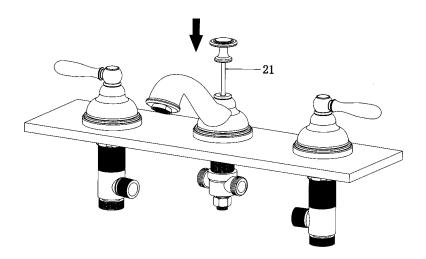


Step 20

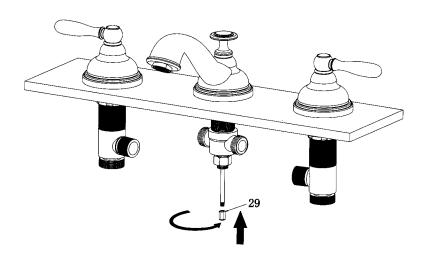


Step 21

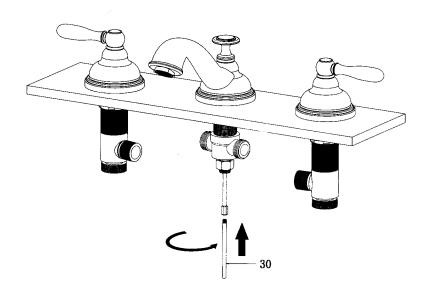


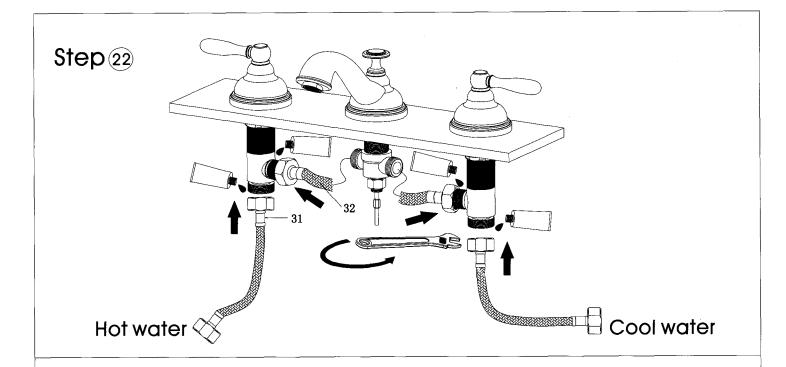

Step 23

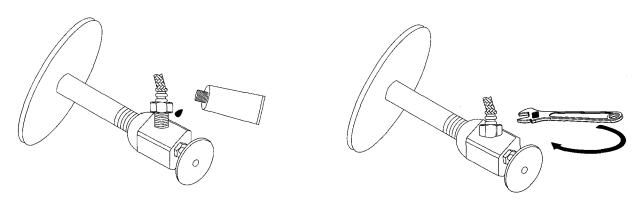


Step 24

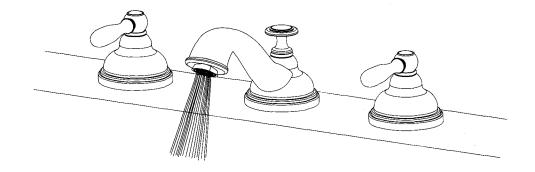


Replacement Parts

Keep this manual for ordering replacement parts.

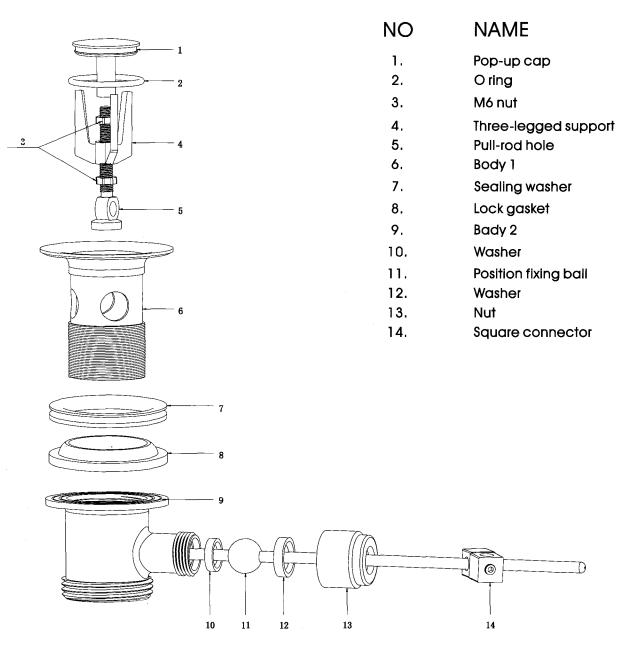


Installation Procedures


Step 1

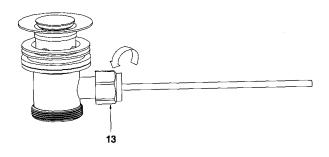


Step 2

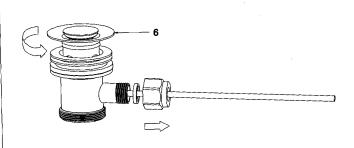


Step 3

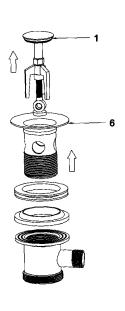

Step 4

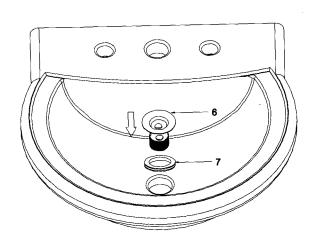

Step 5

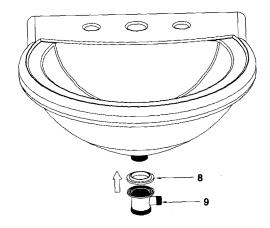

Step 6

