

COMPUTER ORGANIZATION AND DE

The Hardware/Software Interface



Chapter 1

Computer Abstractions and Technology

The Computer Revolution

- Progress in computer technology
 - Underpinned by Moore's Law
- Makes novel applications feasible
 - Computers in automobiles
 - Cell phones
 - Human genome project
 - World Wide Web
 - Search Engines
- Computers are pervasive

Classes of Computers

- Personal computers
 - General purpose, variety of software
 - Subject to cost/performance tradeoff
- Server computers
 - Network based
 - High capacity, performance, reliability
 - Range from small servers to building sized

Classes of Computers

- Supercomputers
 - High-end scientific and engineering calculations
 - Highest capability but represent a small fraction of the overall computer market
- Embedded computers
 - Hidden as components of systems
 - Stringent power/performance/cost constraints

What You Will Learn

- How programs are translated into the machine language
 - And how the hardware executes them
- The hardware/software interface
- What determines program performance
 - And how it can be improved
- How hardware designers improve performance
- What is parallel processing

Understanding Performance

- Algorithm
 - Determines number of operations executed
- Programming language, compiler, architecture
 - Determine number of machine instructions executed per operation
- Processor and memory system
 - Determine how fast instructions are executed
- I/O system (including OS)
 - Determines how fast I/O operations are executed

Seven Great Ideas

- Use abstraction to simplify design
- Make the **common case fast**





- Performance via parallelism
- Performance via pipelining



- *Hierarchy* of memories
- **Dependability** via redundancy














Below Your Program



- Written in high-level language
- System software
 - Compiler: translates HLL code to machine code
 - Operating System: service code
 - Handling input/output
 - Managing memory and storage
 - Scheduling tasks & sharing resources

Hardware

Processor, memory, I/O controllers

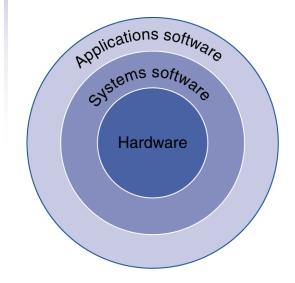

Levels of Program Code

- High-level language
 - Level of abstraction closer to problem domain
 - Provides for productivity and portability
- Assembly language
 - Textual representation of instructions
- Hardware representation
 - Binary digits (bits)
 - Encoded instructions and data

High-level language program (in C)

Assembly language program

(for RISC-V)


```
swap(int v[], int k)
{int temp;
   temp = v[k];
   v[k] = v[k+1];
   v[k+1] = temp;
}
```

Compiler

swap:

slli x6, x11, 3
add x6, x10, x6
ld x5, 0(x6)
ld x7, 8(x6)
sd x7, 0(x6)
sd x5, 8(x6)


jalr x0. 0(x1)




Binary machine language program (for RISC-V)

Components of a Computer

The BIG Picture





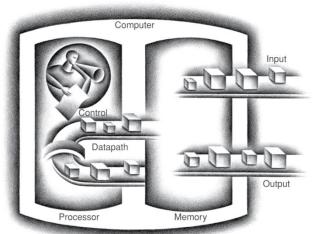

- Same components for all kinds of computer
 - Desktop, server, embedded
- Input/output includes
 - User-interface devices
 - Display, keyboard, mouse
 - Storage devices
 - Hard disk, CD/DVD, flash
 - Network adapters
 - For communicating with other computers

Inside the Processor (CPU)

- Datapath: performs operations on data
- Control: sequences datapath, memory, ...
- Cache memory
 - Small fast SRAM memory for immediate access to data

Abstractions

The BIG Picture

- Abstraction helps us deal with complexity
 - Hide lower-level detail
- Instruction set architecture (ISA)
 - The hardware/software interface
- Application binary interface
 - The ISA plus system software interface
- Implementation
 - The details underlying and interface

A Safe Place for Data

- Volatile main memory
 - Loses instructions and data when power off
- Non-volatile secondary memory
 - Magnetic disk
 - Flash memory
 - Optical disk (CDROM, DVD)









Networks

- Communication, resource sharing, nonlocal access
- Local area network (LAN): Ethernet
- Wide area network (WAN): the Internet
- Wireless network: WiFi, Bluetooth





Defining Performance

- Which airplane has the best performance?
 - Boeing 737
 - BAC/ Sub Concorde
 - Boeing 777-200LR
 - Airbus A380-800(P20, Fig1-14)

Response Time and Throughput

- Response time
 - How long it takes to do a task
- Throughput
 - Total work done per unit time
 - e.g., tasks/transactions/... per hour
- How are response time and throughput affected by
 - Replacing the processor with a faster version?
 - Adding more processors?
- We'll focus on response time for now...

Relative Performance

- Define Performance = 1/Execution Time
- "X is n time faster than Y"

```
Performance<sub>x</sub>/Performance<sub>y</sub>
```


- = Execution time $_{Y}$ /Execution time $_{X} = n$
- Example: time taken to run a program
 - 10s on A, 15s on B
 - Execution Time_B / Execution Time_A
 = 15s / 10s = 1.5
 - So A is 1.5 times faster than B

Measuring Execution Time

- Elapsed time
 - Total response time, including all aspects
 - Processing, I/O, OS overhead, idle time
 - Determines system performance
- CPU time
 - Time spent processing a given job
 - Discounts I/O time, other jobs' shares
 - Comprises user CPU time and system CPU time
 - Different programs are affected differently by CPU and system performance

CPU Clocking

 Operation of digital hardware governed by a constant-rate clock

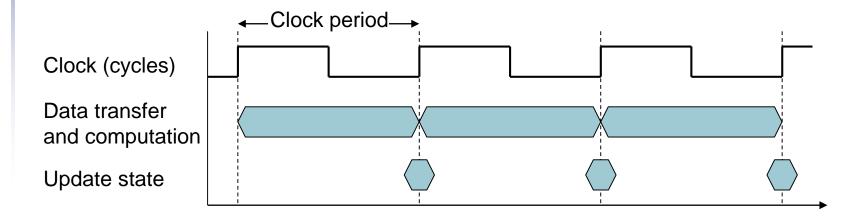

- Clock period: duration of a clock cycle
 - e.g., $250ps = 0.25ns = 250 \times 10^{-12}s$
- Clock frequency (rate): cycles per second
 - e.g., $4.0GHz = 4000MHz = 4.0 \times 10^9Hz$

CPU Time

CPUTime = CPUClock Cycles × Clock Cycle Time

= CPUClock Cycles

Clock Rate

- Performance improved by
 - Reducing number of clock cycles
 - Increasing clock rate
 - Hardware designer must often trade off clock rate against cycle count

CPU Time Example

- Computer A: 2GHz clock, 10s CPU time
- Designing Computer B
 - Aim for 6s CPU time
 - Can do faster clock, but causes 1.2 x clock cycles
- How fast must Computer B clock be?

$$\begin{aligned} \text{Clock Rate}_{\text{B}} &= \frac{\text{Clock Cycles}_{\text{B}}}{\text{CPUTime}_{\text{B}}} = \frac{1.2 \times \text{Clock Cycles}_{\text{A}}}{6\text{s}} \\ \text{Clock Cycles}_{\text{A}} &= \text{CPUTime}_{\text{A}} \times \text{Clock Rate}_{\text{A}} \\ &= 10\text{s} \times 2\text{GHz} = 20 \times 10^9 \\ \text{Clock Rate}_{\text{B}} &= \frac{1.2 \times 20 \times 10^9}{6\text{s}} = \frac{24 \times 10^9}{6\text{s}} = 4\text{GHz} \end{aligned}$$

Instruction Count and CPI

Clock Cycles = Instructio n Count \times Cycles per Instructio n

CPU Time = Instructio n Count \times CPI \times Clock Cycle Time $= \frac{\text{Instructio n Count} \times \text{CPI}}{\text{Clock Rate}}$

- Instruction Count for a program
 - Determined by program, ISA and compiler
- Average cycles per instruction
 - Determined by CPU hardware
 - If different instructions have different CPI
 - Average CPI affected by instruction mix

CPI Example

- Computer A: Cycle Time = 250ps, CPI = 2.0
- Computer B: Cycle Time = 500ps, CPI = 1.2
- Same ISA
- Which is faster, and by how much?

$$\begin{aligned} \text{CPU Time}_{A} &= \text{Instructio n Count} \times \text{CPI}_{A} \times \text{Cycle Time}_{A} \\ &= I \times 2.0 \times 250 \text{ps} = I \times 500 \text{ps} & \text{A is faster...} \end{aligned}$$

$$\begin{aligned} \text{CPU Time}_{B} &= \text{Instructio n Count} \times \text{CPI}_{B} \times \text{Cycle Time}_{B} \\ &= I \times 1.2 \times 500 \text{ps} = I \times 600 \text{ps} \end{aligned}$$

$$\begin{aligned} &= I \times 600 \text{ps} \\ &= I \times 500 \text{ps} \end{aligned}$$

$$\begin{aligned} &= I \times 600 \text{ps} \\ &= I \times 500 \text{ps} \end{aligned}$$

$$\begin{aligned} &= I \times 600 \text{ps} \\ &= I \times 500 \text{ps} \end{aligned}$$
 ...by this much

CPI in More Detail

 If different instruction classes take different numbers of cycles

$$Clock \ Cycles = \sum_{i=1}^{n} (CPI_{i} \times Instructio \ n \ Count_{i})$$

Weighted average CPI

$$CPI = \frac{Clock \ Cycles}{Instructio \ n \ Count} = \sum_{i=1}^{n} \left(CPI_{i} \times \frac{Instructio \ n \ Count}{Instructio \ n \ Count} \right)$$

Relative frequency

CPI Example

 Alternative compiled code sequences using instructions in classes A, B, C

Class	А	В	С
CPI for class	1	2	3
IC in sequence 1	2	1	2
IC in sequence 2	4	1	1

Sequence 1:

- IC = 5
- Clock Cycles= 2×1 + 1×2 + 2×3= 10
- Avg. CPI = 10/5 = 2.0

Sequence 2:

• Avg.
$$CPI = 9/6 = 1.5$$


Performance Summary

The BIG Picture


$$CPUTime = \frac{Instructio \ ns}{Program} \times \frac{Clock \ cycles}{Instructio \ n} \times \frac{Seconds}{Clock \ cycle}$$

- Performance depends on
 - Algorithm: affects IC, possibly CPI
 - Programming language: affects IC, CPI
 - Compiler: affects IC, CPI
 - Instruction set architecture: affects IC, CPI, T_c

Power Trends

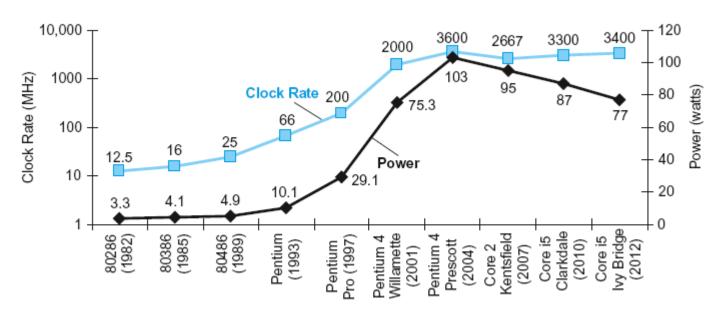

In CMOS IC technology

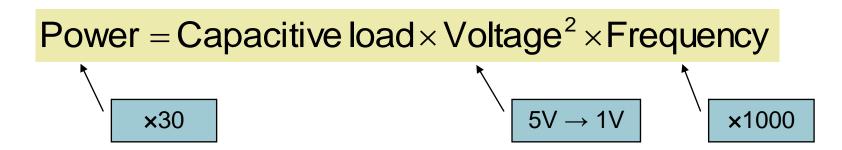

Reducing Power

- Suppose a new CPU has
 - 85% of capacitive load of old CPU
 - 15% voltage and 15% frequency reduction

$$\frac{P_{\text{new}}}{P_{\text{old}}} = \frac{C_{\text{old}} \times 0.85 \times (V_{\text{old}} \times 0.85)^2 \times F_{\text{old}} \times 0.85}{C_{\text{old}} \times V_{\text{old}}^2 \times F_{\text{old}}} = 0.85^4 = 0.52$$

- The power wall
 - We can't reduce voltage further
 - We can't remove more heat
- How else can we improve performance?

Pitfall: Amdahl's Law

 Improving an aspect of a computer and expecting a proportional improvement in overall performance

$$T_{\text{improved}} = \frac{T_{\text{affected}}}{\text{improvement factor}} + T_{\text{unaffected}}$$

- Example: multiply accounts for 80s/100s
 - How much improvement in multiply performance to get 5x overall?

$$20 = \frac{80}{n} + 20$$
 • Can't be done!

Corollary: make the common case fast

Fallacy: Low Power at Idle

- Look back at i7 power benchmark
 - At 100% load: 258W
 - At 50% load: 170W (66%)
 - At 10% load: 121W (47%)
- Google data center
 - Mostly operates at 10% 50% load
 - At 100% load less than 1% of the time
- Consider designing processors to make power proportional to load

Pitfall: MIPS as a Performance Metric

- MIPS: Millions of Instructions Per Second
 - Doesn't account for
 - Differences in ISAs between computers
 - Differences in complexity between instructions

$$\begin{split} \text{MIPS} &= \frac{\text{Instructio n count}}{\text{Execution time} \times 10^6} \\ &= \frac{\text{Instructio n count}}{\frac{\text{Instructio n count} \times \text{CPI}}{\text{Clock rate}}} = \frac{\text{Clock rate}}{\text{CPI} \times 10^6} \end{split}$$

CPI varies between programs on a given CPU

Concluding Remarks

- Cost/performance is improving
 - Due to underlying technology development
- Hierarchical layers of abstraction
 - In both hardware and software
- Instruction set architecture
 - The hardware/software interface
- Execution time: the best performance measure
- Power is a limiting factor
 - Use parallelism to improve performance