

#### COMPUTER ORGANIZATION AND DE

The Hardware/Software Interface



# **Chapter 3**


#### **Arithmetic for Computers**

# **Arithmetic for Computers**

- Operations on integers
  - Addition and subtraction
  - Multiplication and division
  - Dealing with overflow
- Floating-point real numbers
  - Representation and operations

# **Integer Addition**

Example: 7 + 6

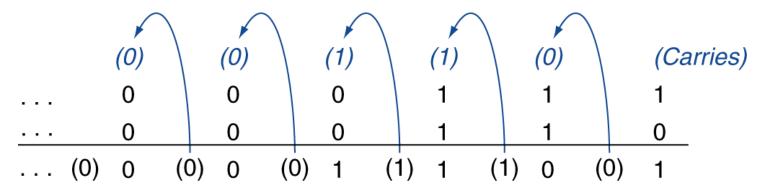

- Overflow if result out of range
  - Adding +ve and –ve operands, no overflow
  - Adding two +ve operands
    - Overflow if result sign is 1
  - Adding two –ve operands
    - Overflow if result sign is 0

# Integer Subtraction

- Add negation of second operand
- Example: 7 6 = 7 + (-6)

```
+7: 0000 0000 ... 0000 0111
```

<u>-6: 1111 1111 ... 1111 1010</u>

+1: 0000 0000 ... 0000 0001


- Overflow if result out of range
  - Subtracting two +ve or two –ve operands, no overflow
  - Subtracting +ve from –ve operand
    - Overflow if result sign is 0
  - Subtracting –ve from +ve operand
    - Overflow if result sign is 1

#### **Arithmetic for Multimedia**

- Graphics and media processing operates on vectors of 8-bit and 16-bit data
  - Use 64-bit adder, with partitioned carry chain
    - Operate on 8×8-bit, 4×16-bit, or 2×32-bit vectors
  - SIMD (single-instruction, multiple-data)
- Saturating operations
  - On overflow, result is largest representable value
    - c.f. 2s-complement modulo arithmetic
  - E.g., clipping in audio, saturation in video

# Floating Point

- Representation for non-integral numbers
  - Including very small and very large numbers
- Like scientific notation

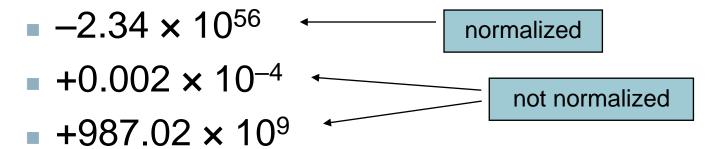

- In binary
  - $\bullet$  ±1. $xxxxxxxx_2 \times 2^{yyyy}$
- Types float and double in C

# Floating Point Standard

- Defined by IEEE Std 754-1985
- Developed in response to divergence of representations
  - Portability issues for scientific code
- Now almost universally adopted
- Two representations
  - Single precision (32-bit)
  - Double precision (64-bit)

# **IEEE Floating-Point Format**

single: 8 bits single: 23 bits double: 11 bits double: 52 bits

S Exponent Fraction

$$x = (-1)^{S} \times (1 + Fraction) \times 2^{(Exponent - Bias)}$$

- S: sign bit  $(0 \Rightarrow \text{non-negative}, 1 \Rightarrow \text{negative})$
- Normalize significand: 1.0 ≤ |significand| < 2.0</p>
  - Always has a leading pre-binary-point 1 bit, so no need to represent it explicitly (hidden bit)
  - Significand is Fraction with the "1." restored
- Exponent: excess representation: actual exponent + Bias
  - Ensures exponent is unsigned
  - Single: Bias = 127; Double: Bias = 1203

# Single-Precision Range

- Exponents 00000000 and 11111111 reserved
- Smallest value
  - Exponent: 00000001
    - $\Rightarrow$  actual exponent = 1 127 = -126
  - Fraction:  $000...00 \Rightarrow \text{significand} = 1.0$
  - $\pm 1.0 \times 2^{-126} \approx \pm 1.2 \times 10^{-38}$
- Largest value
  - Exponent: 11111110
    - $\Rightarrow$  actual exponent = 254 127 = +127
  - Fraction: 111...11 ⇒ significand ≈ 2.0
  - $\pm 2.0 \times 2^{+127} \approx \pm 3.4 \times 10^{+38}$


# **Double-Precision Range**

- Exponents 0000...00 and 1111...11 reserved
- Smallest value
  - Exponent: 0000000001⇒ actual exponent = 1 - 1023 = -1022
  - Fraction:  $000...00 \Rightarrow \text{significand} = 1.0$
  - $= \pm 1.0 \times 2^{-1022} \approx \pm 2.2 \times 10^{-308}$
- Largest value

  - Fraction: 111...11 ⇒ significand ≈ 2.0
  - $\pm 2.0 \times 2^{+1023} \approx \pm 1.8 \times 10^{+308}$

# Floating-Point Precision

- Relative precision
  - all fraction bits are significant
  - Single: approx 2<sup>-23</sup>
    - Equivalent to 23 x log<sub>10</sub>2 ≈ 23 x 0.3 ≈ 6 decimal digits of precision
  - Double: approx 2<sup>-52</sup>
    - Equivalent to 52 x log<sub>10</sub>2 ≈ 52 x 0.3 ≈ 16 decimal digits of precision

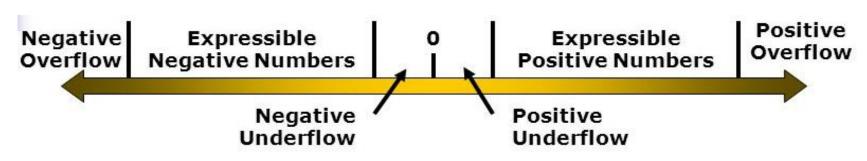

# Floating-Point Example (1/2)

- Represent –0.75
  - $-0.75 = (-1)^1 \times 1.1_2 \times 2^{-1}$
  - S = 1
  - Fraction =  $1000...00_2$
  - Exponent = -1 + Bias
    - Single:  $-1 + 127 = 126 = 011111110_2$
    - Double:  $-1 + 1023 = 1022 = 0111111111110_2$
- Single: 1011111101000...00
- Double: 10111111111101000....00

# Floating-Point Example (2/2)

 What number is represented by the singleprecision float

11000000101000...00

- S = 1
- Fraction =  $01000...00_2$
- Fxponent =  $10000001_2 = 129$

$$x = (-1)^{1} \times (1 + 01_{2}) \times 2^{(129 - 127)}$$

$$= (-1) \times 1.25 \times 2^{2}$$

$$= -5.0$$

#### **Denormal Numbers**

**Exponent = 000...0 \Rightarrow hidden bit is 0** 

$$x = (-1)^{S} \times (0 + Fraction) \times 2^{(1-Bias)}$$

- Smaller than normal numbers
  - allow for gradual underflow, with diminishing precision
- Denormal with fraction = 000...0

$$x = (-1)^{S} \times (0+0) \times 2^{(1-Bias)} = \pm 0.0$$

Two representations of 0.0!

#### **Infinities and NaNs**

- Exponent = 111...1, Fraction = 000...0
  - ±Infinity
  - Can be used in subsequent calculations, avoiding need for overflow check
- Exponent = 111...1, Fraction ≠ 000...0
  - Not-a-Number (NaN)
  - Indicates illegal or undefined result
    - e.g., 0.0 / 0.0
  - Can be used in subsequent calculations


# Floating-Point Addition (1/2)

- Consider a 4-digit decimal example
  - $\bullet$  9.999 × 10<sup>1</sup> + 1.610 × 10<sup>-1</sup>
- 1. Align decimal points
  - Shift number with smaller exponent
  - $\bullet$  9.999 × 10<sup>1</sup> + 0.016 × 10<sup>1</sup>
- 2. Add significands
  - $\bullet$  9.999 × 10<sup>1</sup> + 0.016 × 10<sup>1</sup> = 10.015 × 10<sup>1</sup>
- 3. Normalize result & check for over/underflow
  - $\blacksquare$  1.0015 × 10<sup>2</sup>
- 4. Round and renormalize if necessary
  - $1.002 \times 10^2$

# Floating-Point Addition (2/2)

- Now consider a 4-digit binary example
  - $1.000_2 \times 2^{-1} + -1.110_2 \times 2^{-2} (0.5 + -0.4375)$
- 1. Align binary points
  - Shift number with smaller exponent
  - $1.000_2 \times 2^{-1} + -0.111_2 \times 2^{-1}$
- 2. Add significands
  - $1.000_2 \times 2^{-1} + -0.111_2 \times 2^{-1} = 0.001_2 \times 2^{-1}$
- 3. Normalize result & check for over/underflow
  - $1.000_2 \times 2^{-4}$ , with no over/underflow
- 4. Round and renormalize if necessary
  - $-1.000_2 \times 2^{-4}$  (no change) = 0.0625

## FP Adder Hardware (1/2)

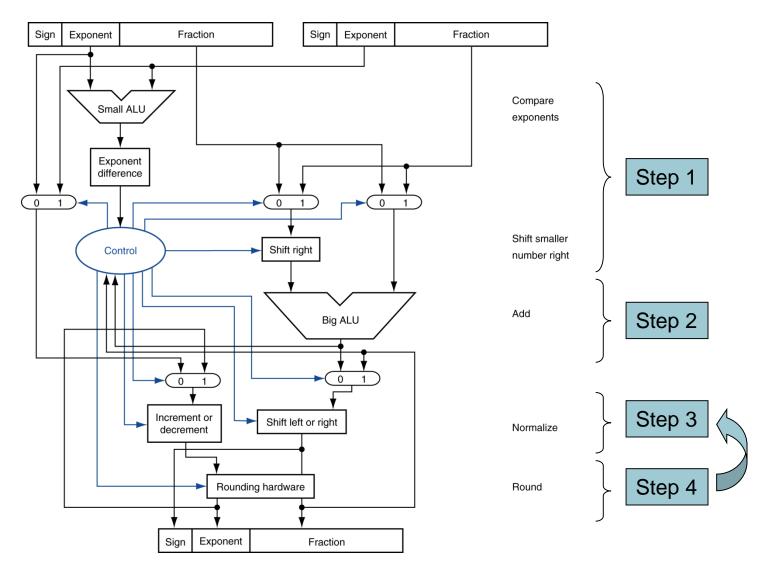

## FP Adder Hardware (2/2)

- Much more complex than integer adder
- Doing it in one clock cycle would take too long
  - Much longer than integer operations
  - Slower clock would penalize all instructions
- FP adder usually takes several cycles
  - Can be pipelined

## Floating-Point Multiplication (1/2)

- Consider a 4-digit decimal example
  - $\bullet$  1.110 × 10<sup>10</sup> × 9.200 × 10<sup>-5</sup>
- 1. Add exponents
  - For biased exponents, subtract bias from sum
  - New exponent = 10 + -5 = 5
- 2. Multiply significands
  - $1.110 \times 9.200 = 10.212 \Rightarrow 10.212 \times 10^{5}$
- 3. Normalize result & check for over/underflow
  - $\bullet$  1.0212 × 10<sup>6</sup>
- 4. Round and renormalize if necessary
  - $1.021 \times 10^6$
- 5. Determine sign of result from signs of operands
  - $+1.021 \times 10^6$

## Floating-Point Multiplication (2/2)

- Now consider a 4-digit binary example
  - $1.000_2 \times 2^{-1} \times -1.110_2 \times 2^{-2} (0.5 \times -0.4375)$
- 1. Add exponents
  - Unbiased: -1 + -2 = -3
  - Biased: (-1 + 127) + (-2 + 127) = -3 + 254 127 = -3 + 127
- 2. Multiply significands
  - $1.000_2 \times 1.110_2 = 1.1102 \implies 1.110_2 \times 2^{-3}$
- 3. Normalize result & check for over/underflow
  - $1.110_2 \times 2^{-3}$  (no change) with no over/underflow
- 4. Round and renormalize if necessary
  - $1.110_2 \times 2^{-3}$  (no change)
- 5. Determine sign: +ve x –ve ⇒ –ve
  - $-1.110_2 \times 2^{-3} = -0.21875$

#### **FP Arithmetic Hardware**

- FP multiplier is of similar complexity to FP adder
  - But uses a multiplier for significands instead of an adder
- FP arithmetic hardware usually does
  - Addition, subtraction, multiplication, division, reciprocal, square-root
  - FP ↔ integer conversion
- Operations usually takes several cycles
  - Can be pipelined

## FP Instructions in RISC-V (1/2)

- Separate FP registers: f0, ..., f31
  - double-precision
  - single-precision values stored in the lower 32 bits
- FP instructions operate only on FP registers
  - Programs generally don't do integer ops on FP data, or vice versa
  - More registers with minimal code-size impact
- FP load and store instructions
  - flw, fld
  - fsw, fsd

## FP Instructions in RISC-V (2/2)

- Single-precision arithmetic
  - fadd.s, fsub.s, fmul.s, fdiv.s, fsqrt.se.g., fadd.s f2, f4, f6
- Double-precision arithmetic
  - fadd.d, fsub.d, fmul.d, fdiv.d, fsqrt.d
     e.g., fadd.d f2, f4, f6
- Single- and double-precision comparison
  - feq.s, flt.s, fle.s
  - feq.d, flt.d, fle.d
  - Result is 0 or 1 in integer destination register
    - Use beq, bne to branch on comparison result

# FP Example: °F to °C

C code:

```
float f2c (float fahr) {
  return ((5.0f/9.0f)*(fahr - 32.0f));
}
```

- fahr in f10, result in f10, literals in global memory space
- Compiled RISC-V code:

```
f2c:
```

```
flw f0,const5(x3) // f0 = 5.0f

flw f1,const9(x3) // f1 = 9.0f

fdiv.s f0, f0, f1 // f0 = 5.0f / 9.0f

flw f1,const32(x3) // f1 = 32.0f

fsub.s f10,f10,f1 // f10 = fahr - 32.0

fmul.s f10,f0,f10 // f10 = (5.0f/9.0f) * (fahr-32.0f)

jalr x0,0(x1) // return
```

#### FP Example: Array Multiplication (1/3)

- $C = C + A \times B$ 
  - All 32 × 32 matrices, 64-bit double-precision elements
- C code:

Addresses of c, a, b in x10, x11, x12, and i, j, k in x5, x6, x7

#### FP Example: Array Multiplication (2/3)

#### RISC-V code:

```
mm: . . .
      addi
            x28,x0,32 // x28 = 32 (row size/loop end)
      addi x5,x0,0
                            // i = 0; initialize 1st for loop
L1:
      addi x6,x0,0
                            // j = 0; initialize 2nd for loop
                            // k = 0; initialize 3rd for loop
L2:
      addi x7,x0,0
      slli
           x30,x5,5 // x30 = i * 2**5 (size of row of c)
                       // x30 = i * size(row) + j
      add
            x30,x30,x6
      slli
           x30,x30,3 // x30 = byte offset of [i][j]
      add
           x30,x10,x30 // x30 = byte address of c[i][i]
      fld
           f0.0(x30)
                        // f0 = c[i][j]
L3:
      slli
           x29,x7,5
                       // x29 = k * 2**5  (size of row of b)
      add
            x29,x29,x6
                       // x29 = k * size(row) + j
      slli x29, x29, 3 // x29 = byte offset of [k][j]
      add
           x29,x12,x29 // x29 = byte address of b[k][j]
      f1d
           f1.0(x29) // f1 = b[k][i]
```

#### FP Example: Array Multiplication (3/3)

```
slli x29,x5,5 // x29 = i * 2**5 (size of row of a)
add x29, x29, x7 // x29 = i * size(row) + k
slli x29, x29, 3 // x29 = byte offset of [i][k]
add x29,x11,x29 // x29 = byte address of a[i][k]
fld f_{2,0}(x29) // f_{2} = a[i][k]
fmul.d f1, f2, f1 // f1 = a[i][k] * b[k][j]
fadd.d f0, f0, f1 // f0 = c[i][j] + a[i][k] * b[k][j]
addi x7, x7, 1 // k = k + 1
bltu x7,x28,L3 // if (k < 32) go to L3
fsd f0.0(x30) // c[i][i] = f0
addi x6, x6, 1 // j = j + 1
bltu x6,x28,L2 // if (j < 32) go to L2
addi x5, x5, 1 // i = i + 1
bltu x5,x28,L1 // if (i < 32) go to L1
```

## **Accurate Arithmetic**

- IEEE Std 754 specifies additional rounding control
  - Extra bits of precision (guard, round, sticky)
  - Choice of rounding modes
  - Allows programmer to fine-tune numerical behavior of a computation
- Not all FP units implement all options
  - Most programming languages and FP libraries just use defaults
- Trade-off between hardware complexity, performance, and market requirements

# Right Shift and Division

- Left shift by i places multiplies an integer by 2<sup>i</sup>
- Right shift divides by 2<sup>i</sup>?
  - Only for unsigned integers
- For signed integers
  - Arithmetic right shift: replicate the sign bit
  - e.g., -5 / 4
    - $\blacksquare$  11111011<sub>2</sub> >> 2 = 111111110<sub>2</sub> = -2
    - Rounds toward -∞
  - c.f.  $11111011_2 >>> 2 = 001111110_2 = +62$

# **Associativity**

- Parallel programs may interleave operations in unexpected orders
  - Assumptions of associativity may fail

		(x+y)+z	x+(y+z)
X	-1.50E+38		-1.50E+38
У	1.50E+38	0.00E+00	
Z	1.0	1.0	1.50E+38
		1.00E+00	0.00E+00

 Need to validate parallel programs under varying degrees of parallelism

## Who Cares About FP Accuracy?

- Important for scientific code
  - But for everyday consumer use?
    - "My bank balance is out by 0.0002¢!" ⊗
- The Intel Pentium FDIV bug
  - The market expects accuracy
  - See Colwell, The Pentium Chronicles

# **Concluding Remarks**

- Bits have no inherent meaning
  - Interpretation depends on the instructions applied

- Computer representations of numbers
  - Finite range and precision
  - Need to account for this in programs

# **Concluding Remarks**

- ISAs support arithmetic
  - Signed and unsigned integers
  - Floating-point approximation to reals

- Bounded range and precision
  - Operations can overflow and underflow