
BIBO Packing

1. Pack the acrylic panels (6pcs) and glass bed (1pc) together with air bubble film. Put glass in the top middle and finally pack them with tape.

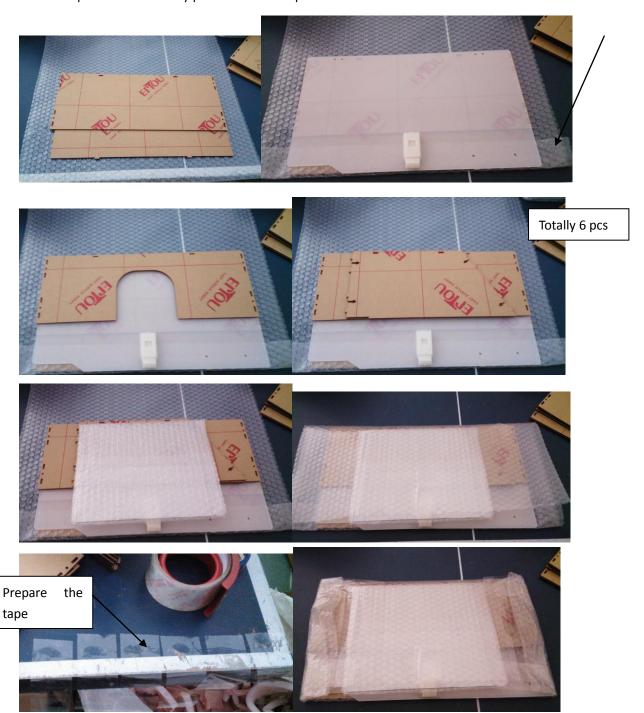







Packed in one bag

Φ4, 10 small nuts, 4 big nuts, 1 handle


3. Packing

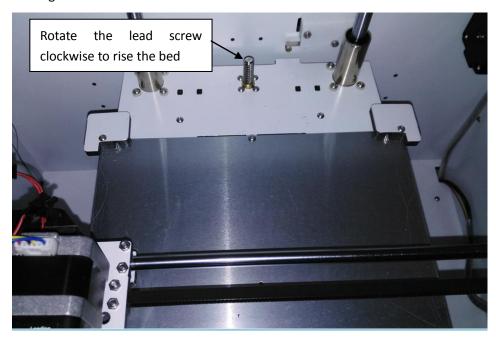



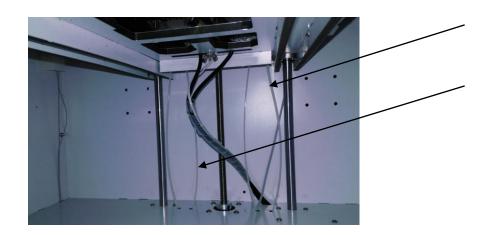




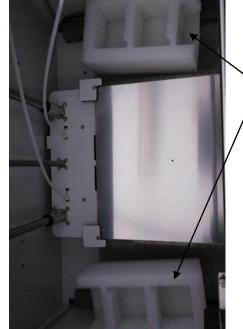

Put two white suppot and tape them on the bottom bubble film


the heated bed and lead screw


connector to be damaged.

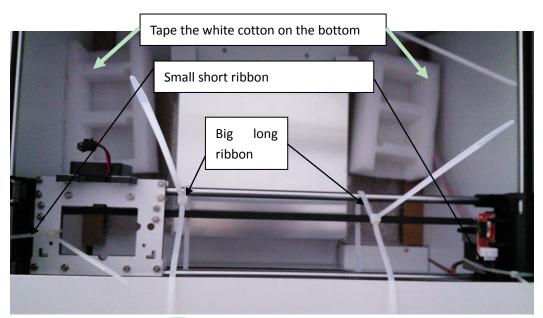





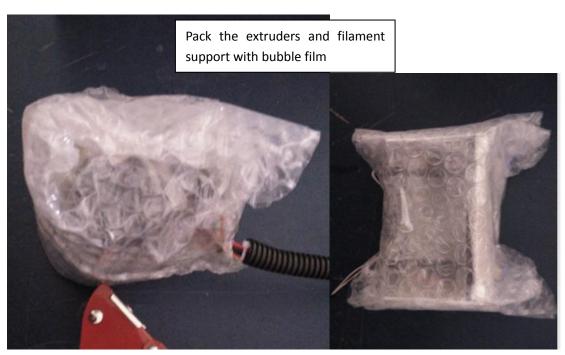

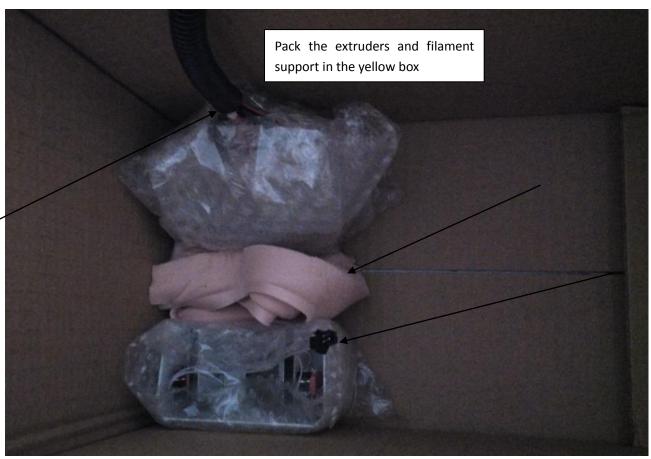














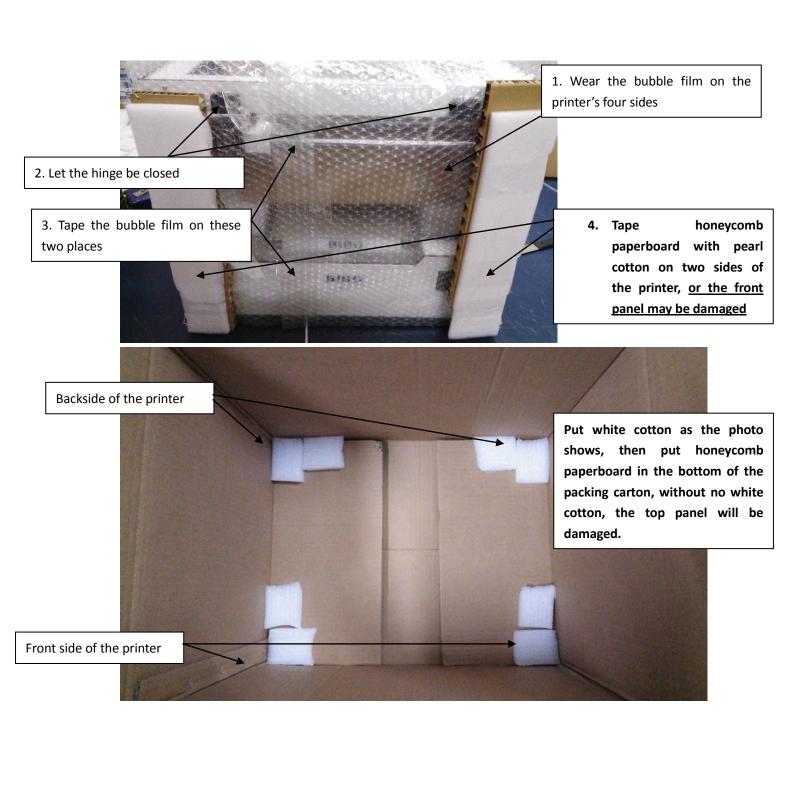



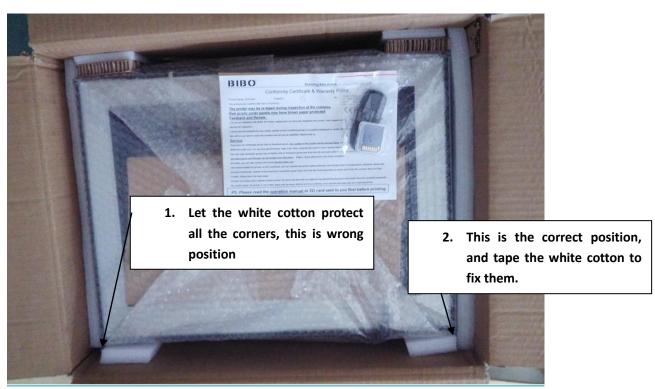

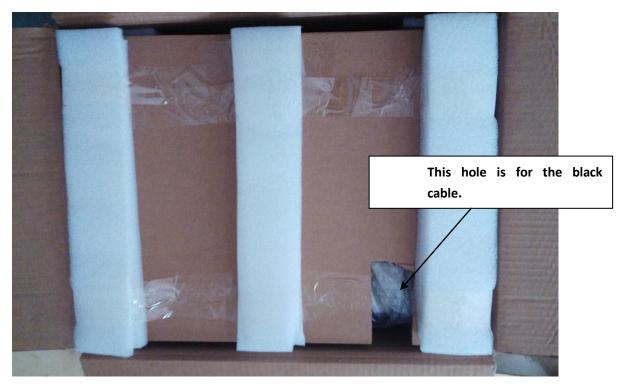

Finally tape the carton.