



DC – AI – Routing – Switching – Security – Wireless – Automation

Adding Device Profiles Using the Apstra UI

An HPE Juniper Networking Techpost

Andy Ford

2023-08-11

HPE



Contents

1	Adding Device Profiles Using the Apstra UI	2
1.1	Introduction	2
1.2	LP <--> IM <--> DP	2
1.2.1	How to Define a Switch within Apstra	3
1.2.2	Logical Devices (LD)	4
1.2.3	Interface Map (IM)	7
1.2.4	Device Profile (DP)	7
1.3	How to Add a Device Profile (Finally!)	8
1.3.1	Adding a New Device Profile Using the Apstra UI	8
1.3.2	When to Add a New Device Profile?	9
1.3.3	Method for Creating a Modular Chassis-Based Device Profile (DP)	9
1.4	Summary	12
1.5	Useful links	12
1.6	Glossary	12

1 Adding Device Profiles Using the Apstra UI

Andy Ford - 08/11/2023

The capabilities of a specific switch hardware model are defined in the Device Profile and linked to the logical representation of the switch. Linking these together allows Apstra to build out the topology efficiently, provide efficient day-2 changes, and accurately build the configuration for a given switch to be used in your topology.


1.1 Introduction

The Apstra system utilizes defined building blocks so that designing, building, and expanding a production network as part of Day-2, is an efficient and accurate process. The building blocks include the following:

- Entities used to define a switch within your fabric: superspine, spine, leaf, access.
 - Logical Device (LD)
 - Interface Map (IM)
 - Device Profile (DP)
- Rack
 - One or more switches
 - ESI (Juniper) or MC-LAG (Cisco, Arista, SONiC)
- Template
 - 3-stage Clos
 - 5-stage Clos
 - Collapsed fabric (Juniper only)
- Blueprint: A representation of your production network with variables (ASNs / IPs / etc.) assigned

1.2 LP <--> IM <--> DP

An Apstra switch comprises three elements so that multiple hardware models in production can satisfy the logical representation of the switch in the Apstra Blueprint. The capabilities of a specific switch hardware model are defined in the Device Profile and linked to the logical representation of the switch, as shown below. Linking these together allows Apstra to build out the topology efficiently, provide efficient day-2 changes, and accurately build the configuration for a given switch to be used in your topology.

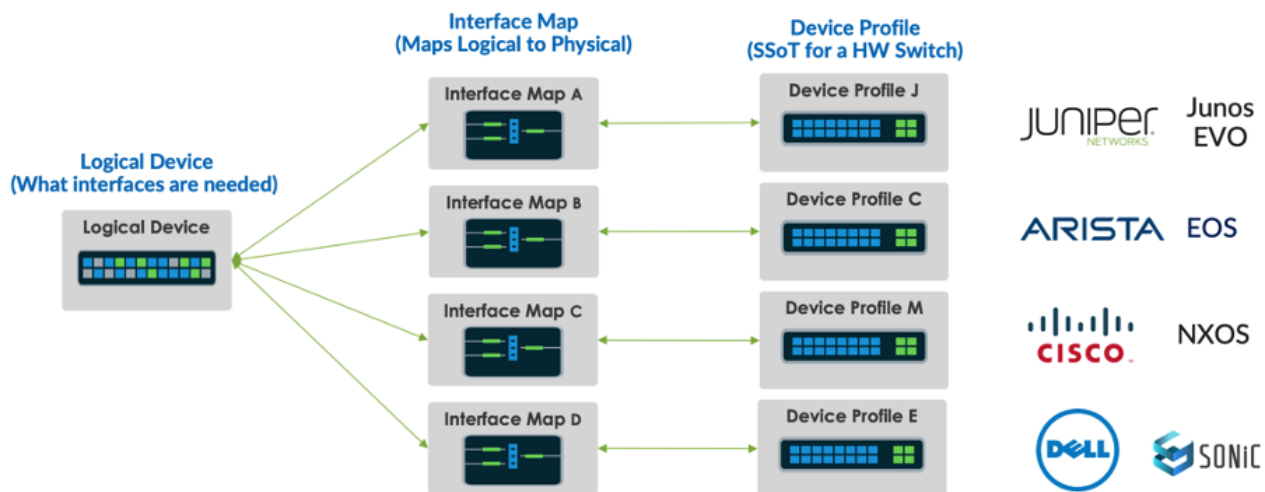


1.2.1 How to Define a Switch within Apstra

You assign a DP to a switch in your Blueprint when you want to derive a config for that switch. A good example of when you wouldn't need to assign a DP to a switch is when it's an unmanaged access switch, i.e., an access switch for which Apstra will not create a validated config. As of Apstra v4.1.2, the only managed access switches are those from Juniper.


Another interesting situation arises when we add a Generic System to our Blueprint, such as a server. Traditionally, you would only assign an LD to describe the number and speed of the interfaces for that server, as it's also another unmanaged system in Apstra. There is, however, a situation where you may want to add a server to a BP and describe the naming convention of the interfaces on that server in the BP. You can assign a DP to that server, as shown below.

In this example, an LD ↔ IM ↔ DP mapping was created, pointing to the DP named Generic_Server_1RU_2x10G_Centos. Assigning this DP to the Generic System (GS) in our Blueprint results in the GS interfaces being named accordingly.

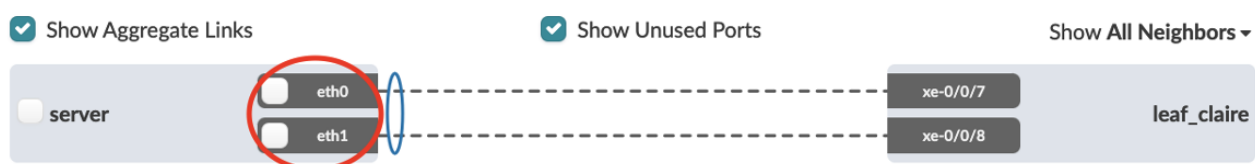

Here we can see that by assigning a DP to the Server, or Generic System (in Apstra-speak), we can label the ports to something meaningful, such as eth0 or eth1.

In this case, rename the ports in the DP for this server to something useful for your organization. A practical example of this is when one organization asks to modify the naming convention to upper & lower, so they could easily direct the DC cabling team where to plug in the cable.

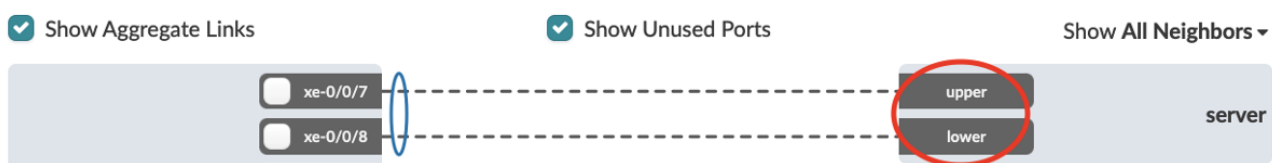

You can edit the DP directly in the UI for this use case, as shown below.



Connected To ^{*}

- ☐ Superspine
- ☐ Spine
- ☐ Leaf
- ☒ Access
- ☒ Peer
- ☐ Unused
- ☒ Generic

Important points to note for Apstra v4.1.2 and above

Note 1: When you select a port or group of ports (as shown below in 'Edit Logical Device' you are presented with this 'Connected To' list of options. To enforce a given architecture, you can be very prescriptive here. For example, you may want your DC always to use the same peer ports or the same leaf or spine ports.*

Conversely, you can select all profiles for all ports to have a more relaxed approach to how you want the DC to be cabled. The latter approach provides more flexibility for changing your design on Day-2.

Note 2: The port numbering, as shown below, bears no relevance to the port number on the physical switch; it's purely a representation of the logical port number. *

Note 3: The speed to all Generic System ports can be changed as a day-2 operation. *

Edit Logical Device

This LD is linked to an Interface Map already

Updating the logical device ports may not be allowed because it is referenced by Juniper_QFX5120-48Y_Junos_AOS-48x10_8x40-1 interface map.

Name

AOS-48x10+8x40-1

PANEL #1

TOTAL

PORT GROUPS

48 ports
48 assigned • 0 available48 x 10 Gbps
Access • Peer • Generic

Selecting the port group will allow you to assign them here

1	3	5	7	9	11	13	15	17	19	21	23	25	27	29	31	33	35	37	39	41	43	45	47
2	4	6	8	10	12	14	16	18	20	22	24	26	28	30	32	34	36	38	40	42	44	46	48

Edit port group

Number of ports *

48

Speed *

10 Gbps

Connected To *

- ☐ Superspine
- ☐ Spine
- ☐ Leaf
- ☒ Access
- ☒ Peer
- ☐ Unused
- ☒ Generic

Where do you intend to connect this port?

Cancel

Update Port Group

Below is an example of a Logical Device that represents a switch with two port groups (or panels) and roles assigned to those port groups.

[Design](#) > [Logical Devices](#) > [AOS-48x25+6x100-1](#)

Example of a Logical Device that represents a Leaf switch with two port groups: 48x25Gbps and 6x100Gbps.

[back to list](#)

Updating the logical device ports may not be allowed because it is referenced by interface maps.

Interface map list (3)

Dell_S5048F-ON_Cumulus_AOS-48x25_6x100-1
Arista_DCS-7160YC-72_EOS_AOS-48x25_6x100-1
Dell_S5048F-ON_OPX_AOS-48x25_6x100-1

This specific Logical Device is referenced by 3 Interface Maps.
This is how Apstra will assign port roles and speed to a physical switch port. In this case, an Arista and Dell Switch.

Name

AOS-48x25+6x100-1

PANEL #1

TOTAL

PORT GROUPS

48 ports

48 x 25 Gbps
Access • Peer • Generic

The first panel represents 48 ports of 25Gbps. These ports are assigned the roles of Access, Peer, and Generic. Access is used for connecting to L2 Access Switches, Peer is used to connect to peer devices in an MLAG/vPC or Collapsed-Fabric (Junos Only), and Generic is used for all L2 or L3 servers and external routers, firewalls, load-balancers, etc.

1	3	5	7	9	11	13	15	17	19	21	23	25	27	29	31	33	35	37	39	41	43	45	47
2	4	6	8	10	12	14	16	18	20	22	24	26	28	30	32	34	36	38	40	42	44	46	48

PANEL #2

TOTAL

PORT GROUPS

6 ports

6 x 100 Gbps
Spine

The second panel represents 6 ports of 100Gbps. These ports only have the role of Spine so it will only uplink to a Spine switch in a Blueprint.

1	3	5
2	4	6

1.2.3 Interface Map (IM)

Referring to the above diagram, 'How to define a switch within Apstra,' the Interface Map (IM) is the link between your logical switch representation (LD) and the physical Device Profile (DP) representation.

The IM represents your intent on which physical ports will be utilized, as described in the Logical Device. Below is an example of an Interface Map for the Logical Device shown in the picture above. This is one of the Interface Maps referencing the Logical Device above (AOS-48x25_6x100-1) and the Device Profile of a physical device (Dell S5048F-ON).

Interface Map that references a Logical Device and a Device Profile

Name	Dell_S5048F-ON_Cumulus_AOS-48x25_6x100-1
Logical device	AOS-48x25+6x100-1
Device profile	Dell S5048F-ON

Interface map preview

SUMMARY

48 x 25 Gbps Access • Peer • Generic
6 x 100 Gbps Spine

This Summary describes the Logical Device characteristics: [AOS-48x25_6x100-1]

INTERFACES Click on interface to toggle the details

1

Selecting port #1 of the interface group shows how this Interface Map references both the Logical Device and Device Profile.

INTERFACE DETAILS

Position	#1
Name	swp1
Active?	yes

Connected to	Access • Peer • Generic
Speed	25 Gbps
Setting	Show setting

MAPPING

Map of a logical port (LD) to a physical port (DP)

Logical Device port #1 panel #1

Device Profile port #1 panel #1 transformation #1 interface #1

1.2.4 Device Profile (DP)

A DP is a static representation of the capability of the vendor-specific switch:

- Vendor & model name
- NOS family
- CPU & ASIC type
- RAM
- ECMP limit
- Interface capacity number of ports and speed of ports
- Interface capabilities - which ports can be broken out, i.e., QSFP -> 4*SFP
- Number of ASIC SerDes (e.g. 64 or 128)

The Device Profile example below represents the DELL S5048F-ON referenced by the Interface Map above. The purpose of this document is to show how to create a Device Profile like the one below:

0 Devices > Device Profiles > Dell S5048F-ON Device Profile for a DELL S5048F-ON

Updating the device profile parts may not be allowed because it is referenced by Dell_S5048F-ON_Cumulus_AOS-19v23_AutOS-1 interface map. This DP is referenced by an Interface Map

Expanded View Compact View

Summary

Name	Dell S5048F-ON
Device Profile Type	monolithic
Modular?	no
Slot count	0
Physical Device	yes
Ports preview	

Summary section with generic info about the switch.

Selects

Manufacturer	Dell(Dell)Dell EMC
Model	S5048F-ON
OS family	Cumulus
Version	(23.15-75)uh(23.15-23)uh(23.15-23)

Summary section with generic info about the switch.

Capabilities

Hardware Capabilities		Supported Features	Software Capabilities	
CPU	x86	No items.	LXC	no
Uplink Sfp	04		OS	yes
RAM (GB)	16		Config Apply Support	Incremental
ECMP lines	04			
Form factor	1RU			
ASIC	Ti+			

Hardware and Software Capabilities

Parts

Panel #1

INTERFACES CAPACITY

72 x 25 Gbps 72 x 10 Gbps 6 x 100 Gbps 12 x 50 Gbps 6 x 40 Gbps

PORTS

Panel of the ports on the switch along with the supported speeds and breakouts. The same physical device could be represented by a combination of the interface options shown.

1.3 How to Add a Device Profile (Finally!)

***Note:** Although we provide an interface via the UI to create a Device Profile in the UI, Apstra discourages user-defined DPs. It is preferable to have Apstra engineering drive the development of a DP to ensure accuracy.

****DP accuracy = Switch config accuracy***

1.3.1 Adding a New Device Profile Using the Apstra UI

Before creating a new Device Profile, you can view what's available in Apstra. From the Web interface, navigate to **Devices / Device Profiles (1)** to see the list of **Device Profiles (2)**. Apstra ships with many predefined profiles. To sort the list, click the header of the category you'd like to sort. Click the header again to reverse the sort order.

Click to sort by

Click for details

	Manufacturer	Hardware Model	Device Profile Type	OS Family	OS Version	ASIC	Actions
	Juniper	QFX5700	modular	Junos	[20\,[34]'*2[12]\..-)*-EVO\$	TD4	Edit Clone Delete
	Juniper	QFX5700	modular	Junos	[20\,[34]'*2[12]\..-)*-EVO\$	TD4	Edit Clone Delete
	Juniper	QFX5700	modular	Junos	[20\,[34]'*2[12]\..-)*-EVO\$	TD4	Edit Clone Delete
	Juniper	QFX5700	modular	Junos	[20\,[34]'*2[12]\..-)*-EVO\$	TD4	Edit Clone Delete
	Accton	5712-54X-O.*	monolithic	Cumulus	[[3\,[5-7]\d+]](4\,[2-3]\d+)]\d+)?	T2	Edit Clone Delete
	Accton	6712-32X-O.*	monolithic	Cumulus	[[3\,[5-7]\d+]](4\,[2-3]\d+)]\d+)?	T2	Edit Clone Delete
Accton-AS5712-54X_SONIC	Edgecore/Accton	5712-54X-O.*	monolithic	SONIC	.*dirty.*	T2	Edit Clone Delete
Accton-AS5712-54X_SONIC_BRCM	Edgecore/Accton	5712-54X-O.*	monolithic	SONIC	.*2.1.0-Generi.*	T2	Edit Clone Delete
Accton-AS5712-54X_SONIC_BRCM_BUZZNIK	Edgecore/Accton	5712-54X-O.*	monolithic	SONIC	.*3\,0.*	T2	Edit Clone Delete
Accton-AS5712-54X_SONIC_BRCM_BUZZNIK_PLUS	Edgecore/Accton	5712-54X-O.*	monolithic	SONIC	[3\,[345]\,4\,0\,].*	T2	Edit Clone Delete
Accton-AS5812-54X_SONIC	Edgecore/Accton	5812-54X-O.*	monolithic	SONIC	.*	T2+	Edit Clone Delete

Note 1: When you create Interface Maps, you'll assign Device Profiles (and Logical Devices) to them. You must ensure that the required Device Profiles exist for all physical devices you'll be using. *

Note 2: Device Profiles contain extensive hardware model details. Apstra doesn't necessarily use all the information in a Device Profile for modeling. However, that may change in future Apstra releases.*

1.3.2 When to Add a New Device Profile?

Although you could create a new DP, there are only two use cases for adding a new Device Profile:

1. When Apstra support has provided a validated DP for a new switch model you would like to use in your design. In this instance, you can easily navigate to Devices / Device Profiles and click on the [+ Create Device Profile] button and then click on the following button to import the JSON payload.



2. When you are constructing a modular chassis through the UI, where the DP for both the chassis and available line cards are already created. In this case, you will create a chassis-based DP with the line cards you place in each slot.

1.3.3 Method for Creating a Modular Chassis-Based Device Profile (DP)

1. Click the [+ Create Device Profile] button and select 'Modular' from the 'Type' dropdown list.

2. Give it a name. The example we will build is based on a QFX10008 with 4x36Q line cards and 1x30C line cards. So the name could be (e.g.) **Juniper_QFX10008-4x36Q+1x30C**.
3. Select the QFX10008 chassis in the Chassis profile dropdown, as shown below.

Create Device Profile



Device profiles need to accurately model various characteristics of a switch model. Make sure you create the profile to match the new switch model(s) you intend to use this profile for.

Start creation of a new device profile by filling the form. Alternatively, you can [Import Device Profile](#) from JSON.

Summary

Linecards

Type *

Modular

Name *

Juniper_QFX10008-4x36Q+1x30C

Chassis Profile *

Juniper QFX10008

☐ Create Another?

Create

4. Switch to the Linecards tab on the left of the window to add the required line cards. In our case
 - 4x 36
 - 1x 30C
5. Click on the Add Linecard link



Add Linecard

6. Select the slot and the line card you would like in that slot
7. Click save and continue with the next slot as shown below

Create Device Profile



Device profiles need to accurately model various characteristics of a switch model. Make sure you create the profile to match the new switch model(s) you intend to use this profile for.

Start creation of a new device profile by filling the form. Alternatively, you can [Import Device Profile](#) from JSON.

Summary

Linecards

Installed Linecards

Slot 4	Juniper QFX10000-30C-LC	
Slot 3	Juniper QFX10000-36Q-LC	
Slot 2	Juniper QFX10000-36Q-LC	
Slot 1	Juniper QFX10000-36Q-LC	
Slot 0	Juniper QFX10000-36Q-LC	

Add Linecard

☐ Create Another?

Create

8. When complete, hit the [Create] button. You will see your named DP in the list.

9. Click on the Juniper_QFX10008-4x36Q+1x30C link, and you will see the modular chassis DP you have created.

☆ [Home](#) > [Devices](#) > [Device Profiles](#) > Juniper_QFX10008-4x36Q+1x30C

Expanded View

Compact View

Summary

Name	Juniper_QFX10008-4x36Q+1x30C
Device Profile Type	modular
Modular?	yes
Slot count	8
Physical Device	yes
Dual Routing Engine	yes
Ports preview	

This DP is now ready to be linked to a Logical Device.

1.4 Summary

Although Apstra provides an extensive library of Device Profiles, it is occasionally necessary to create your own DP or to customize a DP from the Apstra DP library. This paper shows the workflow for adding a DP, from creation to blueprint.

1.5 Useful links

- Apstra User Guide: <https://www.juniper.net/documentation/us/en/software/apstra4.1/apstra-user-guide/index.html>

1.6 Glossary

- ASN: Autonomous System Number
- BP: Blueprint
- DP: Device Profile
- ESI: Ethernet Segment Identifier
- GS: Generic System
- IM: Interface Map
- JSON: JavaScript Object Notation
- IP: Internet Protocol
- LD: Logical Device
- MC-LAG: MultiChassis Link Aggregation Group



DC – AI – Routing – Switching – Security – Wireless – Automation

© Copyright 2026 Hewlett Packard Enterprise Development LP. The information contained herein is subject to change without notice. The only warranties for Hewlett Packard Enterprise products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty.

Hewlett Packard Enterprise shall not be liable for technical or editorial errors or omissions contained herein.

Trademark acknowledgments, if needed. All third-party marks are the property of their respective owners.

HEWLETT PACKARD ENTERPRISE

HPE.com

HPE

