



DC – AI – Routing – Switching – Security – Wireless – Automation

Deploying and Using vJunos in a Bare Metal EVE-NG server

An HPE Juniper Networking Techpost

Shalini Mukherjee

2023-05-11

HPE



Contents

1	Deploying and Using vJunos in a Bare Metal EVE-NG server	2
1.1	Introduction	2
1.1.1	What is EVE-NG and vJunos-switch/vJunosEvolved?	2
1.2	Installing EVE-NG on a Bare Metal Ubuntu Server	2
1.2.1	Deploying vJunos-switch and vJunosEvolved in EVE-NG	4
1.2.2	Deploying Juniper Apstra in EVE-NG	9

1 Deploying and Using vJunos in a Bare Metal EVE-NG server

Shalini Mukherjee - 05/11/2023

vJunos-switch and vJunosEvolved deployed on EVE-NG and integrated with Juniper Apstra to build a complete Data Center fabric. Article co-written with Aninda Chatterjee and Shalini Mukherjee, TME in Juniper Networks Cloud-Ready Data Center team.

1.1 Introduction

In this article, we will look at how vJunos-switch and vJunosEvolved is deployed on a bare metal install of EVE-NG. This deployment will then be used to integrate with Juniper Apstra and build a complete Data Center fabric.

We'll start with instructions on how to deploy EVE-NG as a bare metal install on an Ubuntu server and run through the EVE-NG installation itself as an example of how this can be done. Once EVE-NG is setup, we'll show how vJunos-switch and vJunosEvolved can be added to EVE-NG as a deployable node and the EVE-NG template that is needed for this to work.

Finally, we'll wrap this up by onboarding vJunos-switch and vJunosEvolved devices in Juniper Apstra and building a simple Data Center fabric to show that these devices work seamlessly with Apstra as well.

Note that another post on [vJunos installation on KVM](#) has been published too.

1.1.1 What is EVE-NG and vJunos-switch/vJunosEvolved?

EVE-NG is a popular network emulation software that offers multivendor support. It allows a user to build network topologies on a blank canvas, providing means to test and simulate various network technologies and features across different network operating systems and products.

EVE-NG has various deployment options:

- as a VM on top of a hypervisor like ESXi
- over a bare metal server
- cloud deployment options (like GCP)

vJunos-switch and vJunosEvolved are two new virtual software offerings from Juniper Networks. vJunos-switch emulates the software functionality of Junos OS while vJunosEvolved emulates the software functionality of Junos EVO.

Since vJunos-switch is only supported on a bare metal install of EVE-NG, that is the deployment option we'll be going through in this blog post.

1.2 Installing EVE-NG on a Bare Metal Ubuntu Server

EVE-NG comes in two flavors: a community (free) edition, and a professional (paid) edition. We'll take a look at how to do a bare metal EVE-NG community edition install in this post, since that is more complicated. The .iso file for the community edition can be downloaded from the EVE-NG website - <https://www.eve-ng.net/index.php/download/>

Once this file is downloaded, mount the .iso file on your local machine. For example, on a MAC, you can simply double click the file to mount it. This should create a new drive, whose contents can be accessed now:

```

1 anindac@ubuntu EVE-NG Community % ls -l
2 total 216
3 dr-xr-xr-x 3 aninchat staff 2048 Feb 23 2022 EFI
4 dr-xr-xr-x 3 aninchat staff 2048 Feb 23 2022 boot
5 dr-xr-xr-x 3 aninchat staff 2048 Feb 23 2022 casper
6 dr-xr-xr-x 3 aninchat staff 2048 Feb 23 2022 dists
7 dr-xr-xr-x 2 aninchat staff 2048 Feb 23 2022 install
8 dr-xr-xr-x 2 aninchat staff 36864 Feb 23 2022 isolinux
9 -r--r--r-- 1 aninchat staff 27257 May 21 2022 md5sum.txt
10 -r--r--r-- 1 aninchat staff 27389 Feb 23 2022 md5sum.txt.orig
11 dr-xr-xr-x 3 aninchat staff 2048 Feb 23 2022 pool
12 dr-xr-xr-x 2 aninchat staff 2048 Feb 23 2022 preseed
13 dr-xr-xr-x 2 aninchat staff 2048 May 20 2022 server

```

Here, should see a folder titled 'server'. This has a shell script that installs EVE-NG as a bare metal install. The script is as follows:

```

1 anindac@ubuntu EVE-NG Community % cd server
2 anindac@ubuntu server % ls -l
3 total 8
4 -r-xr-xr-x 1 aninchat staff 802 May 20 2022 eve-setup.sh
5 -r--r--r-- 1 aninchat staff 0 May 14 2022 meta-data
6 -r--r--r-- 1 aninchat staff 956 May 20 2022 user-data
7
8 anindac@ubuntu server % cat eve-setup.sh
9 #!/bin/sh
10 #Modify /etc/ssh/sshd_config with: PermitRootLogin yes
11 sed -i -e "s/.*PermitRootLogin .*/PermitRootLogin yes/" /etc/ssh/sshd_config
12 sed -i -e 's/.*DefaultTimeoutStopSec=.*/*DefaultTimeoutStopSec=5s/' /etc/systemd/system.conf
13 systemctl restart ssh
14 apt-get update
15 apt-get -y install software-properties-common
16 wget -O - http://www.eve-ng.net/focal/eczema@eczema.com.gpg.key | sudo apt-key add -
17 sudo add-apt-repository "deb [arch=amd64] http://www.eve-ng.net/focal focal main"
18 apt-get update
19 DEBIAN_FRONTEND=noninteractive apt-get -y install eve-ng
20 /etc/init.d/mysql restart
21 DEBIAN_FRONTEND=noninteractive apt-get -y install eve-ng
22 echo root:eve | chpasswd
23 ROOTLV=$(mount | grep ' / ' | awk '{print $1}')
24 echo $ROOTLV
25 lvextend -l +100%FREE $ROOTLV
26 echo Resizing ROOT FS
27 resize2fs $ROOTLV
28 reboot

```

On your Ubuntu 20.04 server, simply run through these steps one by one. Once you reboot (the final step of the script), and the server comes back online, you should be able to SSH into the device with the default credentials of root/eve.

Once you've logged in, the actual EVE-NG installation is kicked off – this includes providing a hostname, IP address and gateway, primary and secondary DNS servers, NTP servers and so on. When this finishes, EVE-NG should be up and running, and accessible via both the CLI and UI (default credentials for UI login is admin/eve).

To deploy the professional version of EVE-NG, similar steps can be followed. Alternatively, the .iso file can be mounted directly as a virtual drive and you can boot from it to start both the Ubuntu and the EVE-NG installation together.

1.2.1 Deploying vJunos-switch and vJunosEvolved in EVE-NG

EVE-NG uses templates to boot various operating systems it supports – these templates are pre-built and come packaged within the installation of EVE-NG. They contain instructions on how to boot the devices, including how many interfaces to assign to the device, the kind of CPU/memory the device needs and so on.

The templates are stored in the path `/opt/unetlab/html/templates/intel/` and are written in YAML format, as seen below:

```
1 root@eve-ng:/opt/unetlab/html/templates/intel# ls -l
2 total 588
3 -rw-r--r-- 1 root root 10 Jan 31 07:15 '*.yaml'
4 -rw-r--r-- 1 root root 1944 May 14 2022 128T.yaml
5 -rw-r--r-- 1 root root 1853 May 14 2022 a10.yaml
6 -rw-r--r-- 1 root root 1897 May 14 2022 acs.yaml
7 -rw-r--r-- 1 root root 1913 May 14 2022 alienvault.yaml
8 -rw-r--r-- 1 root root 1911 May 14 2022 alteon.yaml
9 -rw-r--r-- 1 root root 1848 May 14 2022 ampccloud.yaml
10 -rw-r--r-- 1 root root 1885 May 14 2022 android.yaml
11 -rw-r--r-- 1 root root 1921 Jan 31 07:15 aos.yaml
12 -rw-r--r-- 1 root root 1890 May 14 2022 apicem.yaml
13 -rw-r--r-- 1 root root 1952 May 14 2022 apstra-aos.yaml
14 -rw-r--r-- 1 root root 1951 May 14 2022 apstra-ztp.yaml
15 -rw-r--r-- 1 root root 1950 May 14 2022 aruba.yaml
16 -rw-r--r-- 1 root root 1919 May 14 2022 arubaamp.yaml
17 -rw-r--r-- 1 root root 2002 May 14 2022 arubacx.yaml
18 -rw-r--r-- 1 root root 1930 May 14 2022 arubanet.yaml
19 -rw-r--r-- 1 root root 1971 May 14 2022 asa.yaml
20 -rw-r--r-- 1 root root 1950 May 14 2022 asav.yaml
21 -rw-r--r-- 1 root root 1899 May 14 2022 barracuda.yaml
22 -rw-r--r-- 1 root root 1930 May 14 2022 bigip.yaml
23 -rw-r--r-- 1 root root 1915 May 14 2022 brocadevadx.yaml
24 -rw-r--r-- 1 root root 1829 May 14 2022 c1710.yaml
25 -rw-r--r-- 1 root root 1931 May 14 2022 c3725.yaml
26 -rw-r--r-- 1 root root 1993 May 14 2022 c7200.yaml
27 -rw-r--r-- 1 root root 2017 May 14 2022 c8000v.yaml
28 -rw-r--r-- 1 root root 1944 May 14 2022 c9800cl.yaml
29 -rw-r--r-- 1 root root 1839 May 14 2022 cda.yaml
30 -rw-r--r-- 1 root root 1981 May 14 2022 cexpresw.yaml
31 -rw-r--r-- 1 root root 1973 May 14 2022 cips.yaml
32 -rw-r--r-- 1 root root 1974 Jul 8 2022 clavisterc.yaml
33 -rw-r--r-- 1 root root 1925 May 14 2022 clearpass.yaml
34 -rw-r--r-- 1 root root 1917 May 14 2022 cms.yaml
35 -rw-r--r-- 1 root root 1862 May 14 2022 coeus.yaml
36 -rw-r--r-- 1 root root 1935 May 14 2022 cpsg.yaml
37 -rw-r--r-- 1 root root 1938 May 14 2022 csr1000v.yaml
38 -rw-r--r-- 1 root root 1967 May 14 2022 csr1000vng.yaml
39 -rw-r--r-- 1 root root 1997 May 14 2022 ctxsdw.yaml
40 -rw-r--r-- 1 root root 1966 May 14 2022 cuc.yaml
41 -rw-r--r-- 1 root root 1931 May 14 2022 cucm.yaml
42 -rw-r--r-- 1 root root 1909 May 14 2022 cue.yaml
43 -rw-r--r-- 1 root root 1870 May 14 2022 cumulus.yaml
44 -rw-r--r-- 1 root root 1998 May 14 2022 cup.yaml
45 -rw-r--r-- 1 root root 1955 May 14 2022 cvp.yaml
46 -rw-r--r-- 1 root root 1878 May 14 2022 cyberoam.yaml
47 -rw-r--r-- 1 root root 1957 May 14 2022 dcnm.yaml
48 -rw-r--r-- 1 root root 1969 May 14 2022 dellos10.yaml
49 -rw-r--r-- 1 root root 1769 May 14 2022 docker.yaml
50 -rw-r--r-- 1 root root 1920 May 14 2022 esxi.yaml
51 -rw-r--r-- 1 root root 1862 May 14 2022 extremexos.yaml
52 -rw-r--r-- 1 root root 1898 May 14 2022 firepower.yaml
53
54 *snip*
```

Since vJunos-switch and vJunosEvolved are entirely new offerings, there is no pre-built template for this. The template must be created manually. The following templates can be used for vJunos-switch and vJunosEvolved:

vJunosEvolved:

```
1 root@eve-ng:/opt/unetlab/html/templates/intel# cat vJunosEV0.yaml
```

```

2  type: qemu
3  description: vJunos-switch
4  name: vJunos-switch
5  cpulimit: 4
6  icon: JunipervQFXre.png
7  cpu: 4
8  ram: 5120
9  eth_name:
10 - fxp0
11 - ge-0/0/0
12 - ge-0/0/1
13 - ge-0/0/2
14 - ge-0/0/3
15 - ge-0/0/4
16 - ge-0/0/5
17 - ge-0/0/6
18 - ge-0/0/7
19 - ge-0/0/8
20 - ge-0/0/9
21 ethernet: 11
22 console: telnet
23 qemu_arch: x86_64
24 qemu_version: 4.1.0
25 qemu_nic: virtio-net-pci
26 qemu_options: -machine type=pc,accel=kvm -serial mon:stdio -nographic -smbios type=1,product=VM-
                VEX -cpu IvyBridge,ibpb=on,md-clear=on,spec-ctrl=on,ssbd=on,vmx=on

```

The next step is to create a new directory for this device and copy the image to this directory. We'll create a directory with the prefix 'vJunosEVO' and 'vJunos-switch' followed by a suffix which specifies the version of the software image. The prefix naming convention is important – it must match the name of the template that exists for the device. EVE-NG uses this name to determine which template must be used to boot the device (hence, the need for them to match).

The images (and their directories) are stored under '/opt/unetlab/addons/qemu/'.

```

1  root@eve-ng:/opt/unetlab/addons/qemu# pwd
2  /opt/unetlab/addons/qemu
3  root@eve-ng:/opt/unetlab/addons/qemu# mkdir vJunosEVO-23.2R1
4
5  root@eve-ng:/opt/unetlab/addons/qemu# cd vJunosEVO-23.2R1/
6  root@eve-ng:/opt/unetlab/addons/qemu/vJunosEVO-23.2R1# ls -l
7  total 1714308
8  -rw-r--r-- 1 root root 1755447296 Mar 14 00:14 virtioa.qcow2

```

and

```

1  root@eve-ng:/opt/unetlab/addons/qemu# pwd
2  /opt/unetlab/addons/qemu
3  root@eve-ng:/opt/unetlab/addons/qemu# mkdir vJunosswitch-23.2R1
4
5  root@eve-ng:/opt/unetlab/addons/qemu# cd vJunosswitch-23.2R1/
6  root@eve-ng:/opt/unetlab/addons/qemu/vJunosswitch-23.2R1# ls -l
7  total 3850436
8  -rw-r--r-- 1 root root 3942842368 Feb 25 11:15 vjunos-switch-23.2R1.qcow2

```

Once the image is copied into the folder, it must be renamed to 'virtioa.qcow2' as per EVE-NGs naming convention. Finally, EVE-NG requires you to fix some permissions to use the image - they have a pre-built script for this which can be invoked using '/opt/unetlab/wrappers/unl_wrapper -a fixpermissions' as seen below:

```

1  root@eve-ng:/opt/unetlab/addons/qemu/vJunosEVO-23.2R1# mv vjunosEVO-23.2R1.qcow2 virtioa.qcow2
2  root@eve-ng:/opt/unetlab/addons/qemu/vJunosEVO-23.2R1# /opt/unetlab/wrappers/unl_wrapper -a
    fixpermissions

```

and


```

1  root@eve-ng:/opt/unetlab/addons/qemu/vJunosswitch-23.2R1# mv vjunos-switch-23.2R1.qcow2 virtioa.
    qcow2
2  root@eve-ng:/opt/unetlab/addons/qemu/vJunosswitch-23.2R1# /opt/unetlab/wrappers/unl_wrapper -a
    fixpermissions

```

On the EVE-NG UI, you should see 'vJunosEvolved' and 'vJunos-switch' as a device available to use and deploy:


vJunosEvolved:

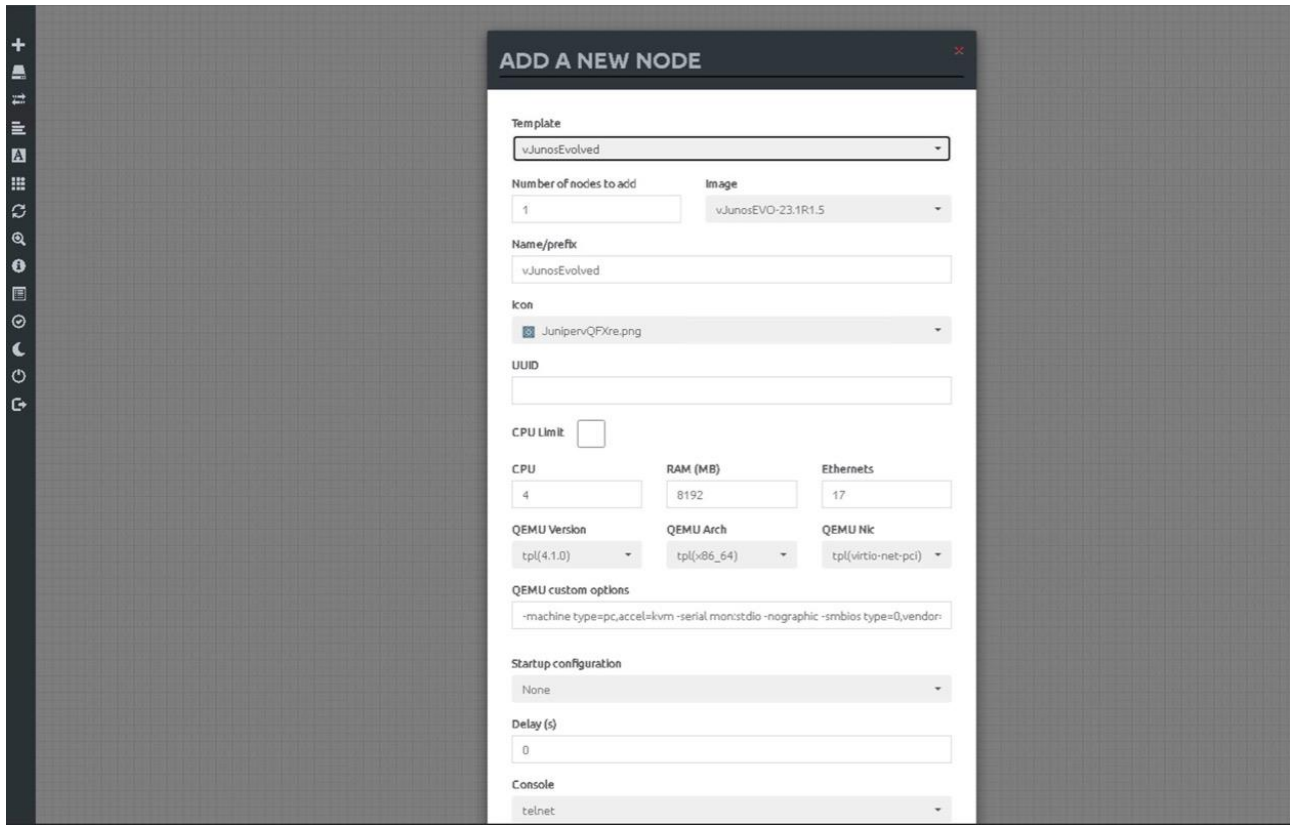

The screenshot shows the 'ADD A NEW NODE' form in the EVE-NG UI for the 'vJunosEvolved' template. The form includes the following fields and options:

- Template:** vJunosEvolved
- Number of nodes to add:** 1
- Image:** vJunosEVO-23.1R1.5
- Name/prefix:** vJunosEvolved
- Icon:** JunipervQFXre.png
- UUID:** (empty field)
- CPU Limit:** (checkbox, unchecked)
- CPU:** 4
- RAM (MB):** 8192
- Ethernets:** 17
- QEMU Version:** tpl(4.1.0)
- QEMU Arch:** tpl(x86_64)
- QEMU Nic:** tpl(virtio-net-pci)
- QEMU custom options:** -machine type=pc,accel=kvm -serial monstdio -nographic -smbios type=0,vendor=
- Startup configuration:** None
- Delay (s):** 0
- Console:** telnet


vJunos-switch:

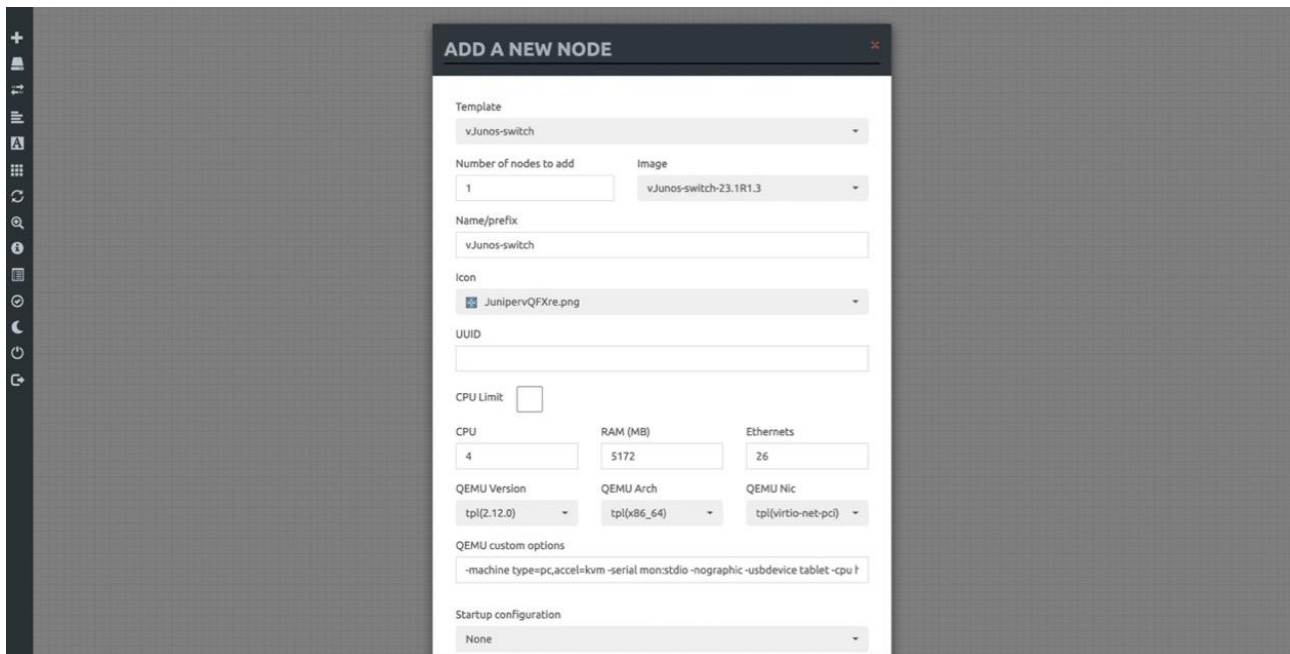

The screenshot shows the 'ADD A NEW NODE' form in the EVE-NG UI for the 'vJunos-switch' template. The form includes the following fields and options:

- Template:** vJunos-switch
- Number of nodes to add:** 1
- Image:** vJunos-switch-23.1R1.3
- Name/prefix:** vJunos-switch
- Icon:** JunipervQFXre.png
- UUID:** (empty field)
- CPU Limit:** (checkbox, unchecked)
- CPU:** 4
- RAM (MB):** 5172
- Ethernets:** 26
- QEMU Version:** tpl(2.12.0)
- QEMU Arch:** tpl(x86_64)
- QEMU Nic:** tpl(virtio-net-pci)
- QEMU custom options:** -machine type=pc,accel=kvm -serial monstdio -nographic -usbdevice tablet -cpu h
- Startup configuration:** None

These devices can now be deployed and interconnected. To interconnect two devices, simply click on the orange icon seen when you hover over a node, as seen below:

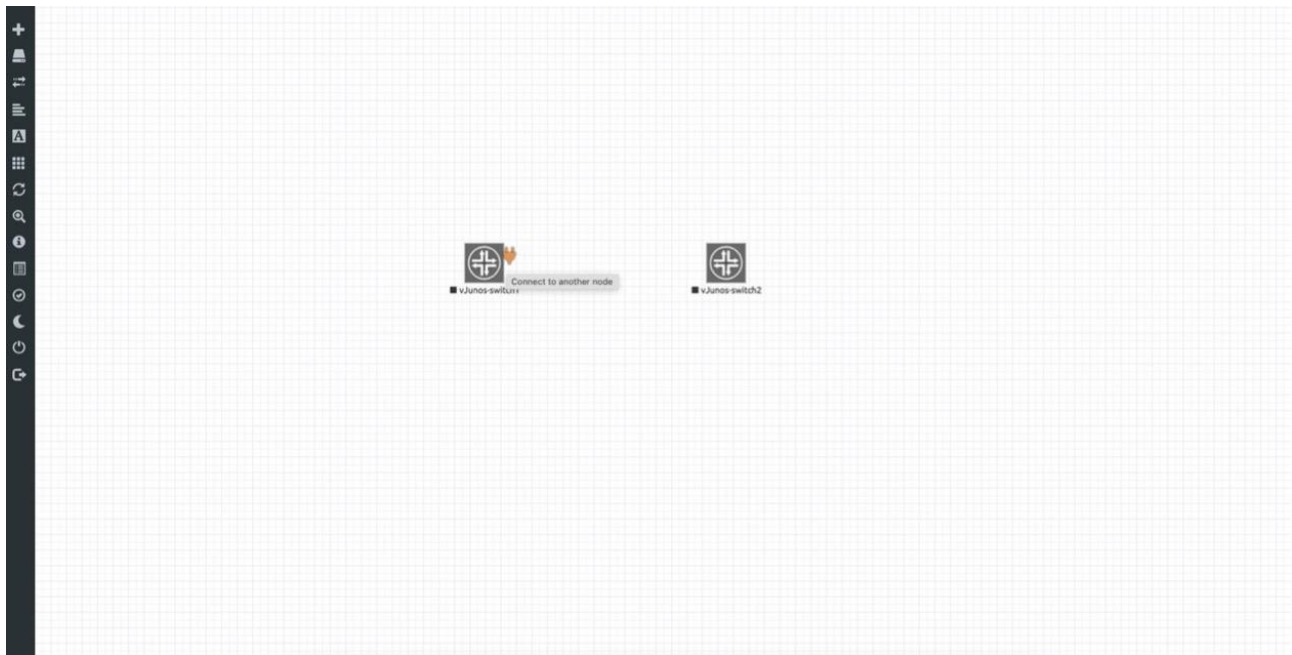


Once clicked, you can drag it to the destination node and let the connector go, which then gives you a pop-up to choose which interface is being connected on each side, like below:




To demonstrate the use of vJunos-switch and vJunosEvolved, we've built the following topology on EVE-NG, respectively:

For vJunosEvolved:

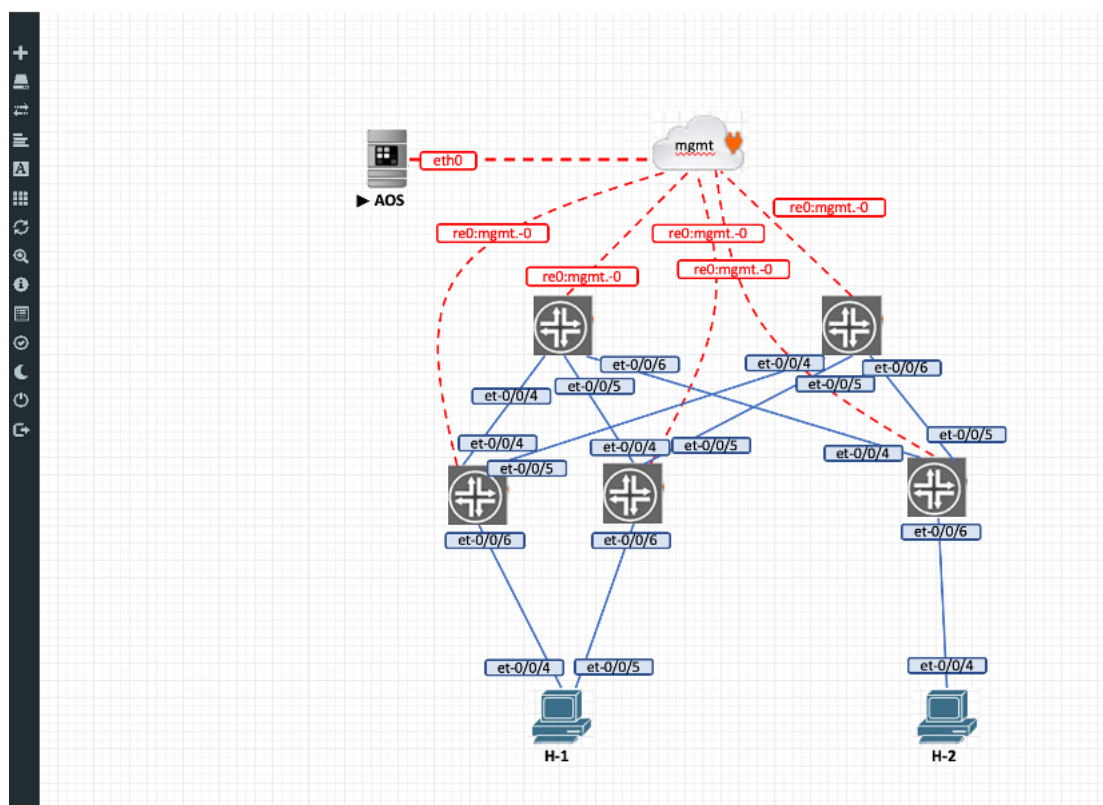

The topology is a typical 3-stage Clos fabric, with two spines and three leafs. Two leafs (leaf1 and leaf2) are ESI peers and connect down to the same host, h1. The end goal is to manage these devices via Juniper Apstra and use Apstra to deploy all the necessary configuration to build a fabric and provide reachability between hosts h1 and h2, which are in the same subnet.

vJunos-switch:

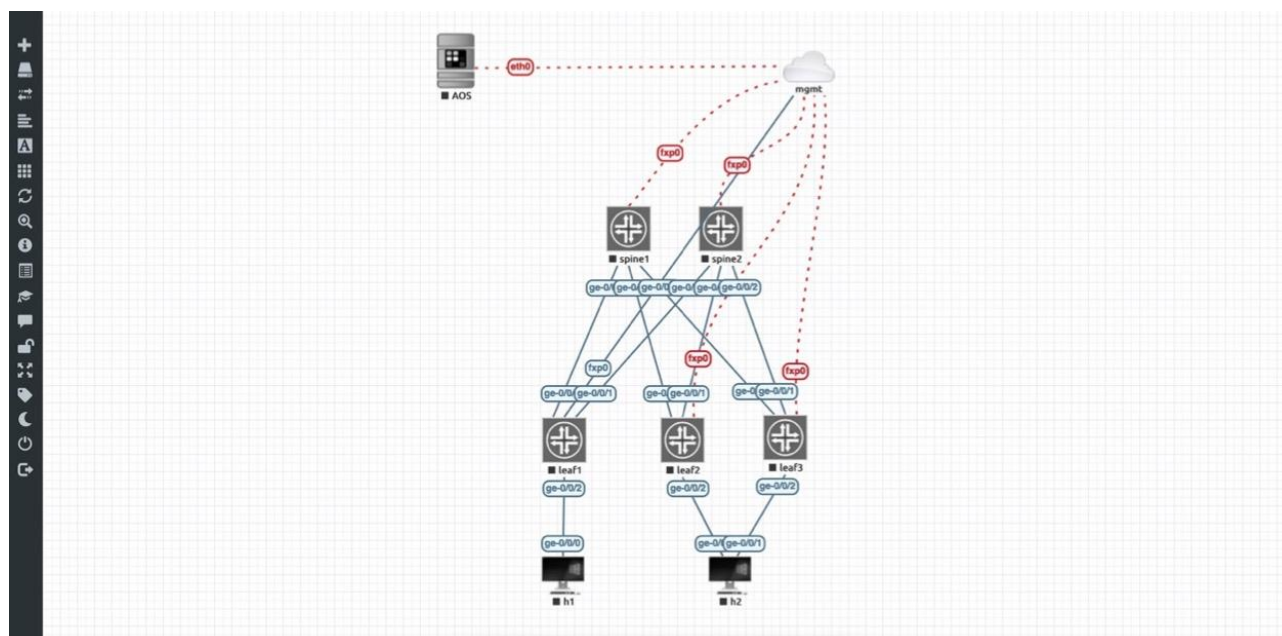

This topology also is with two spines and 3 leafs. Two leafs (leaf2 and leaf3) are ESI peers and connect down to the same host, h2.

1.2.2 Deploying Juniper Apstra in EVE-NG

As seen in the topology above, we also have Juniper Apstra deployed within EVE-NG itself. For the sake of completeness, we'll also document how this is done.

The Juniper Apstra KVM image can be downloaded from the Juniper software downloads page - <https://support.juniper.net/support/downloads/>

The image is zipped with an extension of gz. Once unzipped, move the file to a folder created with the EVE-NG naming convention for Apstra – the directory must start with the prefix 'aos' and you can include the Apstra version as a suffix for easy identification of the image version. For example, we have created a folder named 'aos-4.1.2-269' and the image is under that. The image is finally renamed to 'hda.qcow2':

```
1 root@eve-ng:/opt/unetlab/addons/qemu# cd aos-4.1.2-269/
2 root@eve-ng:/opt/unetlab/addons/qemu/aos-4.1.2-269# ls -l
3 total 2762612
4 -rw-r--r-- 1 root root 2828908544 Feb 25 12:14 hda.qcow2
```

The following template can be used for Apstra:

```
“ root@eve-ng:/opt/unetlab/html/templates/intel# cat aos.yml
```



DC – AI – Routing – Switching – Security – Wireless – Automation

© Copyright 2026 Hewlett Packard Enterprise Development LP. The information contained herein is subject to change without notice. The only warranties for Hewlett Packard Enterprise products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty.

Hewlett Packard Enterprise shall not be liable for technical or editorial errors or omissions contained herein.

Trademark acknowledgments, if needed. All third-party marks are the property of their respective owners.

HEWLETT PACKARD ENTERPRISE

HPE.com

