


PC Communication


Note: If the serial port cannot be recognized, please install the CH340 driver

1. The IMU attitude sensor is connected to the computer via a Type-C data cable

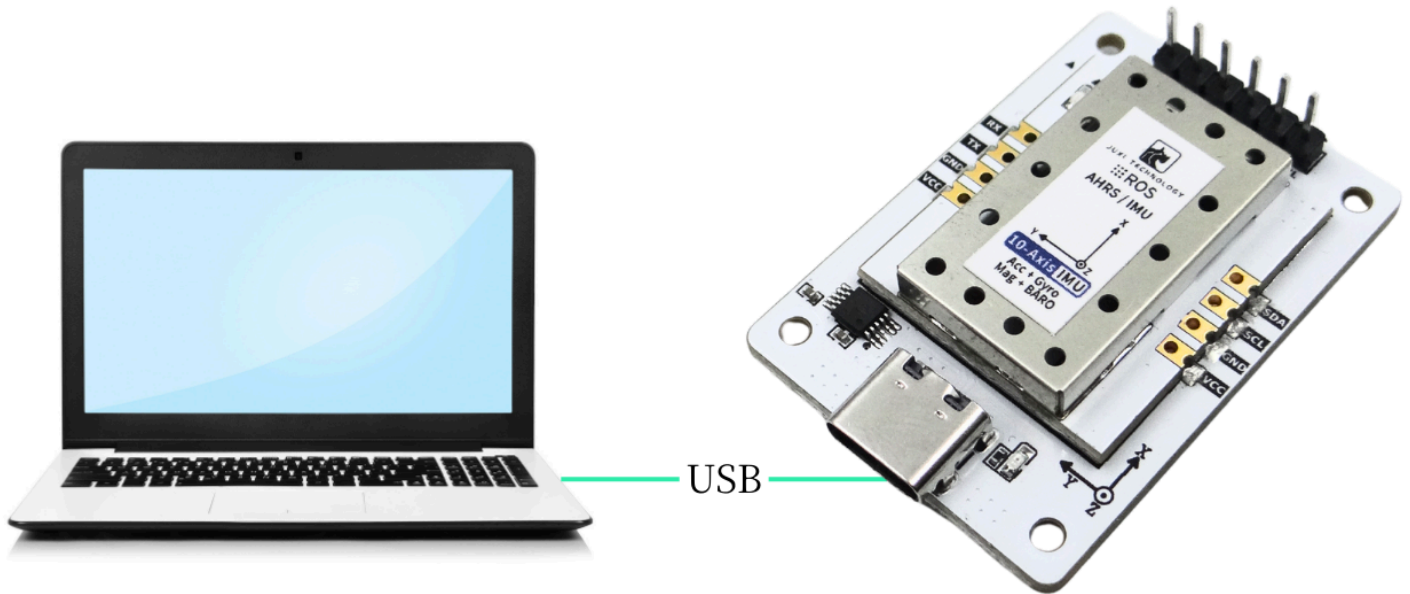

2. View Serial Port Data

Configure the serial port assistant as shown in the figure below,

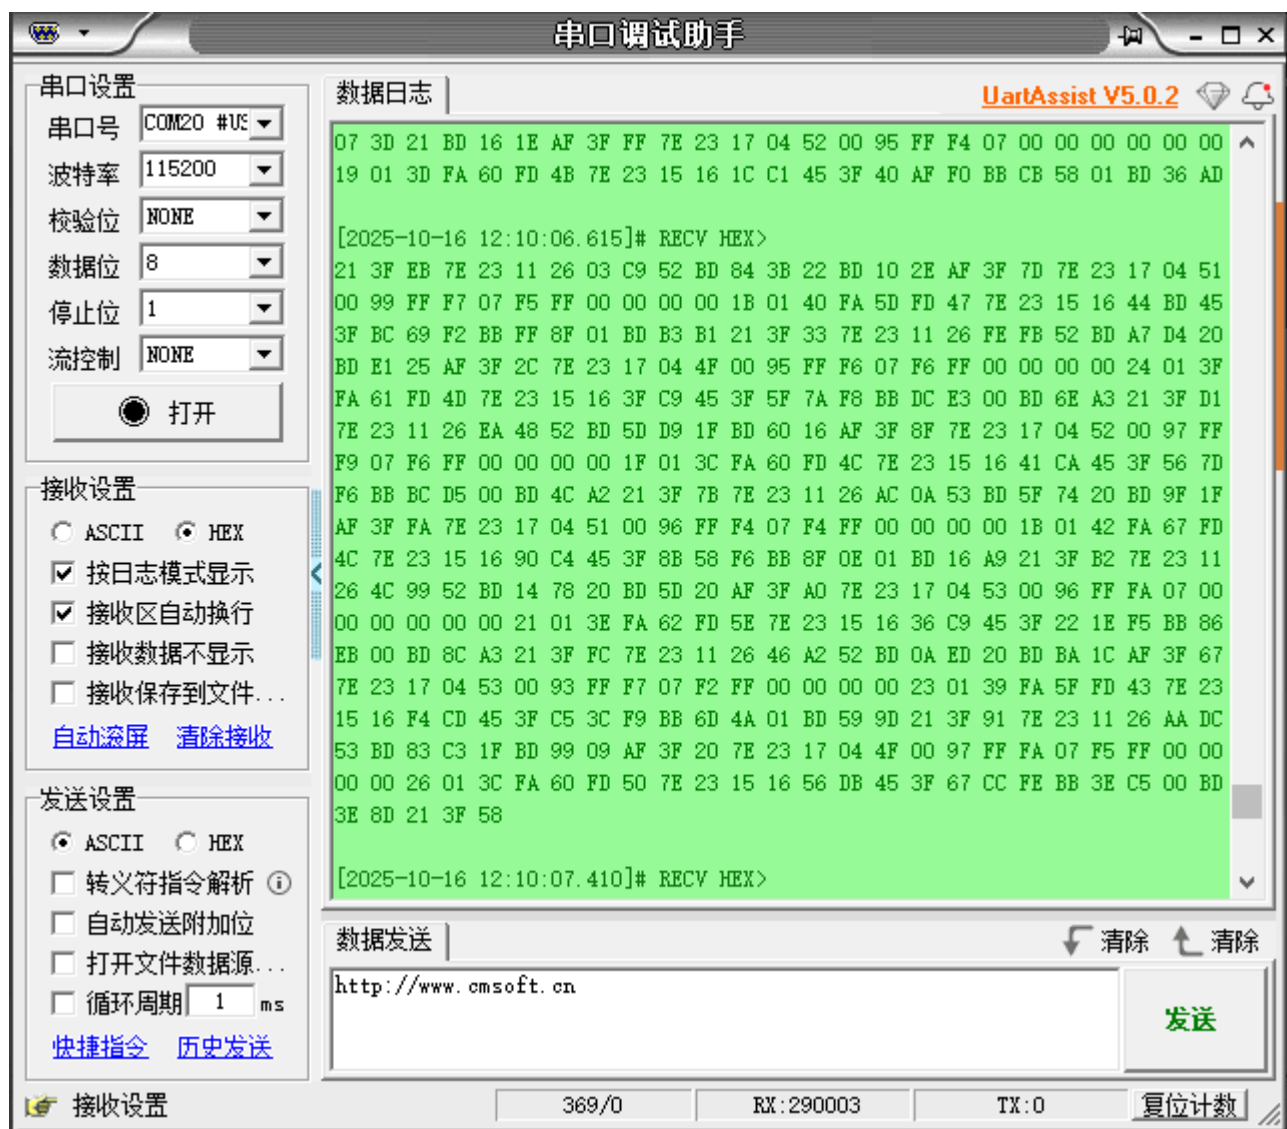

The data printed by the serial port is unprocessed, and for the specific meaning of the data, please refer to the **Communication Protocol** document.

Serial Communication

1. Basic Format of Data Frame

The data frame consists of the following fields in sequence :

Header 1 ,Header 2 ,Length ,Function Word ,Data Segment ,Check Bit

II. General Rules of the Agreement

This communication protocol uses bytes as the basic unit ,and data is re

The fixed header of the frame is : 0x7E , 0x23 ; the end of the frame is a ch
the frame is determined by the length field .

Checksum calculation rule : Starting from the first byte of the packet hea
checksum , all bytes are accumulated byte by byte , and the least significan

Length field calculation rule : The length value is the total number of all
index of the check bit + 1 .

Multi-byte storage rule : Some data consists of 2 or 4 bytes , using little-
byte comes first and the high byte comes last .

Symbol Explanation : "|" : indicates that this position is optional data ; "XX"
calculated

Numerical Scaling Explanation : Some decimals will be scaled up by a fix
needs to divide by the corresponding multiple to restore them to the actu

Data Direction Description :

Yellow background annotation : MCU → Upper layer reported data

No color marking : for the upper layer → MCU issues commands

Function	Baotou 1	Baotou 2	Length	Function Word	Parameter 1	Parameter 2	checksum
Request Firmware	0x7E	0x23	0x07	0x80	0x01	0x00	0x29
Subscript	0	1	2	3	4	5	6
Function	Baotou 1	Baotou 2	Length	Function Word	Major Version	Subversion Number	Patch Version
Return the firmware	0x7E	0x23	0x08	0x01	XX	XX	XX
Subscript	0	1	2	3	4	5	6

