

PPNAM GOODS RECEIVING

Station 1 Scanner App

Standard Operating Procedure

DOCUMENT	PPNAM-SOP-001
SYSTEM	PPNAM Station 1 AA — Android Scanner App
DEVICE	Chainway C72 / compatible RFID scanner
PACKAGE	com.sysone.scanner
VERSION	1.0
DATE	22 May 2026

CONFIDENTIAL — INTERNAL USE ONLY

Table of Contents

Overview

Prerequisites

App Launch & Dashboard

Settings Configuration

Step 1 – SAP Document Lookup

Step 2 – Product Selection

Step 3 – RFID Tag Assignment

Step 4 – Pallet Offloading

Completing a Session

Error Messages & Recovery

Unassign Mode

Reassign Mode

1. Overview


The PPNAM Station 1 Scanner App is used by goods-receiving operators to register incoming pallets against SAP Purchase Orders or Stock Transfer Requests. The workflow is: **SAP Lookup** → **Product Selection** → **RFID Tag Assignment** → **Offloading**.

2. Prerequisites

- Scanner device is charged and powered on.
- Wi-Fi is connected to the site network.
- Station 1 PC is running with MQTT broker online.
- App is installed: `com.sysone.scanner`.
- Settings are configured (MQTT host, scanner ID, station ID — see Section 4).

3. App Launch & Dashboard

Tap the **PPNAM Scanner** icon on the home screen to launch the app.

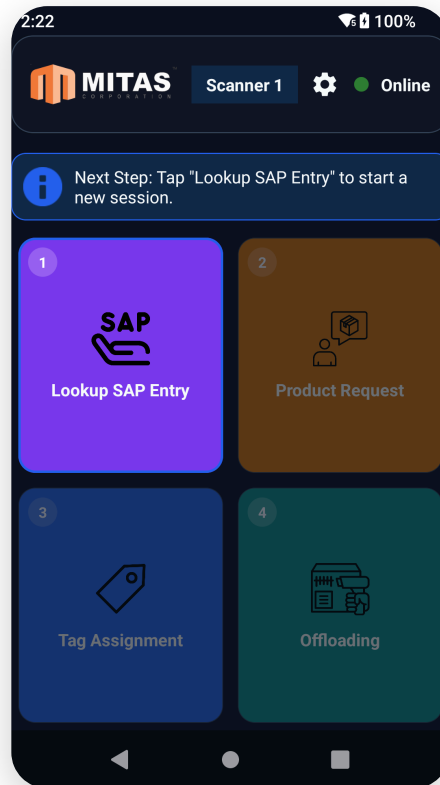


Main dashboard — no active session

The dashboard shows four workflow tiles. When no session is active the tag assignment and offload tiles are greyed out. The tiles become enabled as you progress through the workflow.

- **Lookup SAP Entry** — start a new receiving session (Step 1).
- **Tag Assignment** — assign RFID tags to pallets (Step 3, enabled after product selection).
- **Offload** — scan pallets off the truck (Step 4, enabled after tag assignment).
- **Settings** (⚙️) — configure MQTT, scanner, and station settings.

3.1 Station Offline State

If Station 1 is not running or the network is unavailable, the dashboard shows a full-screen offline overlay blocking all workflow tiles:

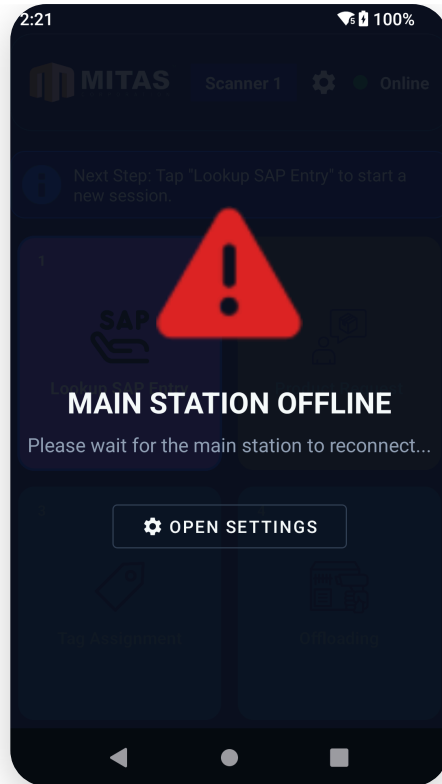


Dashboard — station offline overlay

The overlay clears automatically once Station 1 comes back online and the MQTT connection is restored. Check that the Station 1 PC is running and connected, or verify MQTT/Wi-Fi settings (Section 4).


4. Settings Configuration

Tap the  **gear icon** (top-right of the dashboard). Enter the supervisor password when prompted.

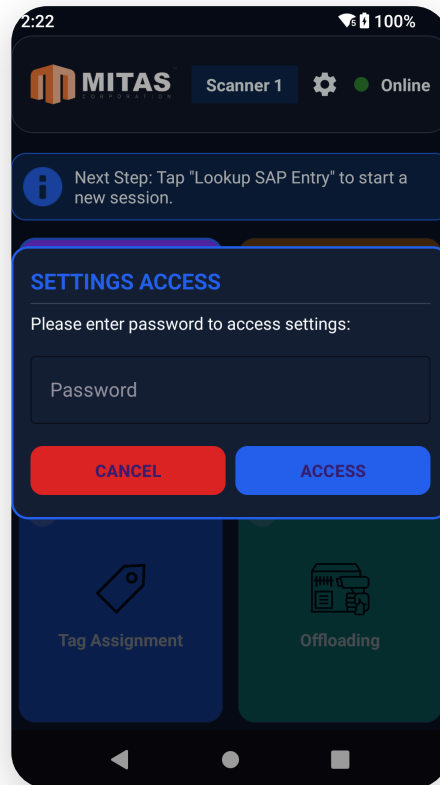


Settings — password prompt

Type the supervisor password and tap **ACCESS**.

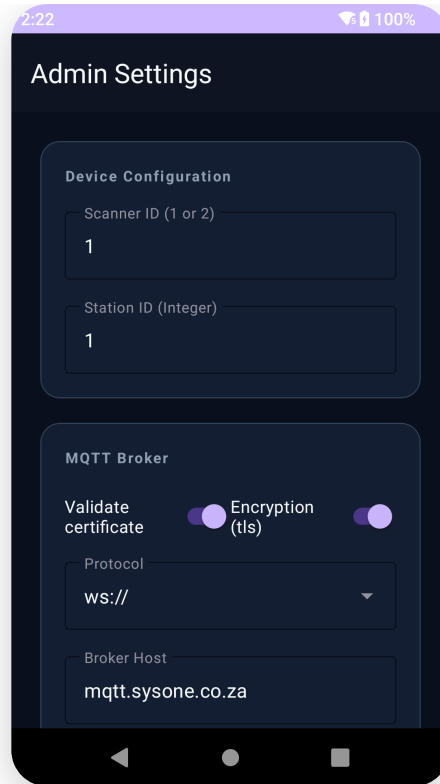


Settings — top section (MQTT and scanner IDs)

MQTT Settings: Enter the broker host, port, and credentials provided by your IT team. **Scanner ID** and **Station ID** identify this device on the network.

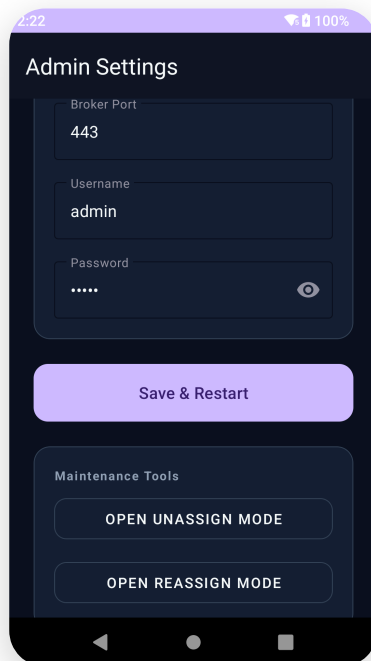

Settings — middle section

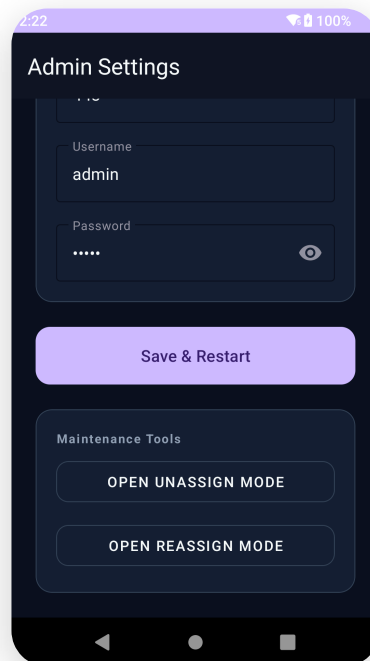


Settings — bottom section (Unassign / Reassign buttons)

Scroll to the bottom to access **Unassign Mode** and **Reassign Mode** (see Sections 11 and 12).

Note: Changes are saved automatically. Tap the **back arrow** to return to the dashboard.


5. Step 1 – SAP Document Lookup

Tap **Lookup SAP Entry** on the dashboard. Enter the SAP document number and select the document type, then tap **LOOKUP**.

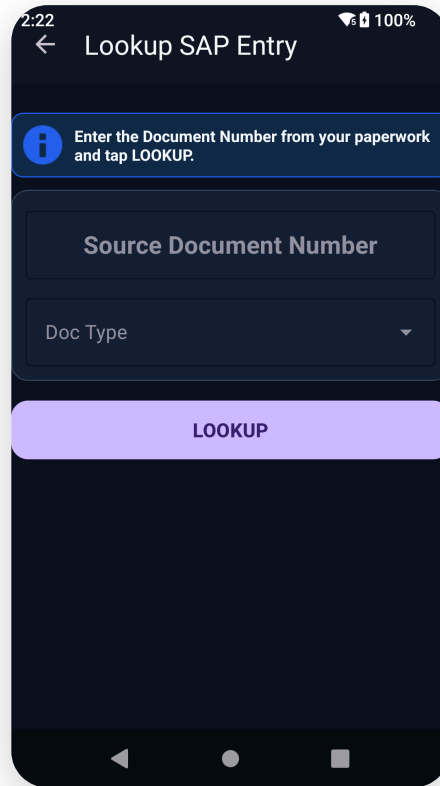


SAP Lookup screen — empty

- **Document Number** — enter the SAP PO number or Transfer Request number.
- **Document Type** — select *Purchase Order* or *Stock Transfer* from the dropdown.
- **Vendor Reference** — (Purchase Order only) enter an optional internal reference for logging.

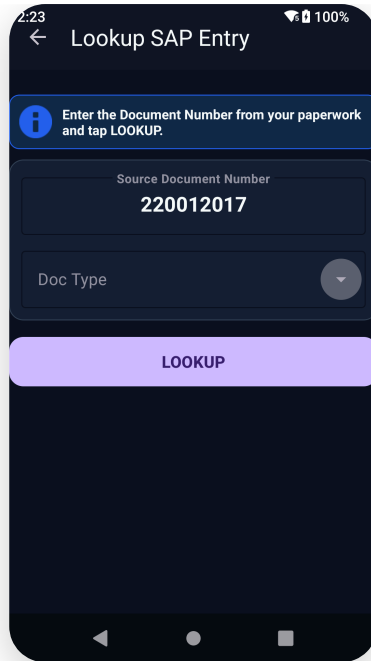


SAP Lookup screen — PO number entered, vendor reference and type selected

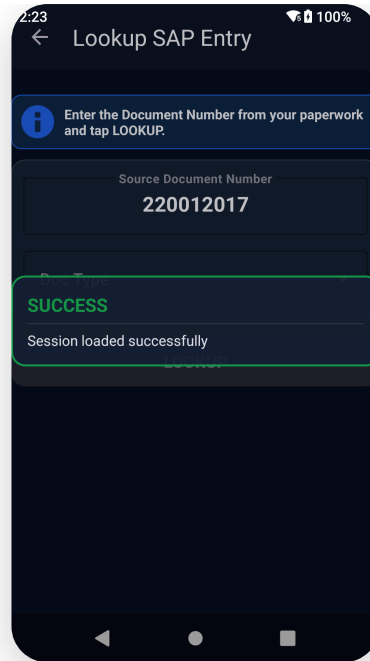

SAP Lookup — waiting for station response

The app contacts the Station 1 PC. A progress indicator is displayed while waiting.

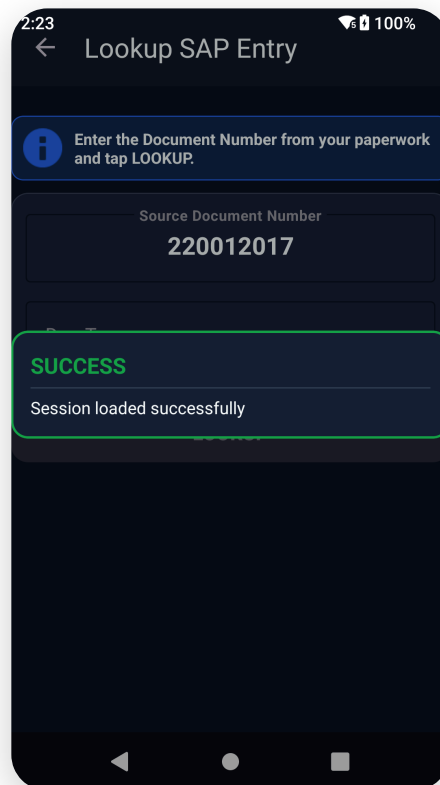


*SAP Lookup — success confirmation
(auto-dismisses after 2 s)*


On success, the app shows a brief confirmation and automatically navigates to the **Product Selection** screen.

6. Step 2 – Product Selection

The product list shows all open lines from the SAP document. Tick the checkbox next to each product that is being received in this delivery, then tap **REQUEST**.

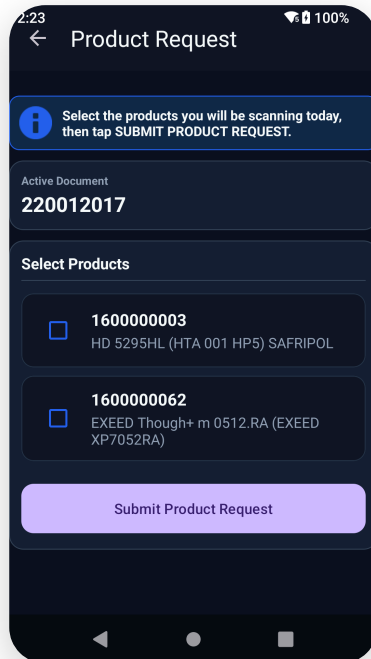


Product Selection — product list loaded

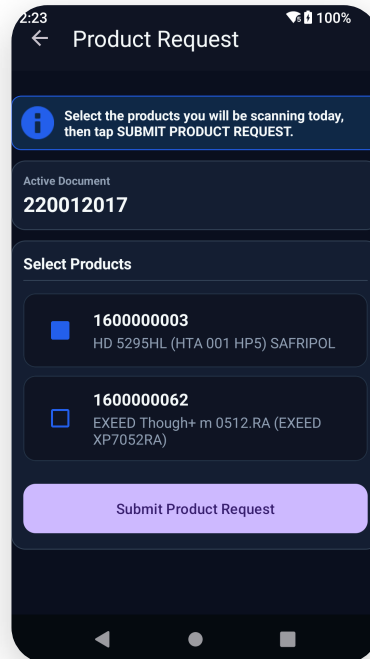


Product Selection — product ticked

Tick each product line being received. If multiple products are on the document tick all that apply. Tap **REQUEST** when done.

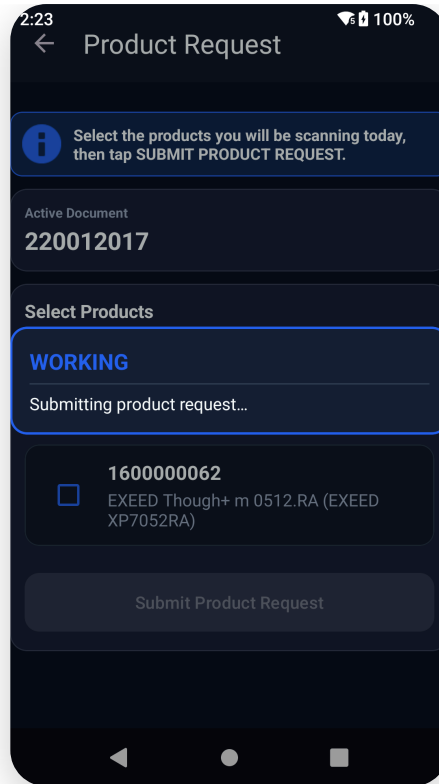

*Product Request — Working popup
while Station 1 processes the selection*

A **Working** popup appears while the app waits for Station 1 to acknowledge the selection.

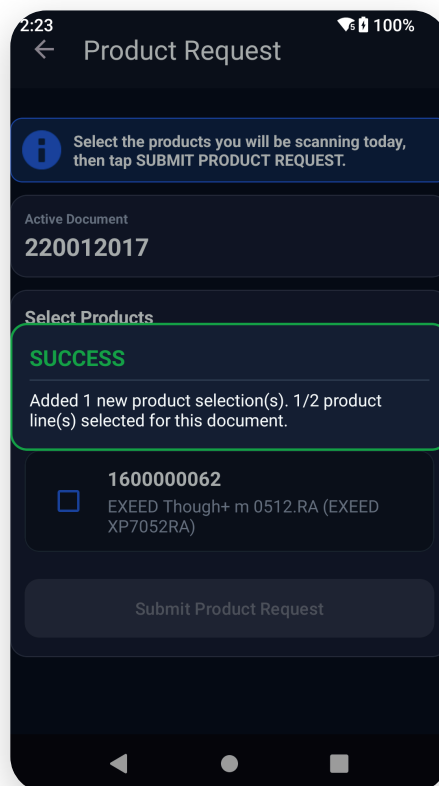


*Product Request — success confirmation
(auto-dismisses after 2 s)*

On success, a brief confirmation appears and the app navigates to Tag Assignment.


7. Step 3 – RFID Tag Assignment

The Tag Assignment screen is where RFID tags are paired with pallets. For each pallet on the truck, scan its RFID tag and tap **SUBMIT**.

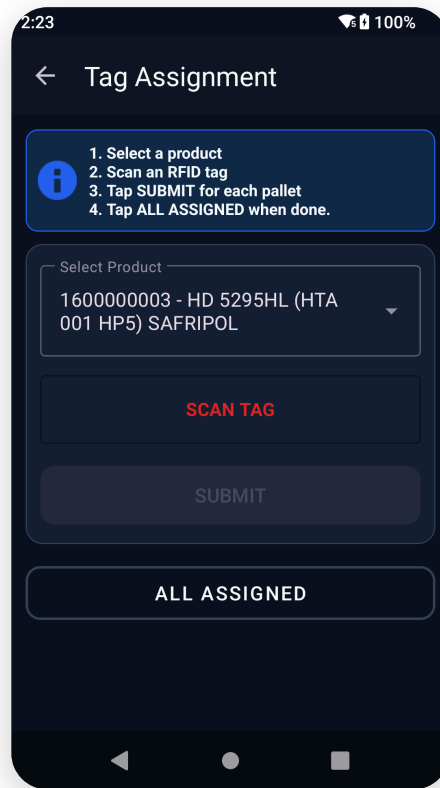


Tag Assignment — ready to scan first tag

- **Product spinner** — select the product for this pallet if multiple products are active.
- **Pallet sequence** — enter the pallet number (auto-increments by default).
- **Scan RFID Tag** — place the RFID tag in range of the scanner, or type the tag ID.
- **SUBMIT** — confirms the tag and creates the pallet record in Station 1.

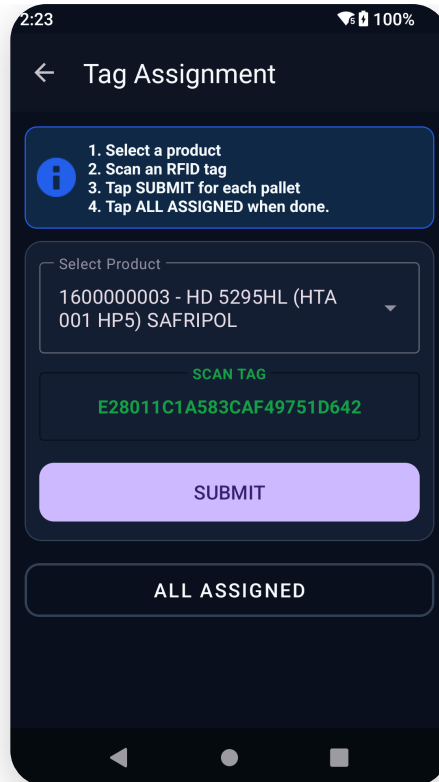


Tag Assignment — RFID tag detected, ready to submit

The scanned tag ID appears in the RFID field. Review it, then tap **SUBMIT**.

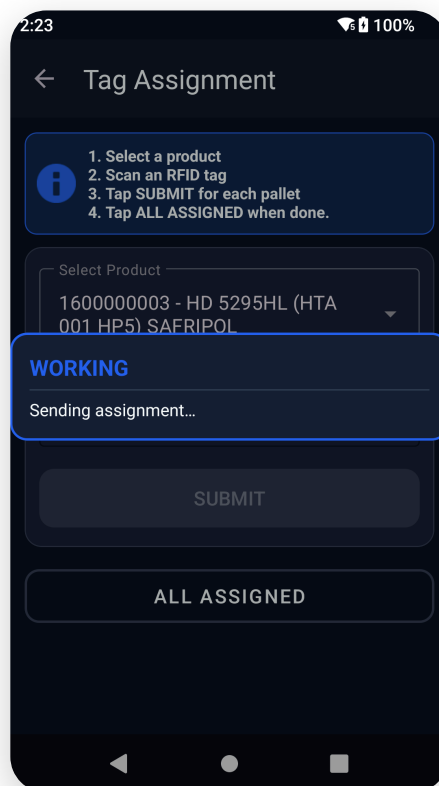


Tag Assignment — Working popup while Station 1 creates the pallet record

A **Working** popup appears while Station 1 creates the pallet record and generates a barcode.

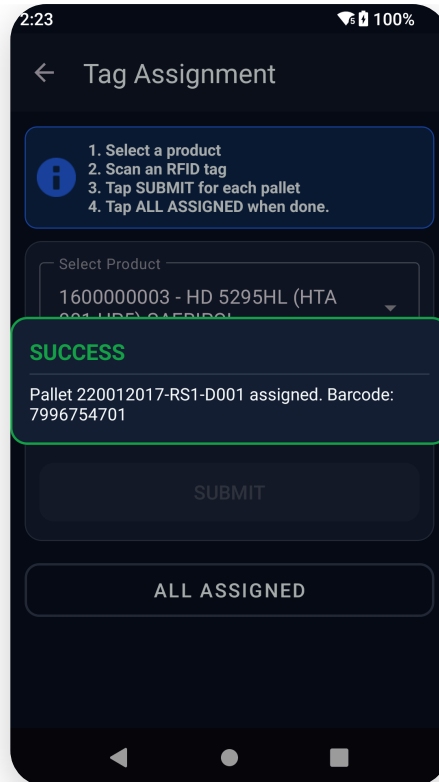


Tag Assignment — success popup showing pallet barcode (auto-dismisses after 2 s)

On success, the station returns a barcode for the pallet. The popup auto-dismisses after 2 s and the form resets ready for the next tag scan.

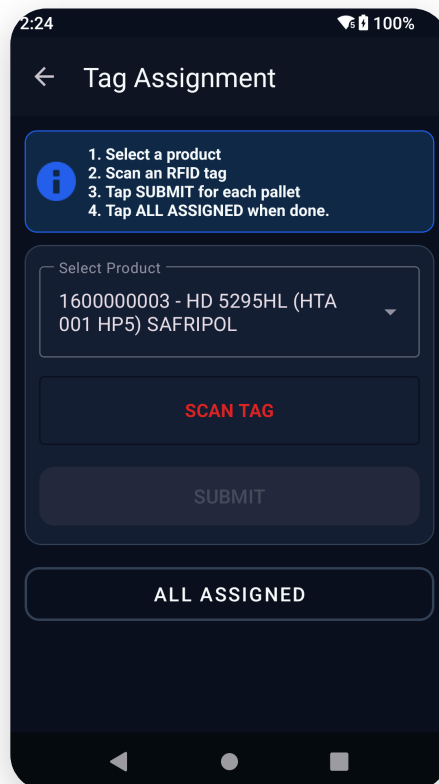


Tag Assignment — all pallets assigned, ready to confirm

When all RFID tags have been scanned, tap **ALL ASSIGNED** to confirm that all pallets for this delivery have been registered.

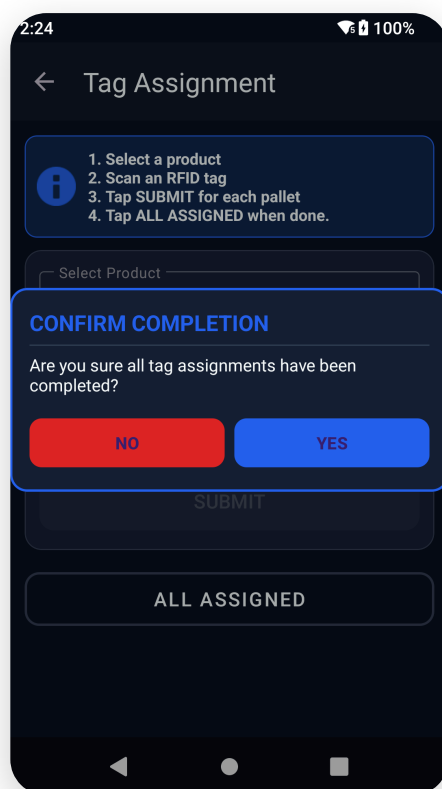


All Assigned — confirmation dialog

Tap **YES** to confirm all pallets are assigned and proceed to printing.

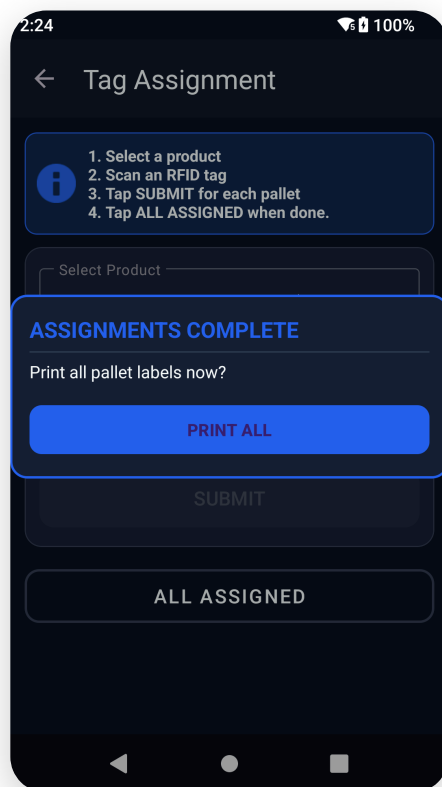


Print All — popup after All Assigned

A popup confirms assignments are complete and prompts to print all labels. Tap **PRINT ALL** to send all pallet labels to the label printer.

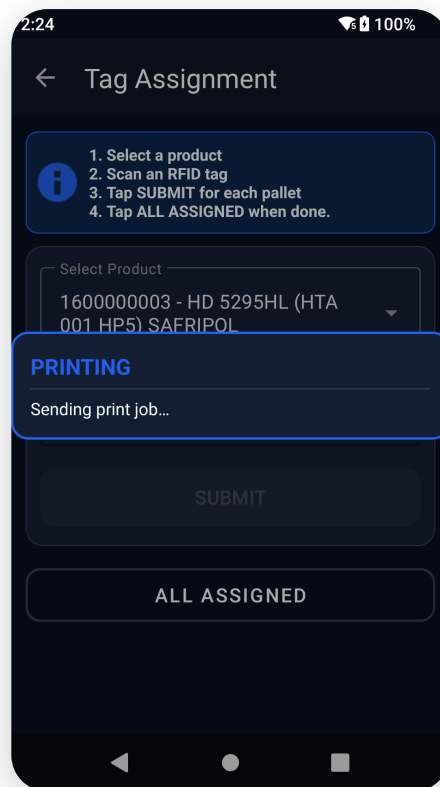

Label Printing — Printing popup while labels are sent to the printer

A **Printing** popup appears while labels are being sent to the printer.

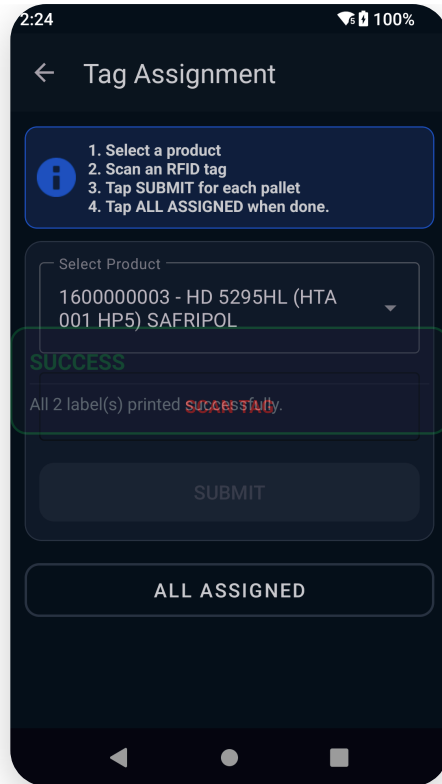


*Label Printing — success confirmation
(auto-dismisses after 2 s)*

On success, all labels are printed and the app navigates to the **Offload** screen.

8. Step 4 – Pallet Offloading

After printing, the app navigates to the **Offload** screen. As each pallet is removed from the truck, scan its **barcode** first, then scan its **RFID tag**, and tap **SUBMIT**.

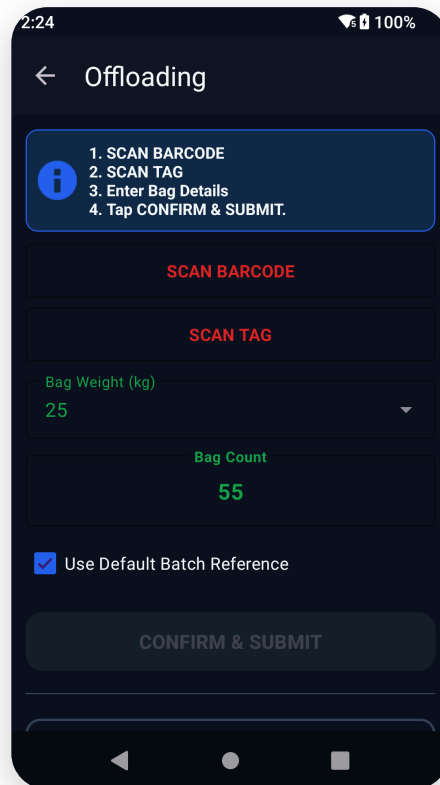

Offload screen — ready to scan first pallet

- **Barcode** — scan the printed label barcode or type it manually.
- **RFID Tag** — scan the pallet's RFID tag.
- **Bag Count** — enter the actual number of bags on this pallet.
- **SUBMIT** — records the offload and validates the barcode/RFID pair.




Offload — barcode scanned for pallet 1

Pallet 1: scan the barcode. The barcode field populates automatically.




Offload — RFID scanned for pallet 1

Then scan the RFID tag. Both fields are now populated.

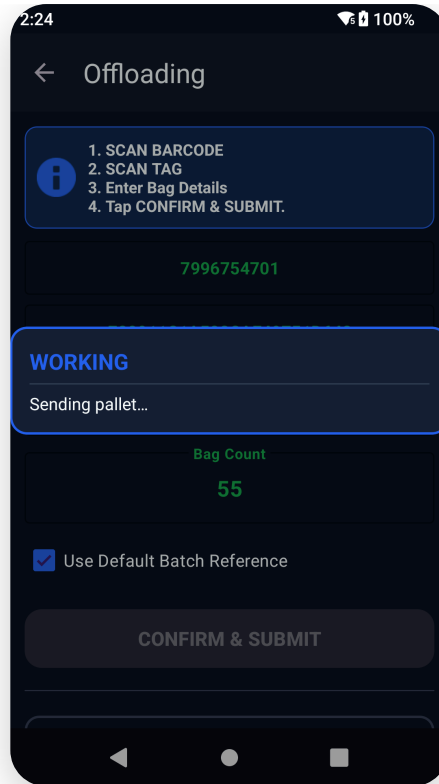

Offload — Working popup while Station 1 validates and records the pallet

A **Working** popup appears while Station 1 validates the barcode/RFID pair.

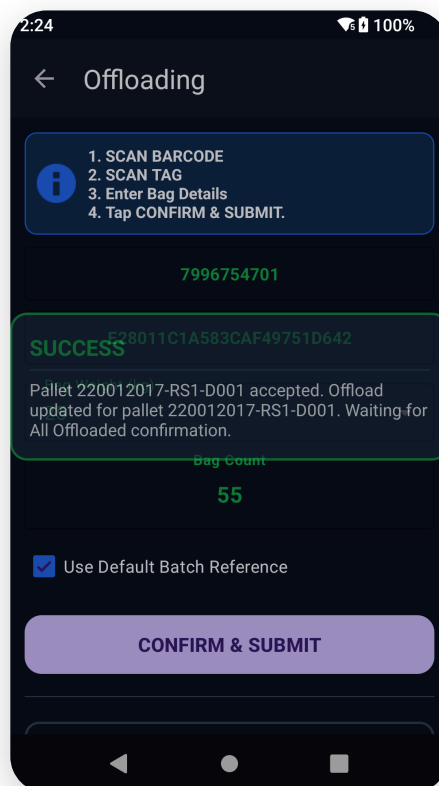

Offload — success confirmation (auto-dismisses after 2 s)

On success, the fields clear ready for the next pallet. Repeat for every pallet.



Offload — barcode scanned for pallet 2

Pallet 2: scan the barcode. The barcode field populates automatically.



Offload — RFID scanned for pallet 2

Then scan the RFID tag. Both fields are now populated.

2:25 100%

← Offloading

- 1. SCAN BARCODE
- 2. SCAN TAG
- 3. Enter Bag Details
- 4. Tap CONFIRM & SUBMIT.

SCAN BARCODE

SCAN TAG

Bag Weight (kg)
25

Bag Count
55

☒ Use Default Batch Reference


CONFIRM & SUBMIT

Offload — pallet 2 successfully recorded

A success message confirms the offload. The fields clear ready for the next pallet. Repeat for every pallet.


9. Completing a Session

When all pallets are offloaded, tap **FINISH SESSION**. Confirm when prompted. The station will post the pallets to SAP.

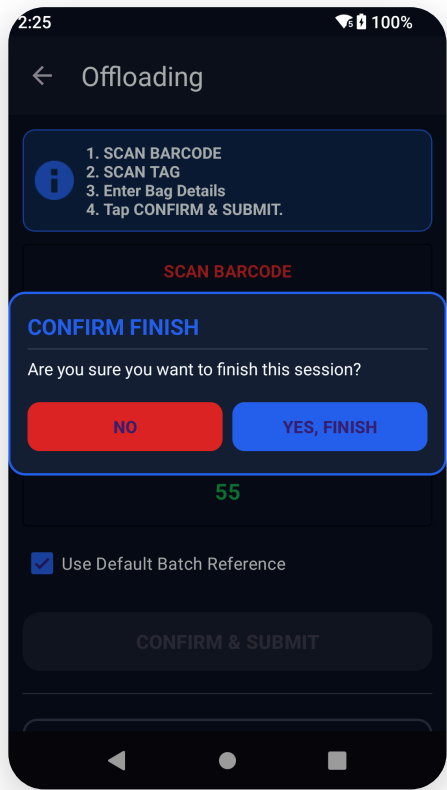


Finish Session — confirmation dialog

Tap **YES** to confirm. The station will post the receiving data to SAP.

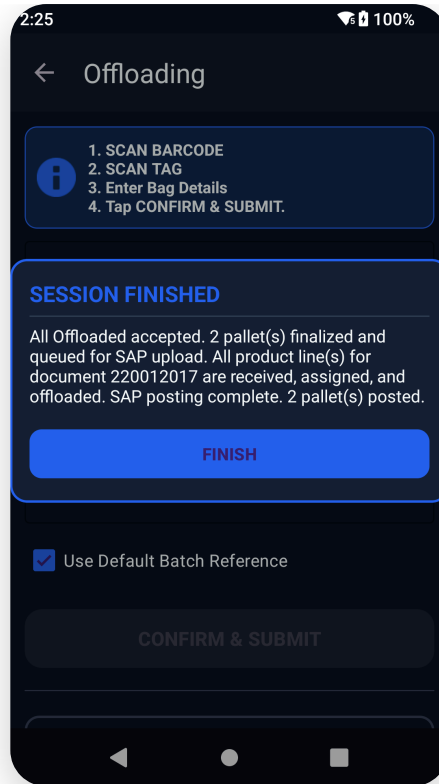

Session Finished — SAP posting complete

The Session Finished popup summarises the SAP posting result. Tap **FINISH** (or **DISMISS**) to return to the dashboard.

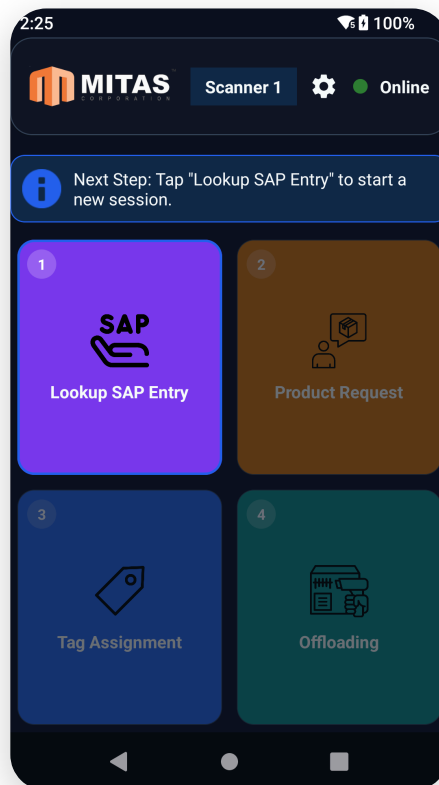

Dashboard — returned to idle after session


Note: The dashboard resets to the idle state. The operator can start a new session immediately by tapping **Lookup SAP Entry** again.

10. Error Messages & Recovery

The app displays a dismissible popup with an error title and recovery instructions whenever a step fails. Each error type and its resolution is described below.

10.1 SAP Lookup Failed

10.2 RFID Tag Assignment Failed

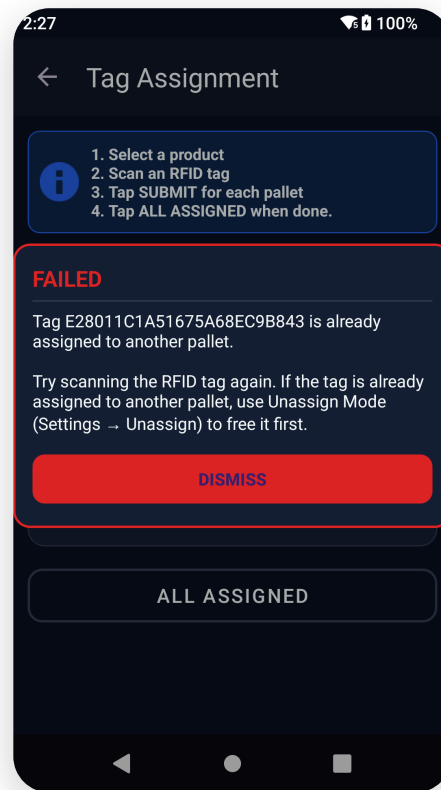


Error — RFID tag assignment failed popup

Cause: The RFID tag is already assigned to another pallet or is not readable.

- Try scanning the RFID tag again — the tag may have been misread.
- If the tag is already assigned: go to **Settings** → **Unassign Mode**, scan the tag to free it, then return to Tag Assignment.
- Replace a physically damaged tag and re-scan.

10.3 Print All Failed

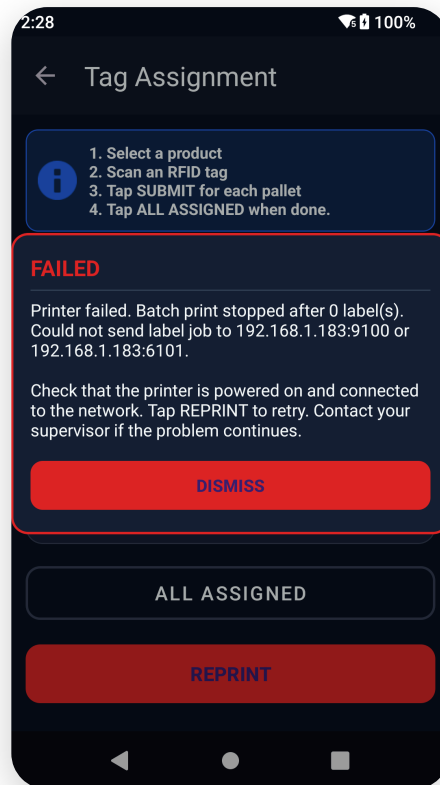


Error — Print All failed popup

Cause: The label printer is offline, out of labels, or unreachable on the network.

- Check that the TSC label printer is powered on and the green light is steady.
- Verify the printer's network cable or Wi-Fi connection.
- Tap **REPRINT** (if shown) to retry once the printer is ready.
- Contact your supervisor if the printer cannot be reached.

10.4 Offload Failed

If an offload scan fails (e.g., mismatched barcode/RFID pair) a popup is shown:

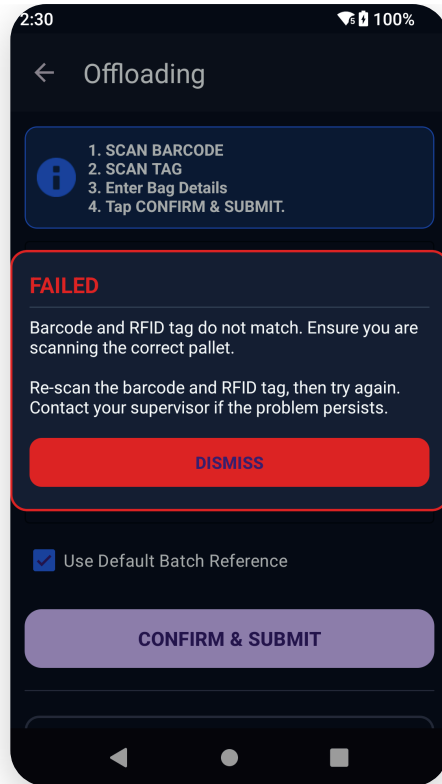

*Error — offload barcode/RFID mismatch
popup*


Cause: The barcode and RFID tag scanned do not belong to the same pallet.

- Re-scan the barcode on the label of the pallet.
- Then re-scan the RFID tag attached to the same pallet.
- Ensure you are scanning the label and tag on the **same** pallet.
- Use **Reassign Mode** (Settings → Reassign) if a tag has been moved to a different pallet.

11. Unassign Mode

Use **Unassign Mode** to remove an RFID tag from its pallet assignment. This is needed when a tag has been assigned in error or needs to be reused.


Access: **Dashboard** → ⚙️ **Settings** → (scroll to bottom) → **UNASSIGN MODE**

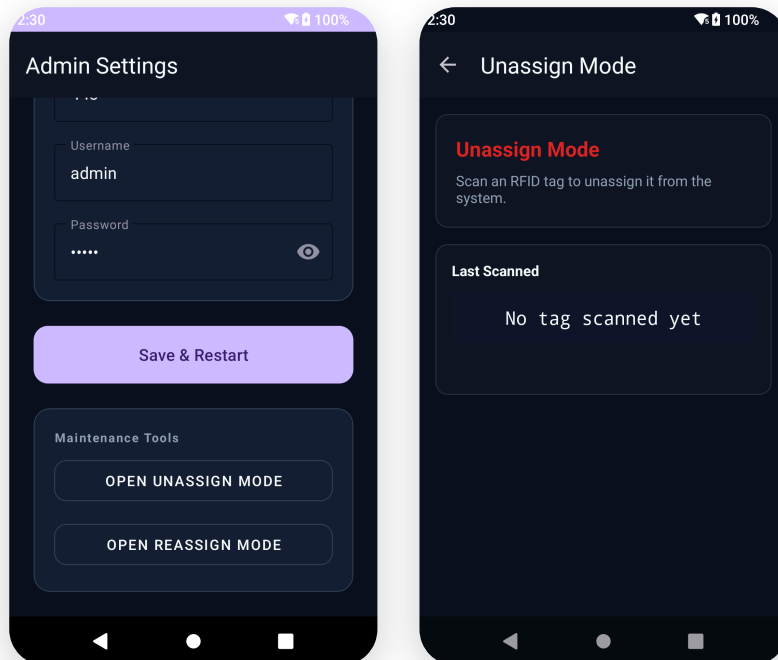

Settings — scroll to bottom to find Unassign Mode button

Unassign Mode — waiting for RFID scan

Scan the RFID tag you want to unassign. The app automatically sends the unassign request.

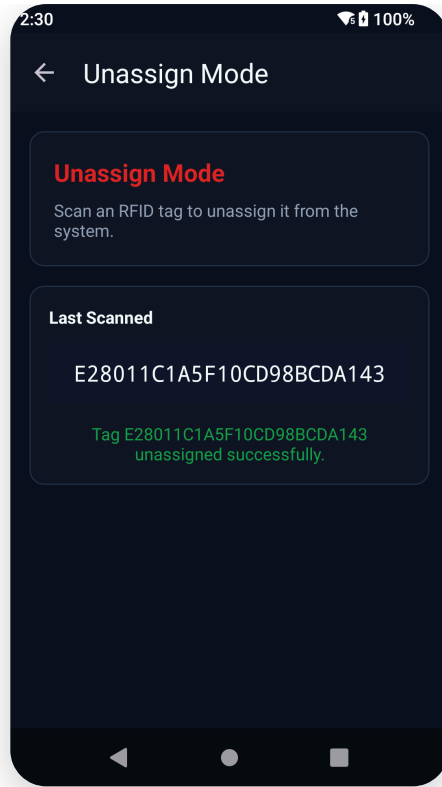


Unassign Mode — success confirmation

A green status message confirms the tag has been unassigned.

11.1 Unassign Failed

If the RFID tag is not found in the system, an error popup is displayed:

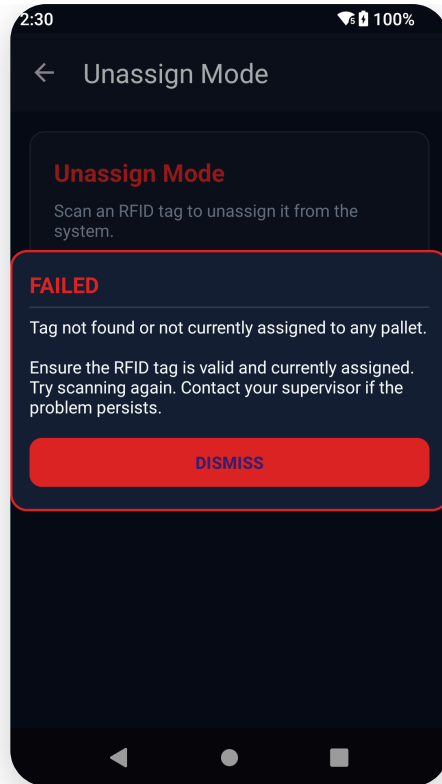


Unassign Mode — tag not found error popup

- Verify the correct RFID tag was scanned.
- Confirm the tag was previously assigned in an active session.
- Contact your supervisor if the tag cannot be found.

12. Reassign Mode

Use **Reassign Mode** to move an RFID tag from one pallet barcode to another. This is needed when a tag was accidentally placed on the wrong pallet.

Access: **Dashboard** → ⚙️ **Settings** → (scroll to bottom) → **REASSIGN MODE**

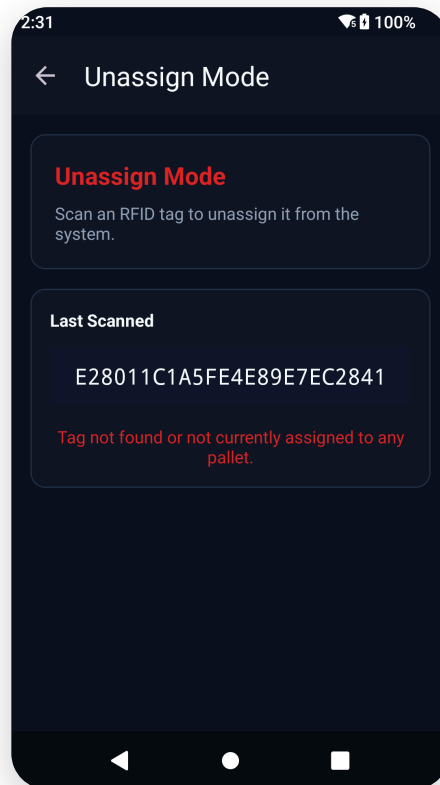

Settings — Reassign Mode button at bottom of settings

13. Troubleshooting Summary

Quick reference for common issues:

Error	Likely Cause	Action
SAP lookup failed	Wrong doc number / doc closed	Check doc number and type
Tag already assigned	Tag used twice	Use Unassign Mode first
Print failed	Printer offline	Power cycle printer, check network
Offload mismatch	Wrong barcode/RFID combo	Re-scan the correct pallet
MQTT connect failed	Wi-Fi or broker issue	Check Wi-Fi; update Settings
Unassign failed	Tag not assigned	Verify tag ID with supervisor