
2.0 m / 120 L downwind pump board: full-scale templates


Length 2000 mm, max width 560 mm, max thickness 154 mm, volume 120.0 L.
Bold lines = CORE cut lines: finished shape inset 3.8 mm on deck and bottom (PVC sandwich) and 1.0 mm on the rail band. Thin dashed = finished shape.
Print every page at 100% (Actual size). Measure the 100 mm bar on each page before cutting anything.
Tiled pages overlap 15 mm: trim one edge, align the 50 mm grid and x labels, tape, then glue to MDF/hardboard.
Station templates are FULL sections tiled over A4 (stringer = dash-dot line). Female template: cut away the inside of the bold line.
x is measured from the TAIL. Stations and tracks are marked on the outline and rocker templates.

Foil tracks: dual US-style, 90 mm centres (45 mm each side of stringer), 356 mm long,
from x = 582 to 938 mm (centre 760 mm from tail). Start with the mast plate mid-track.
Track block (long-dash line on outline): 150 x 420 mm, full depth, x = 550 to 970 mm.

Station	x from tail	x from nose	width	thickness	bottom rocker	chine height	rail-band top
S1	150	1850	486	108.0	0.0	14.3	44.2
S2	450	1550	550	140.6	0.0	27.1	60.2
S3	750	1250	560	154.3	0.0	35.2	68.9
S4	1050	950	558	154.3	0.3	39.4	71.4
S5	1350	650	526	142.0	9.1	40.7	67.5
S6	1650	350	439	111.1	35.8	35.1	54.0
S7	1850	150	312	76.8	69.2	25.4	37.9




100 mm scale check: print at 100% / Actual size, no 'fit to page'

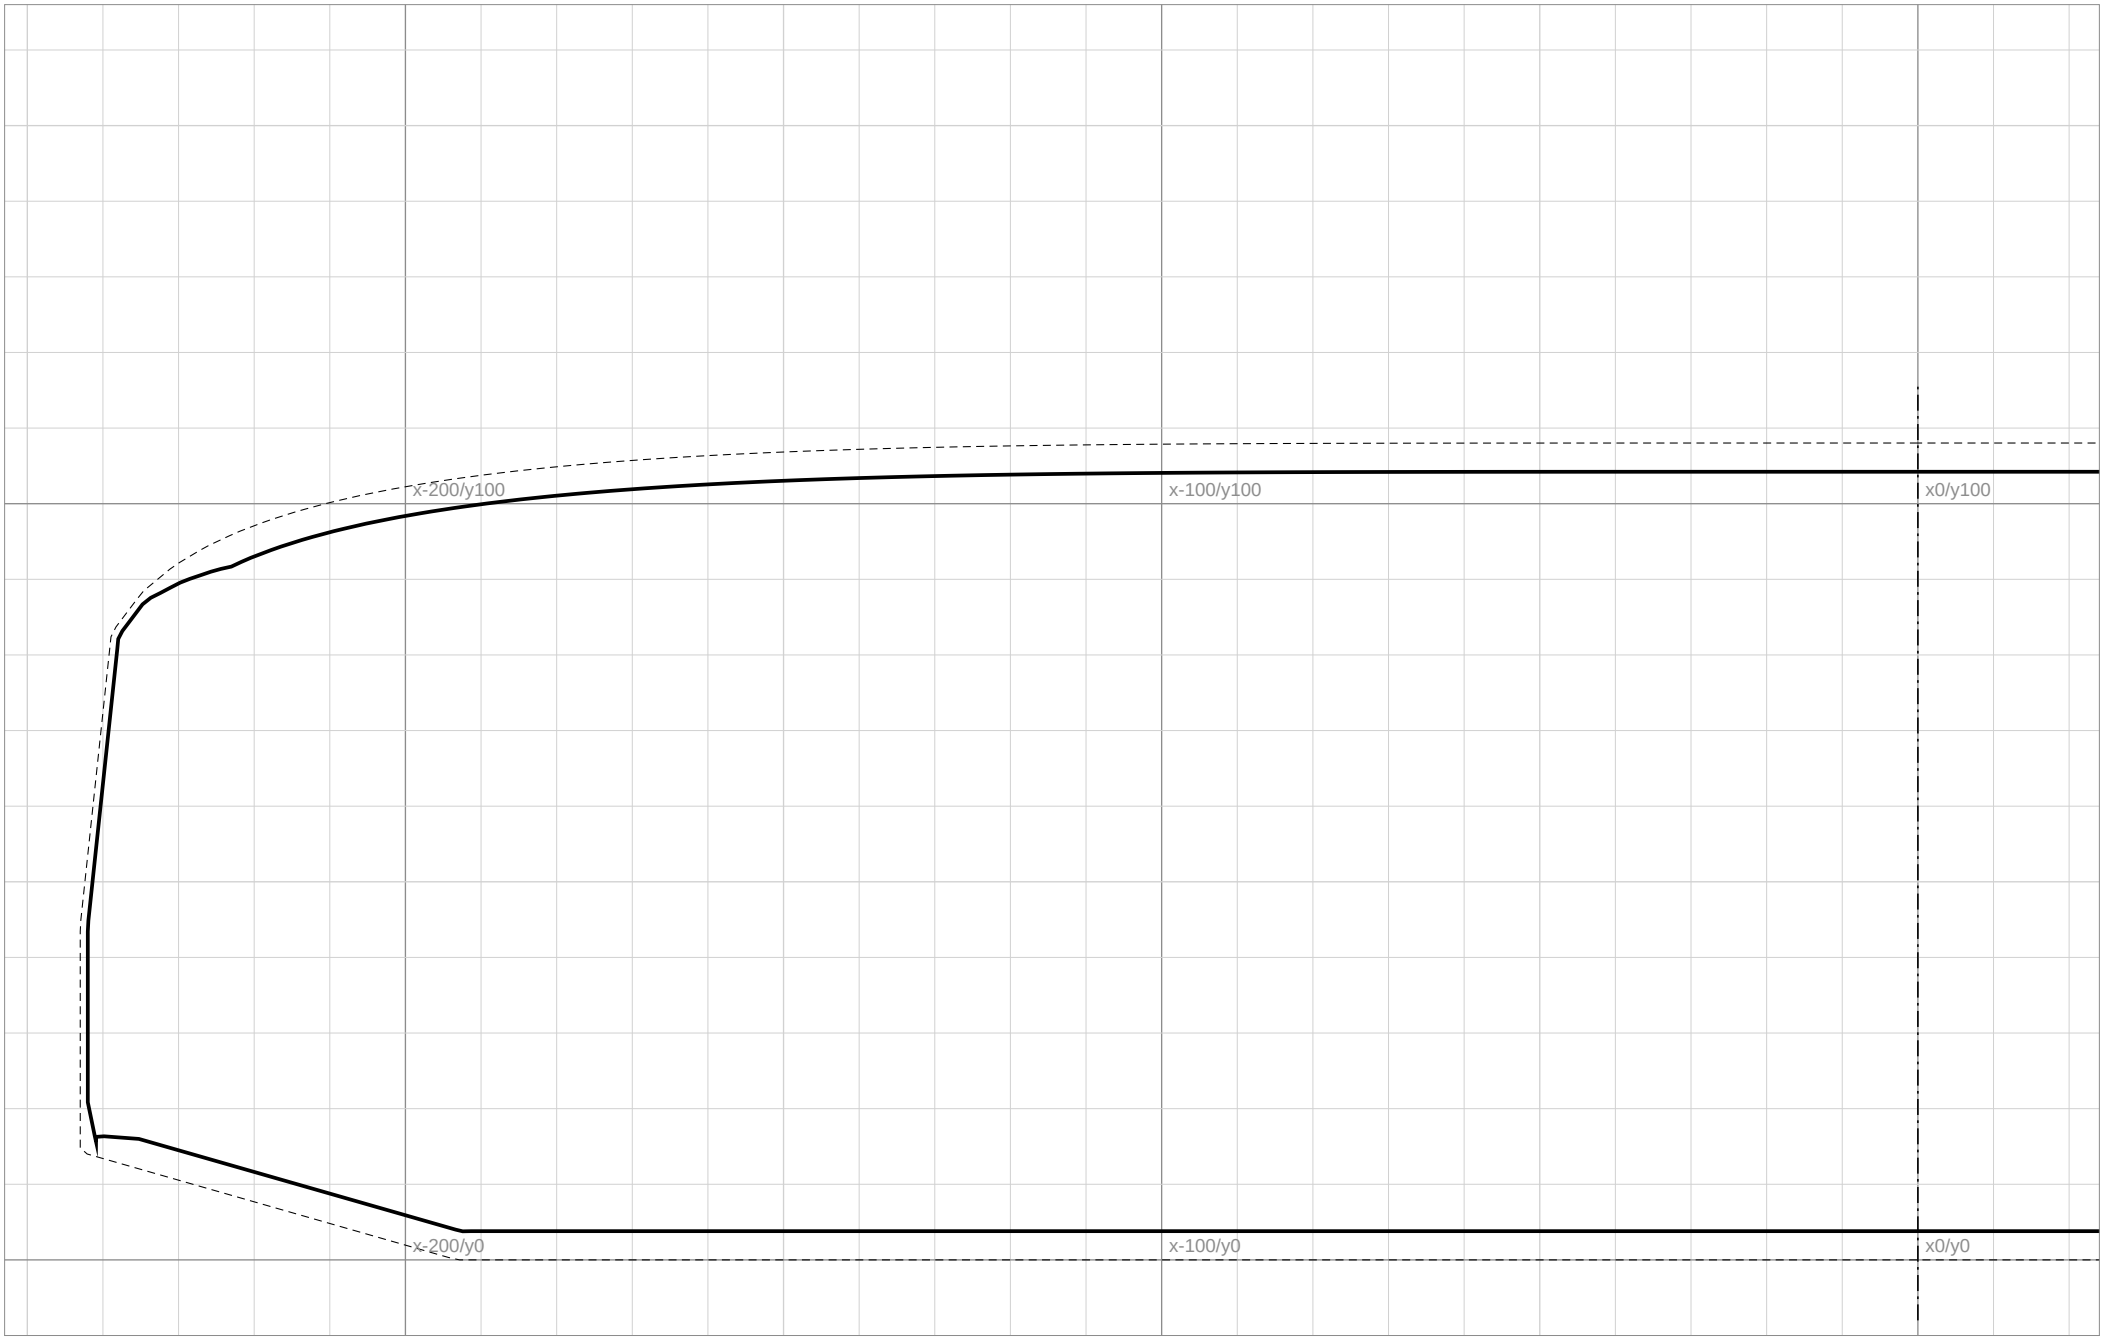

STATION S1: 150 mm from tail, W 486, T 108.0

sheet row 1/1, col 1/2 (x -253 to 24 mm, y -10 to 166 mm)


100 mm scale check: print at 100% / Actual size, no 'fit to page'

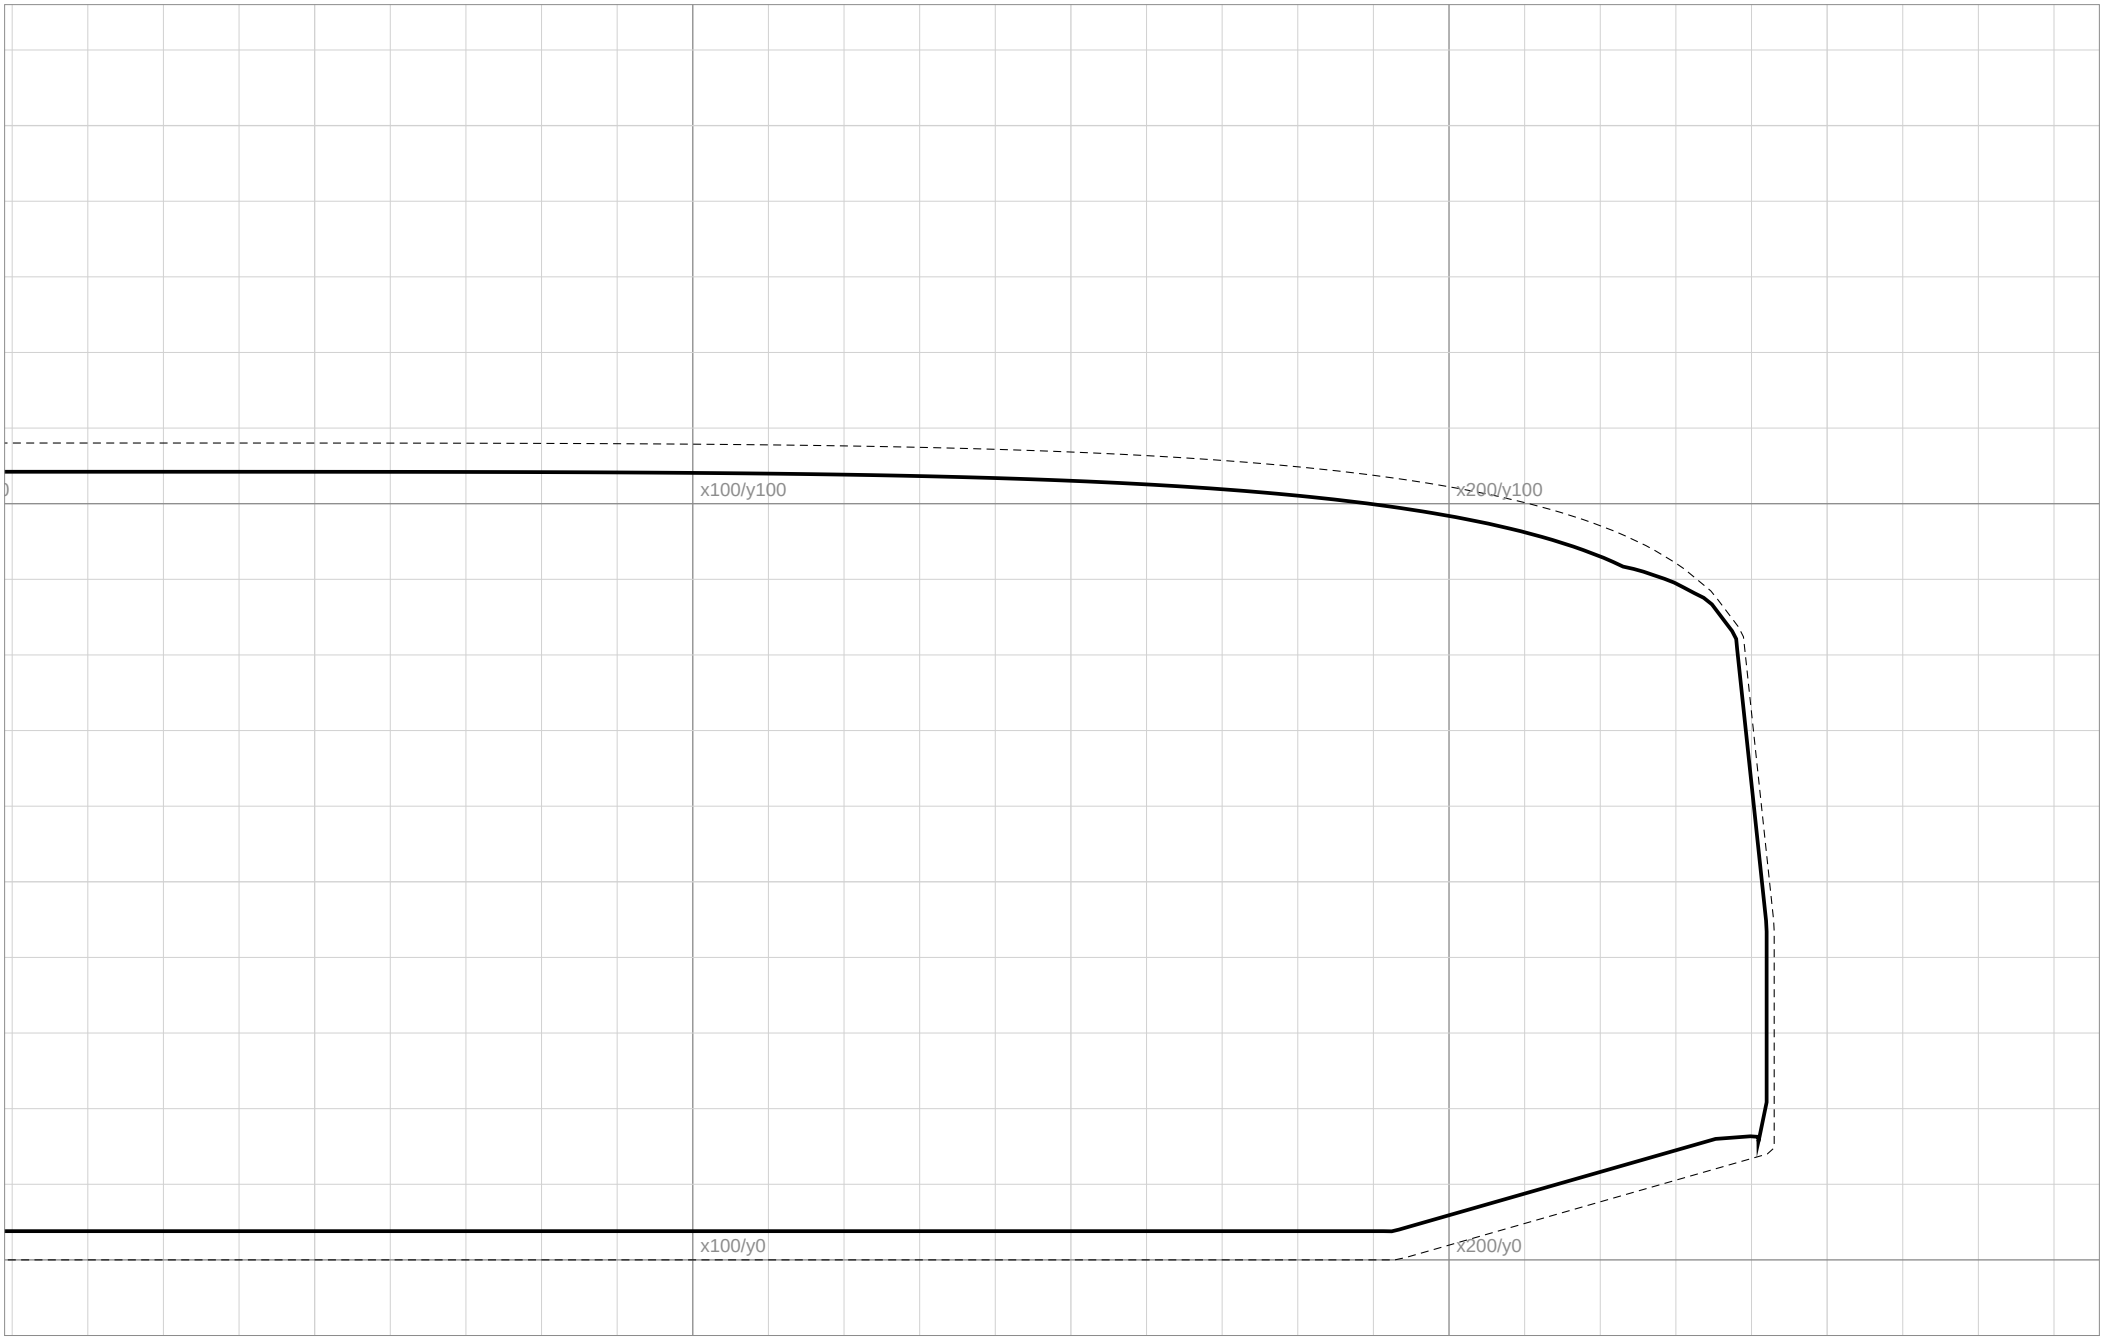

STATION S1: 150 mm from tail, W 486, T 108.0

sheet row 1/1, col 2/2 (x 9 to 286 mm, y -10 to 166 mm)


100 mm scale check: print at 100% / Actual size, no 'fit to page'

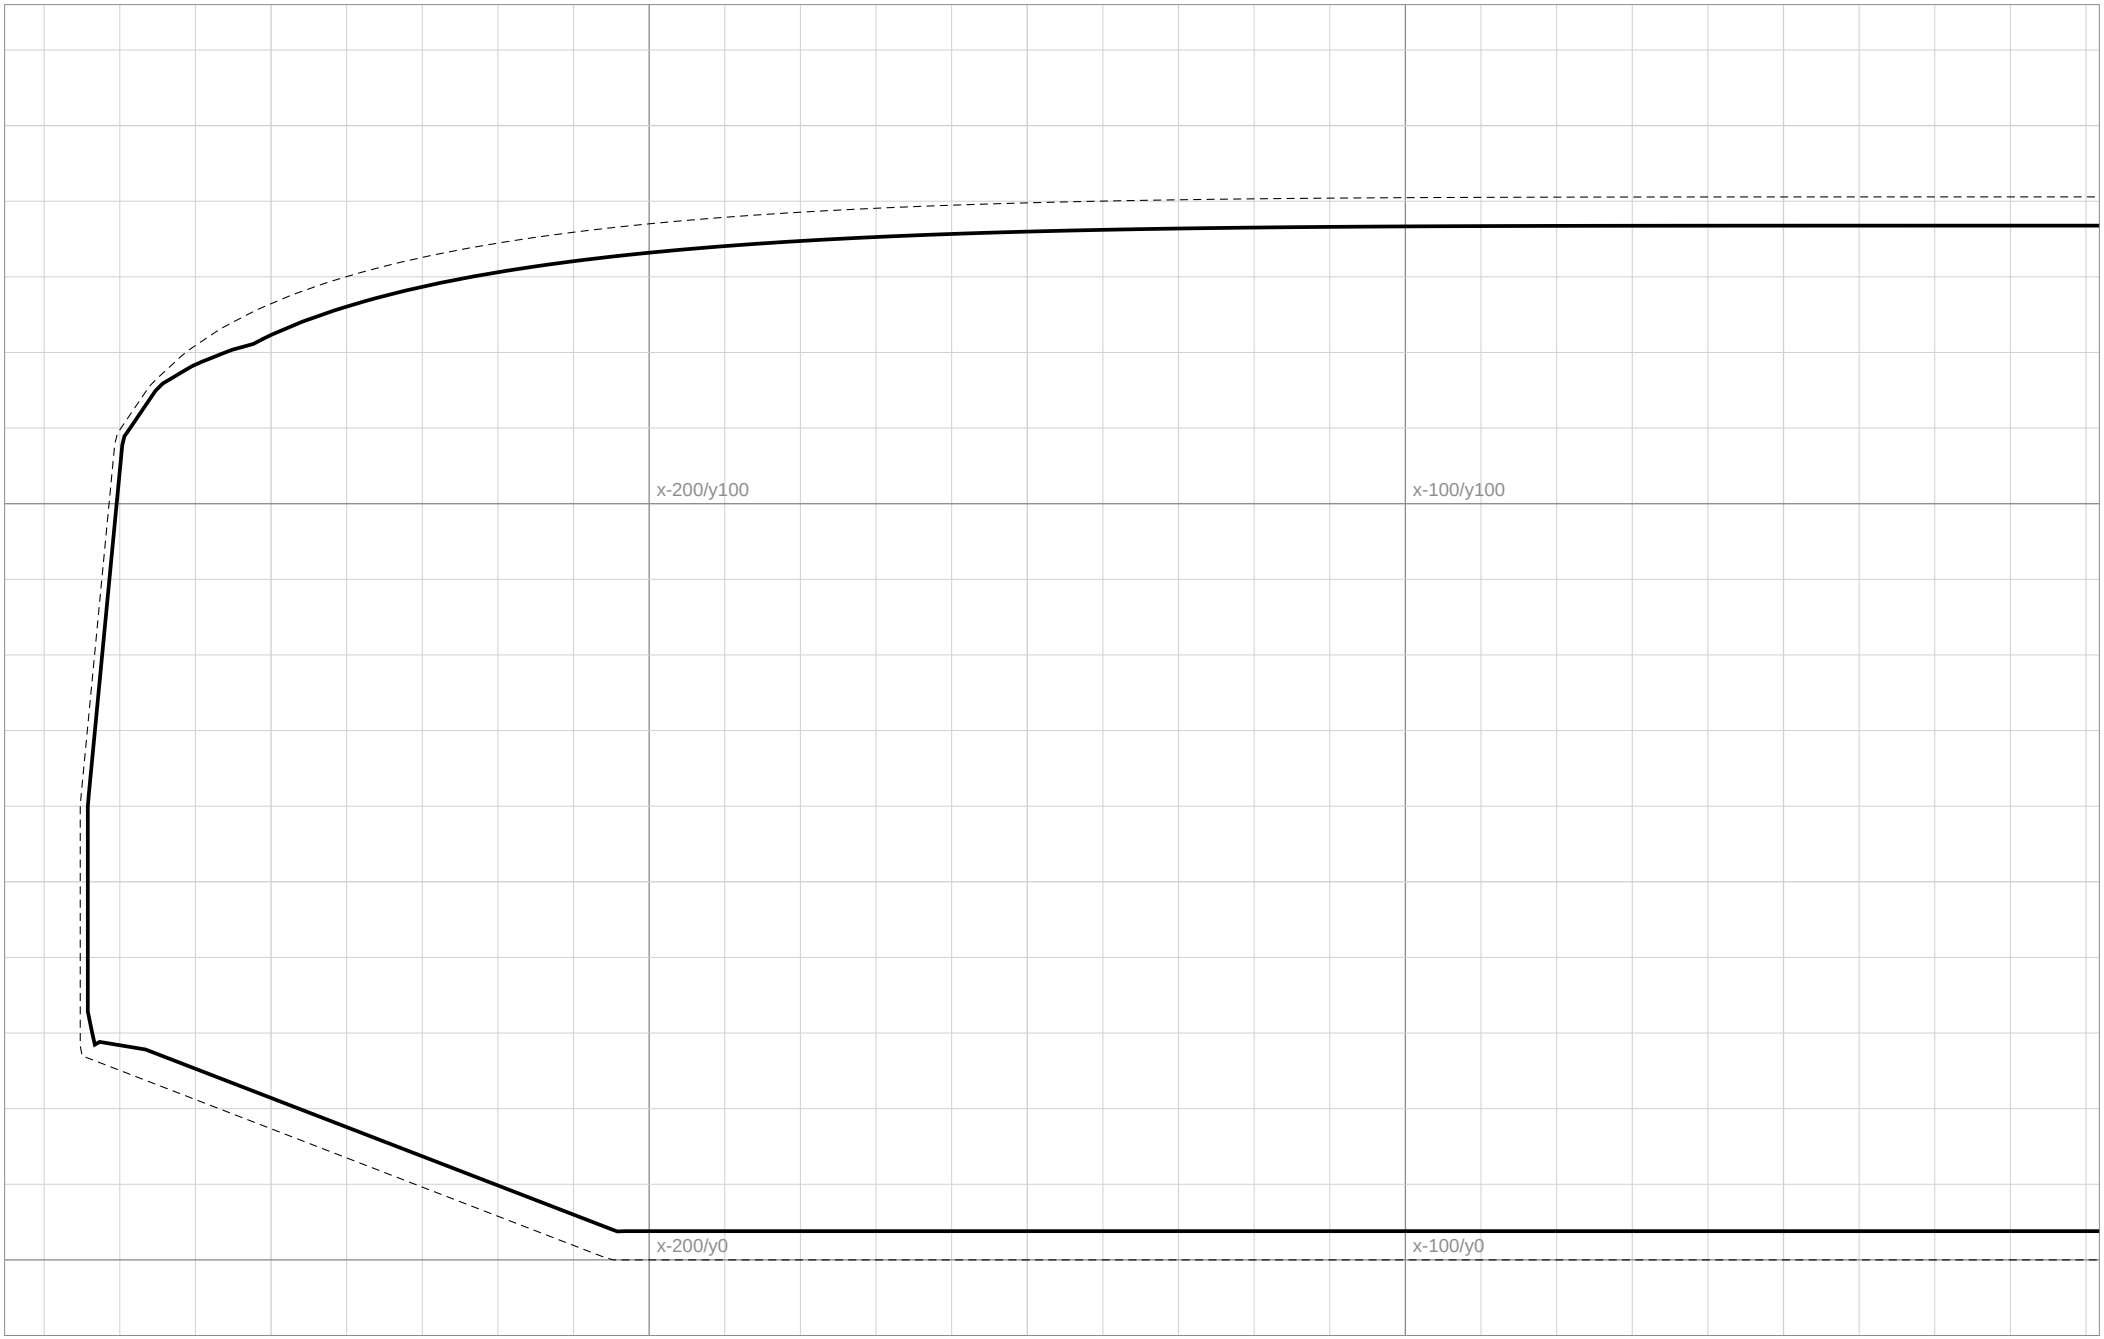

STATION S2: 450 mm from tail, W 550, T 140.6

sheet row 1/1, col 1/3 (x -285 to -8 mm, y -10 to 166 mm)


100 mm scale check: print at 100% / Actual size, no 'fit to page'

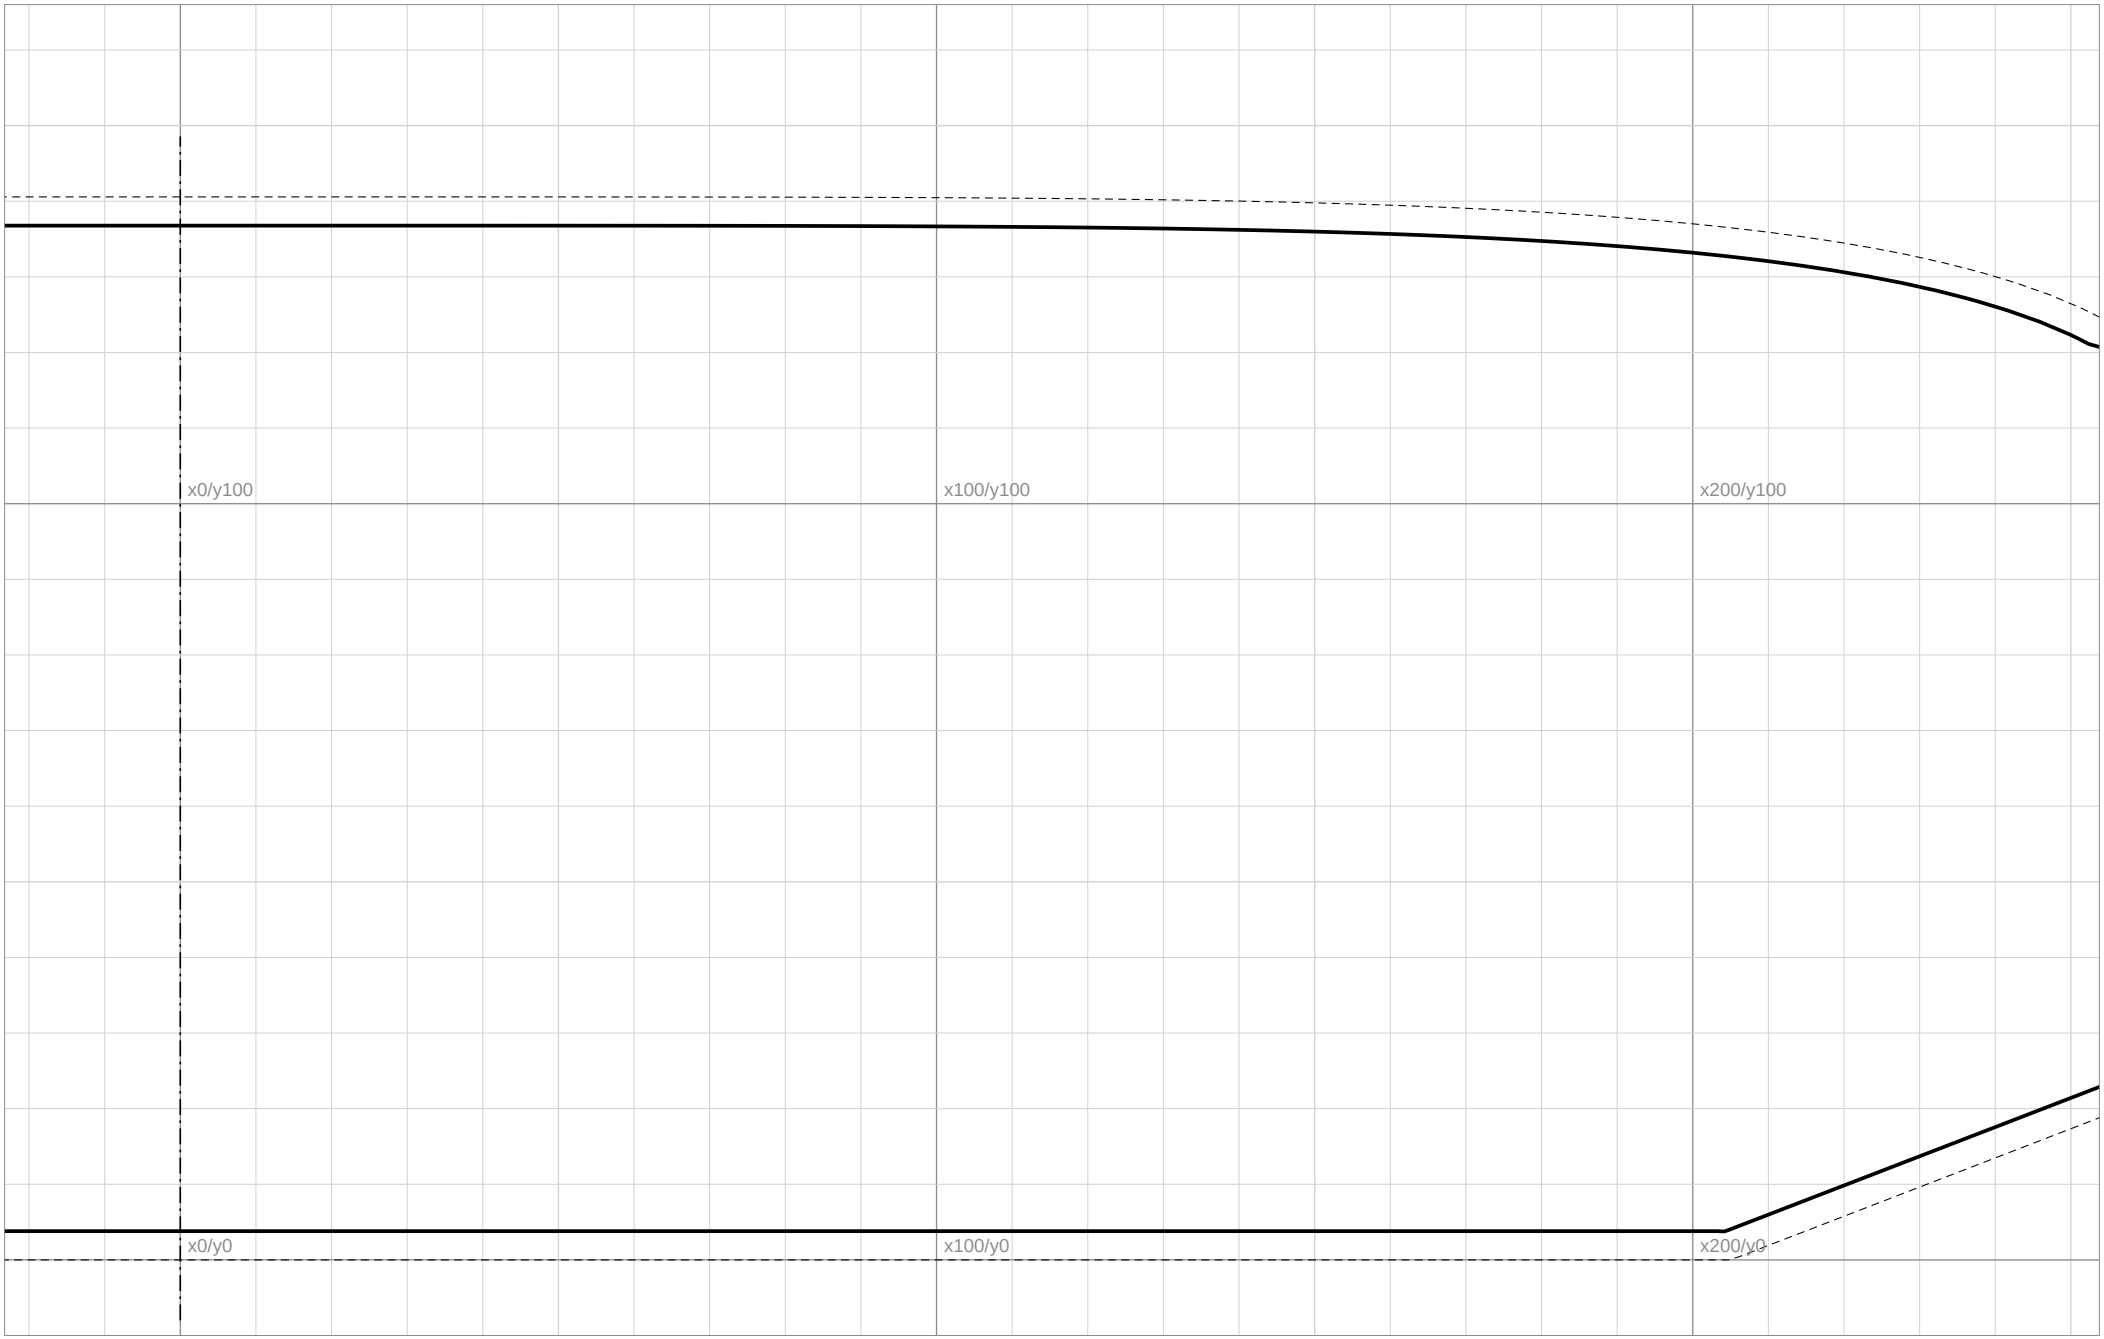

STATION S2: 450 mm from tail, W 550, T 140.6

sheet row 1/1, col 2/3 (x -23 to 254 mm, y -10 to 166 mm)


100 mm scale check: print at 100% / Actual size, no 'fit to page'

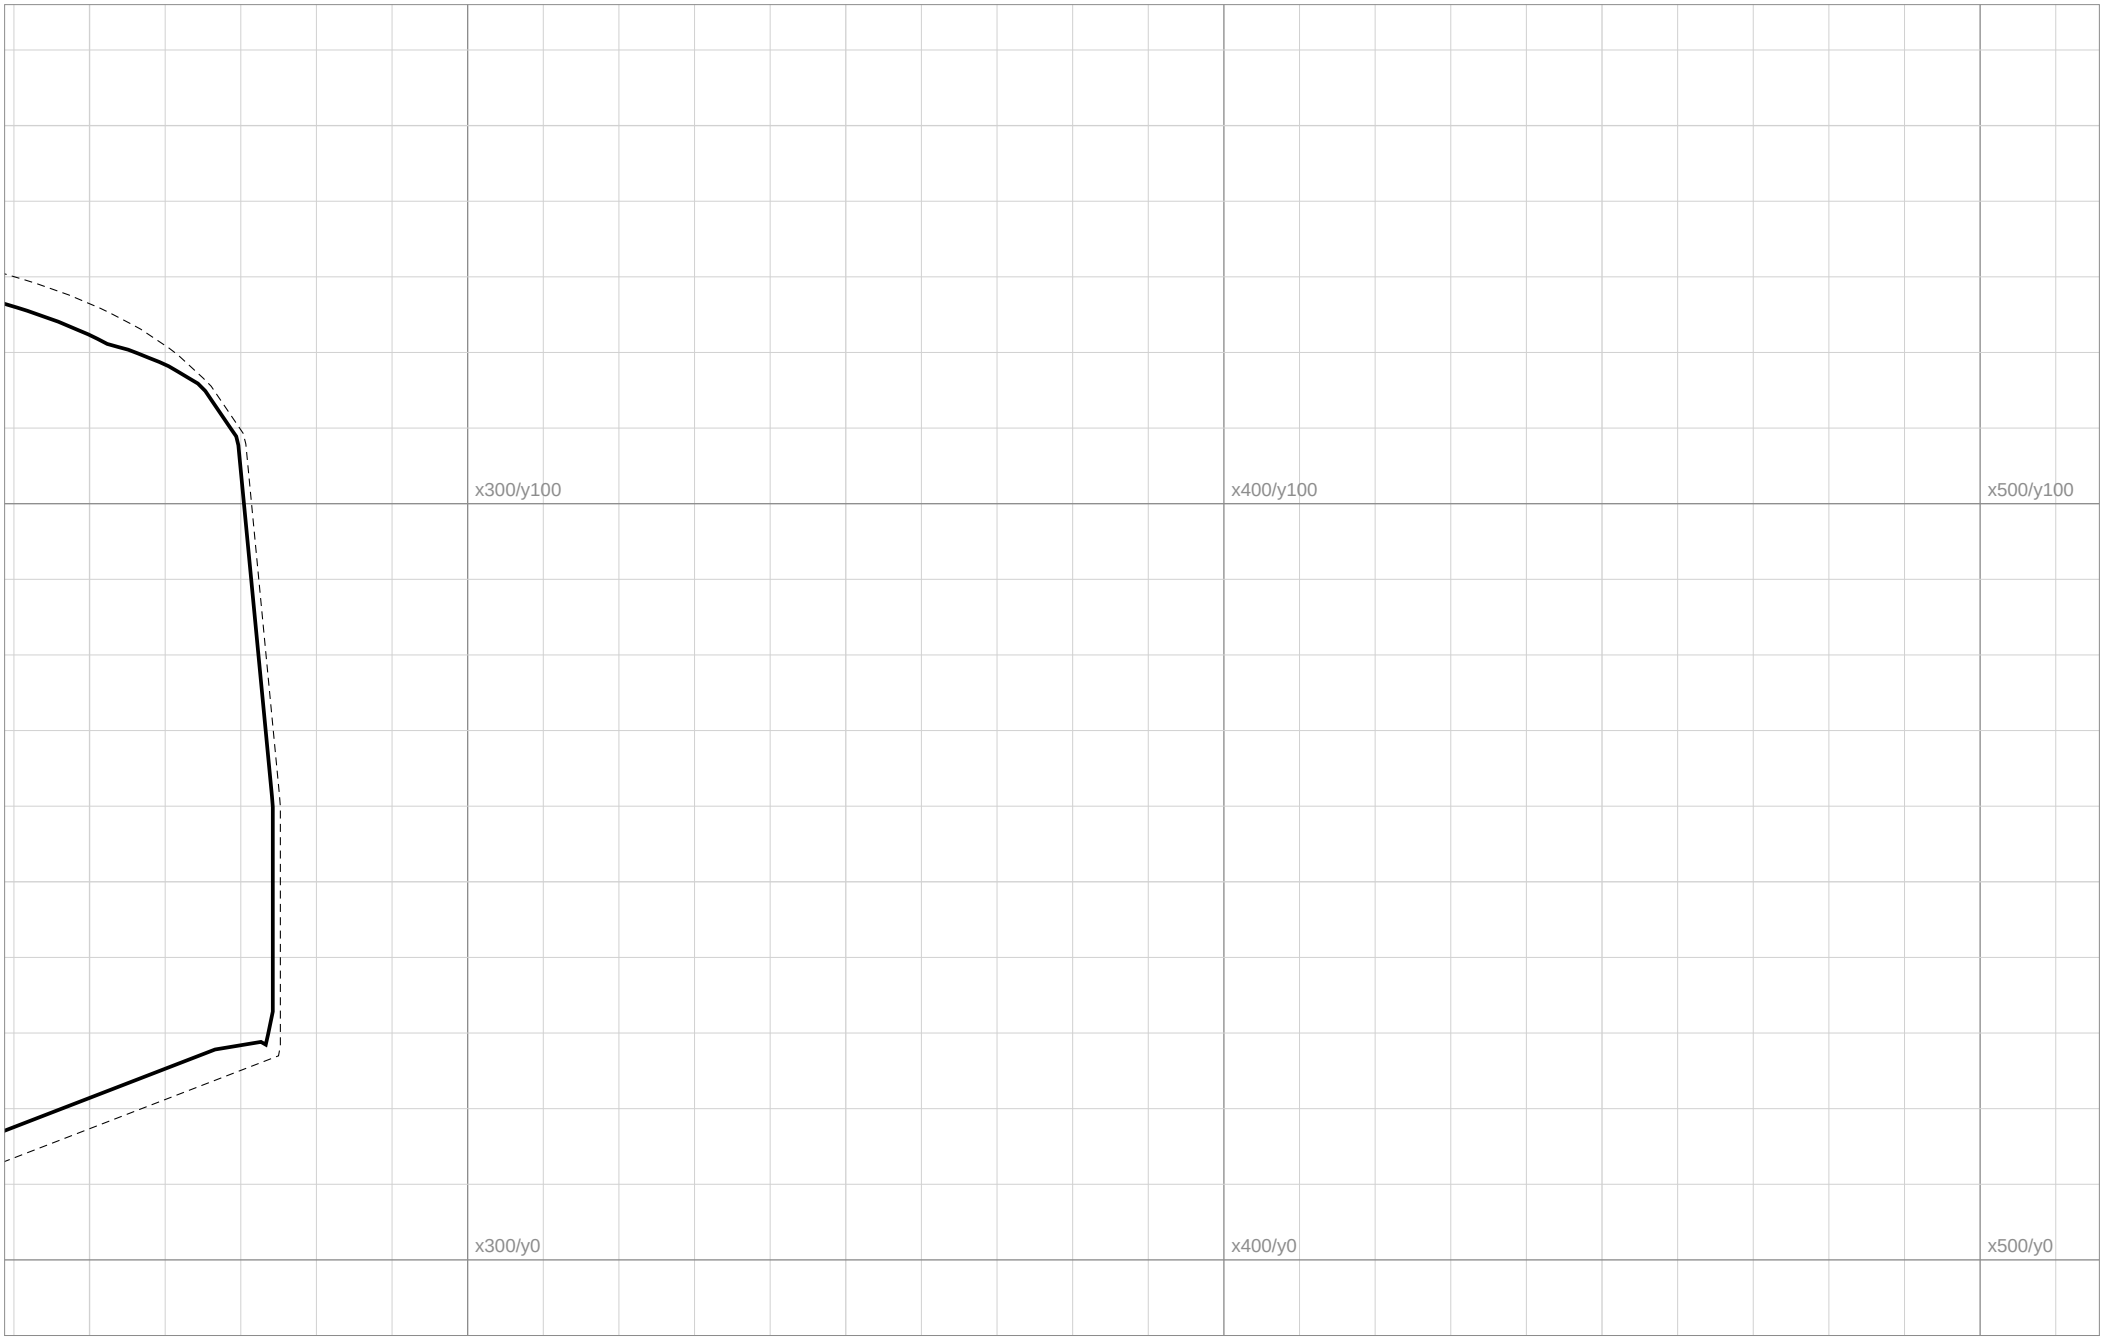

STATION S2: 450 mm from tail, W 550, T 140.6

sheet row 1/1, col 3/3 (x 239 to 516 mm, y -10 to 166 mm)


100 mm scale check: print at 100% / Actual size, no 'fit to page'

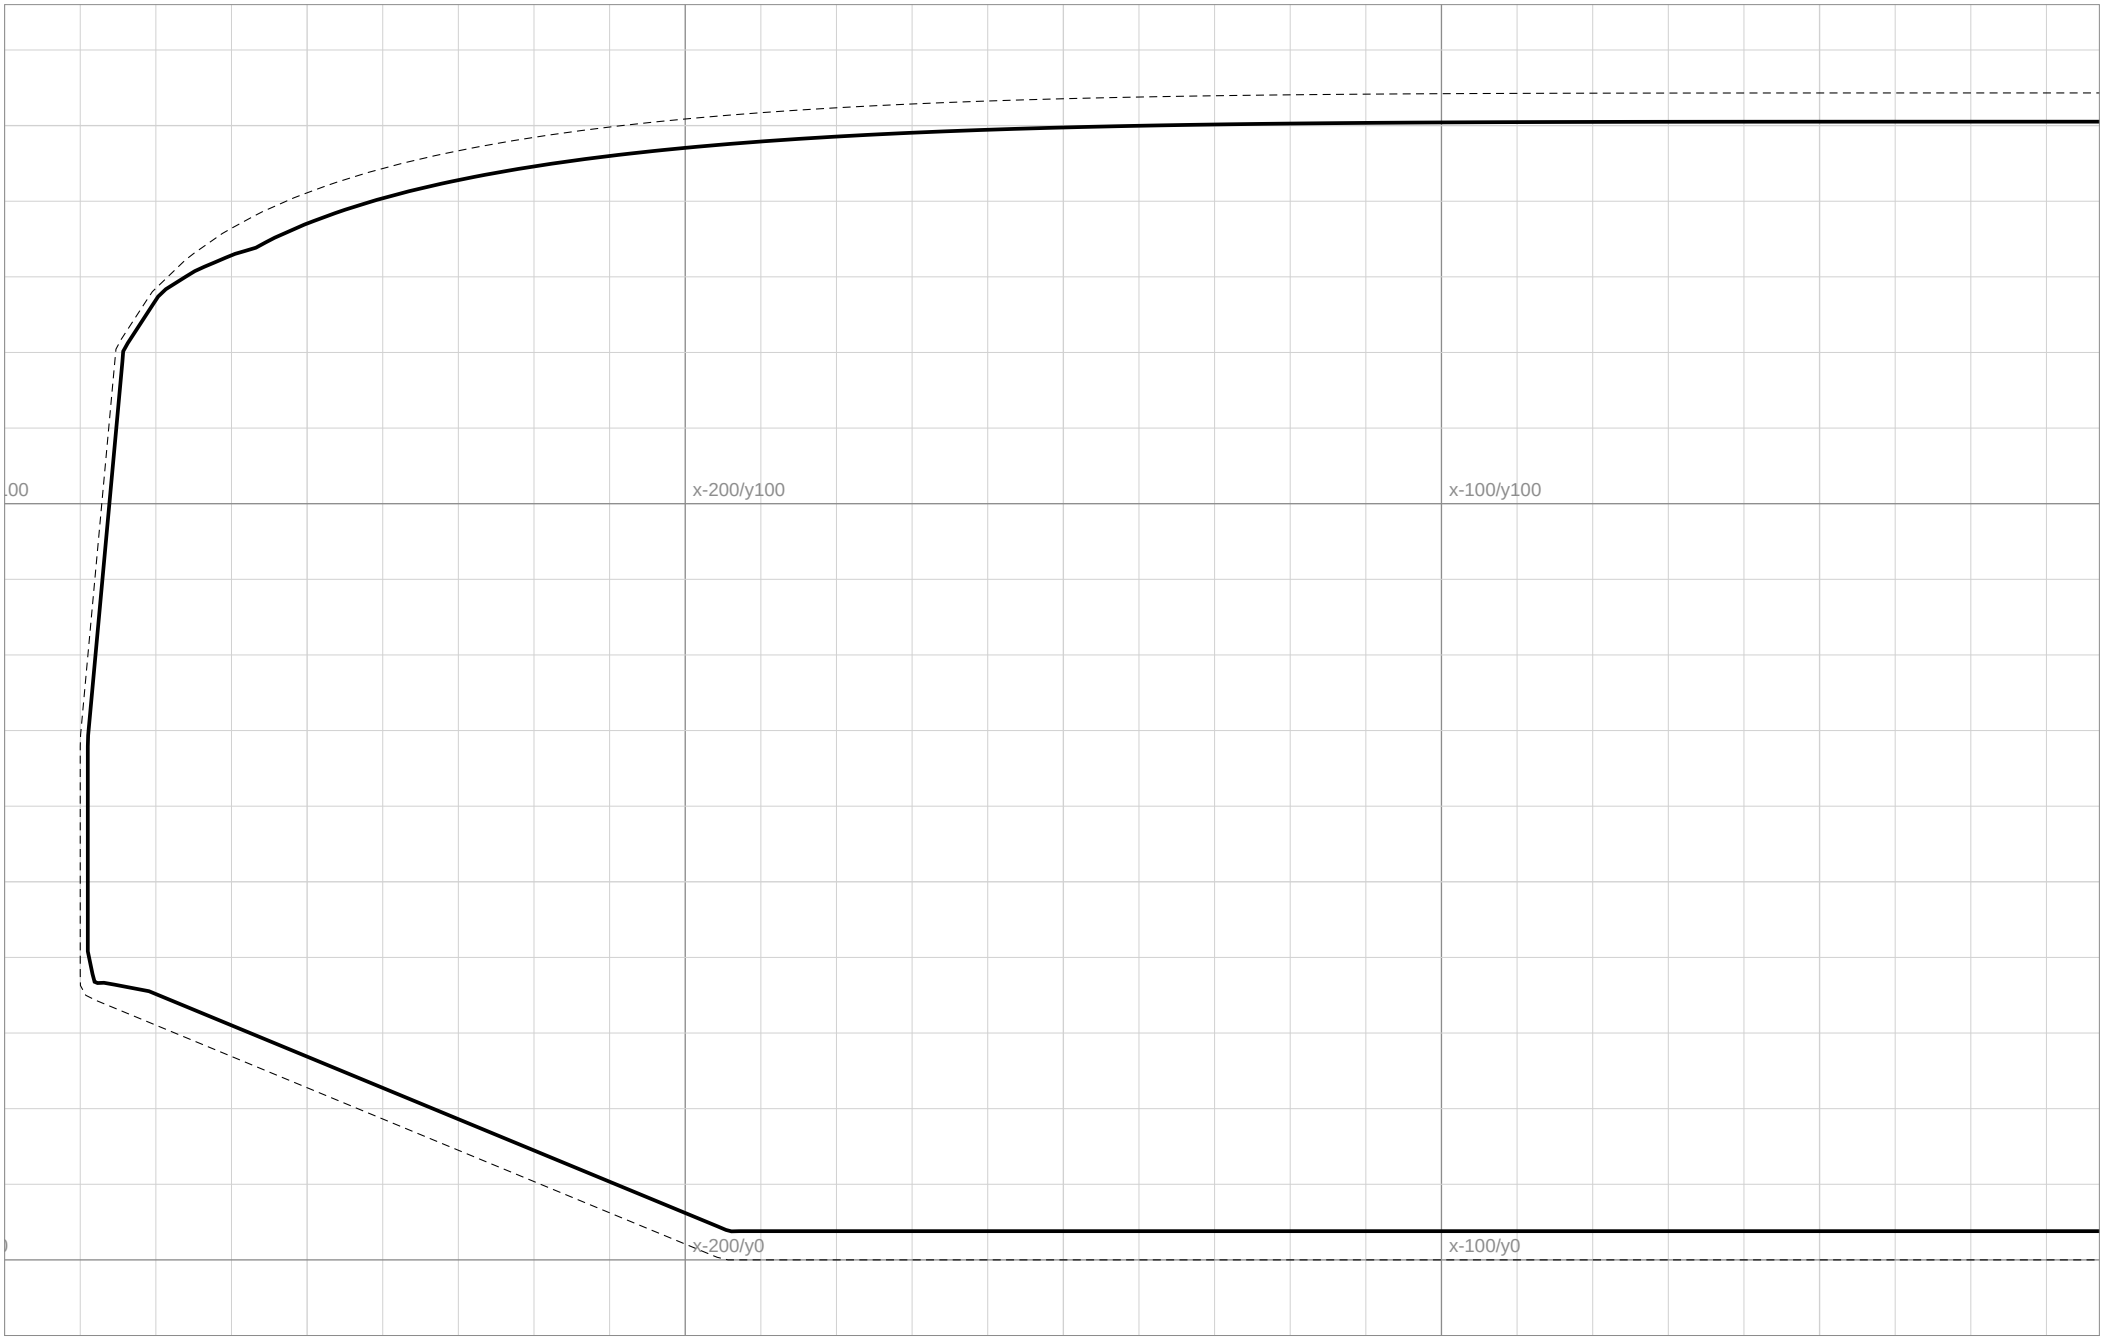

STATION S3: 750 mm from tail, W 560, T 154.3

sheet row 1/1, col 1/3 (x -290 to -13 mm, y -10 to 166 mm)


100 mm scale check: print at 100% / Actual size, no 'fit to page'

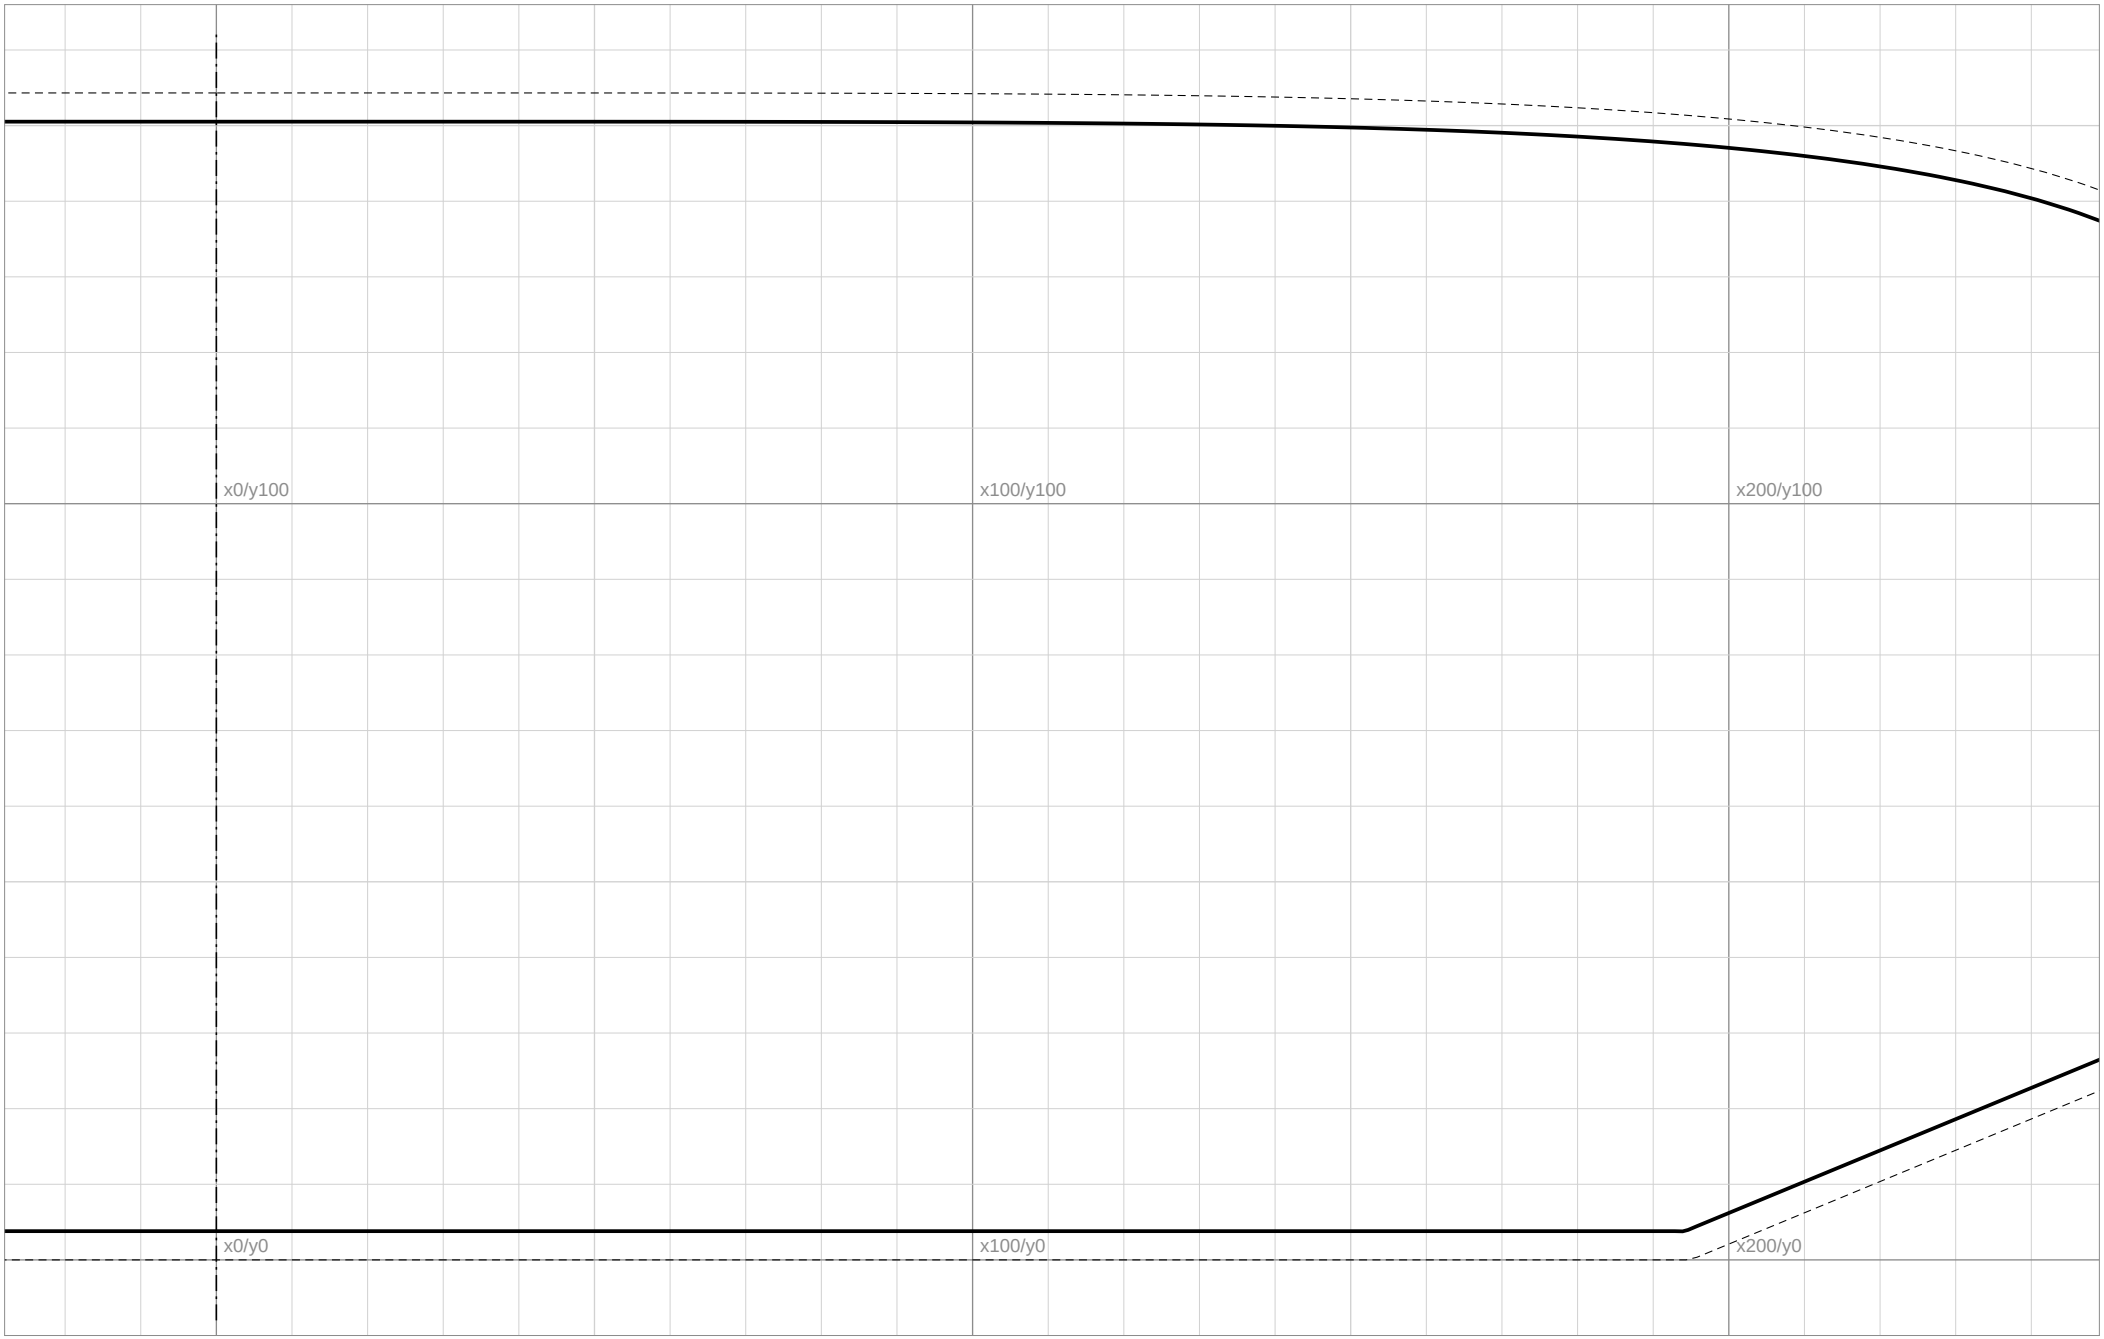

STATION S3: 750 mm from tail, W 560, T 154.3

sheet row 1/1, col 2/3 (x -28 to 249 mm, y -10 to 166 mm)


100 mm scale check: print at 100% / Actual size, no 'fit to page'

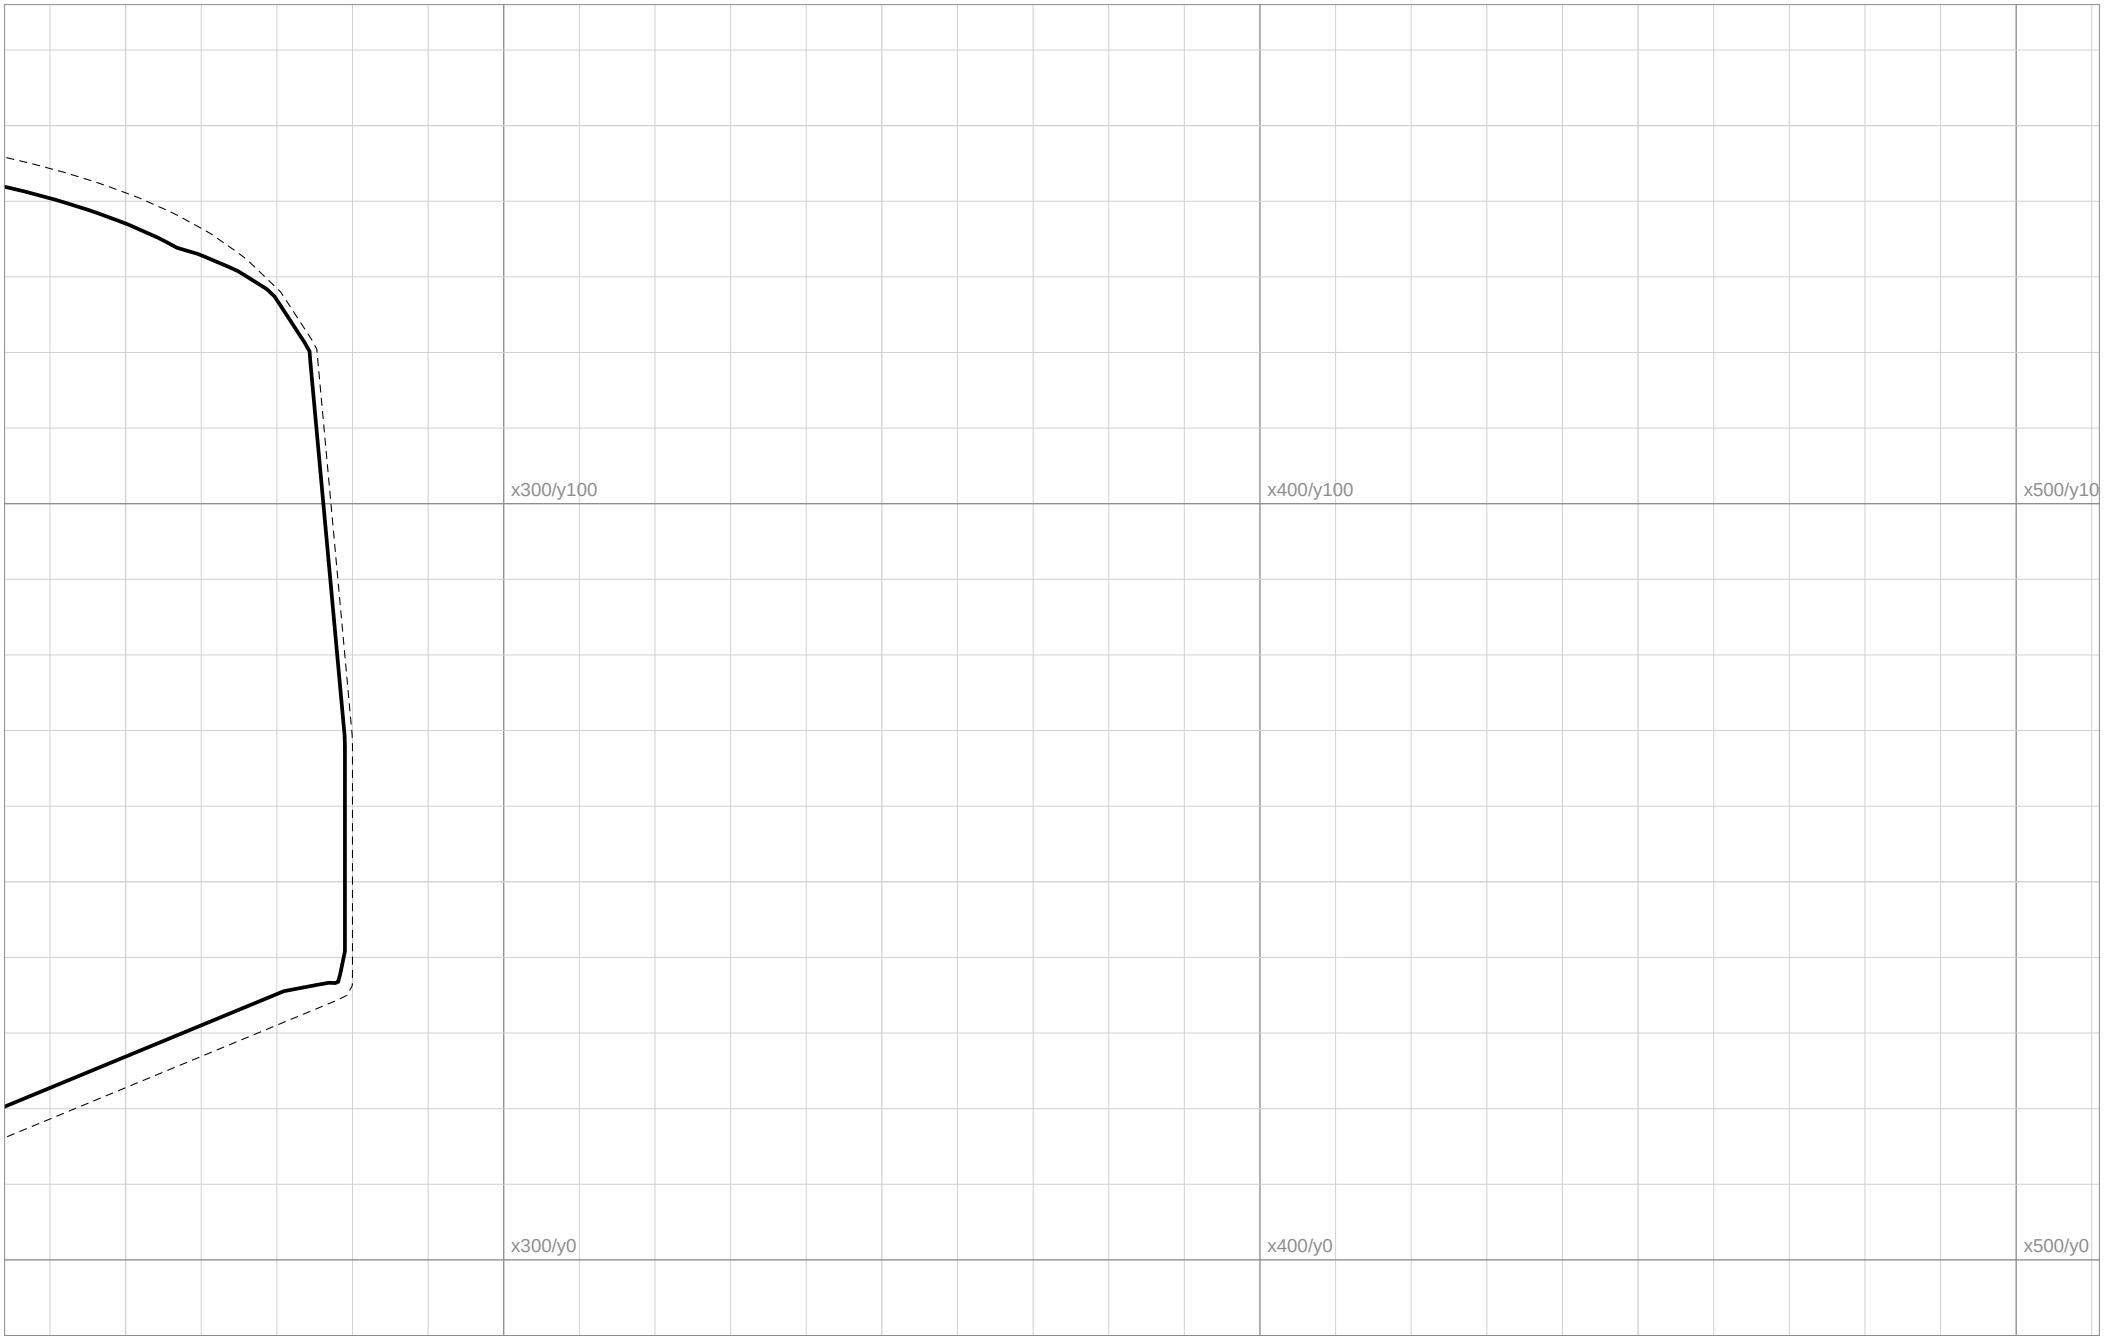

STATION S3: 750 mm from tail, W 560, T 154.3

sheet row 1/1, col 3/3 (x 234 to 511 mm, y -10 to 166 mm)


100 mm scale check: print at 100% / Actual size, no 'fit to page'

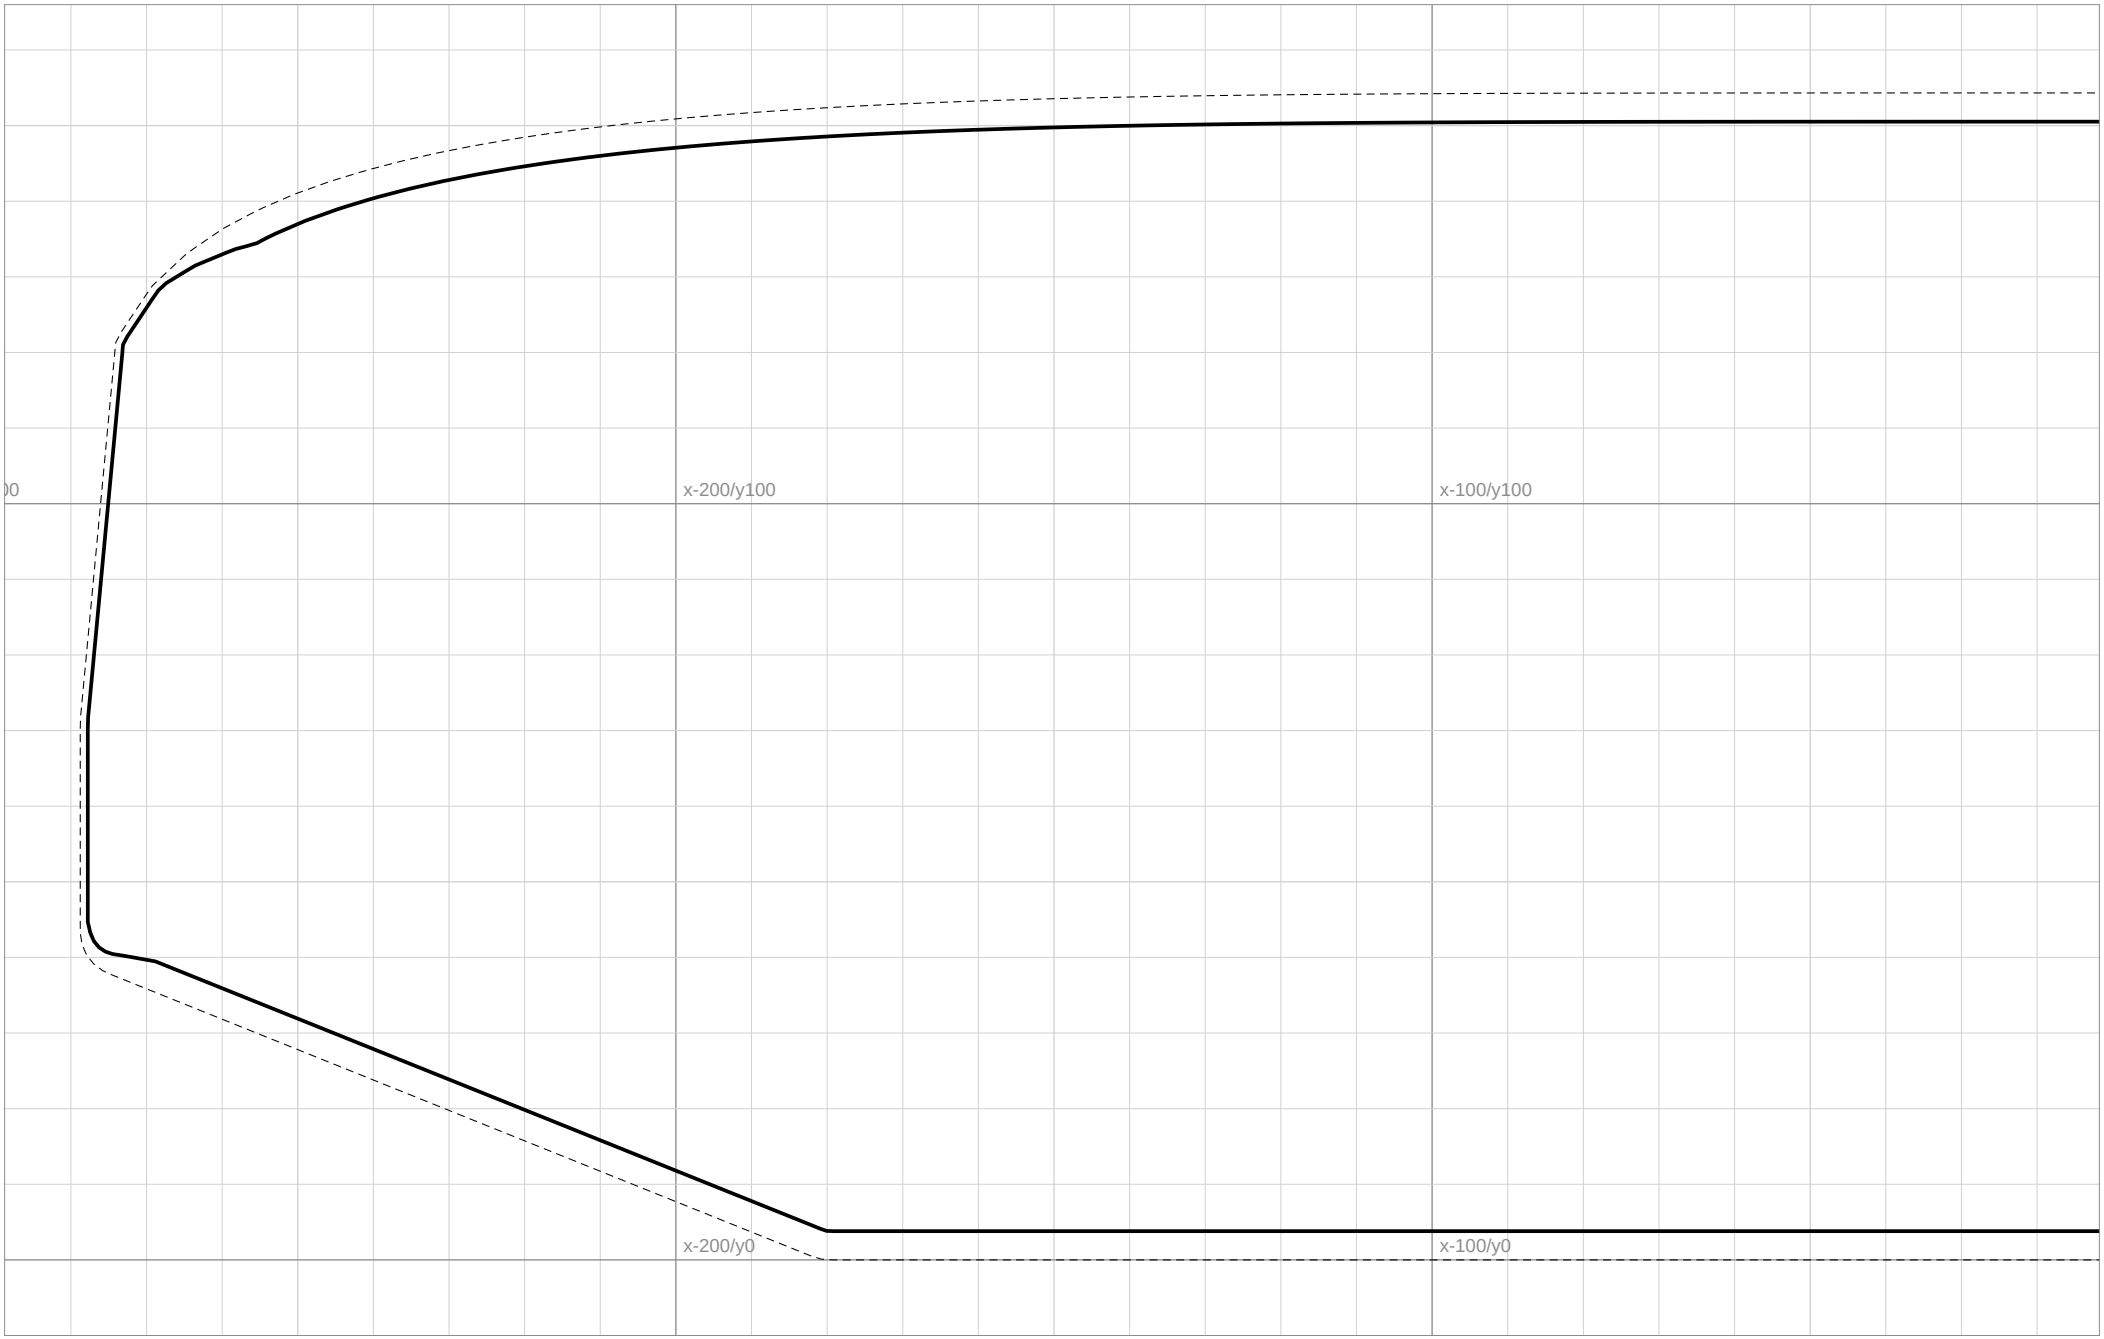

STATION S4: 1050 mm from tail, W 558, T 154.3

sheet row 1/1, col 1/3 (x -289 to -12 mm, y -10 to 166 mm)


100 mm scale check: print at 100% / Actual size, no 'fit to page'

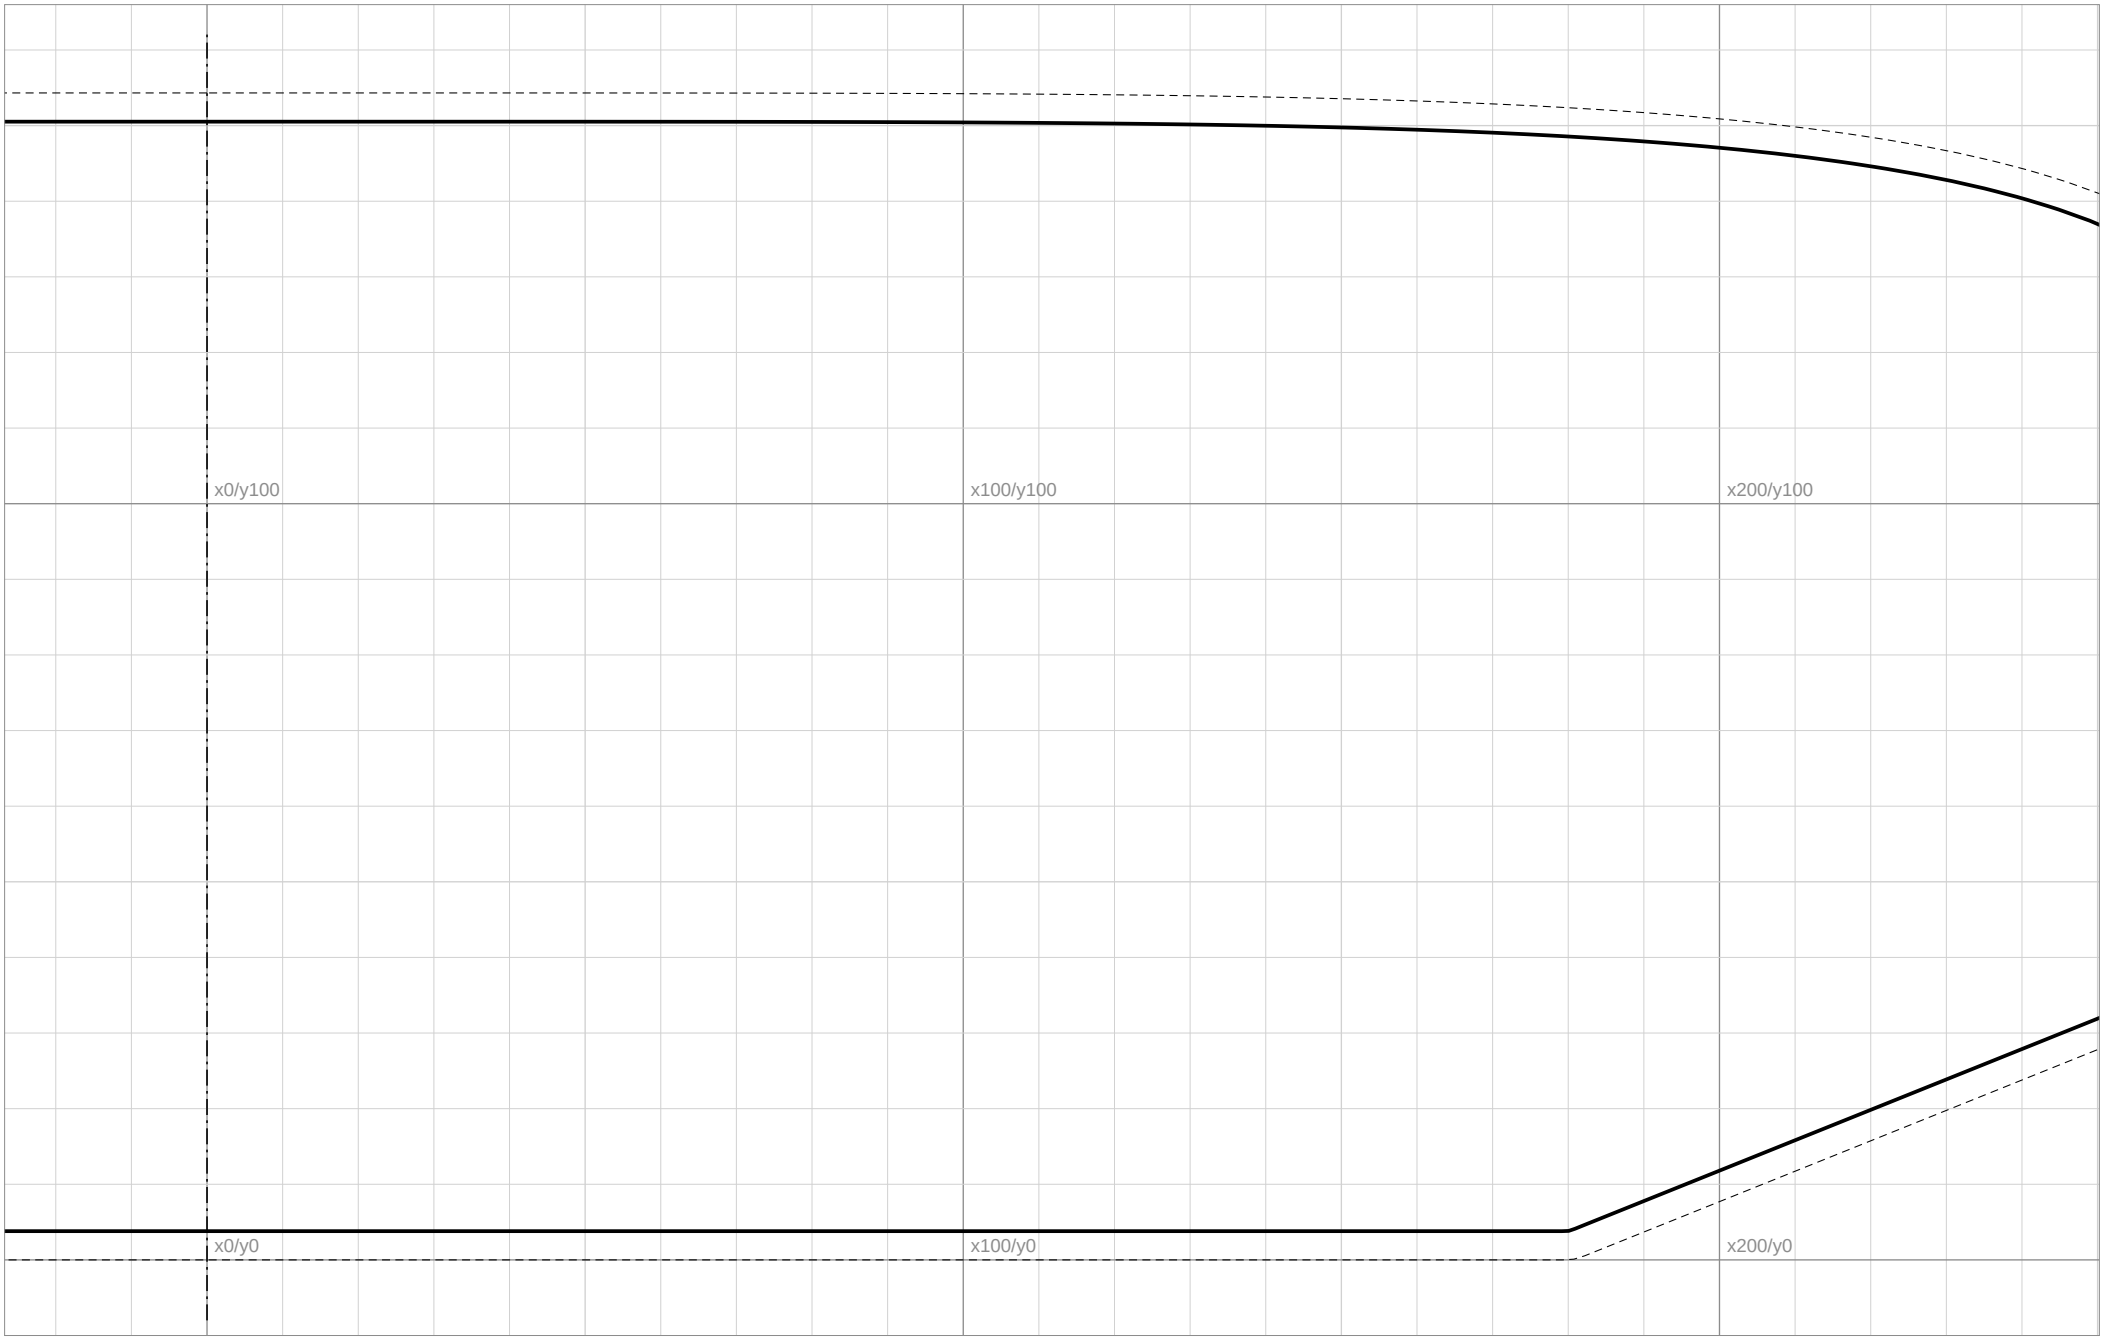

STATION S4: 1050 mm from tail, W 558, T 154.3

sheet row 1/1, col 2/3 (x -27 to 250 mm, y -10 to 166 mm)


100 mm scale check: print at 100% / Actual size, no 'fit to page'

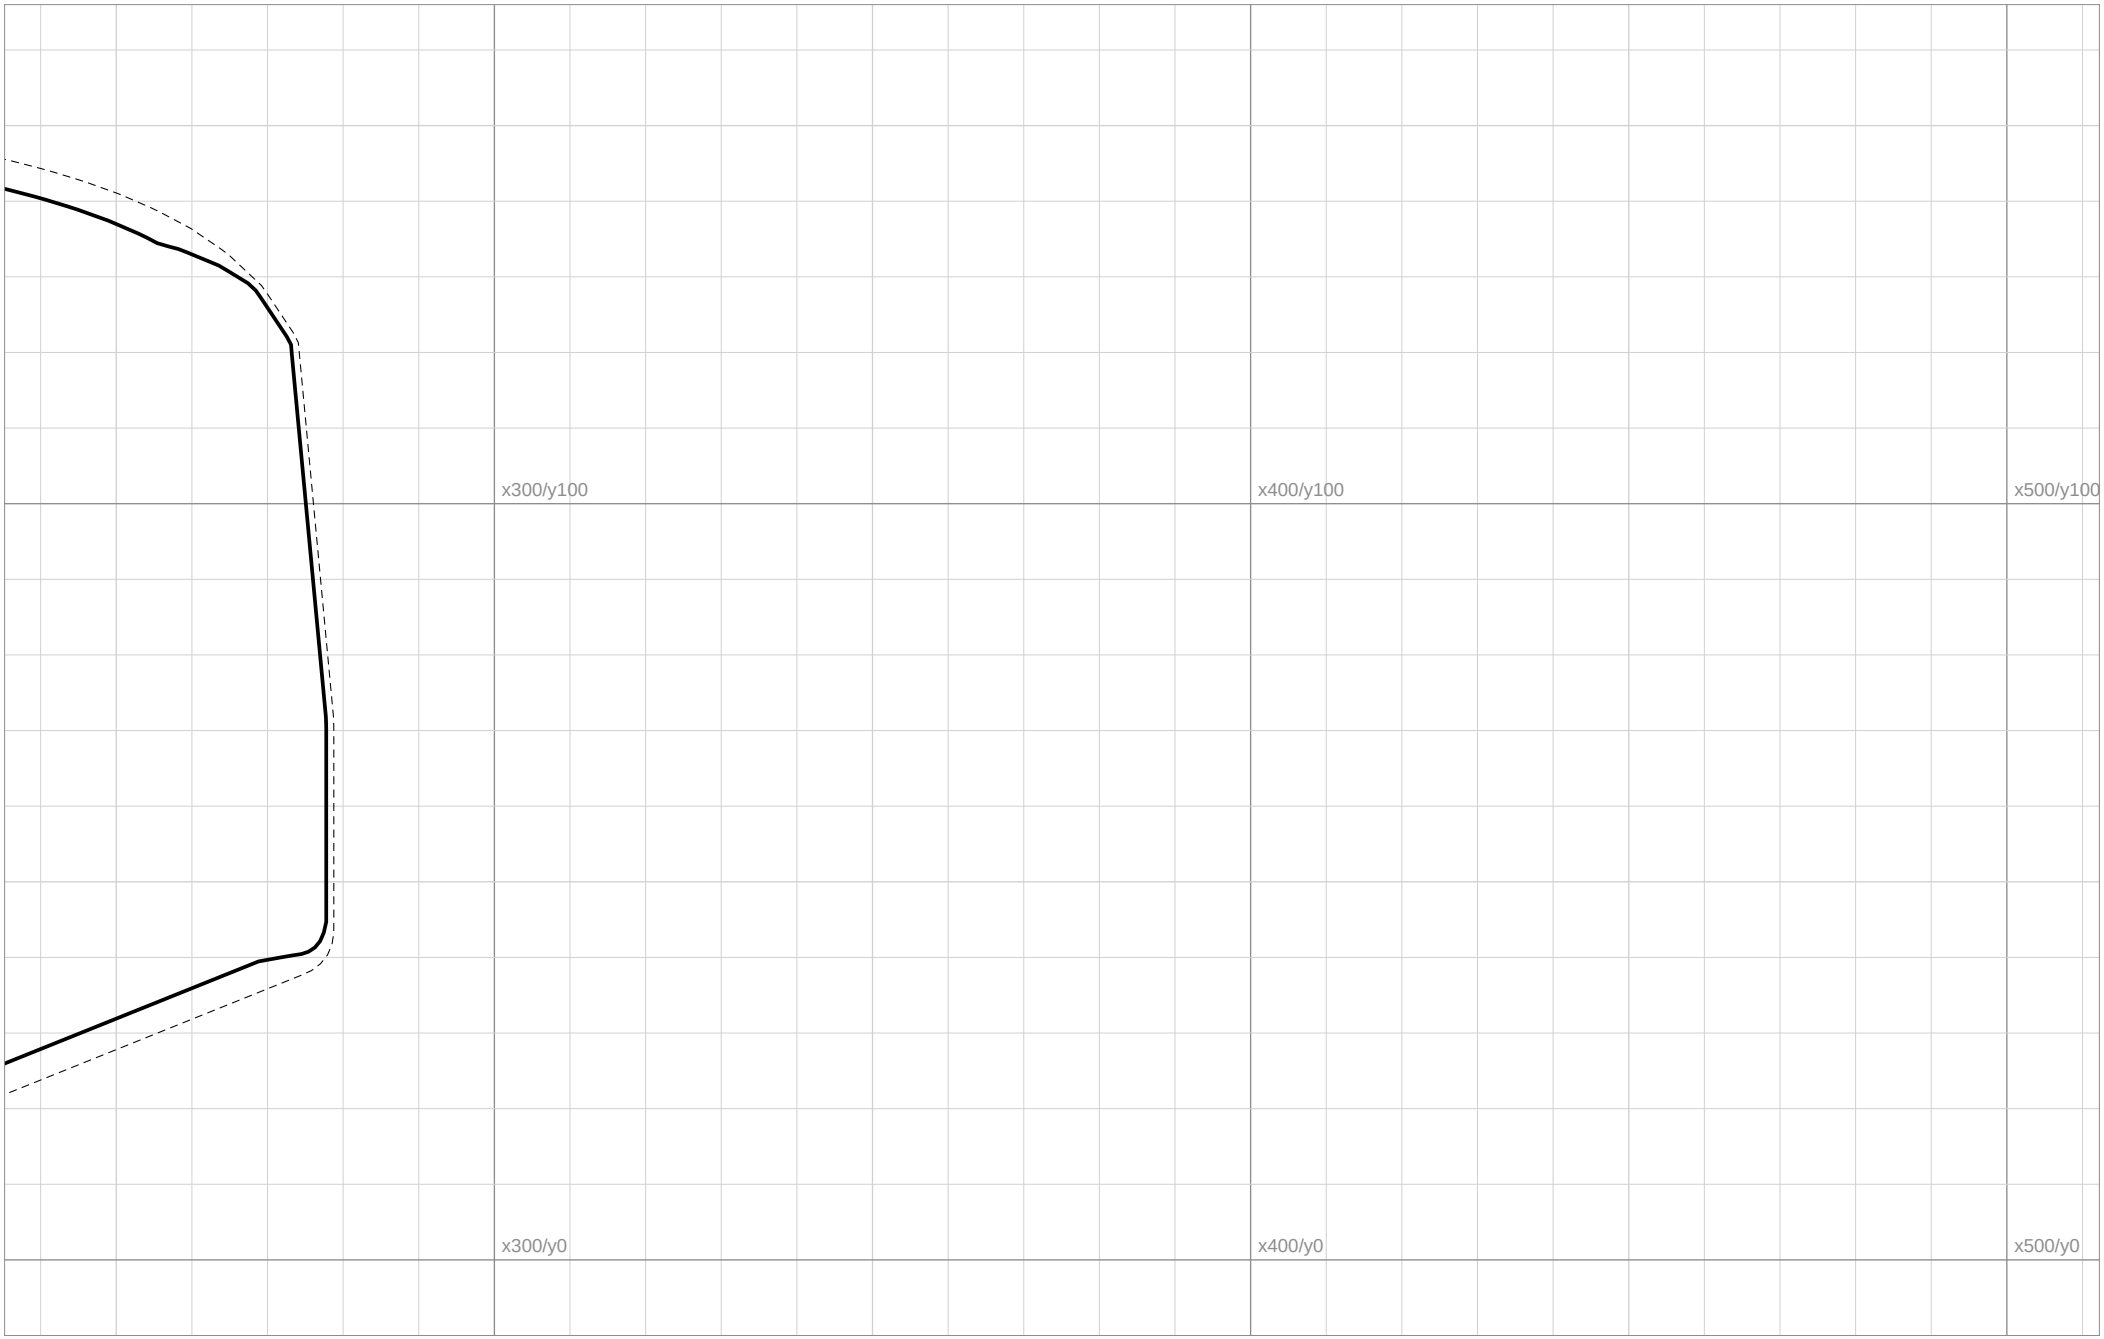

STATION S4: 1050 mm from tail, W 558, T 154.3

sheet row 1/1, col 3/3 (x 235 to 512 mm, y -10 to 166 mm)


100 mm scale check: print at 100% / Actual size, no 'fit to page'

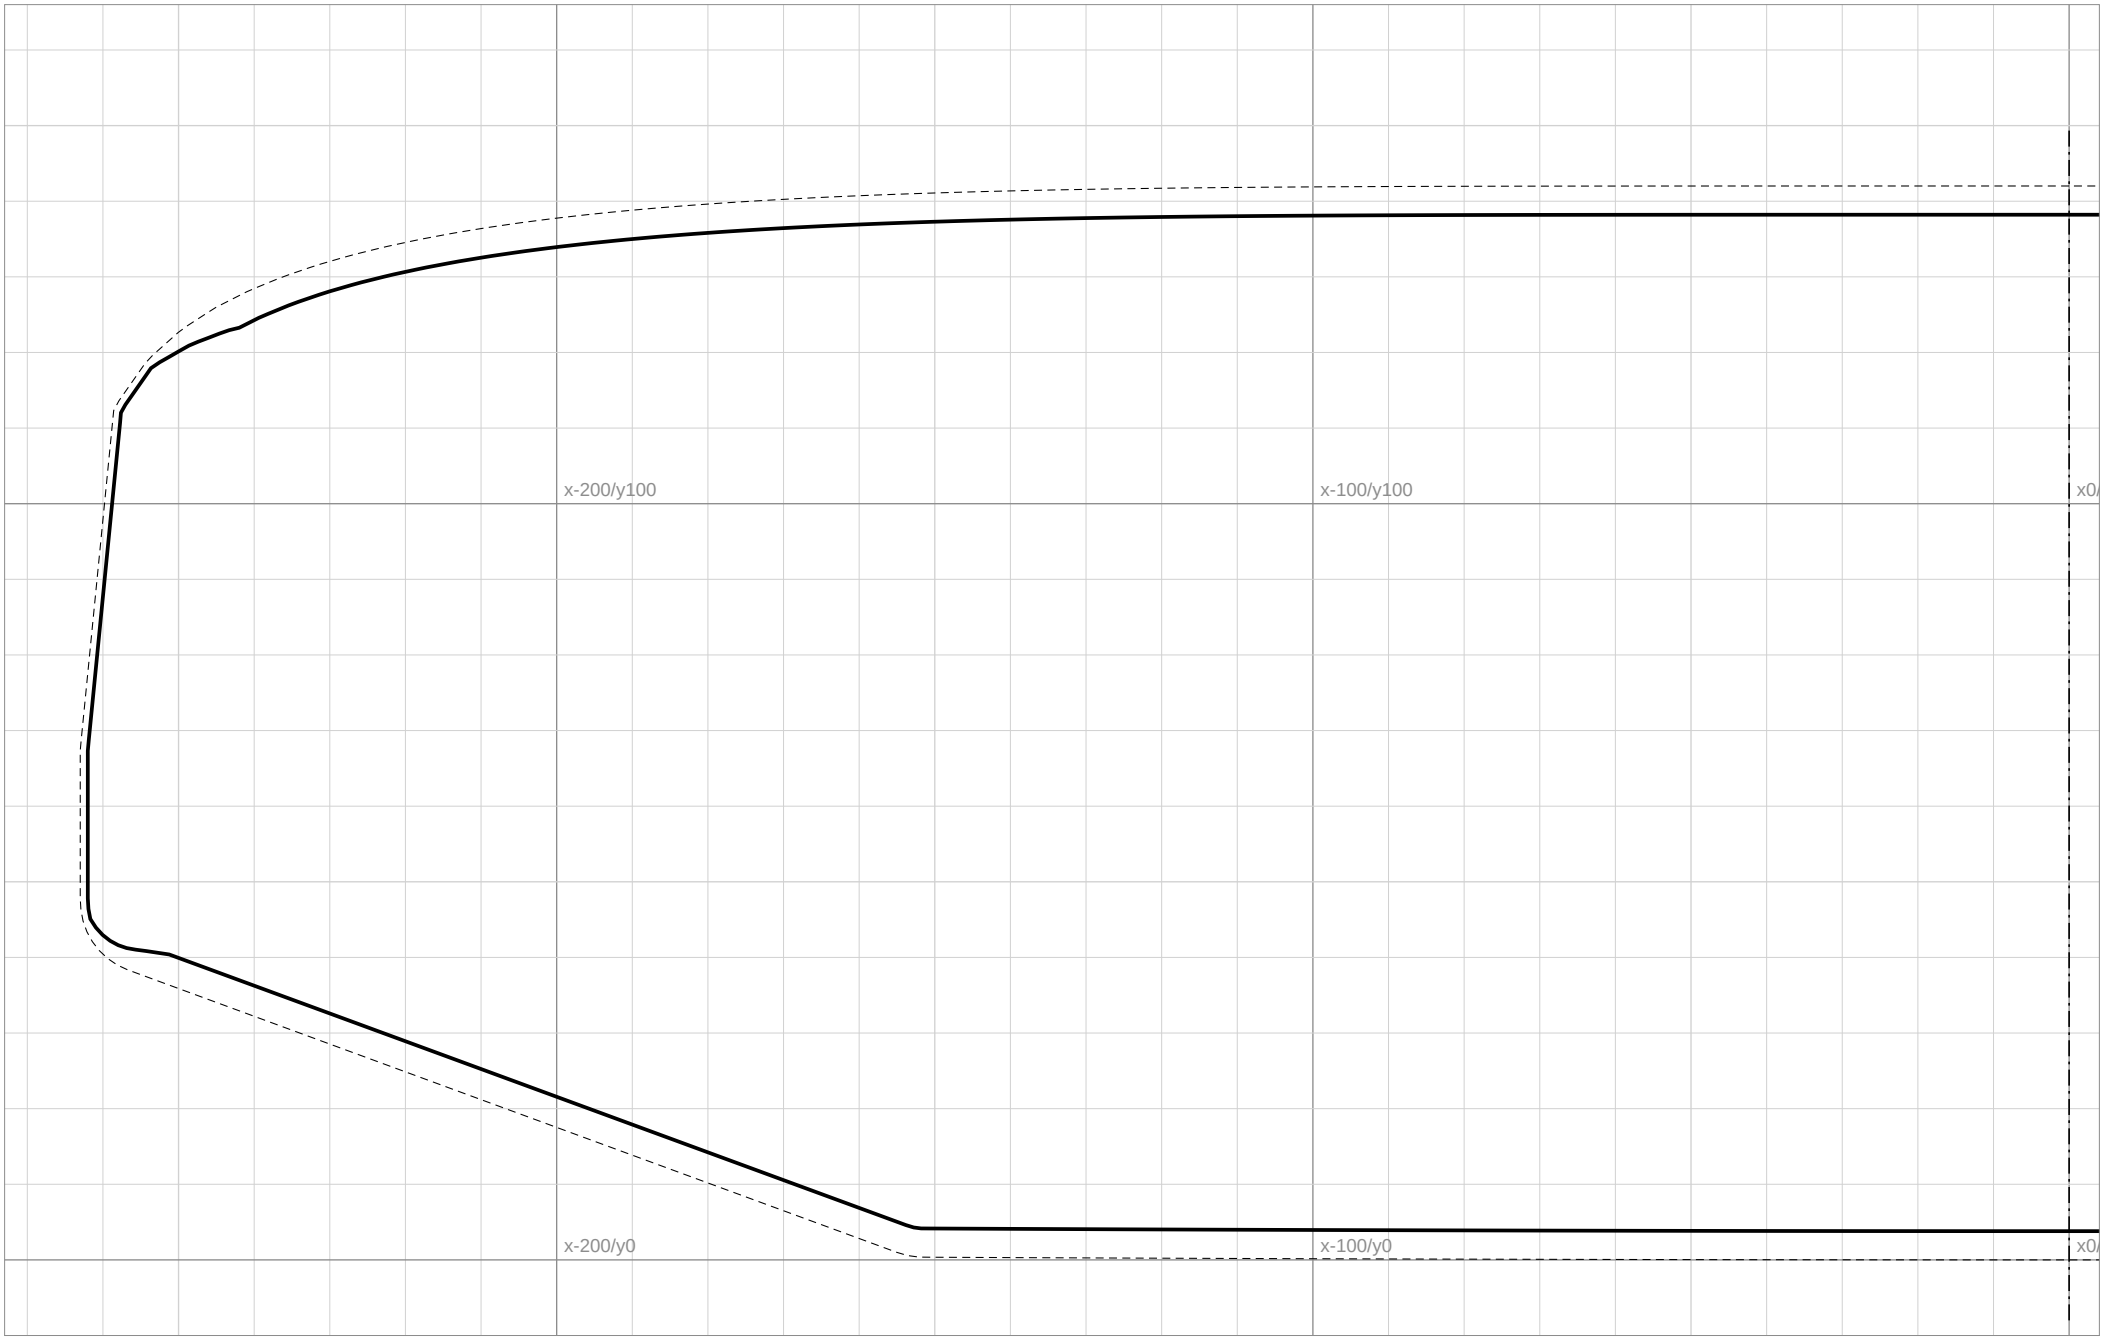

STATION S5: 1350 mm from tail, W 526, T 142.0

sheet row 1/1, col 1/3 (x -273 to 4 mm, y -10 to 166 mm)


100 mm scale check: print at 100% / Actual size, no 'fit to page'

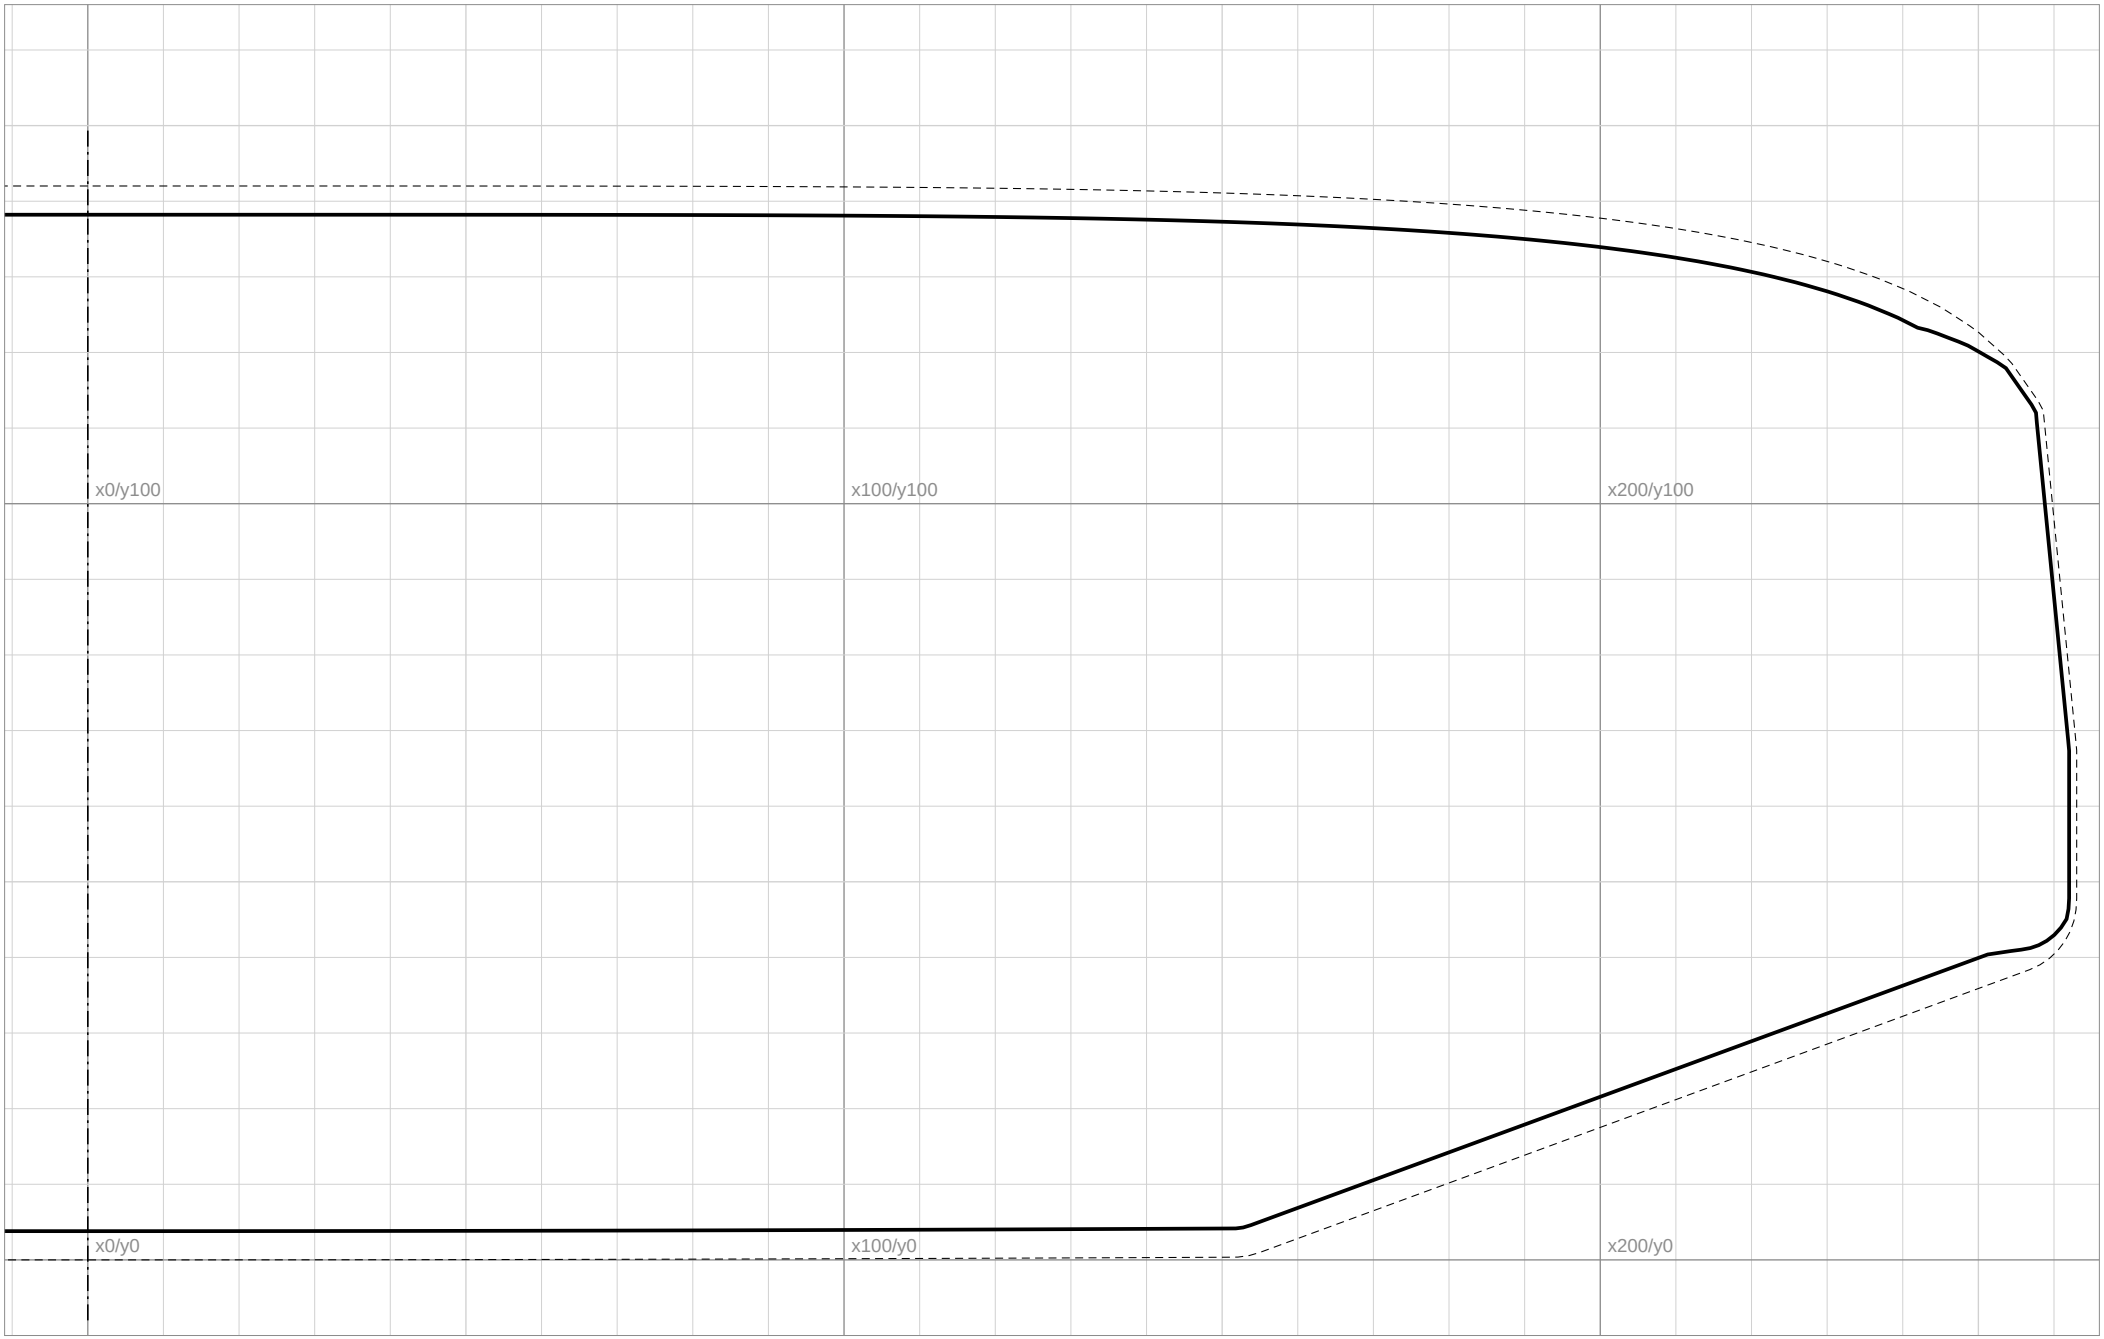

STATION S5: 1350 mm from tail, W 526, T 142.0

sheet row 1/1, col 2/3 (x -11 to 266 mm, y -10 to 166 mm)


100 mm scale check: print at 100% / Actual size, no 'fit to page'

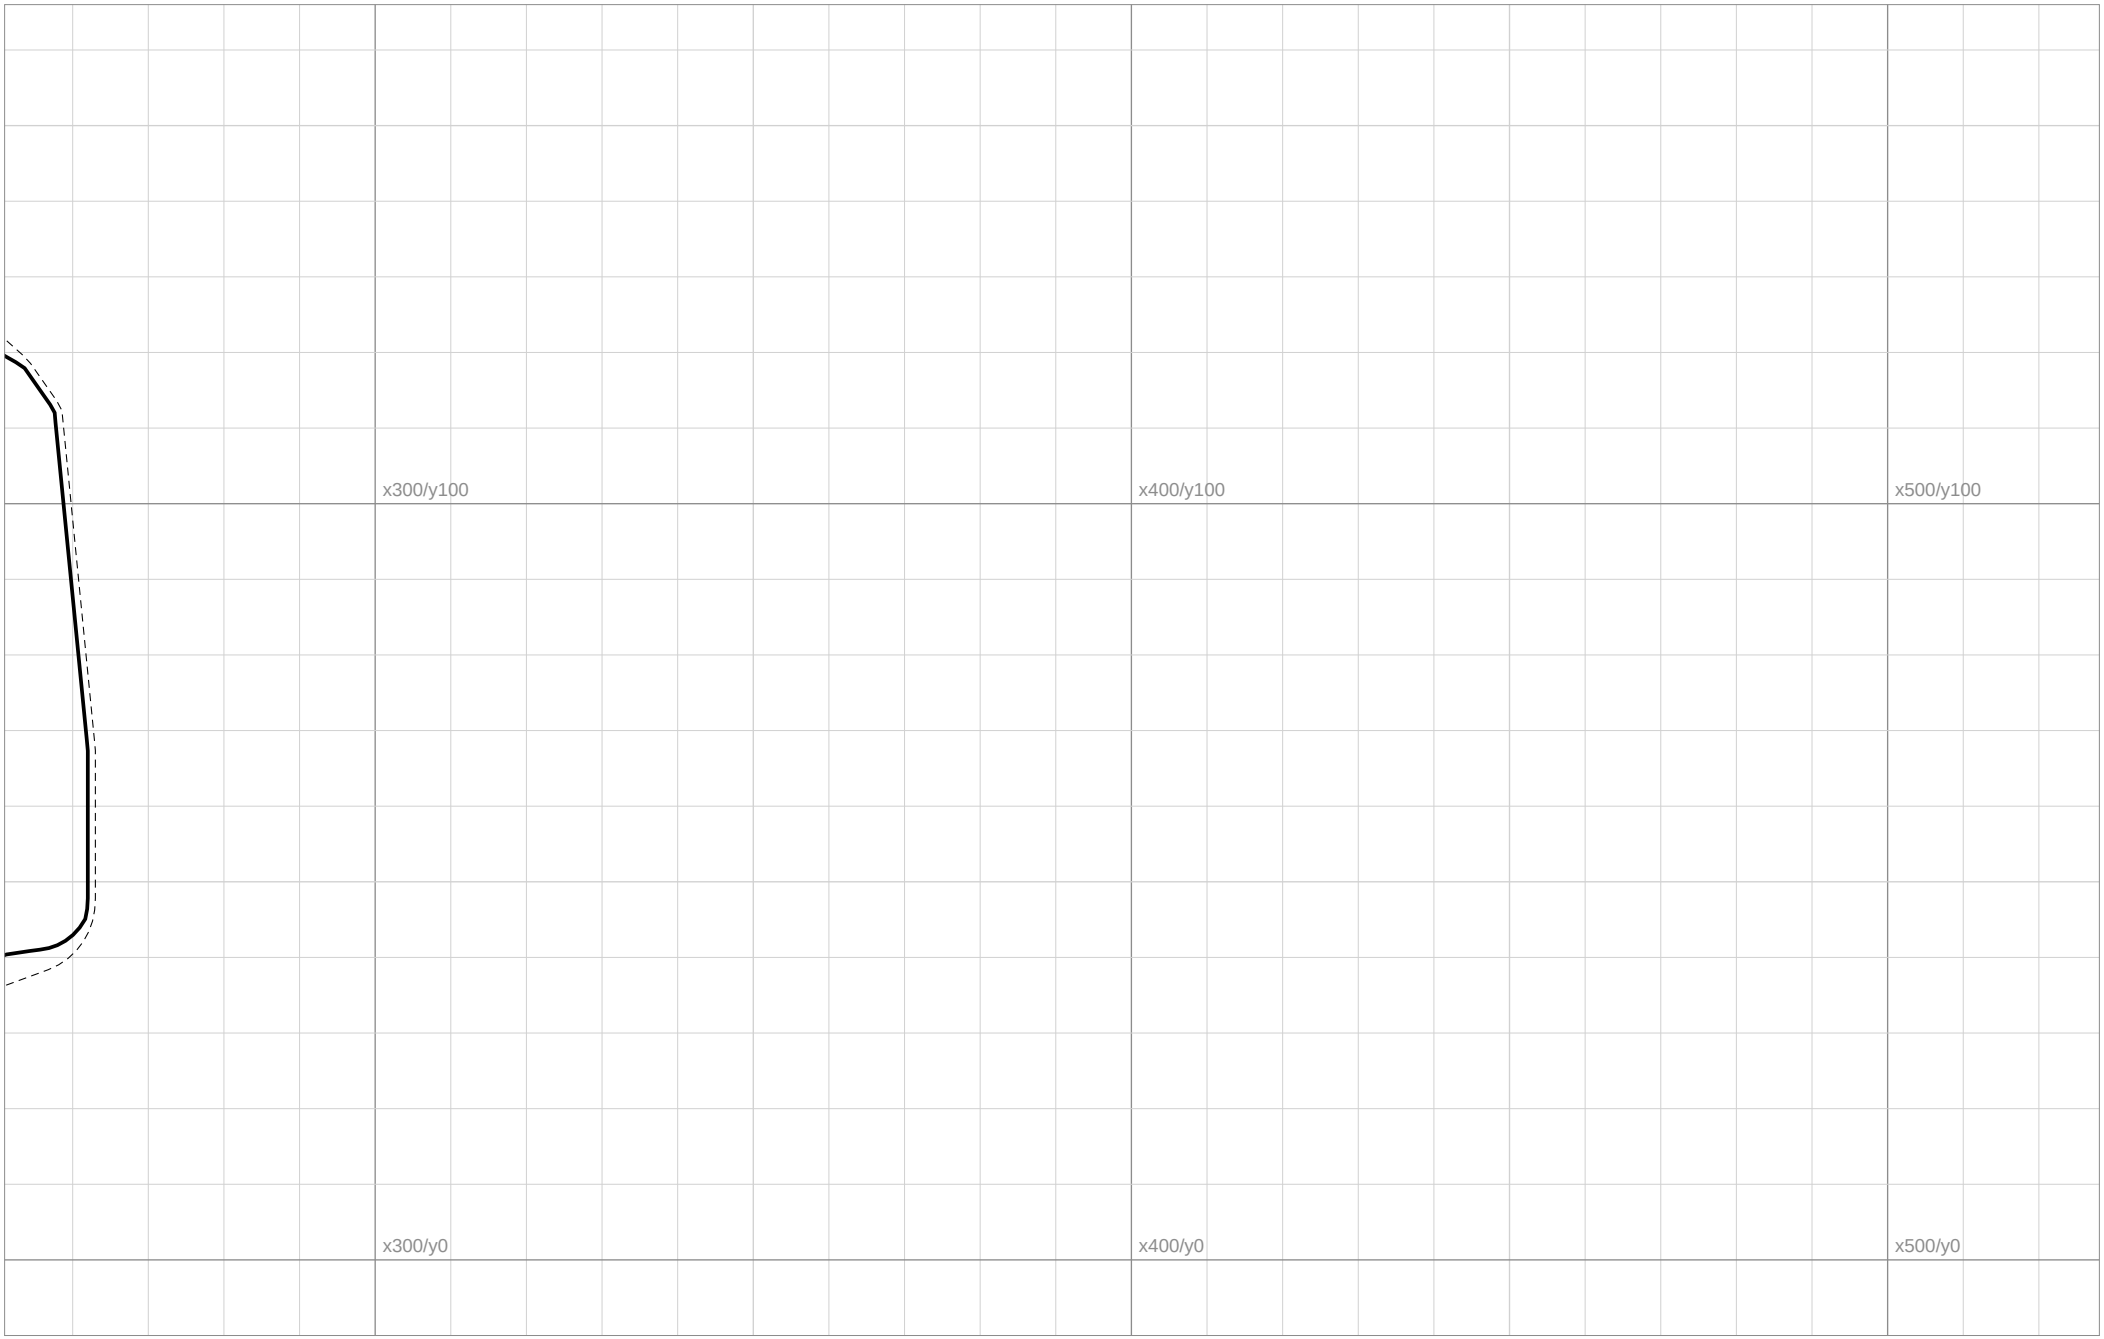

STATION S5: 1350 mm from tail, W 526, T 142.0

sheet row 1/1, col 3/3 (x 251 to 528 mm, y -10 to 166 mm)


100 mm scale check: print at 100% / Actual size, no 'fit to page'

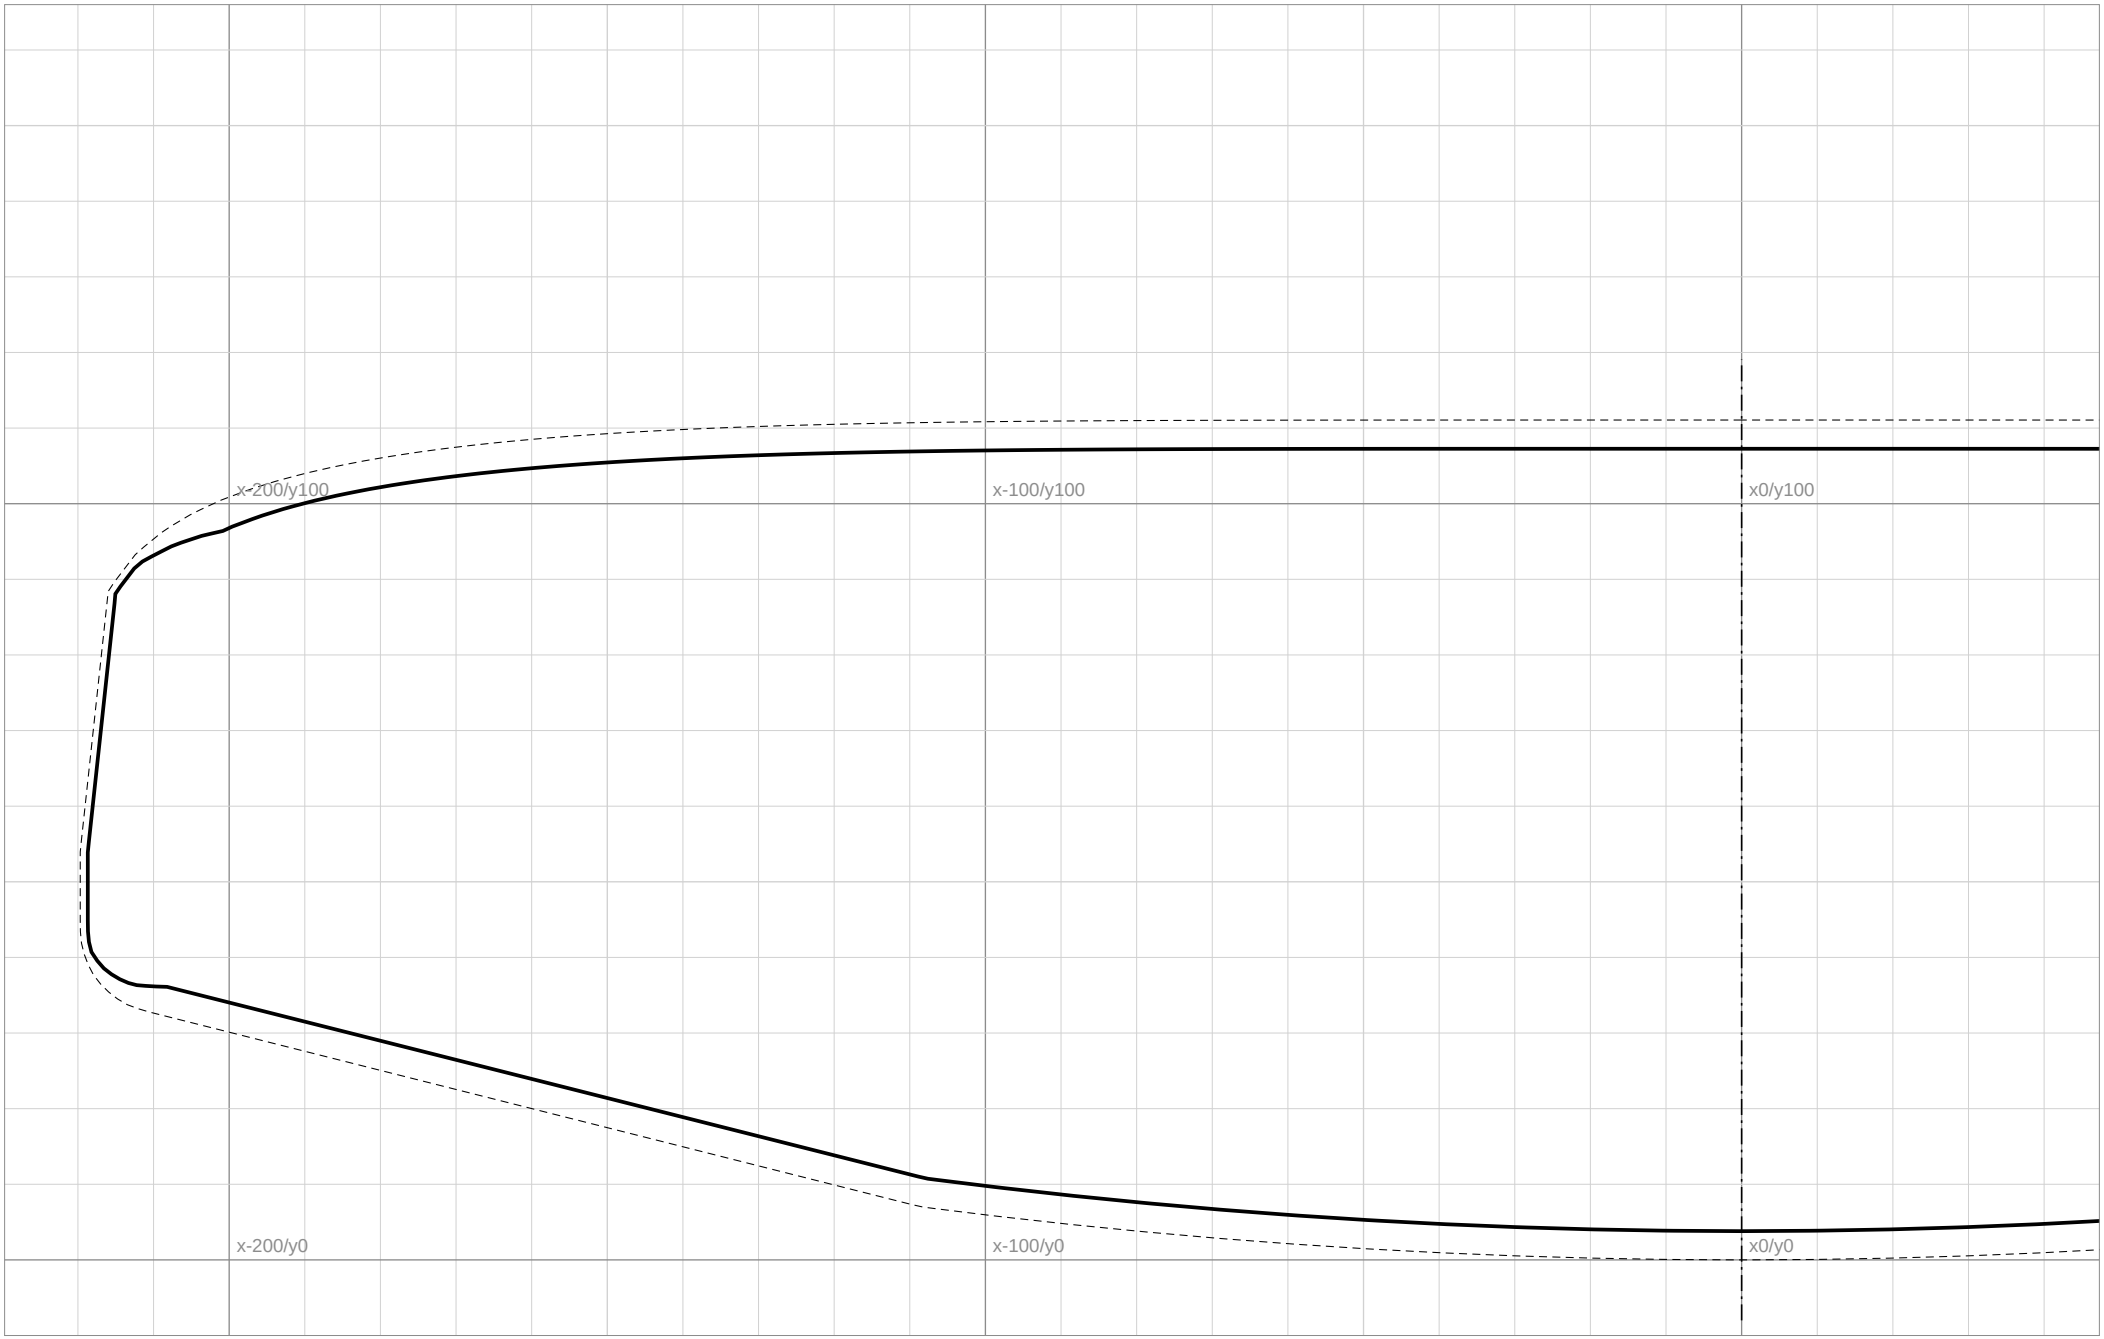

STATION S6: 1650 mm from tail, W 439, T 111.1

sheet row 1/1, col 1/2 (x -230 to 47 mm, y -10 to 166 mm)


100 mm scale check: print at 100% / Actual size, no 'fit to page'

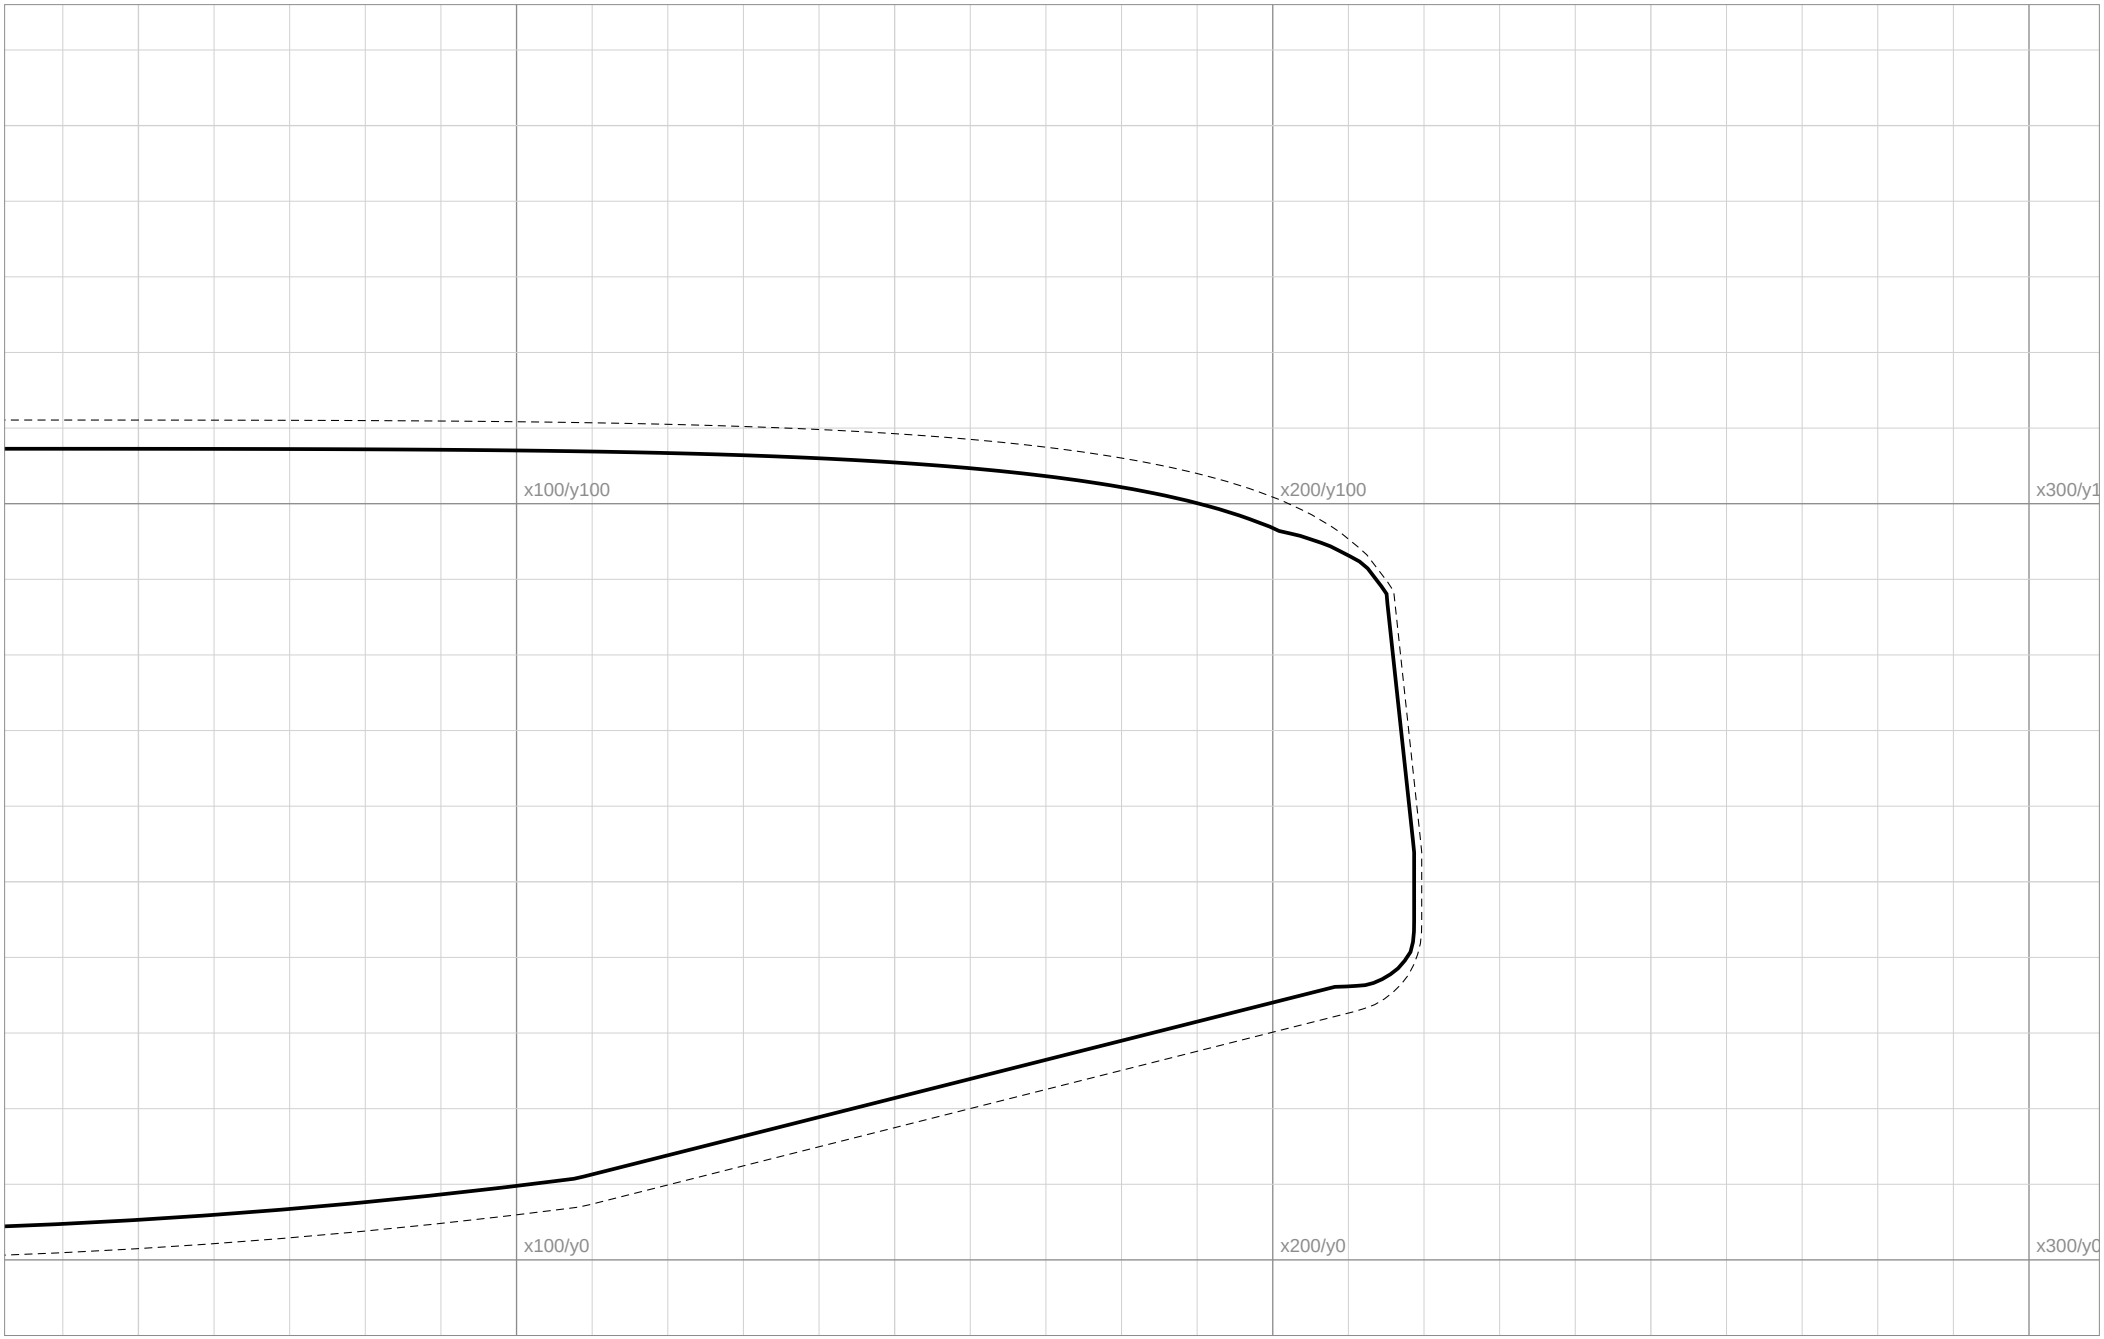

STATION S6: 1650 mm from tail, W 439, T 111.1

sheet row 1/1, col 2/2 (x 32 to 309 mm, y -10 to 166 mm)


100 mm scale check: print at 100% / Actual size, no 'fit to page'

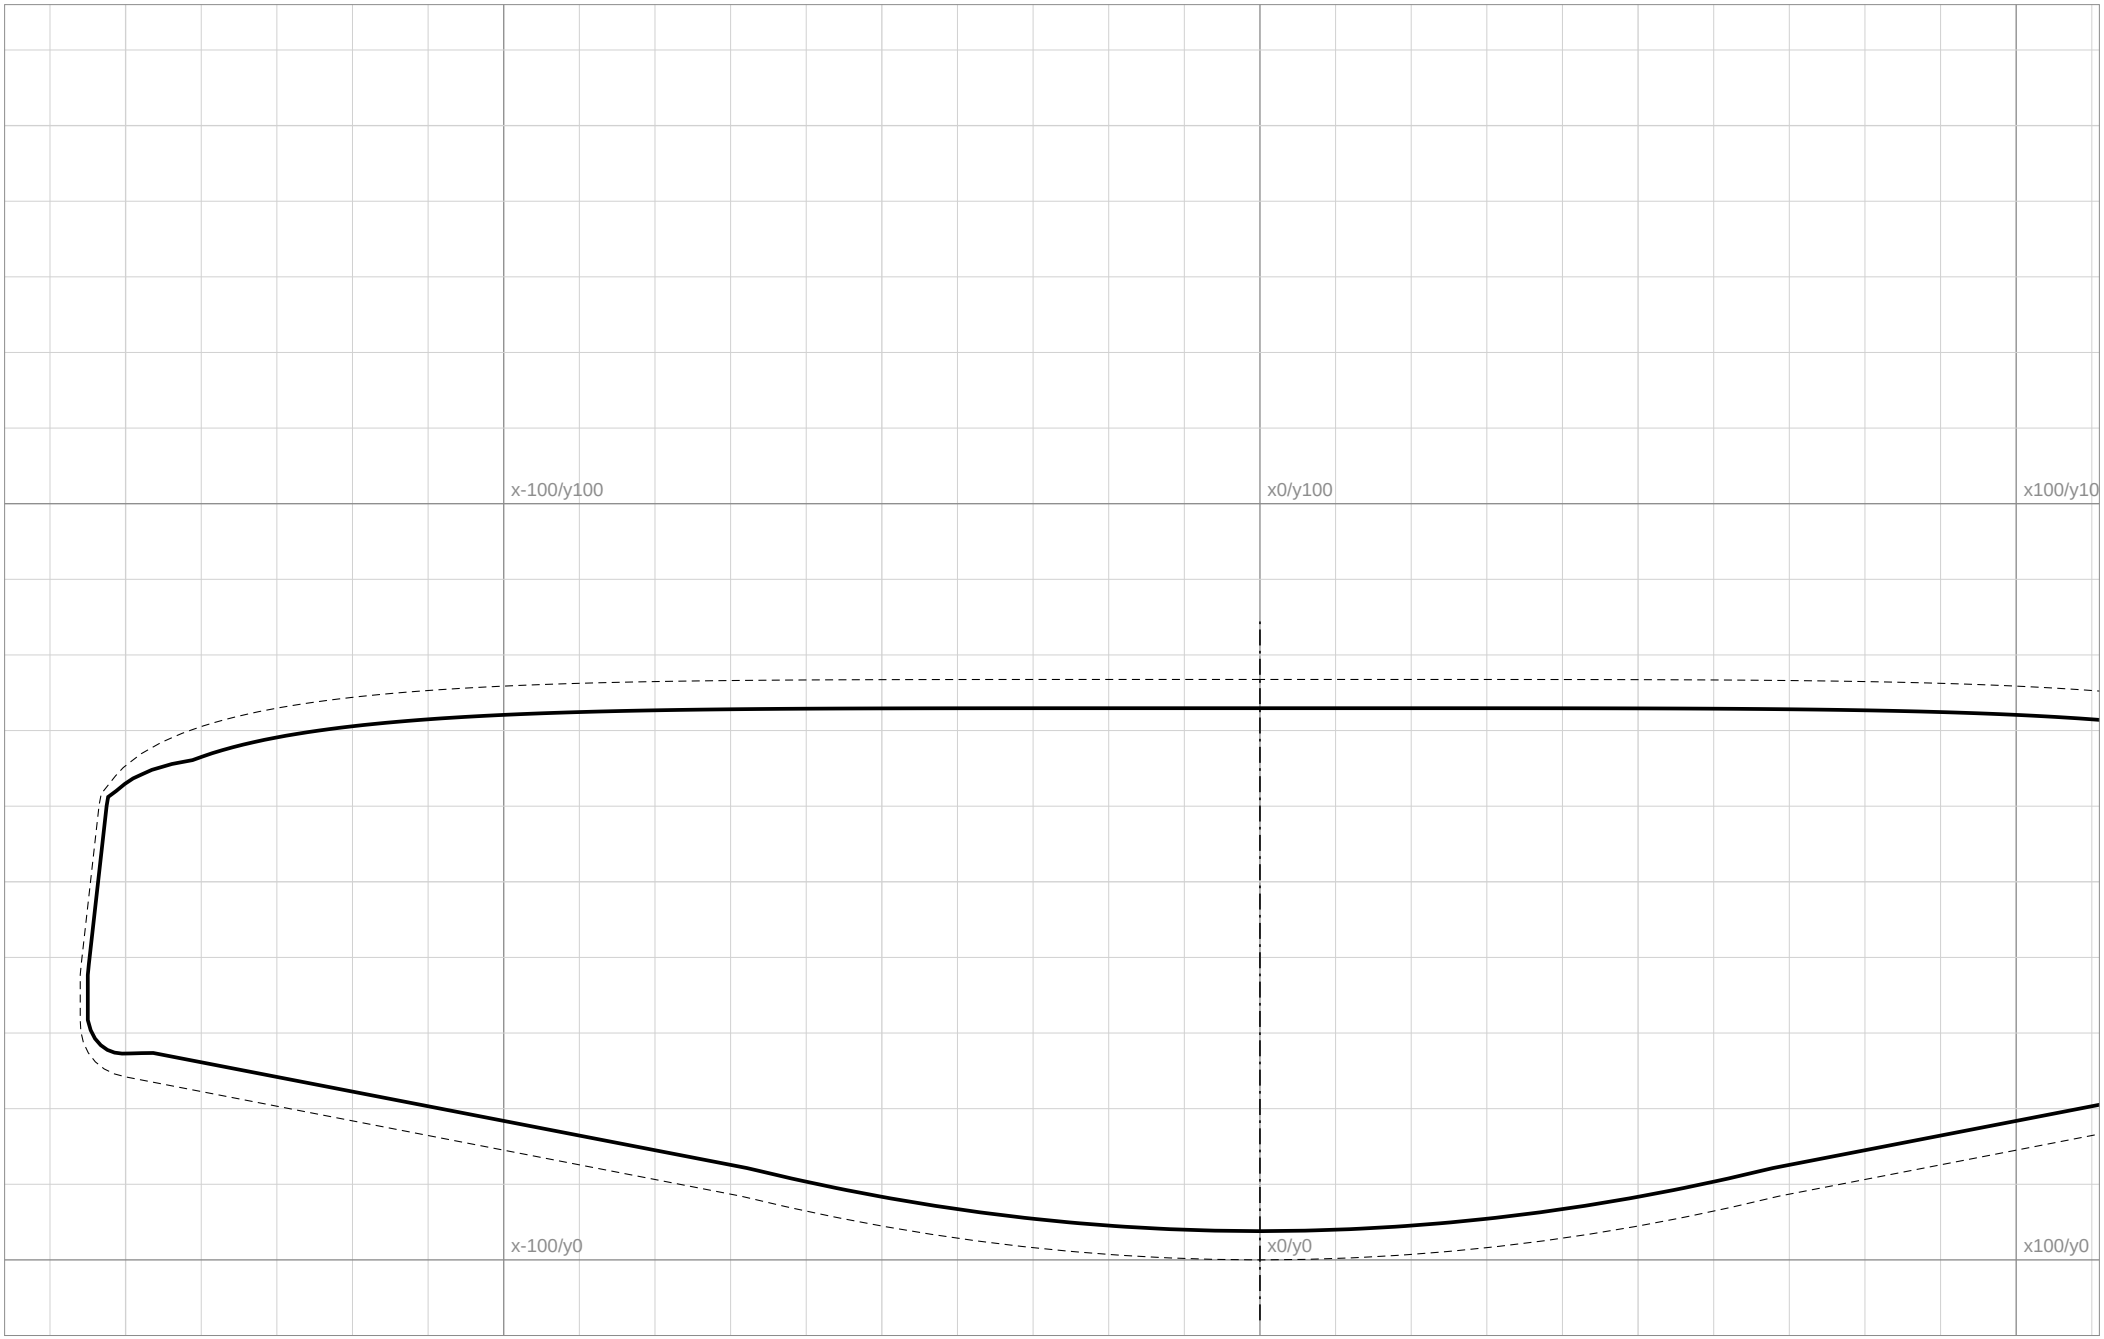

STATION S7: 1850 mm from tail, W 312, T 76.8

sheet row 1/1, col 1/2 (x -166 to 111 mm, y -10 to 166 mm)


100 mm scale check: print at 100% / Actual size, no 'fit to page'

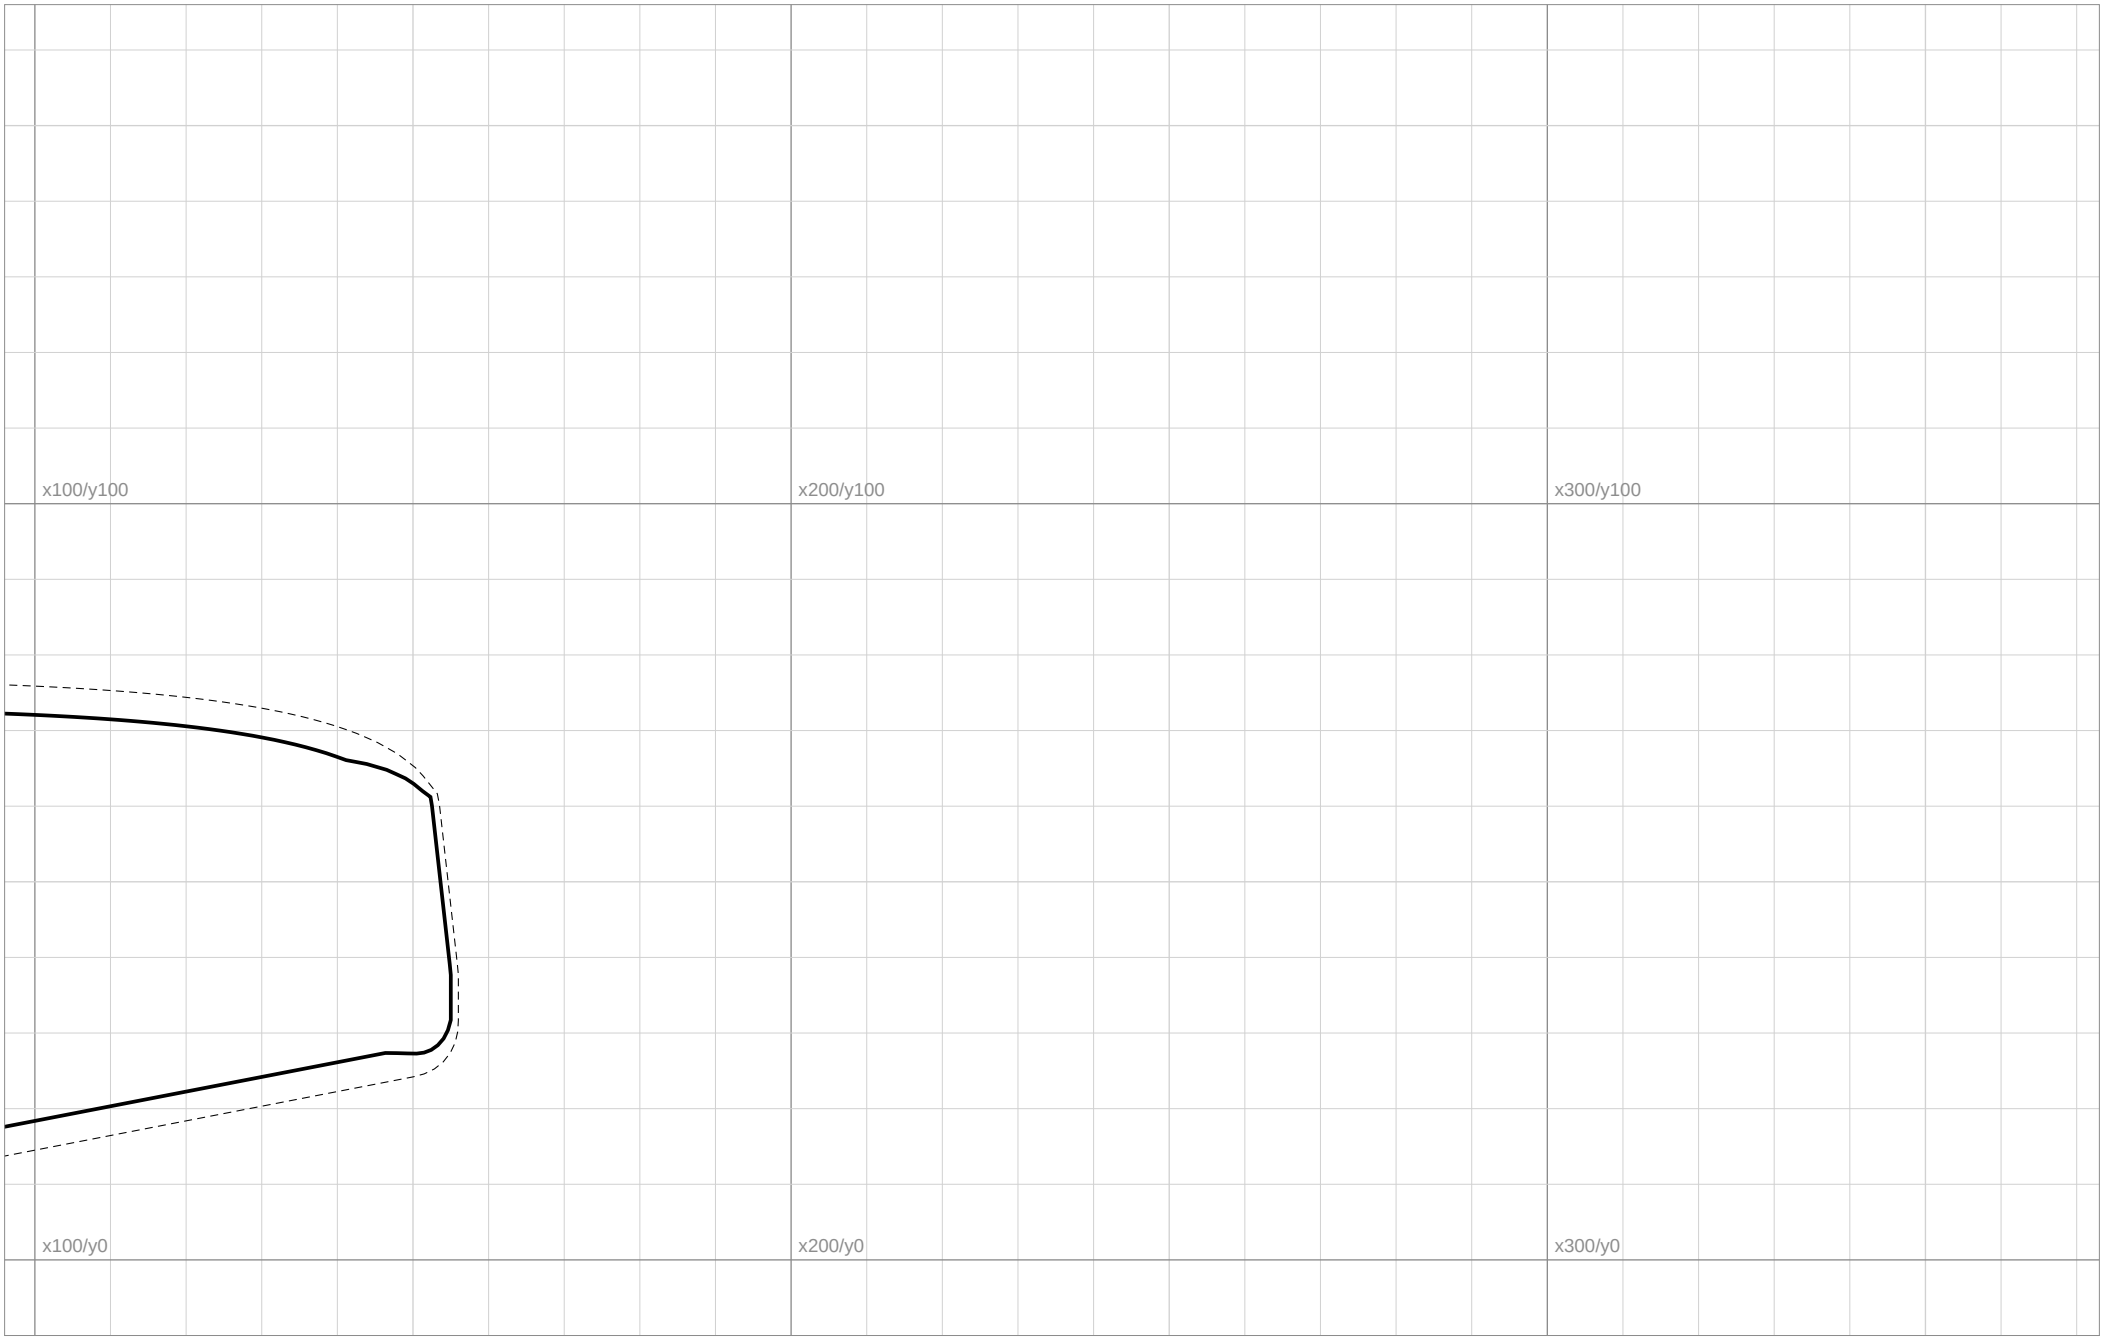

STATION S7: 1850 mm from tail, W 312, T 76.8

sheet row 1/1, col 2/2 (x 96 to 373 mm, y -10 to 166 mm)


100 mm scale check: print at 100% / Actual size, no 'fit to page'

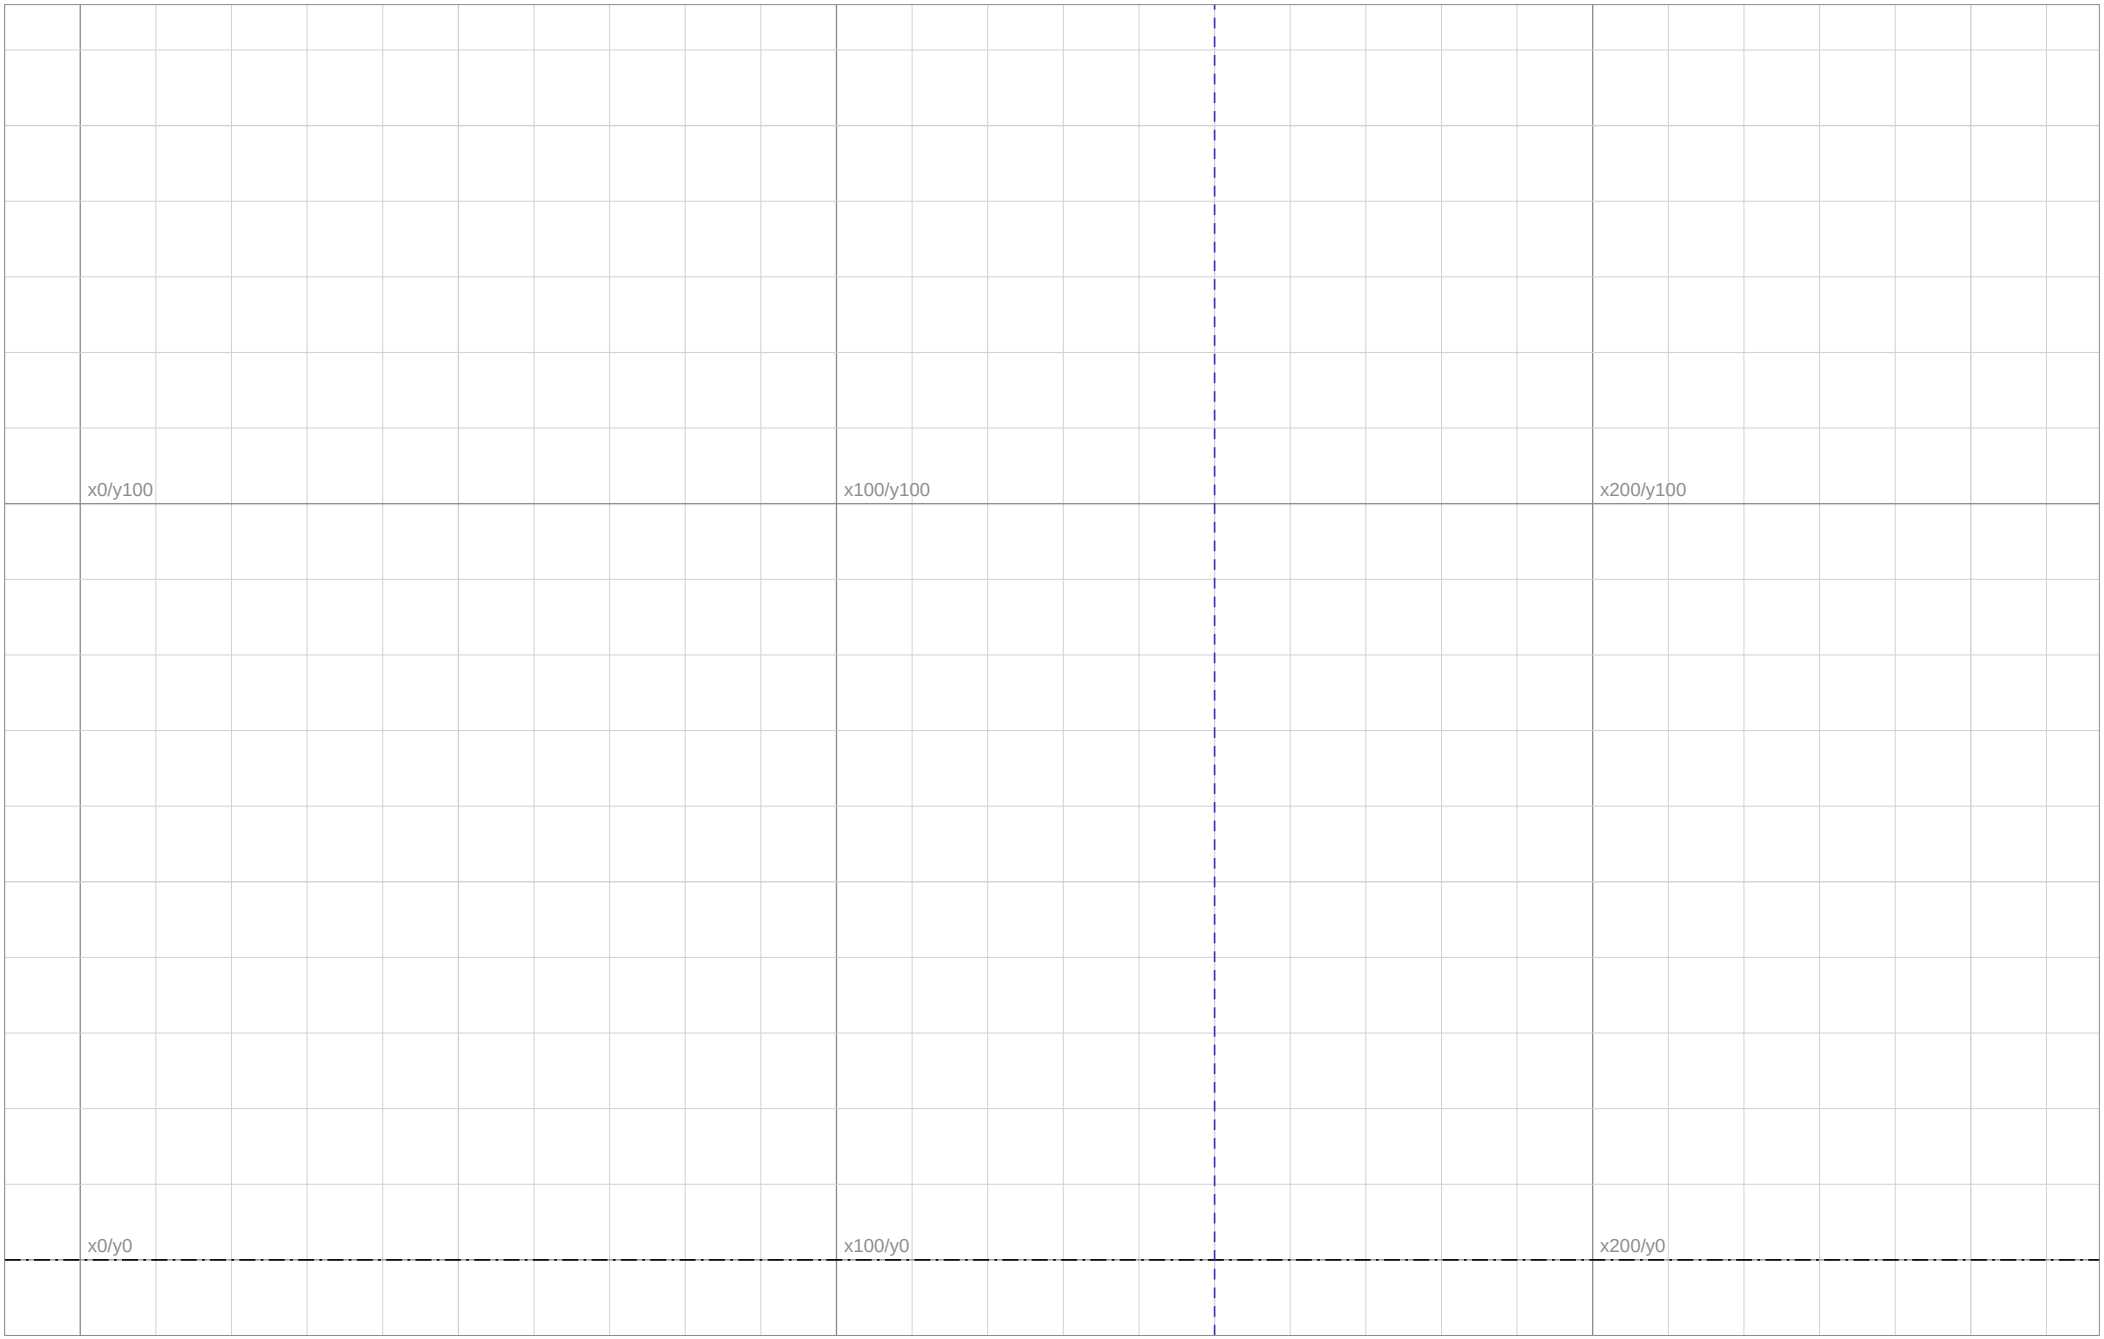

OUTLINE (half, stringer at y=0)

sheet row 1/2, col 1/8 (x -10 to 267 mm, y -10 to 166 mm)


100 mm scale check: print at 100% / Actual size, no 'fit to page'

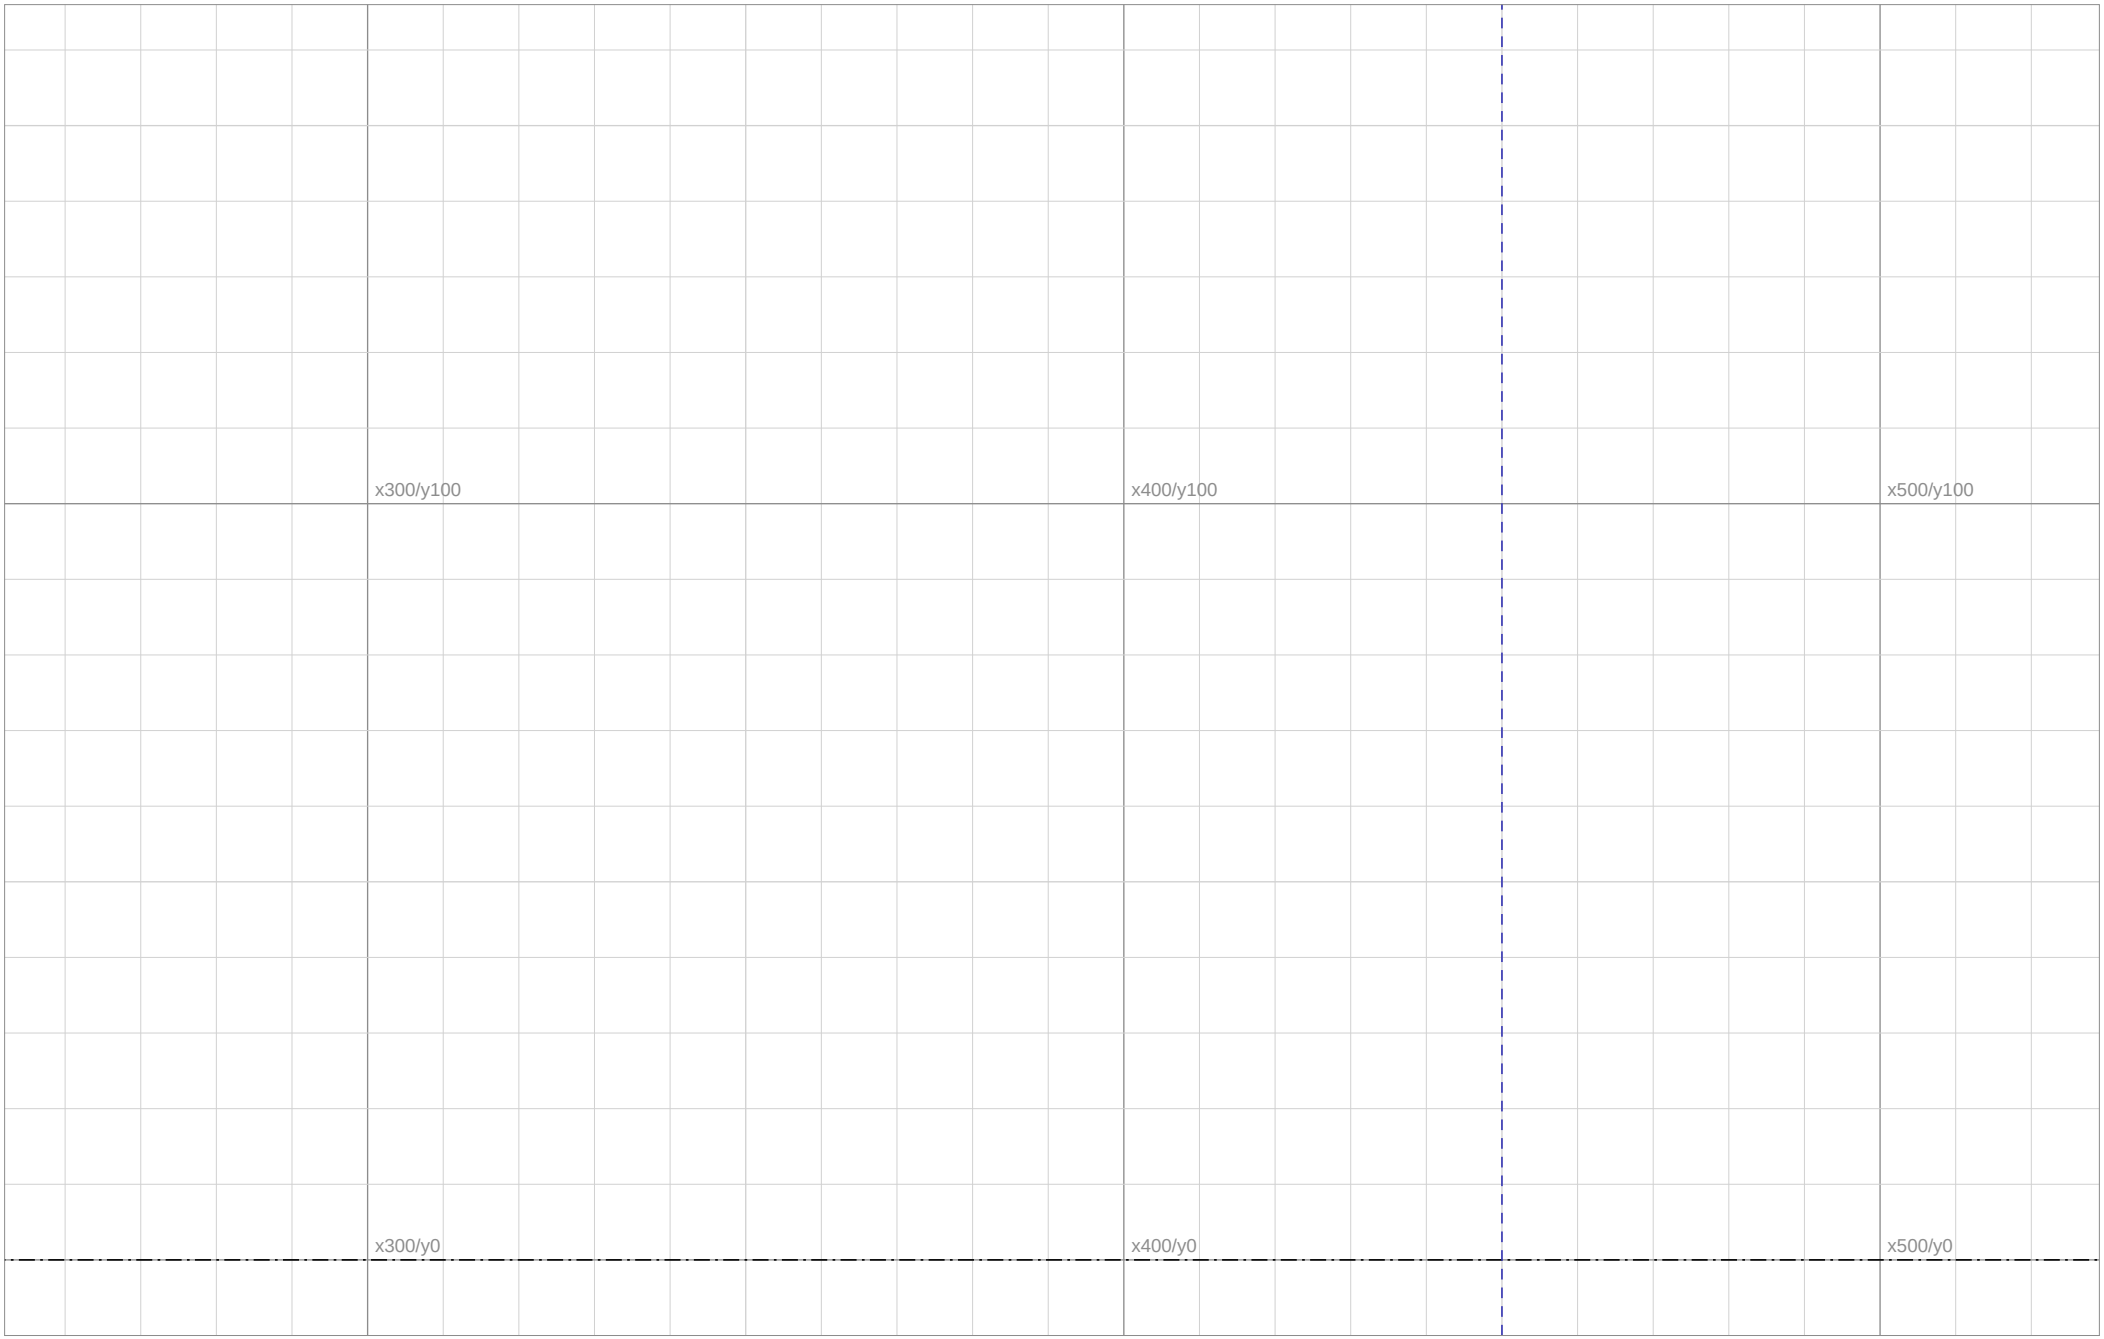

OUTLINE (half, stringer at y=0)

sheet row 1/2, col 2/8 (x 252 to 529 mm, y -10 to 166 mm)


100 mm scale check: print at 100% / Actual size, no 'fit to page'

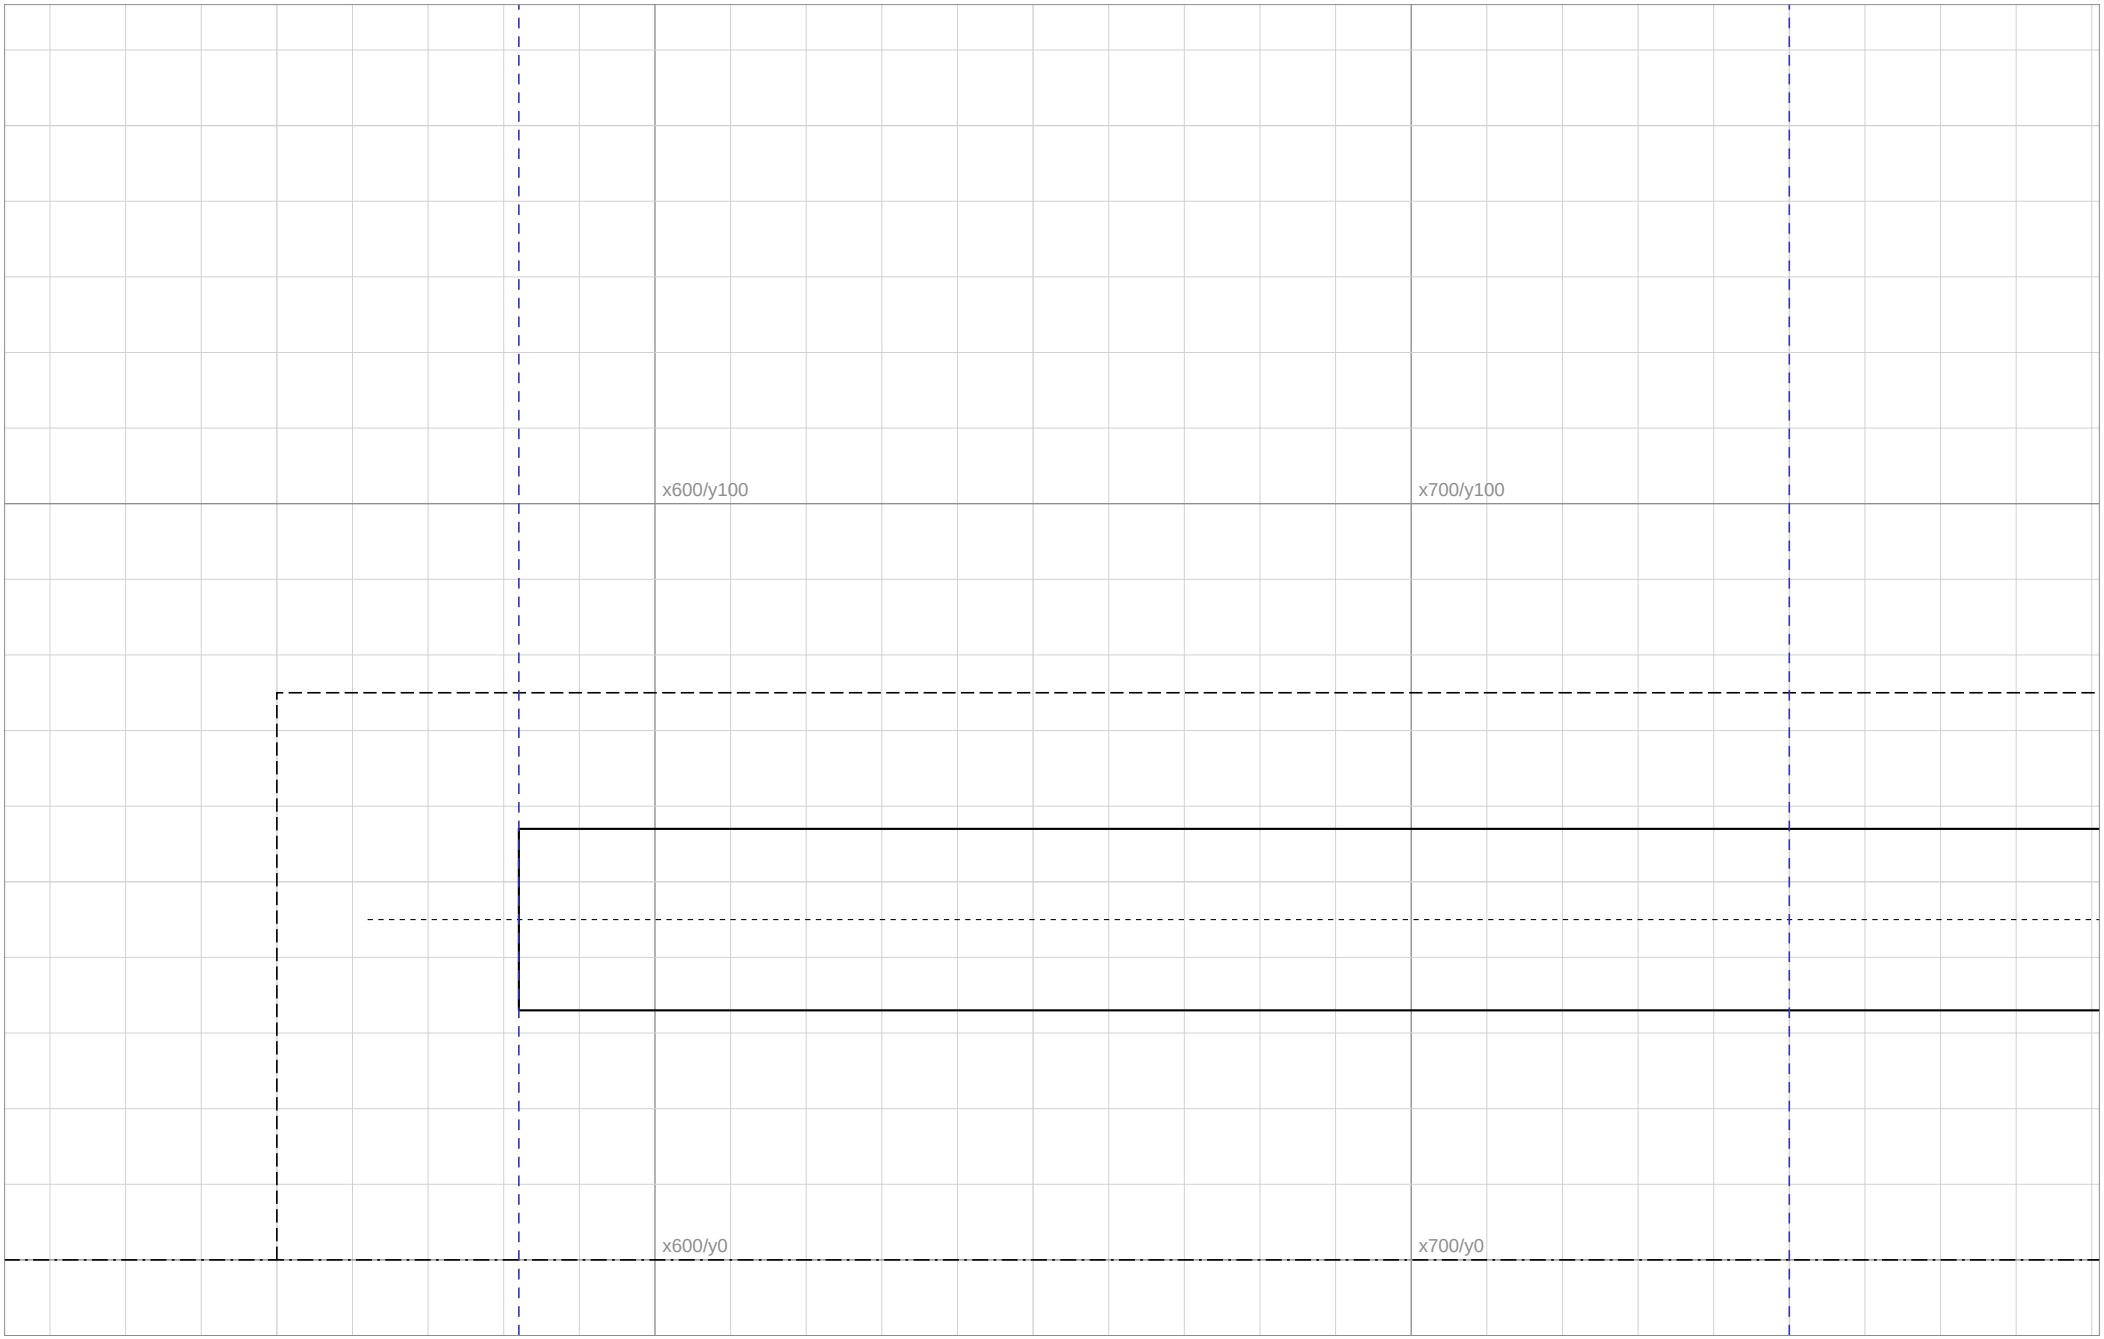

OUTLINE (half, stringer at y=0)

sheet row 1/2, col 3/8 (x 514 to 791 mm, y -10 to 166 mm)

100 mm scale check: print at 100% / Actual size, no 'fit to page'

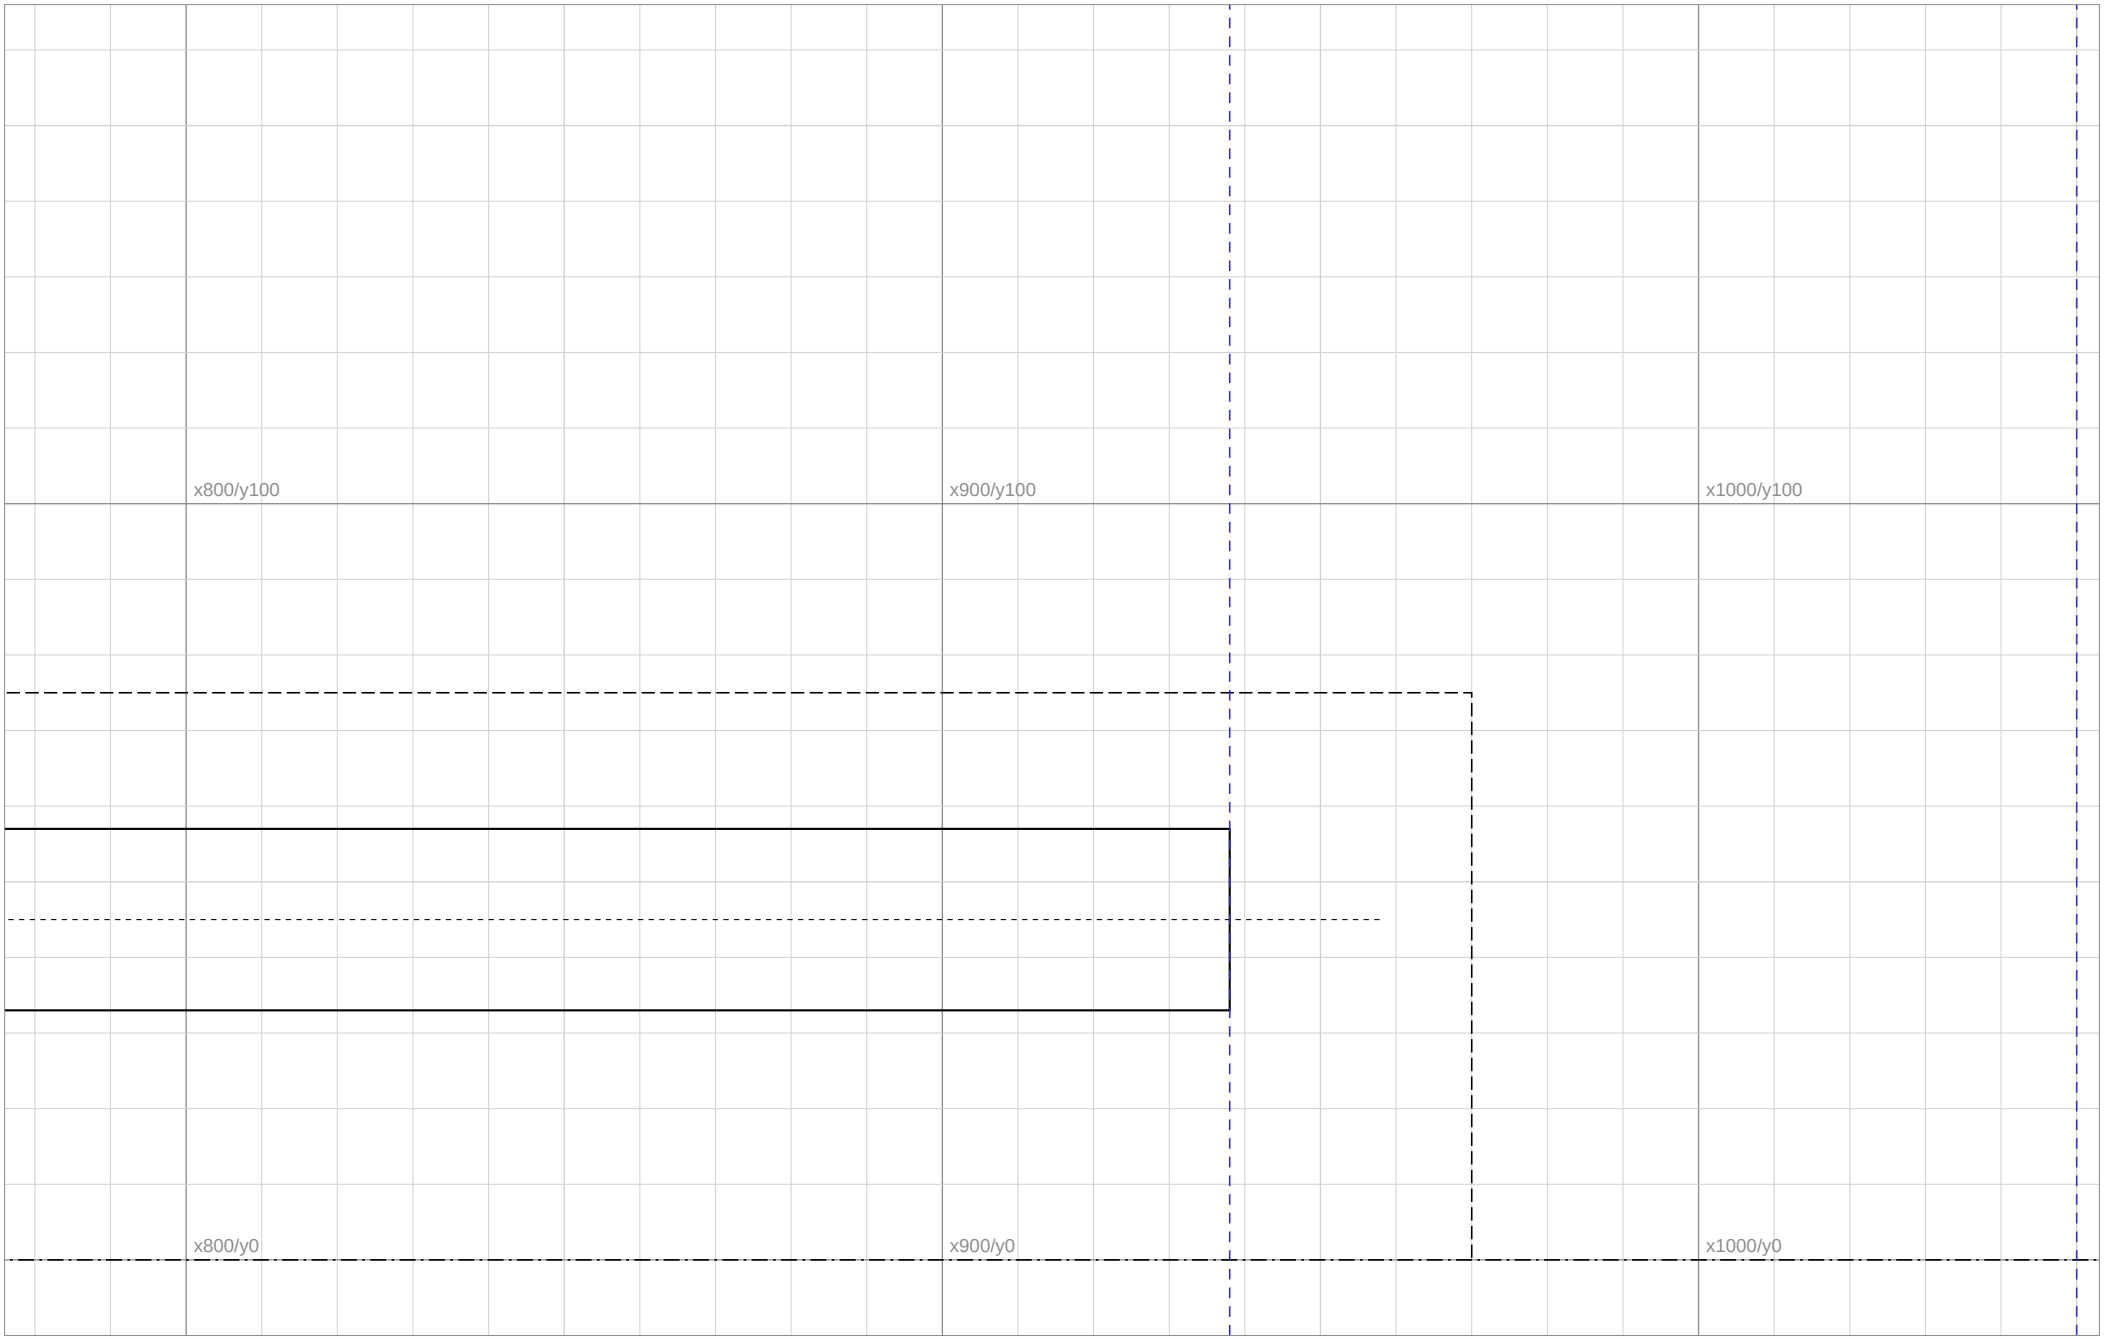

OUTLINE (half, stringer at y=0)

sheet row 1/2, col 4/8 (x 776 to 1053 mm, y -10 to 166 mm)


100 mm scale check: print at 100% / Actual size, no 'fit to page'



OUTLINE (half, stringer at y=0)

sheet row 1/2, col 5/8 (x 1038 to 1315 mm, y -10 to 166 mm)


100 mm scale check: print at 100% / Actual size, no 'fit to page'

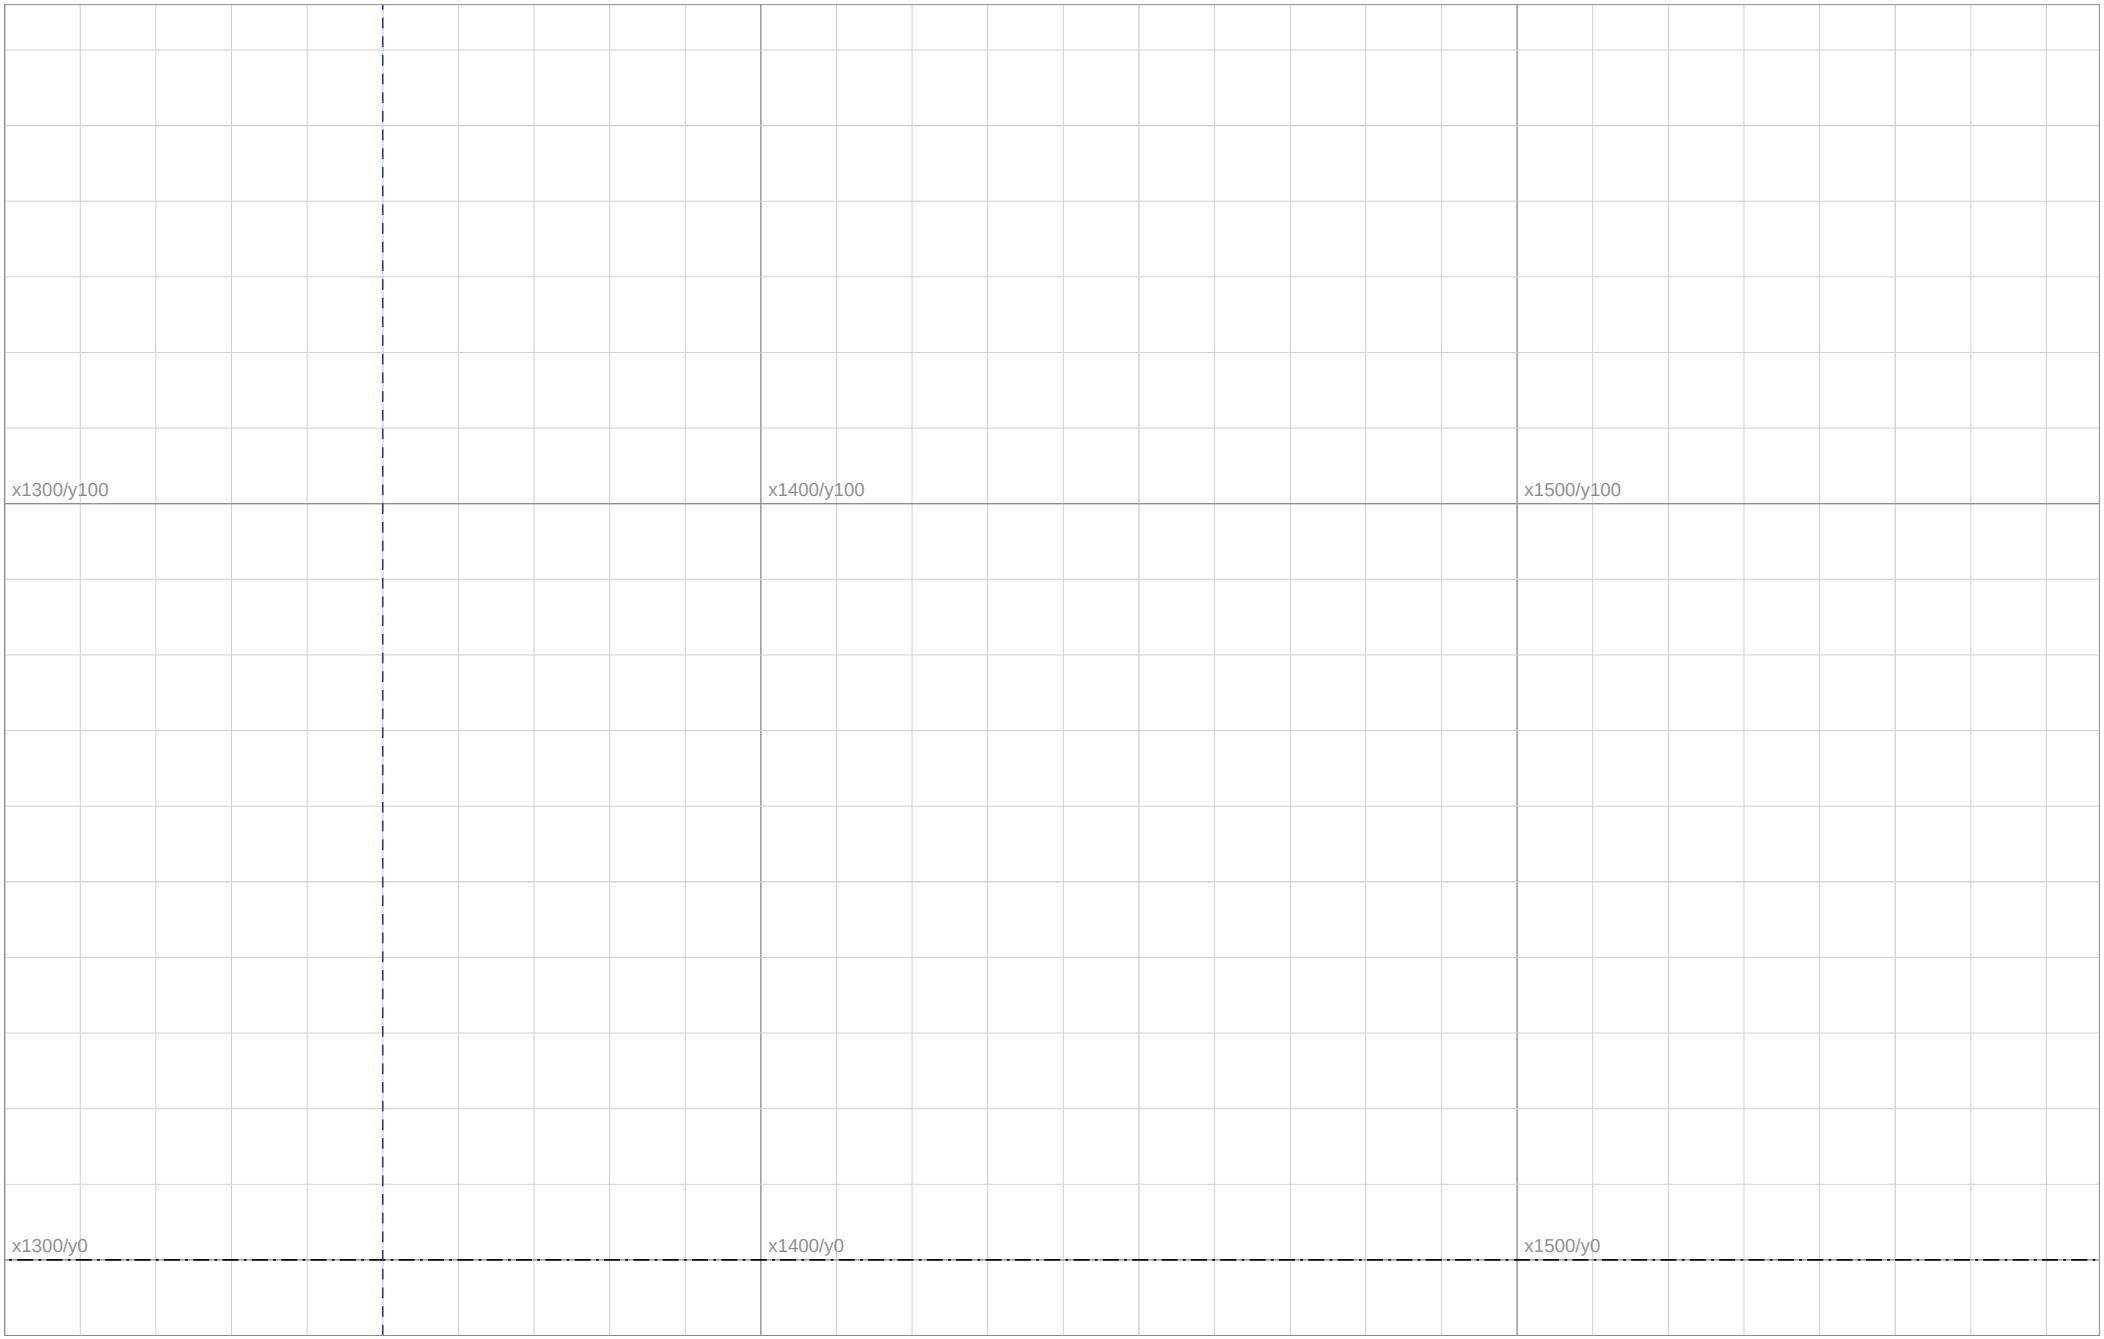

OUTLINE (half, stringer at y=0)

sheet row 1/2, col 6/8 (x 1300 to 1577 mm, y -10 to 166 mm)


100 mm scale check: print at 100% / Actual size, no 'fit to page'

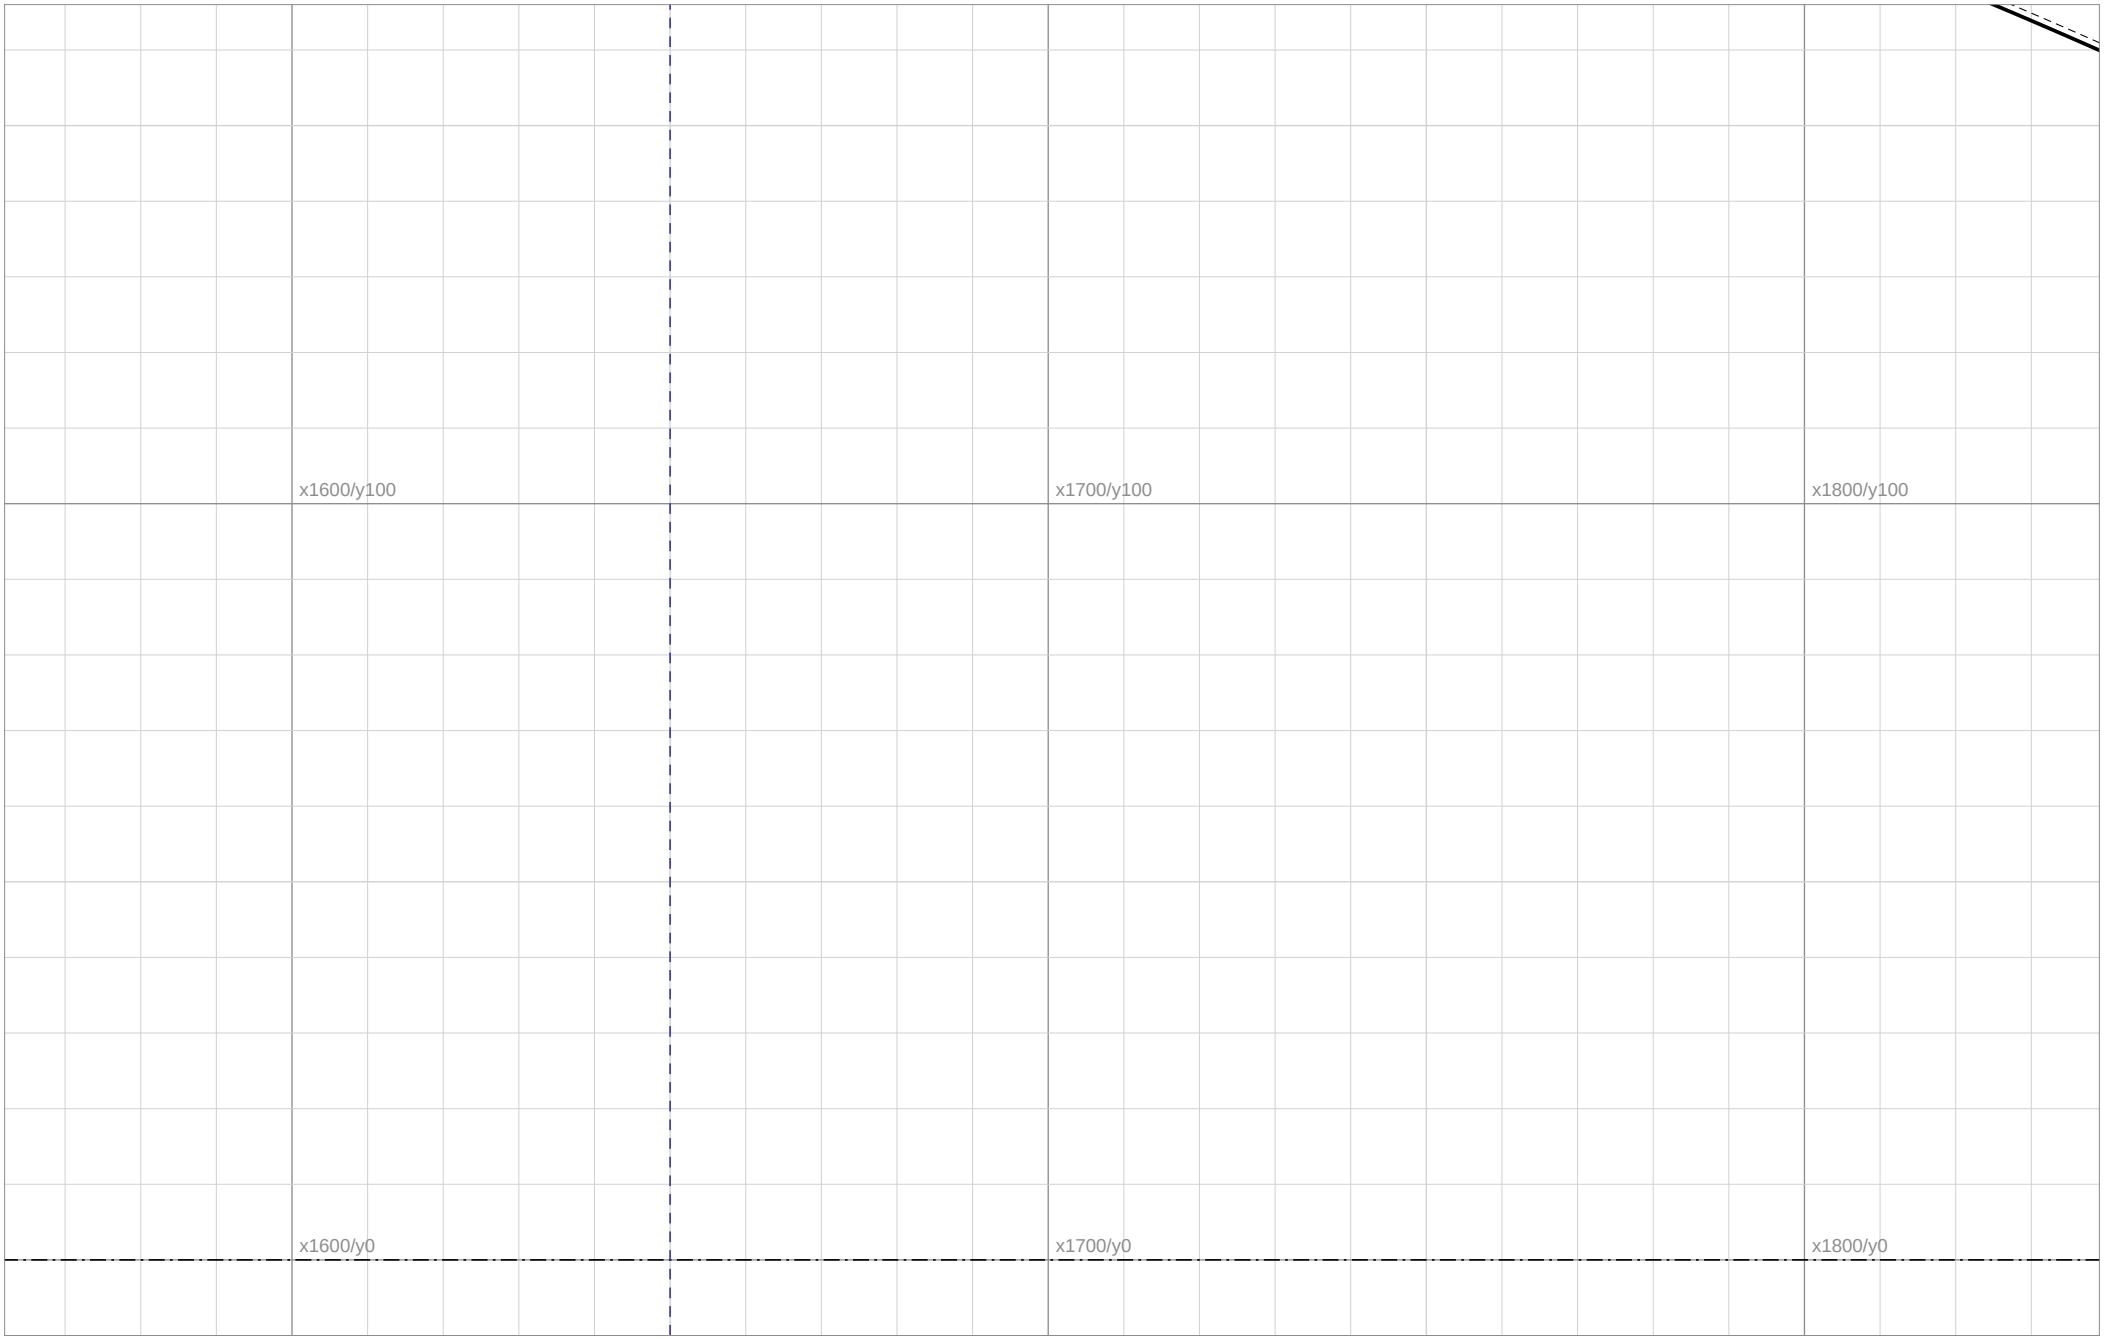

OUTLINE (half, stringer at y=0)

sheet row 1/2, col 7/8 (x 1562 to 1839 mm, y -10 to 166 mm)


100 mm scale check: print at 100% / Actual size, no 'fit to page'

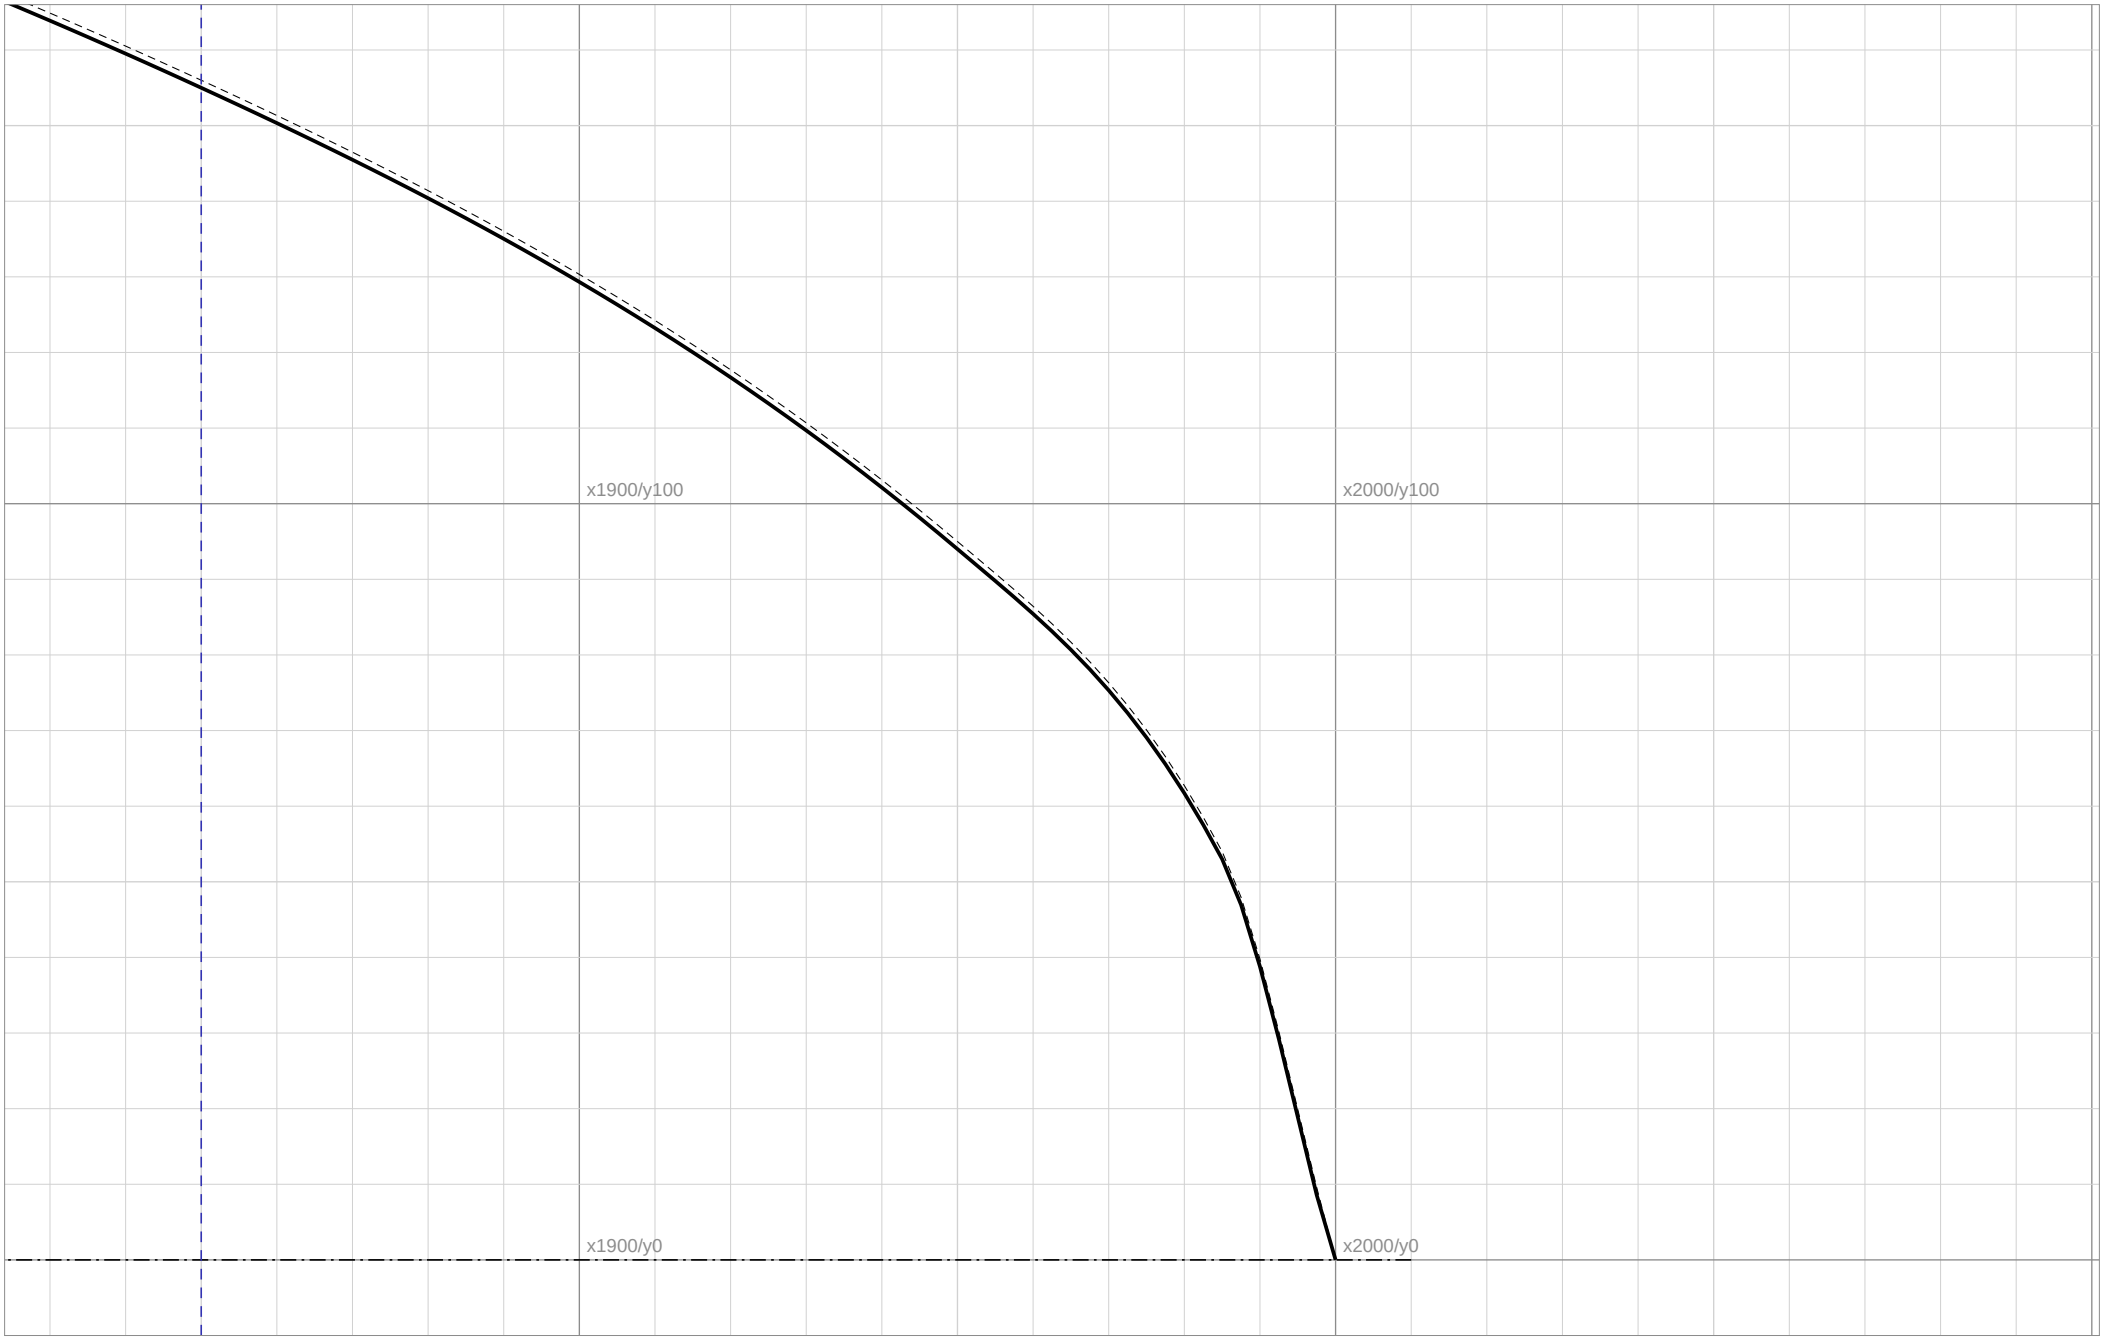

OUTLINE (half, stringer at y=0)

sheet row 1/2, col 8/8 (x 1824 to 2101 mm, y -10 to 166 mm)


100 mm scale check: print at 100% / Actual size, no 'fit to page'

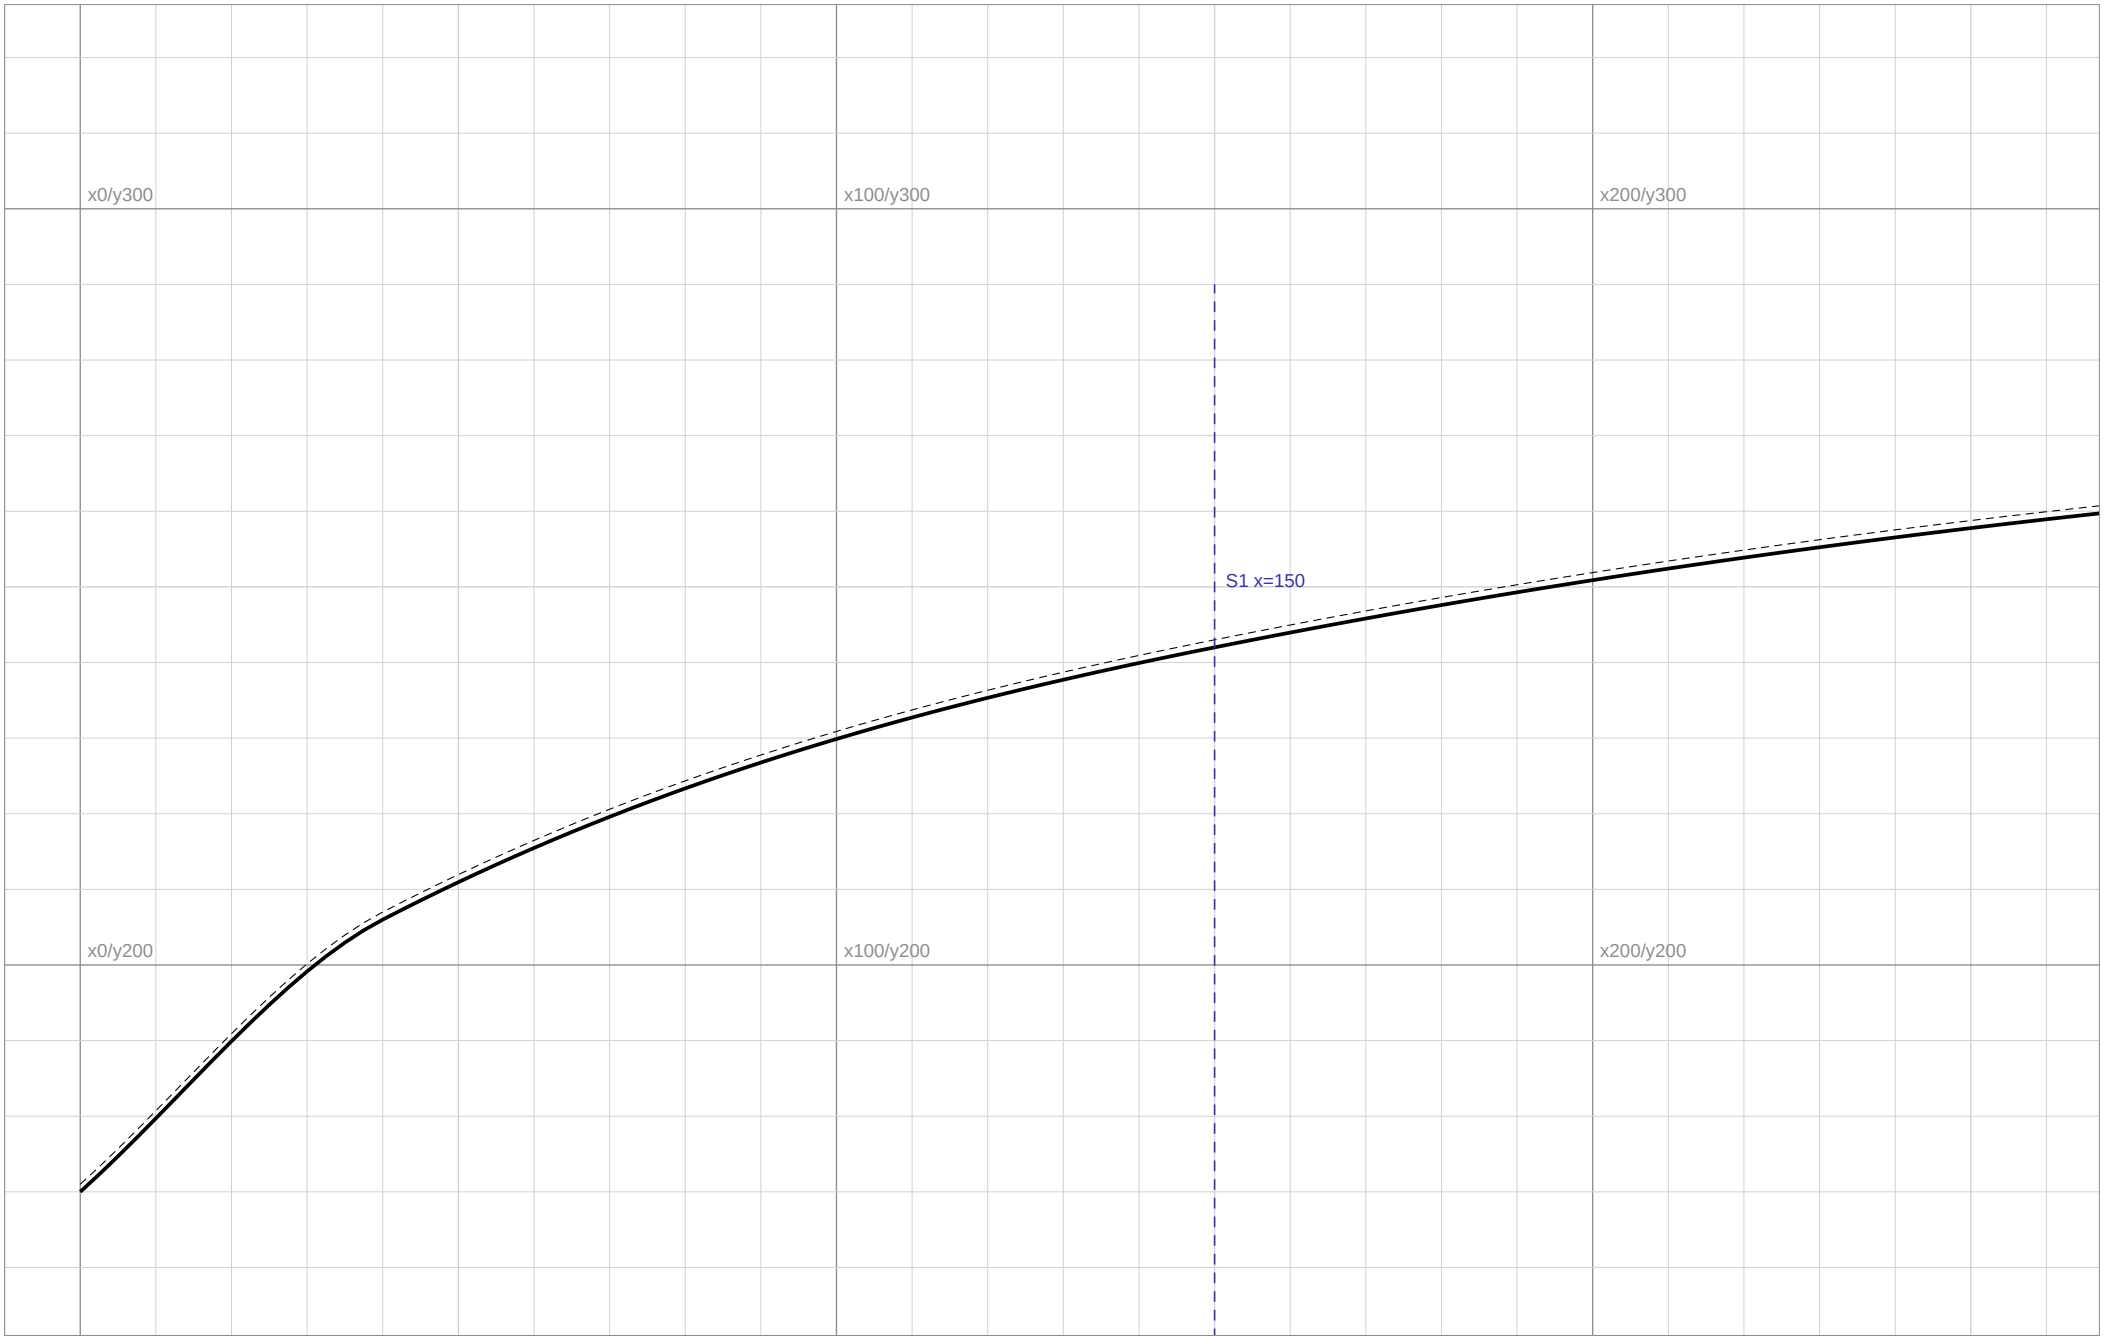

OUTLINE (half, stringer at y=0)

sheet row 2/2, col 1/8 (x -10 to 267 mm, y 151 to 327 mm)


100 mm scale check: print at 100% / Actual size, no 'fit to page'

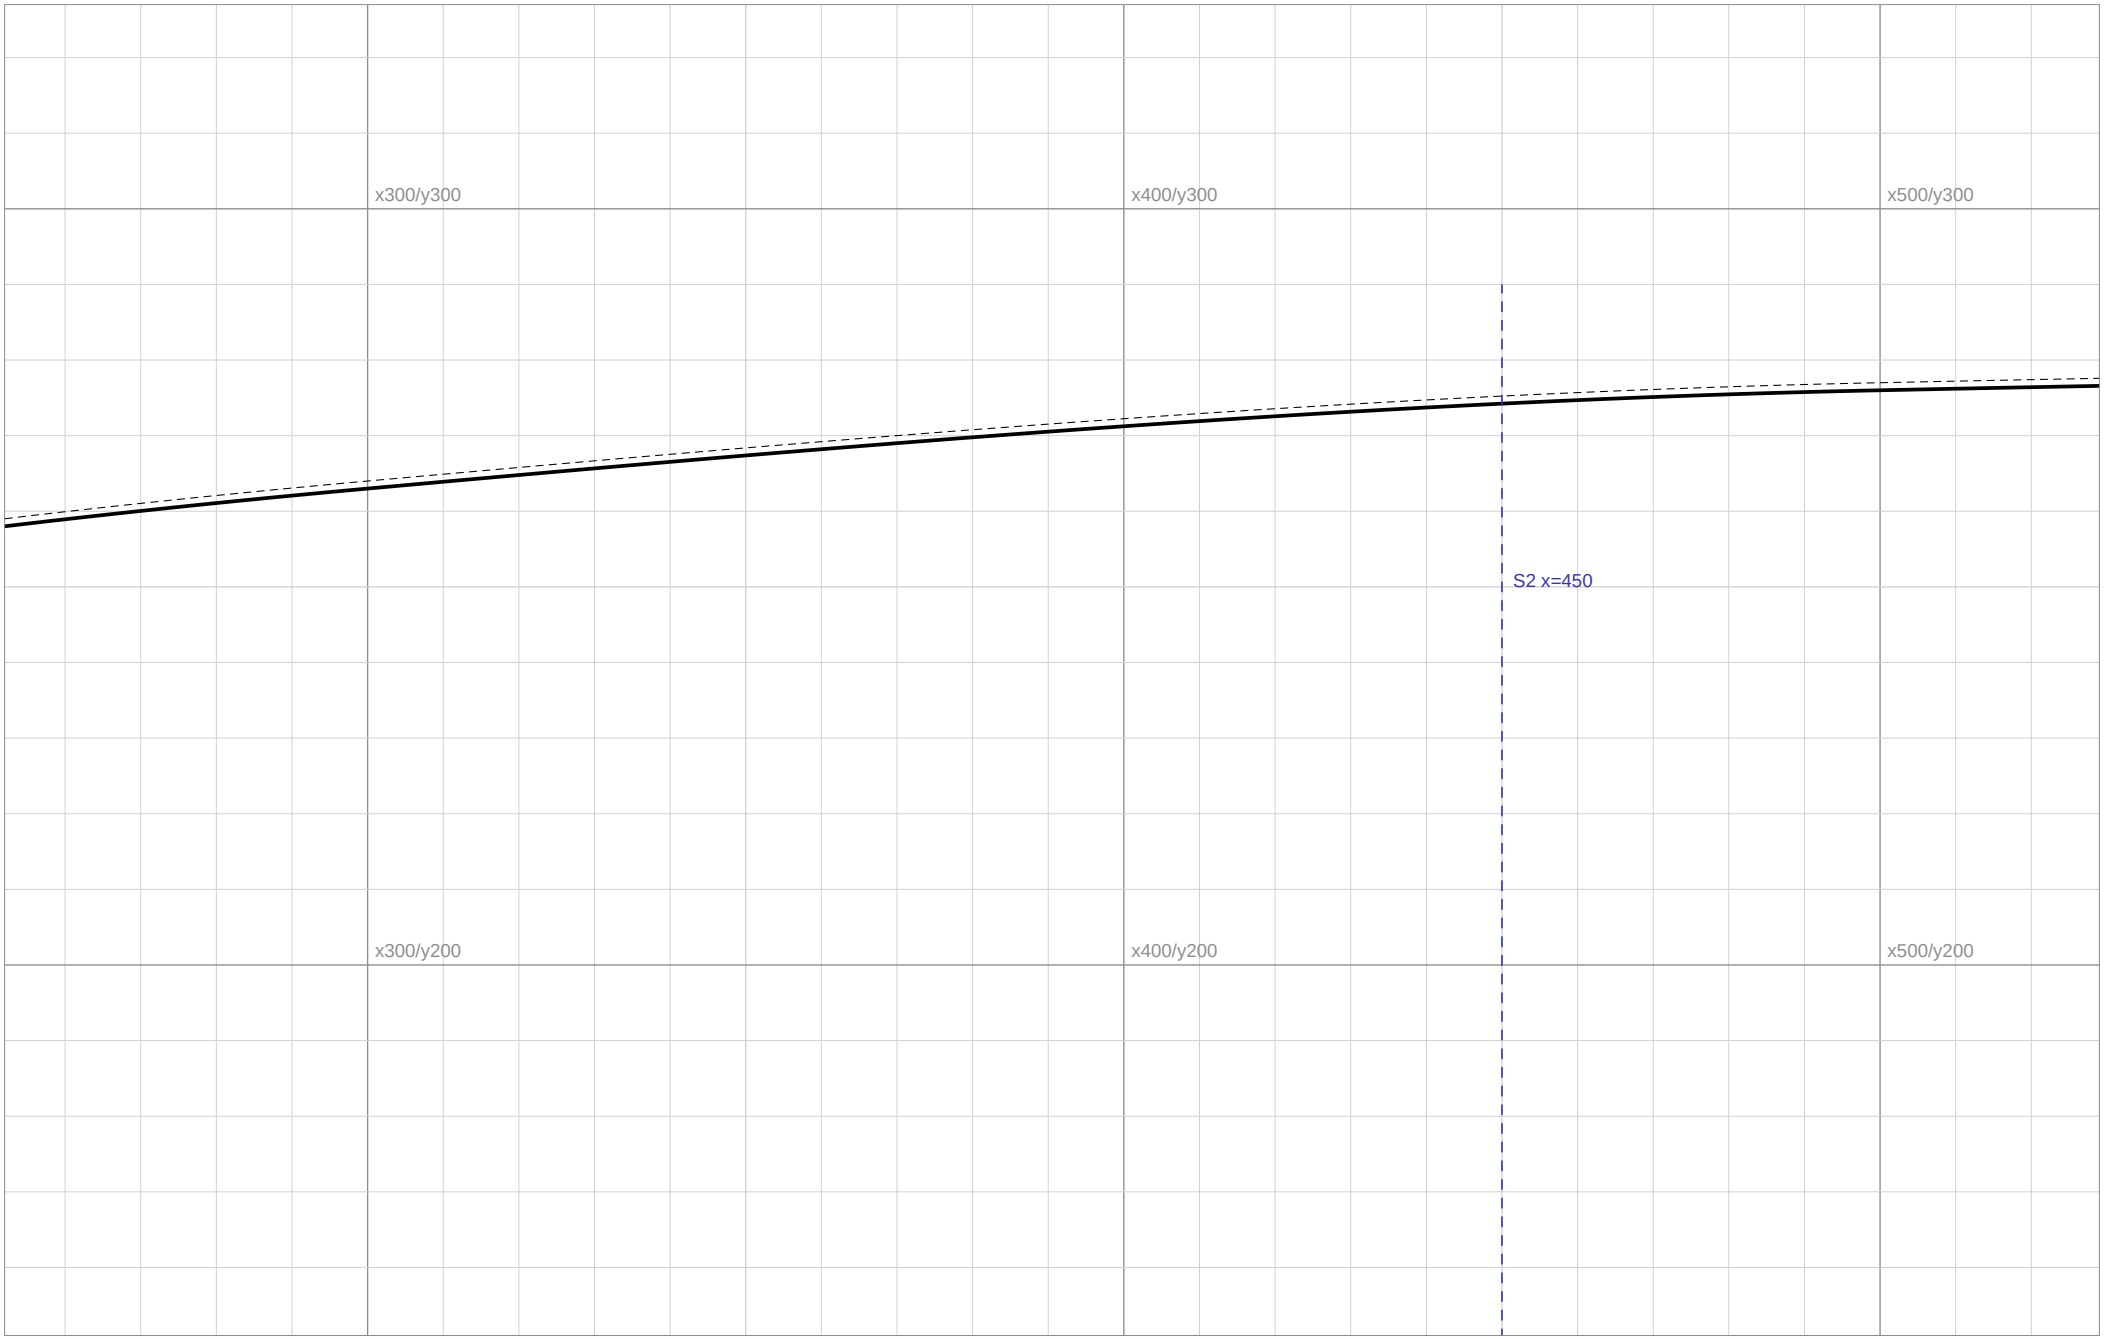

OUTLINE (half, stringer at y=0)

sheet row 2/2, col 2/8 (x 252 to 529 mm, y 151 to 327 mm)


100 mm scale check: print at 100% / Actual size, no 'fit to page'

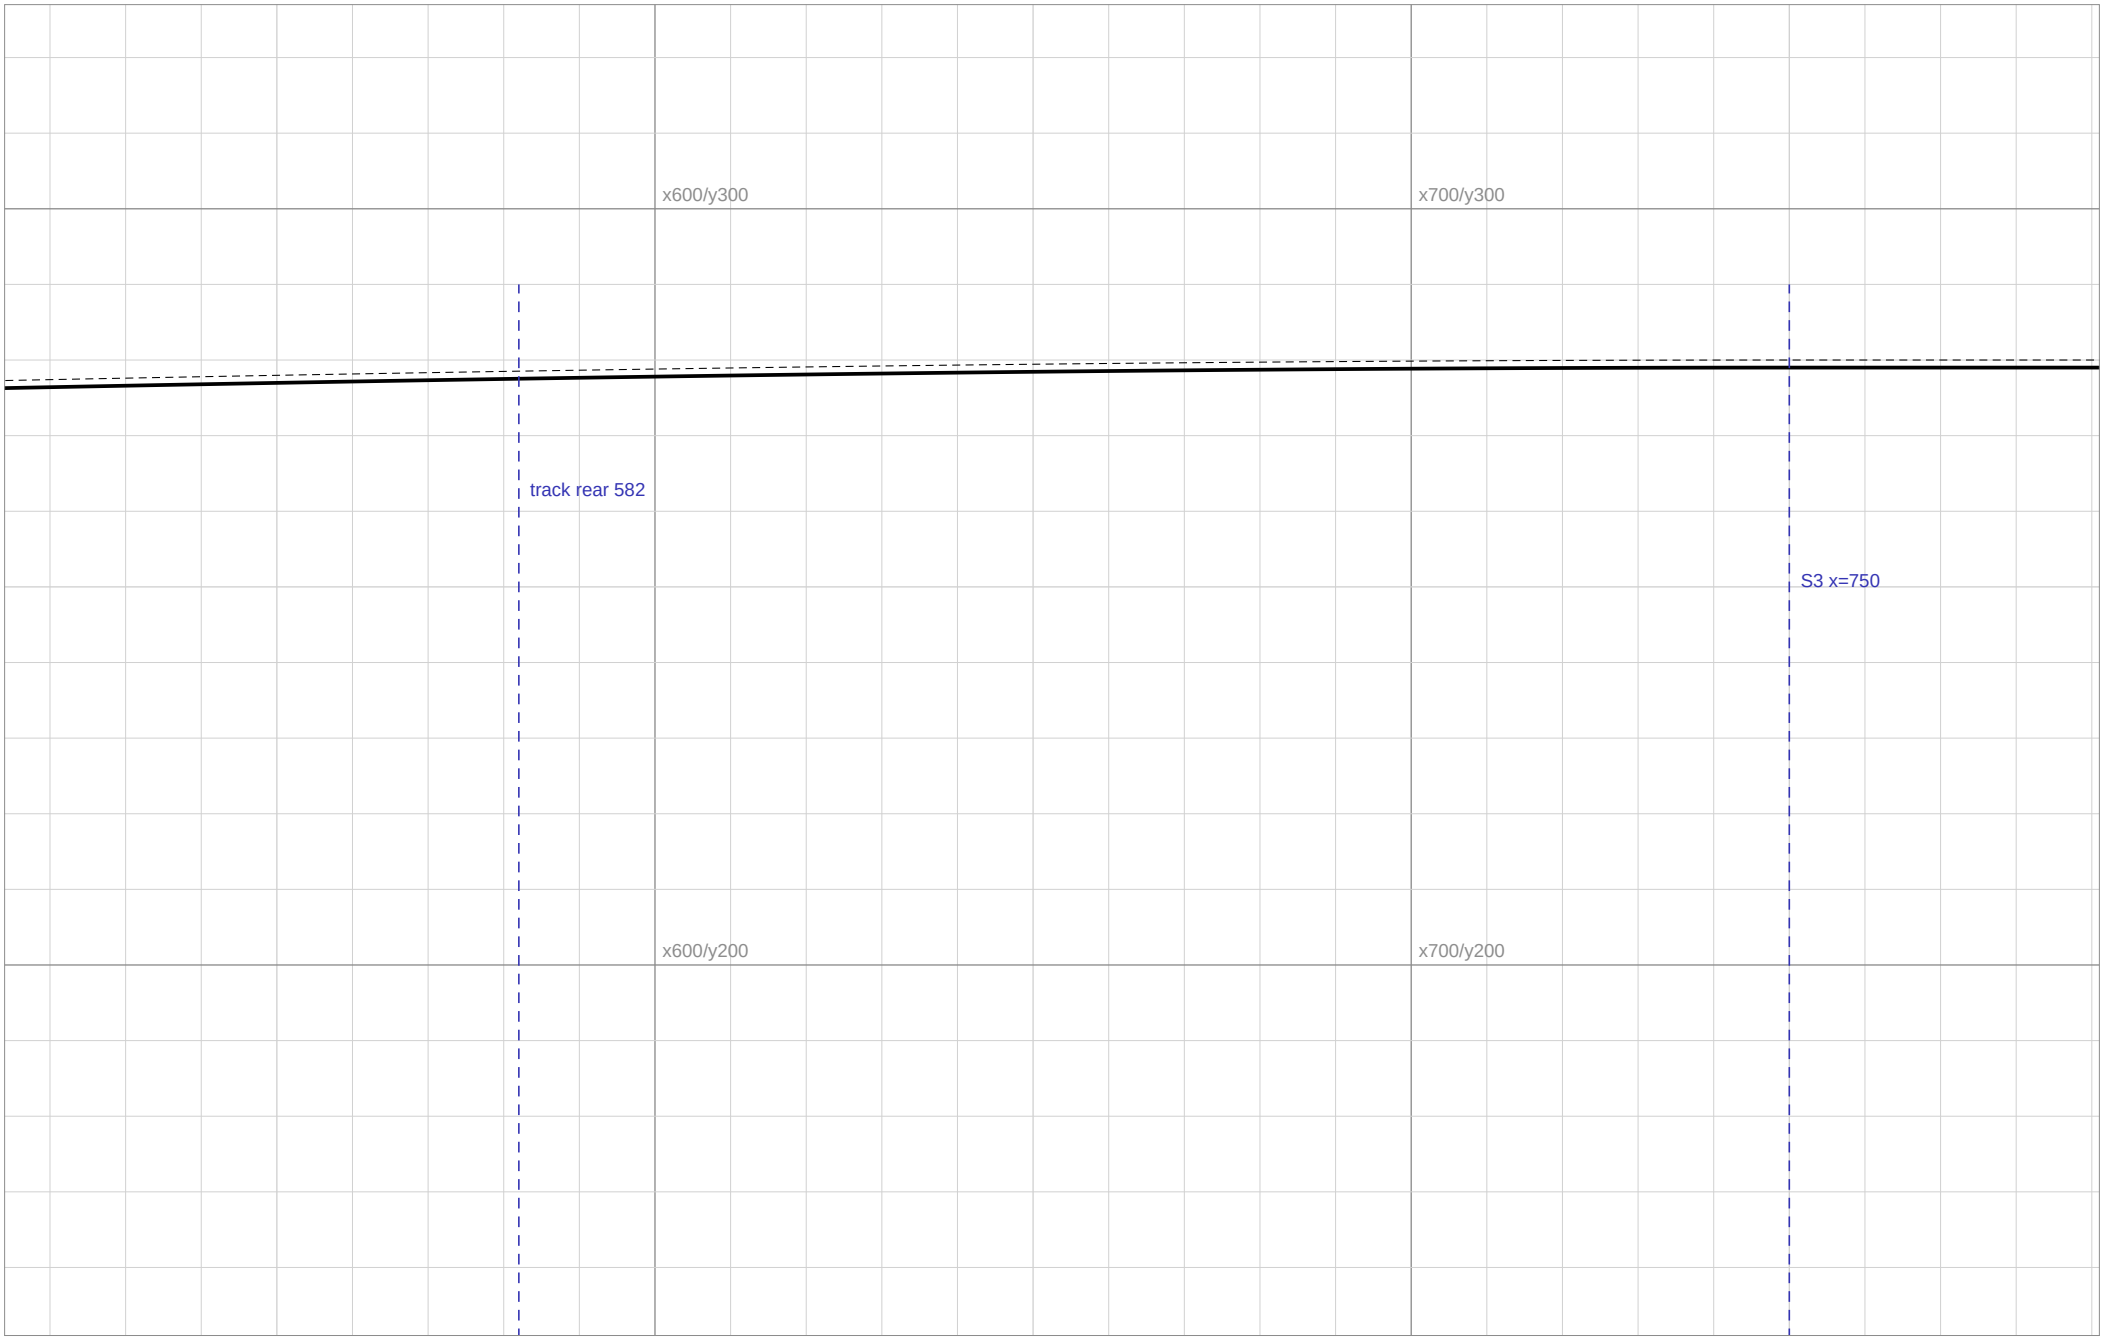

OUTLINE (half, stringer at y=0)

sheet row 2/2, col 3/8 (x 514 to 791 mm, y 151 to 327 mm)


100 mm scale check: print at 100% / Actual size, no 'fit to page'

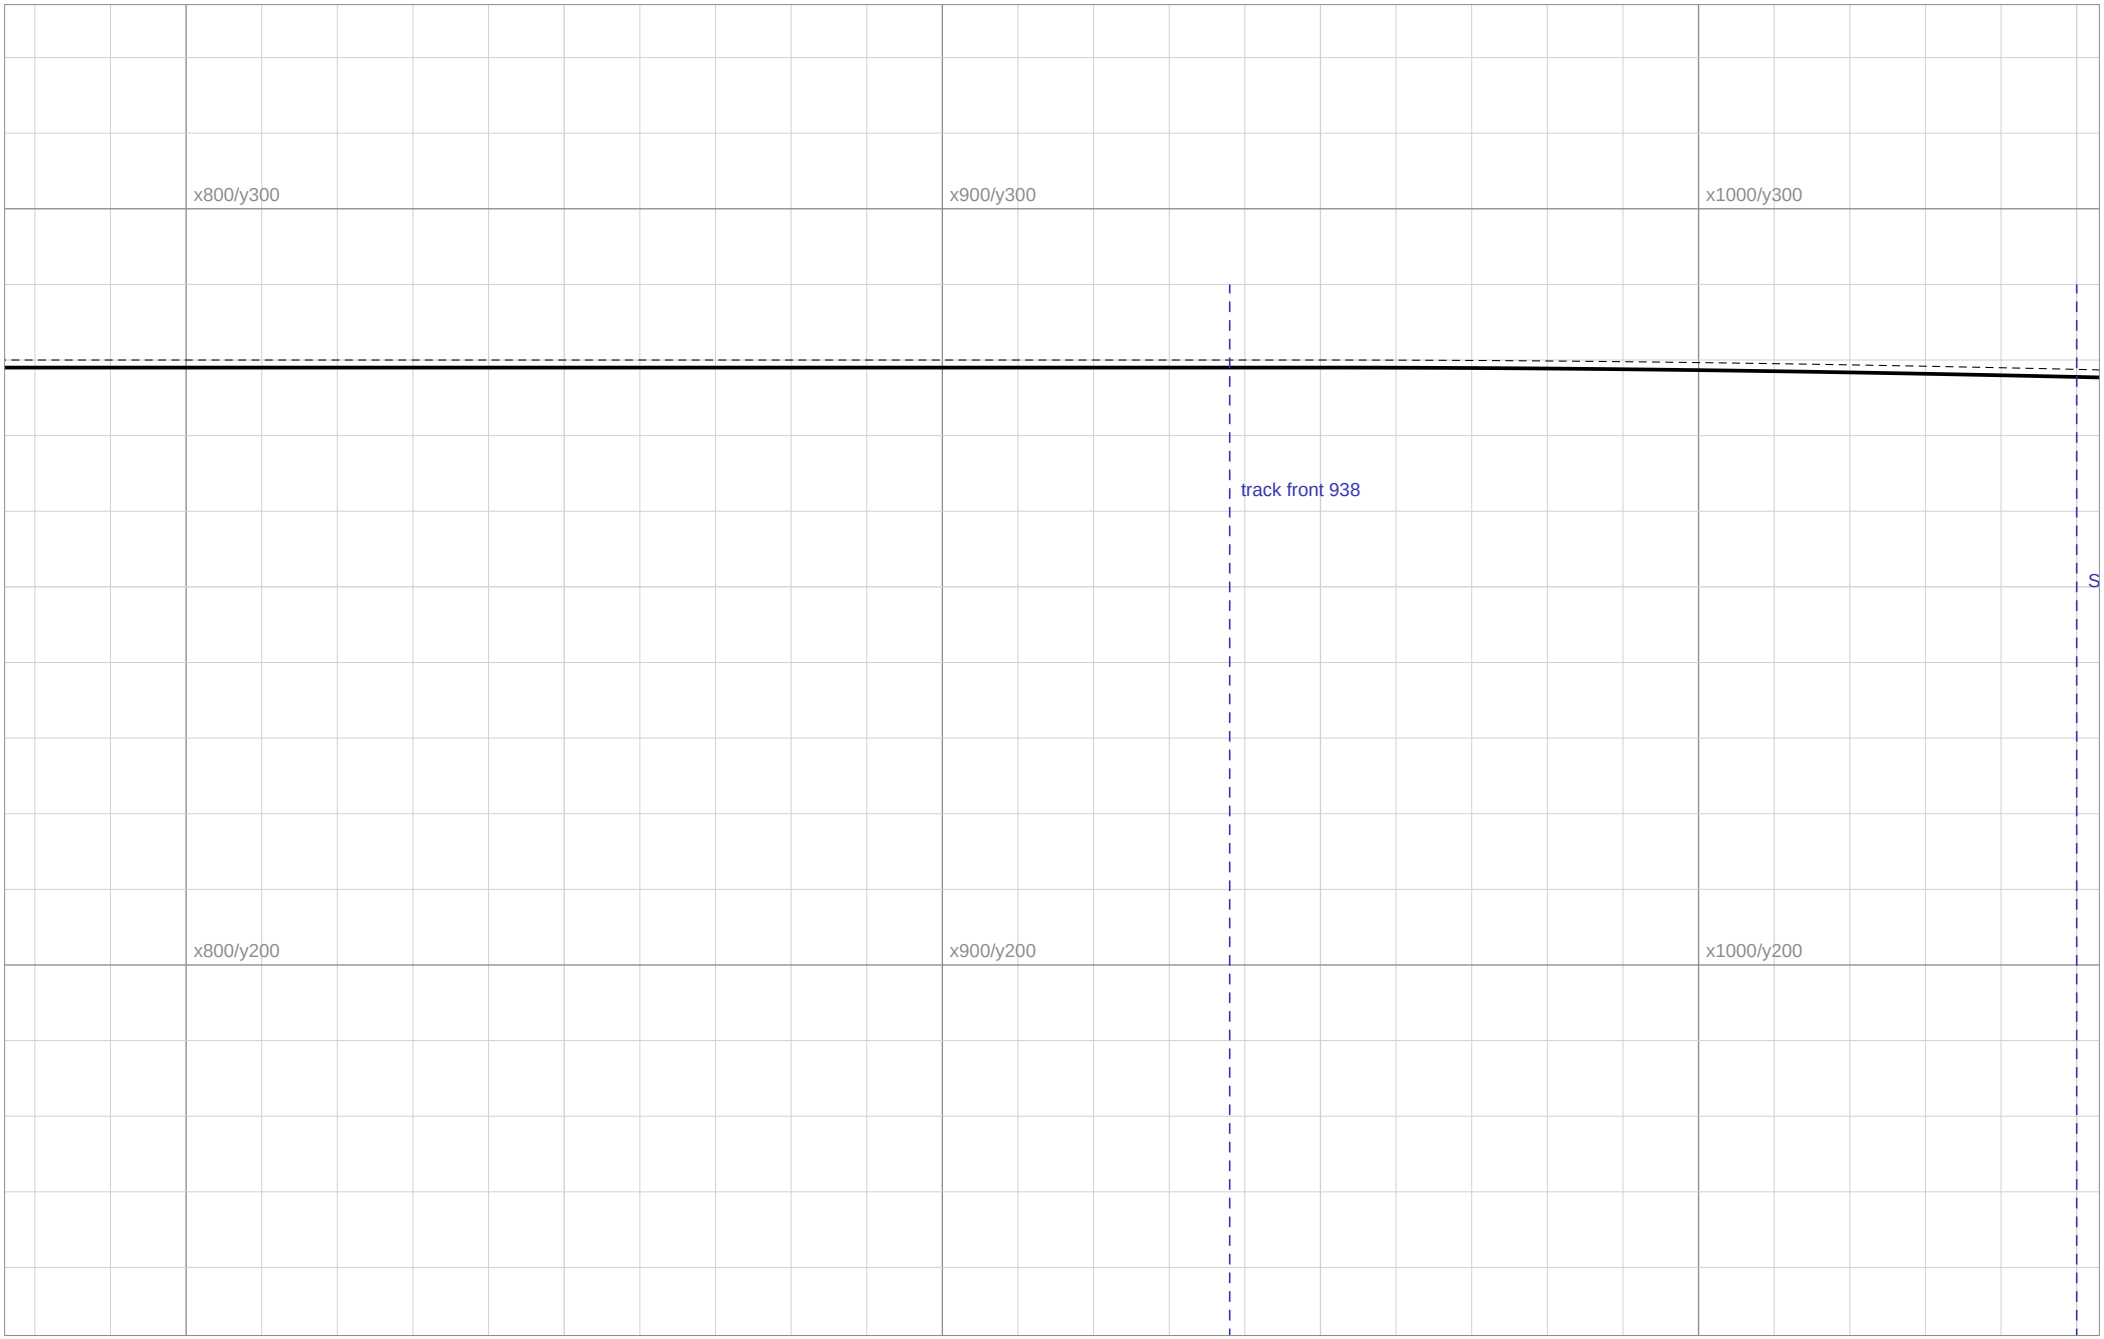

OUTLINE (half, stringer at y=0)

sheet row 2/2, col 4/8 (x 776 to 1053 mm, y 151 to 327 mm)


100 mm scale check: print at 100% / Actual size, no 'fit to page'

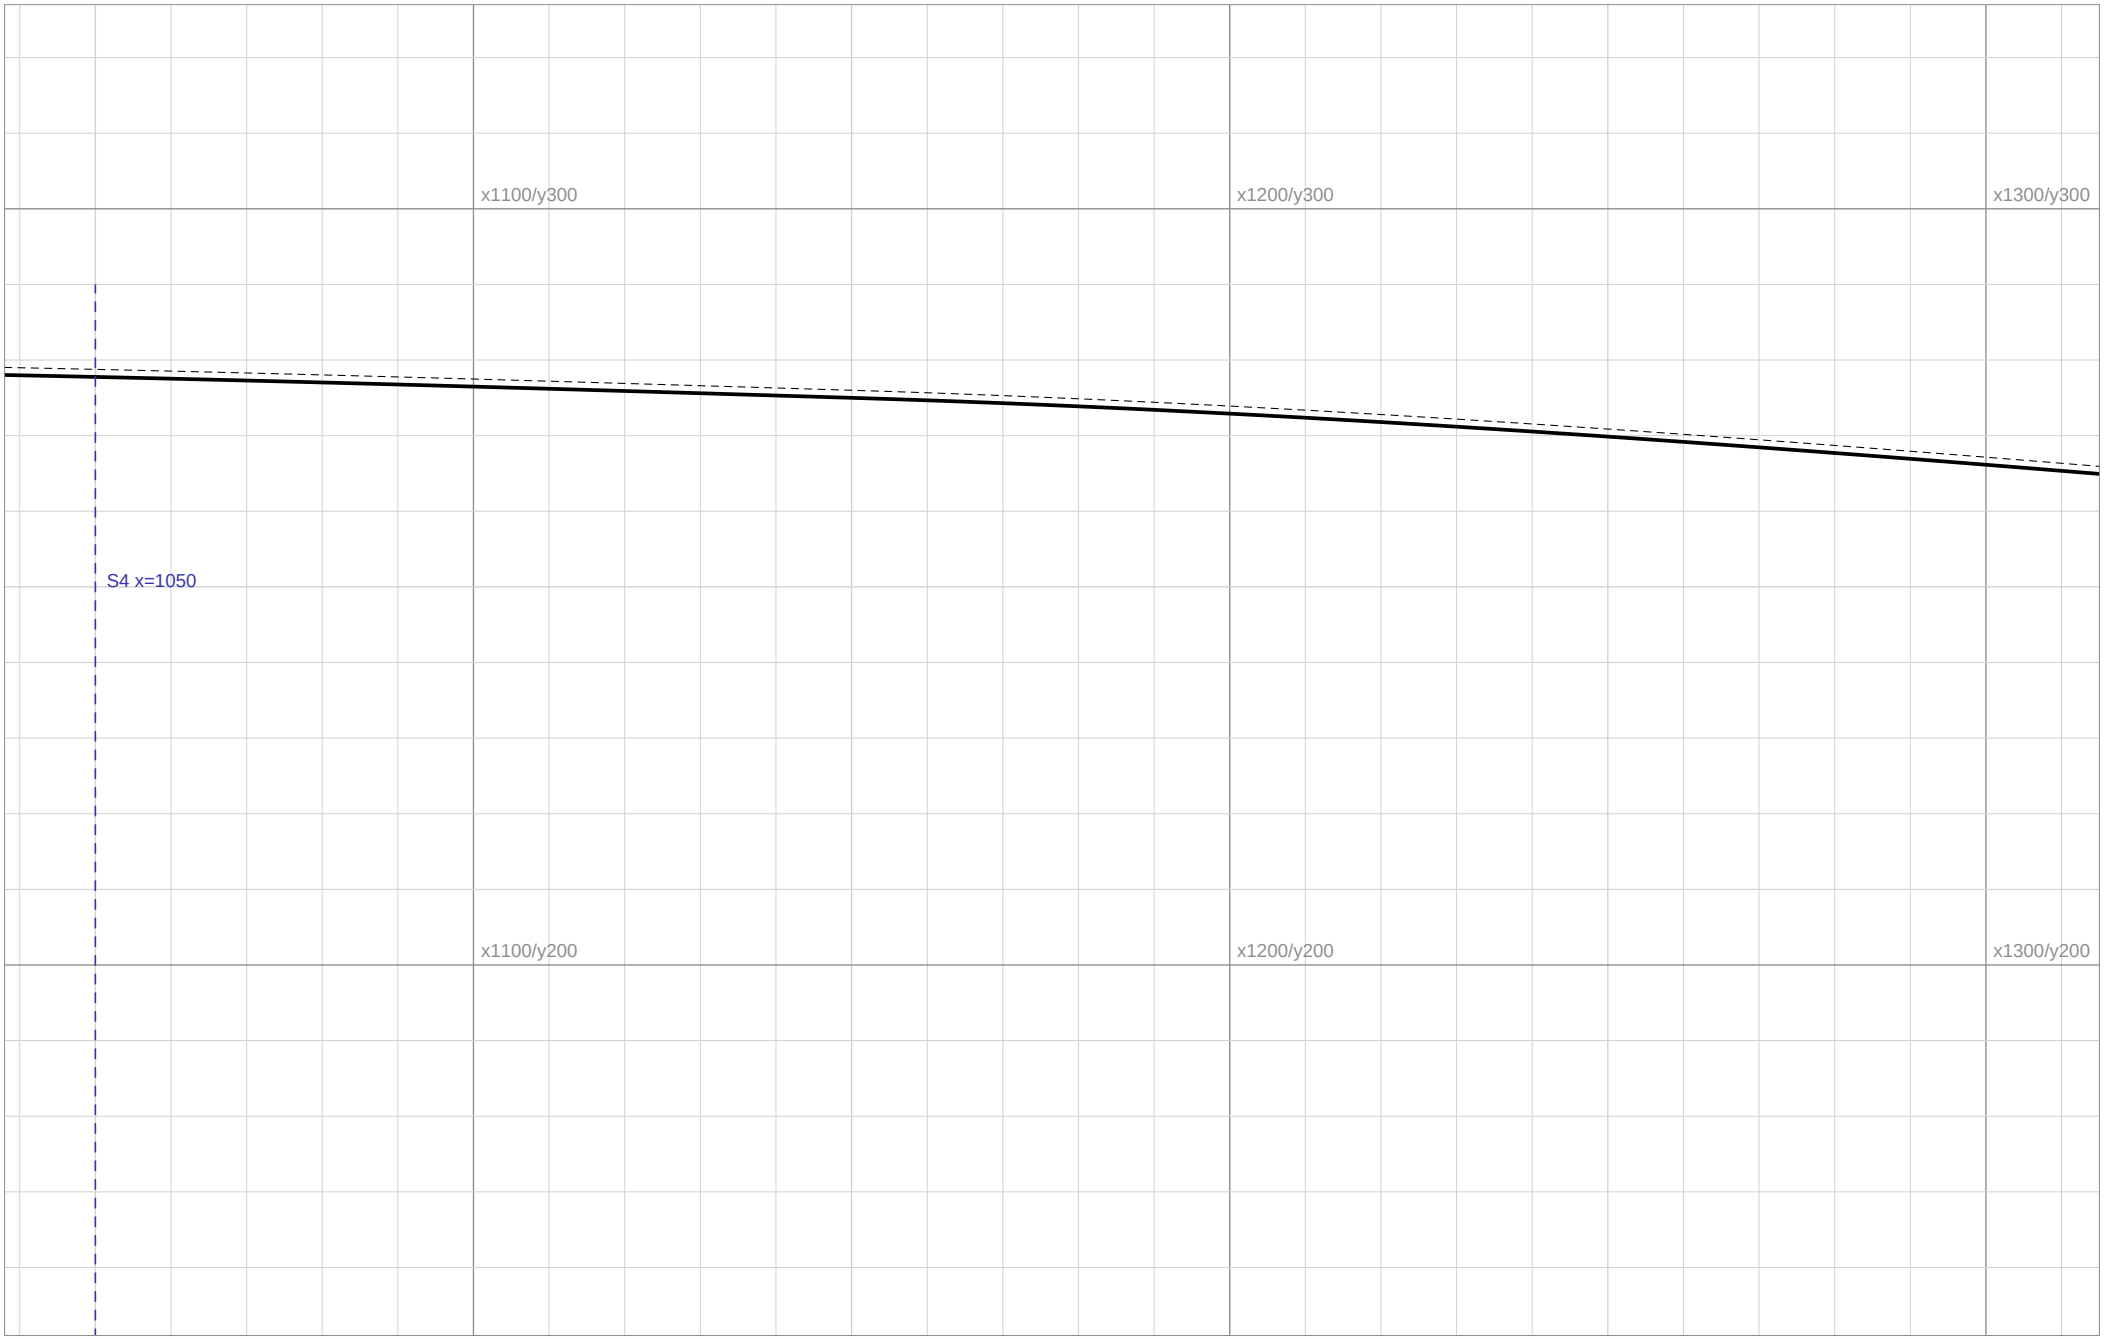

OUTLINE (half, stringer at y=0)

sheet row 2/2, col 5/8 (x 1038 to 1315 mm, y 151 to 327 mm)


100 mm scale check: print at 100% / Actual size, no 'fit to page'

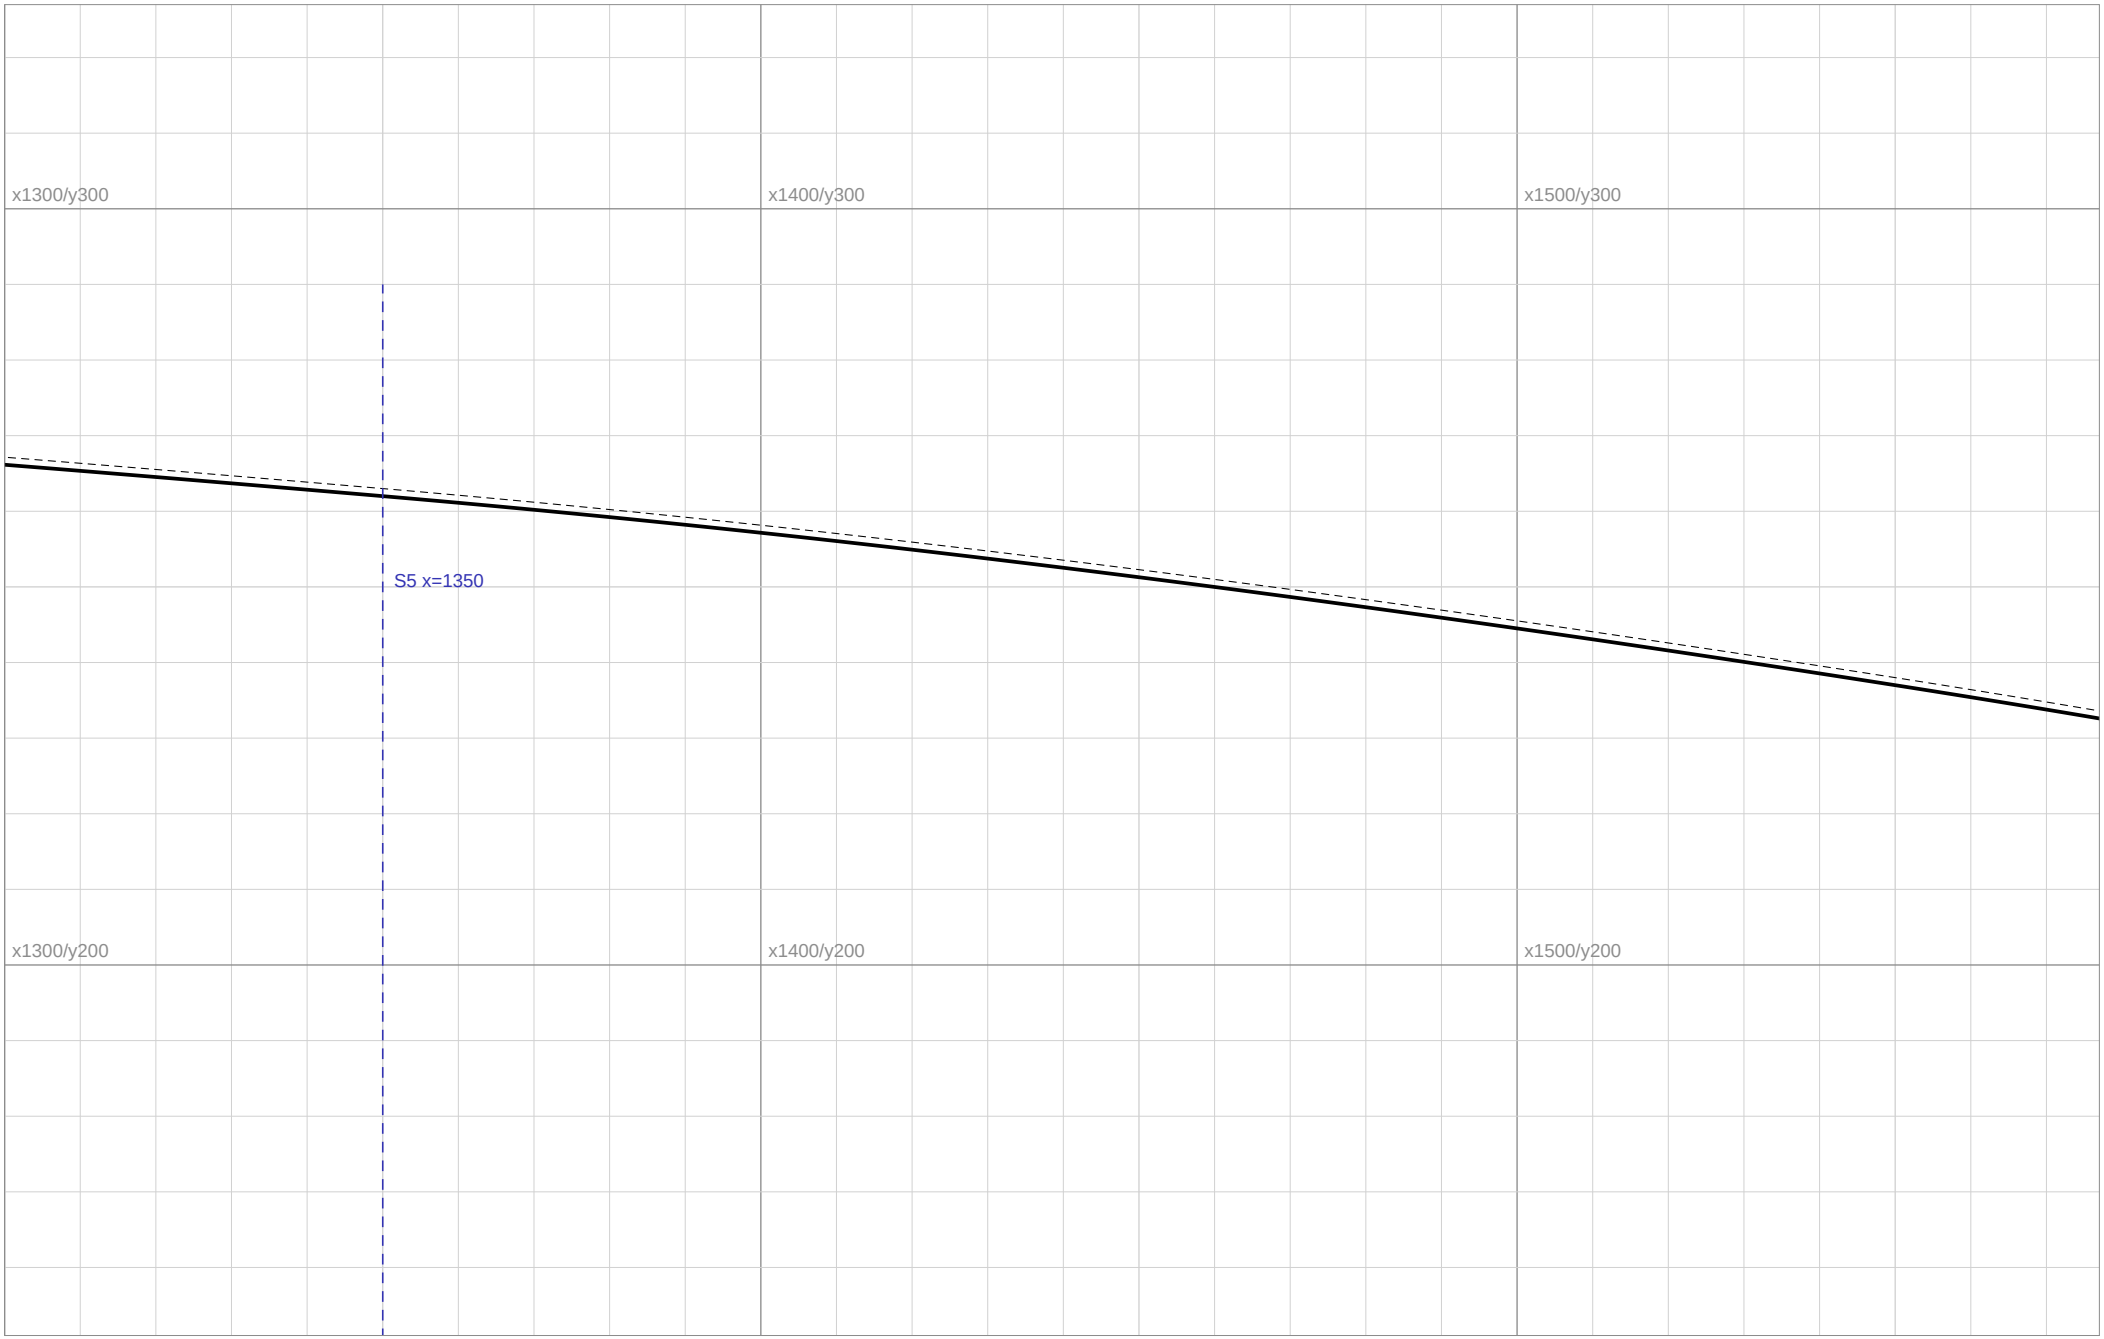

OUTLINE (half, stringer at y=0)

sheet row 2/2, col 6/8 (x 1300 to 1577 mm, y 151 to 327 mm)


100 mm scale check: print at 100% / Actual size, no 'fit to page'

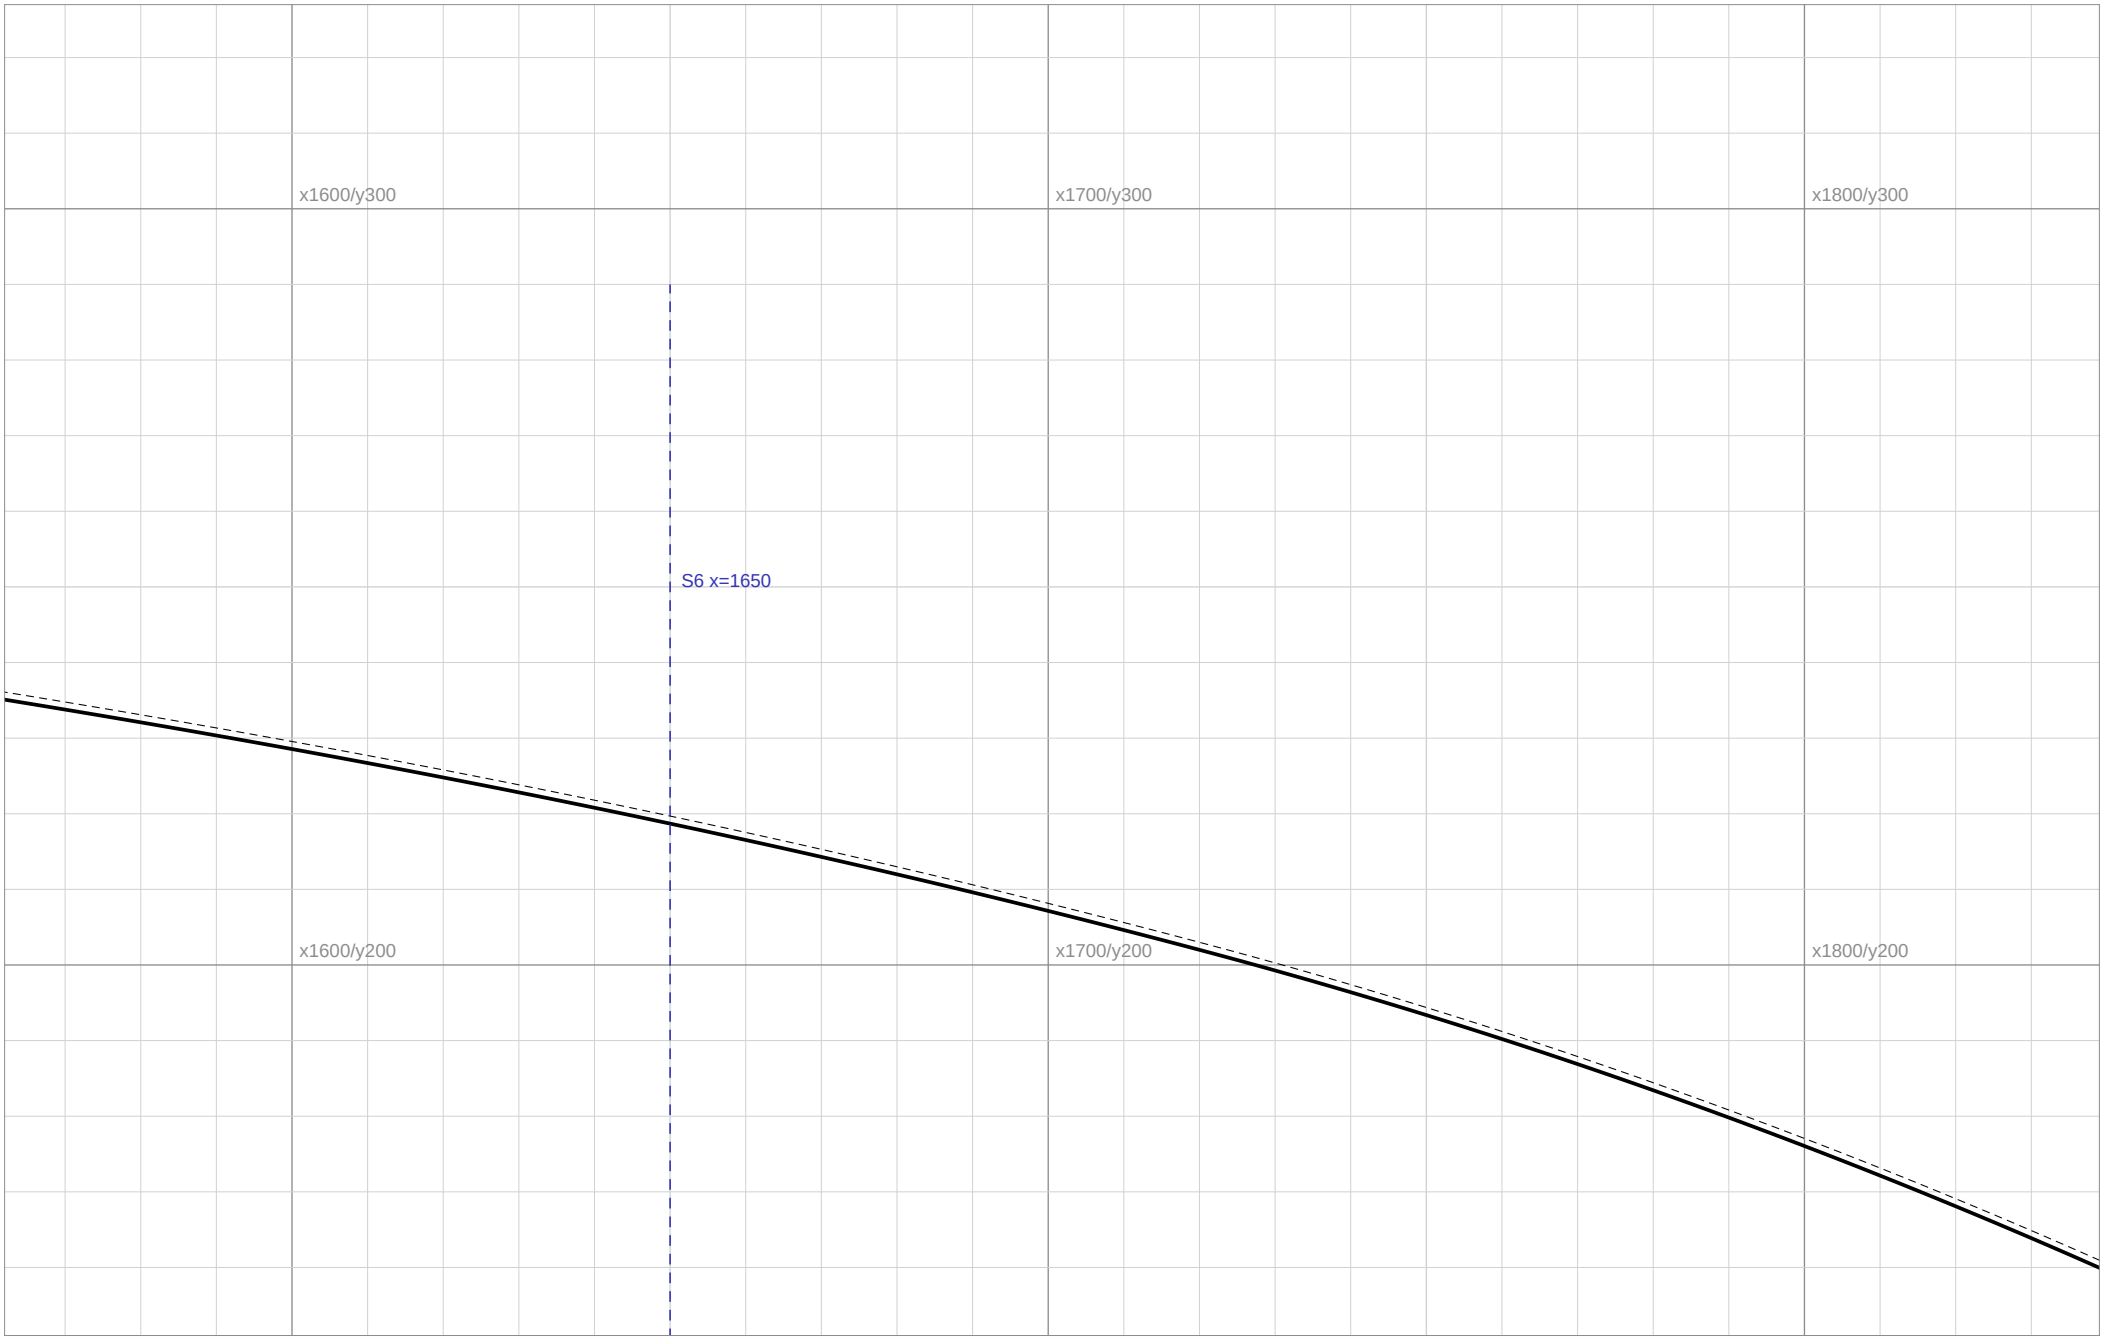

OUTLINE (half, stringer at y=0)

sheet row 2/2, col 7/8 (x 1562 to 1839 mm, y 151 to 327 mm)


100 mm scale check: print at 100% / Actual size, no 'fit to page'

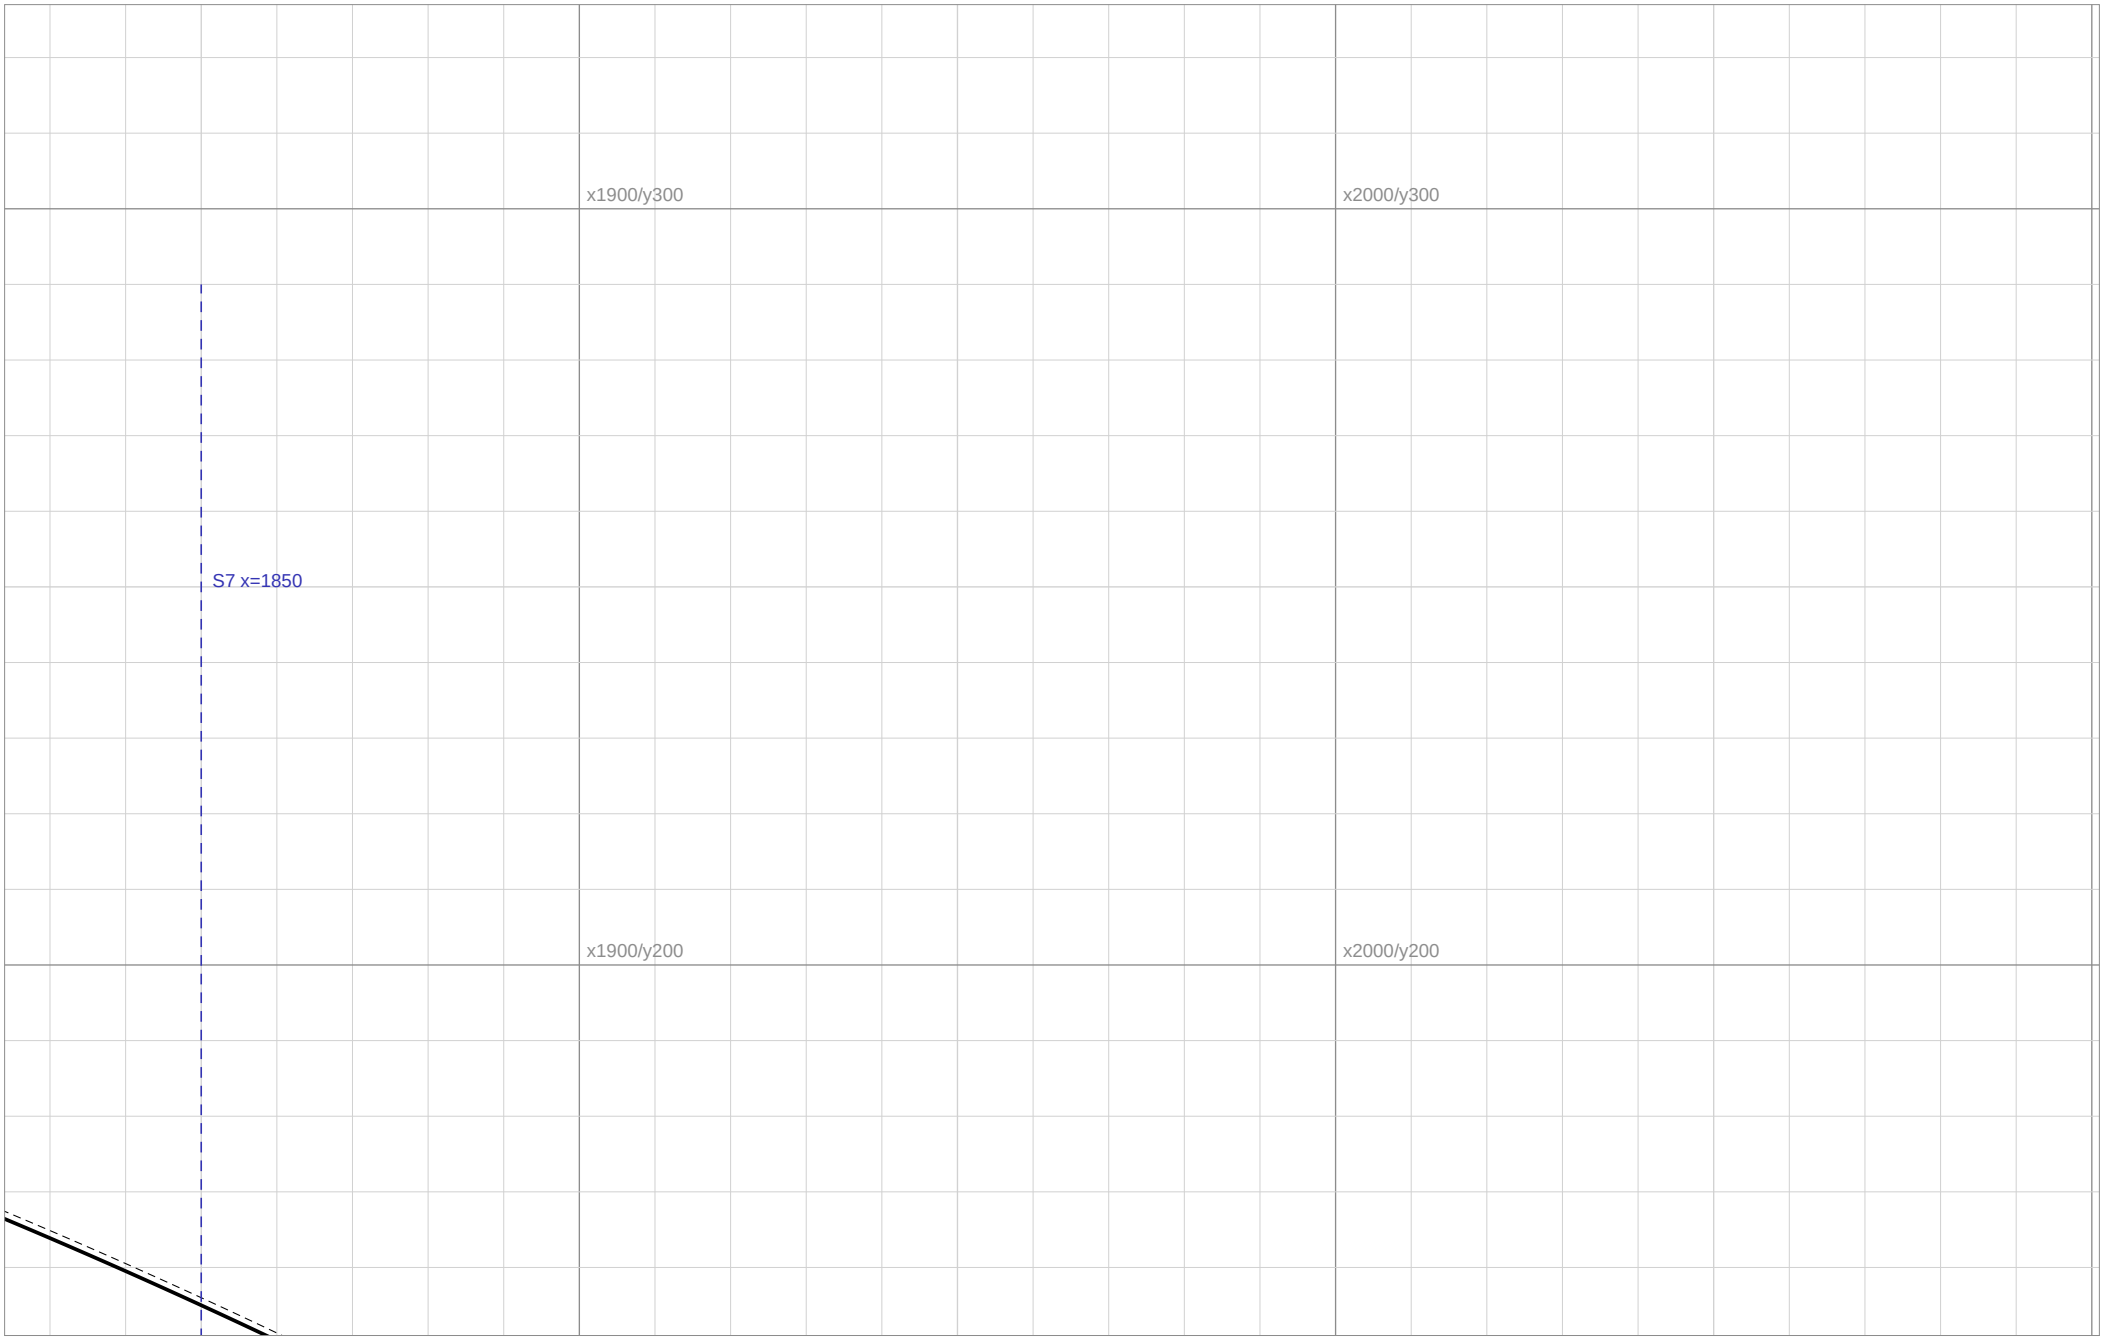

OUTLINE (half, stringer at y=0)

sheet row 2/2, col 8/8 (x 1824 to 2101 mm, y 151 to 327 mm)

100 mm scale check: print at 100% / Actual size, no 'fit to page'

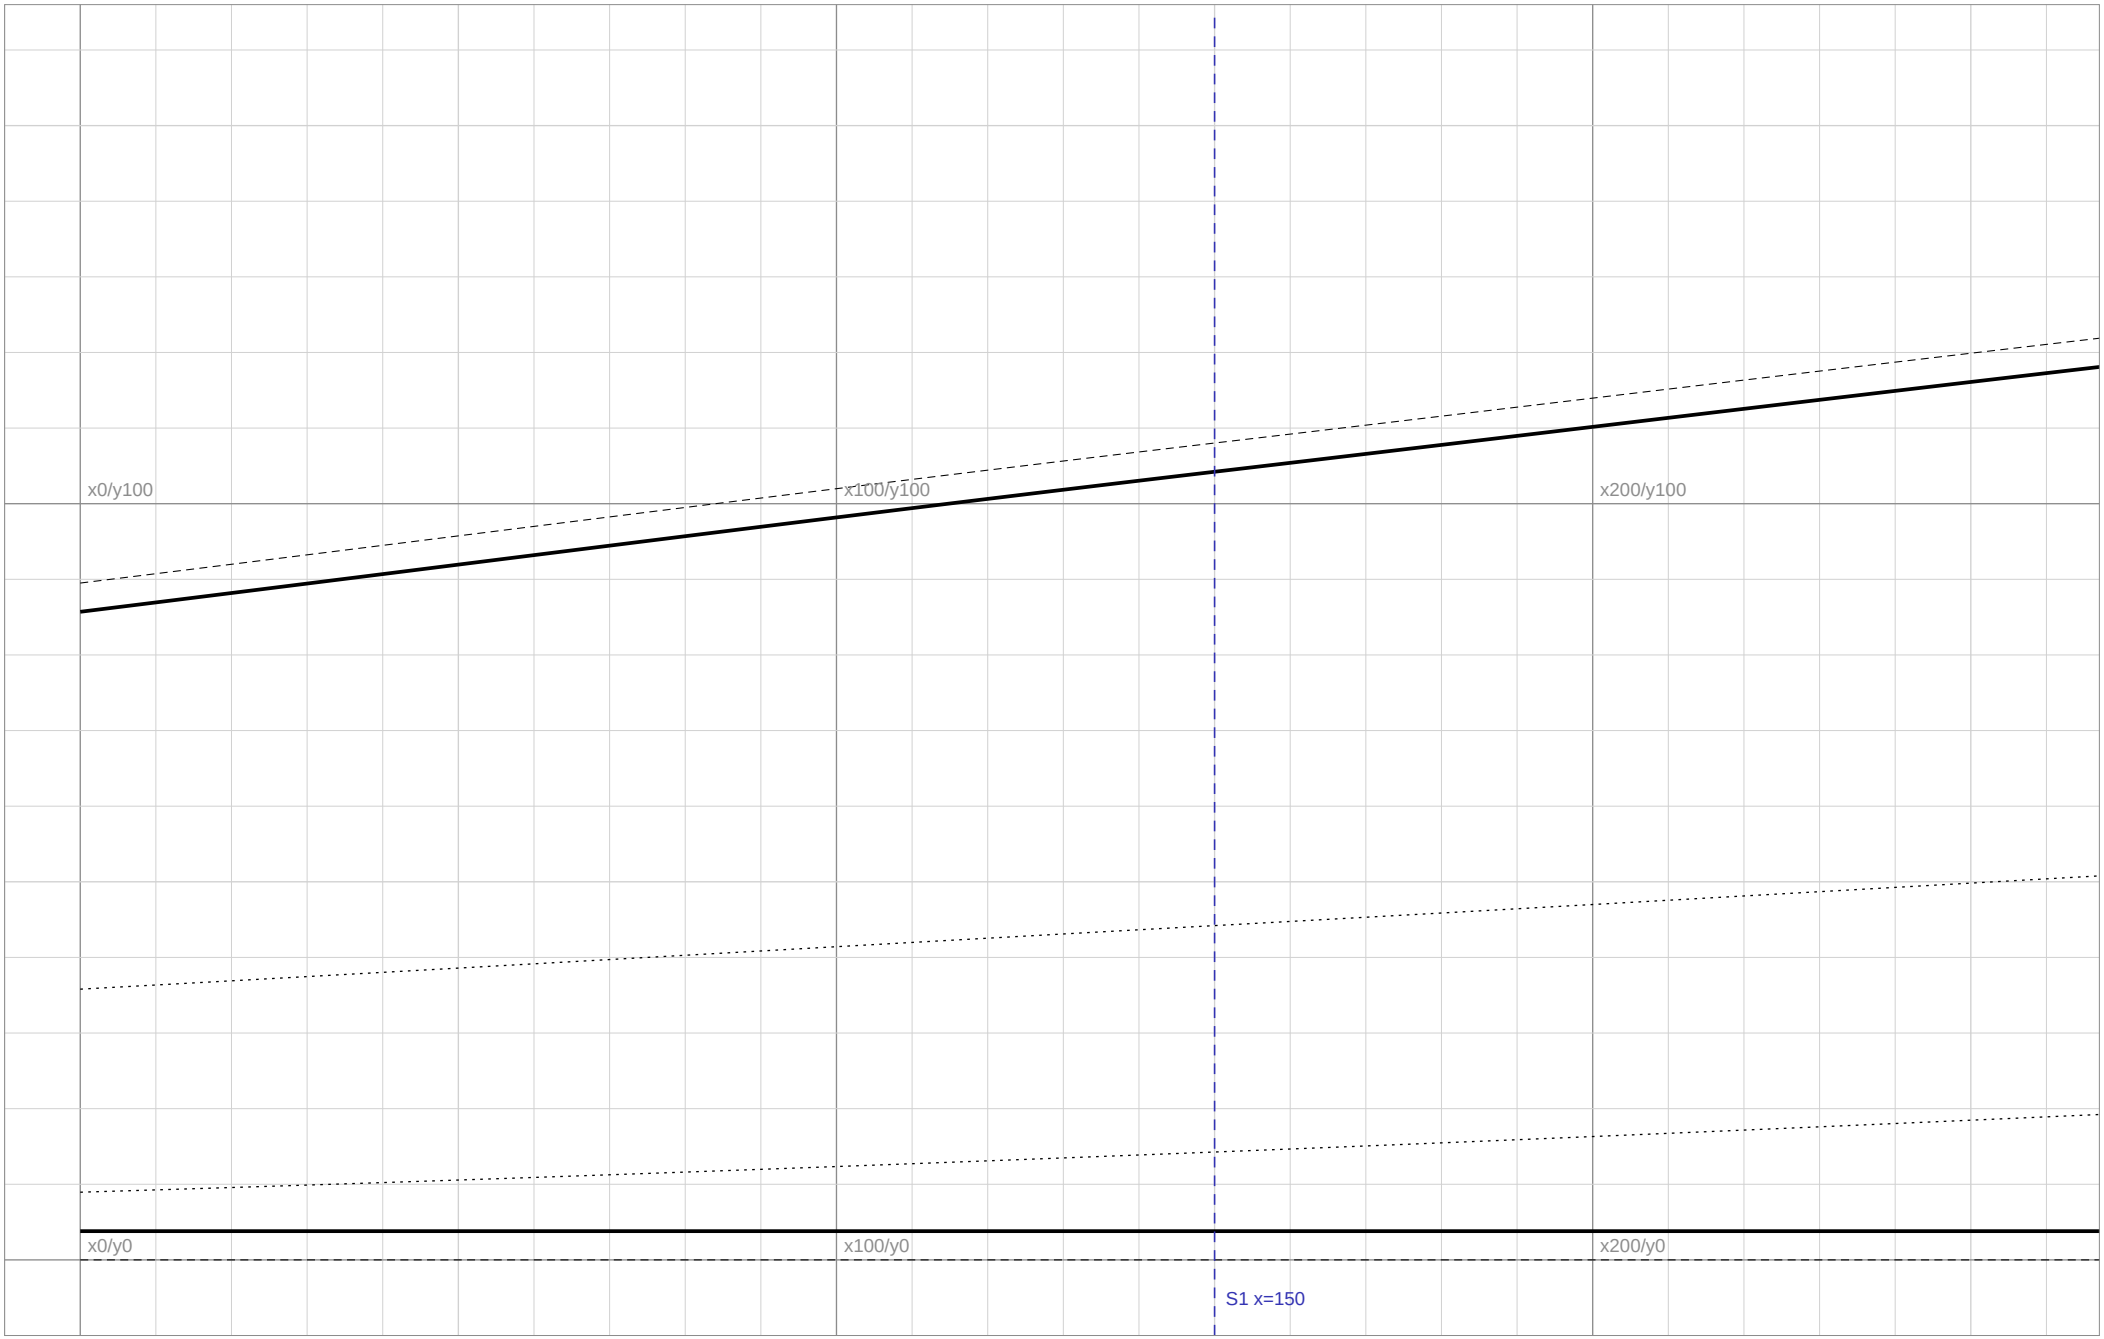

ROCKER / PROFILE at stringer

sheet row 1/1, col 1/8 (x -10 to 267 mm, y -10 to 166 mm)


100 mm scale check: print at 100% / Actual size, no 'fit to page'



ROCKER / PROFILE at stringer

sheet row 1/1, col 2/8 (x 252 to 529 mm, y -10 to 166 mm)


100 mm scale check: print at 100% / Actual size, no 'fit to page'

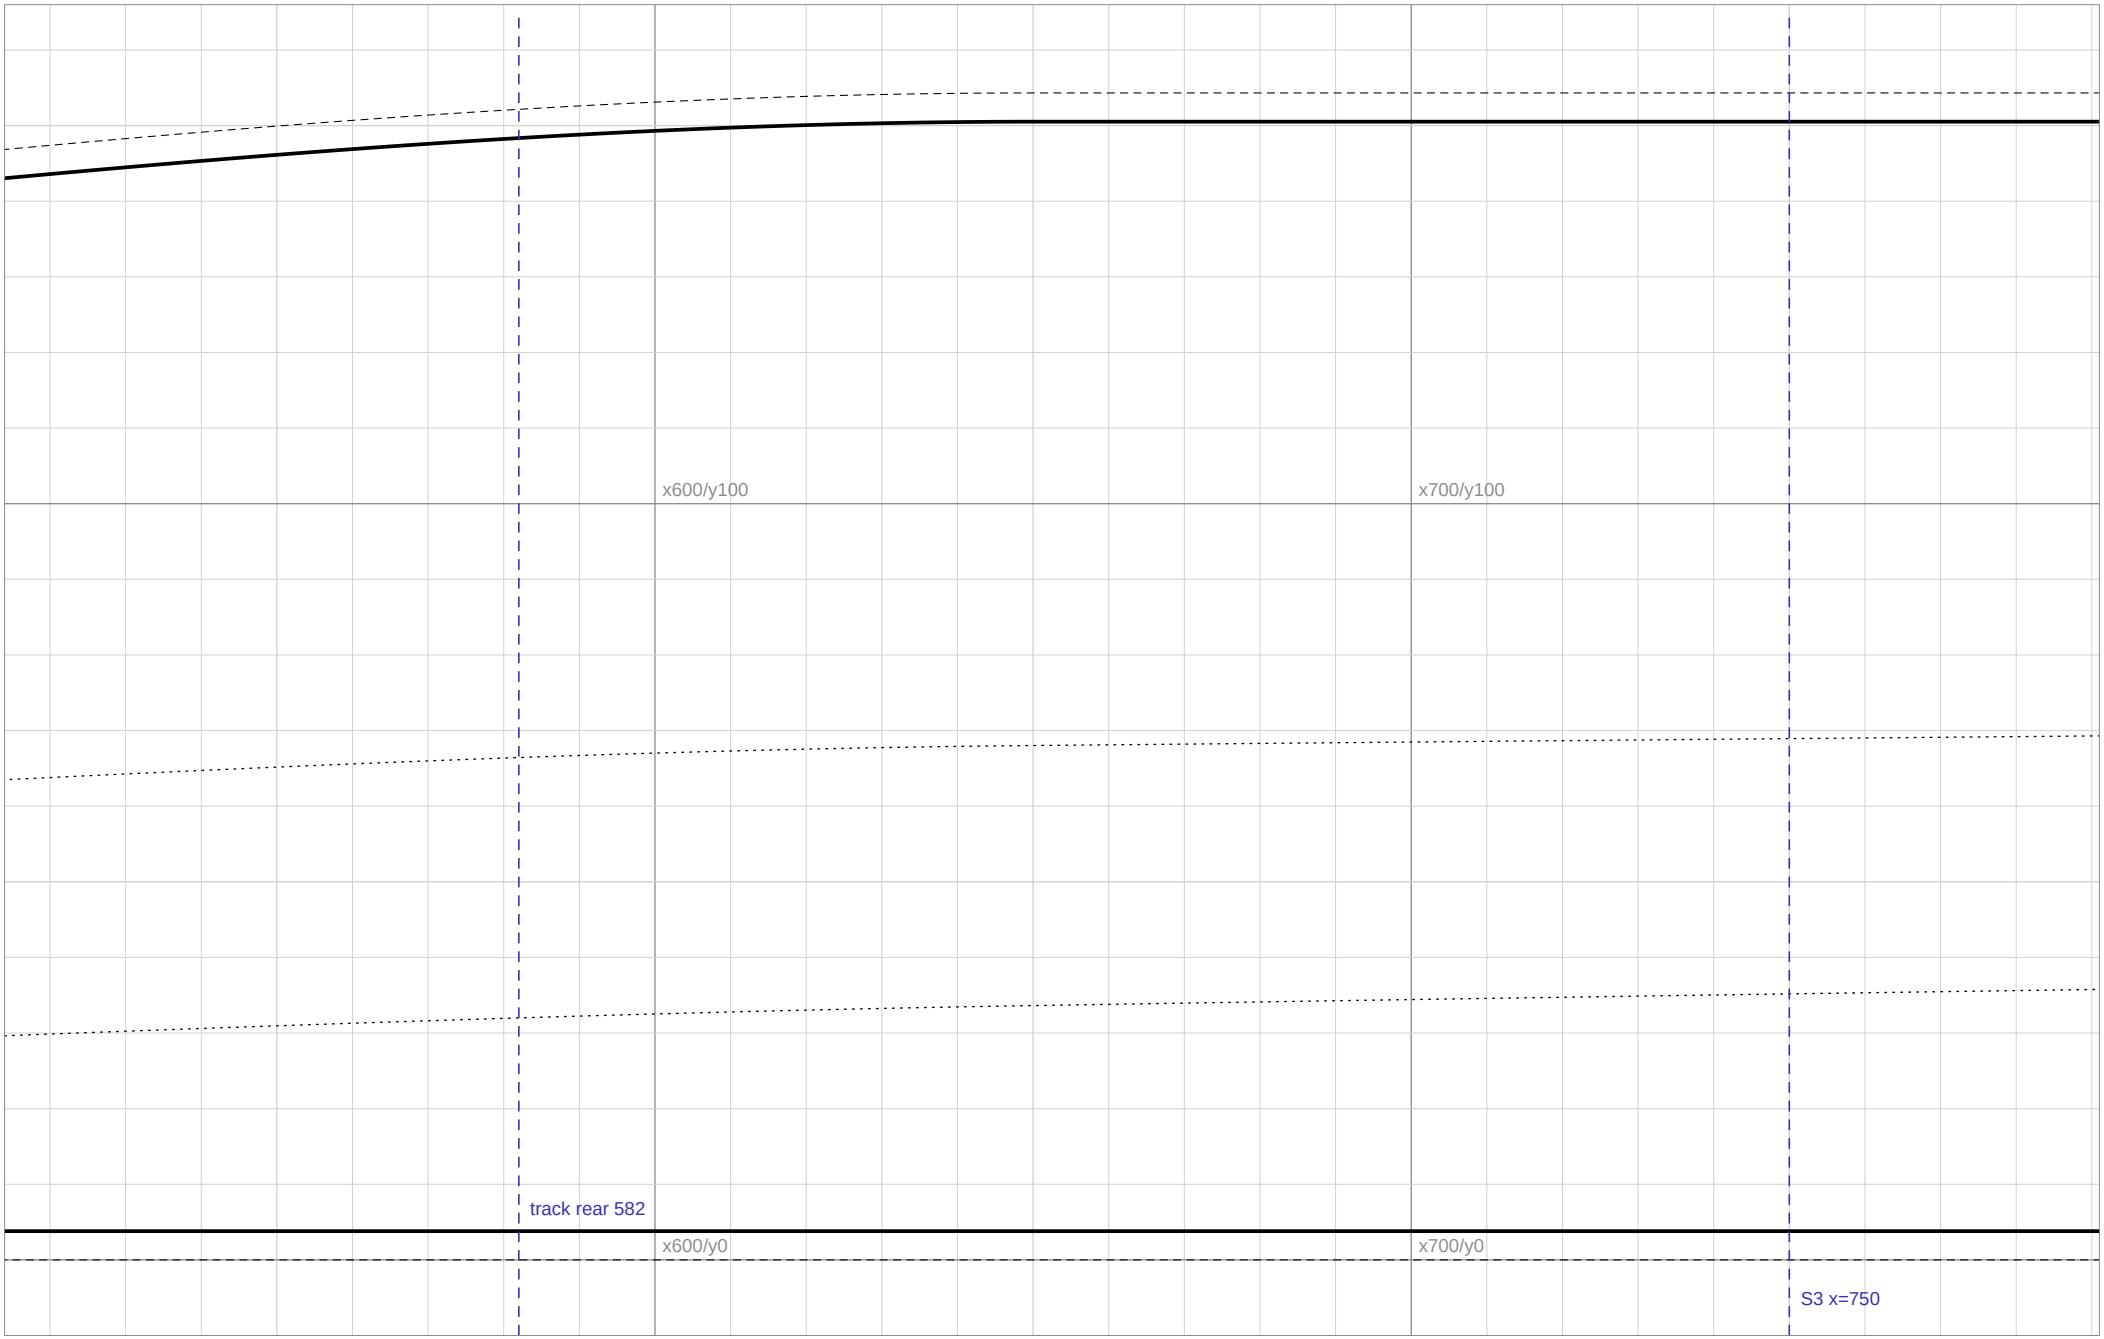

ROCKER / PROFILE at stringer

sheet row 1/1, col 3/8 (x 514 to 791 mm, y -10 to 166 mm)


100 mm scale check: print at 100% / Actual size, no 'fit to page'

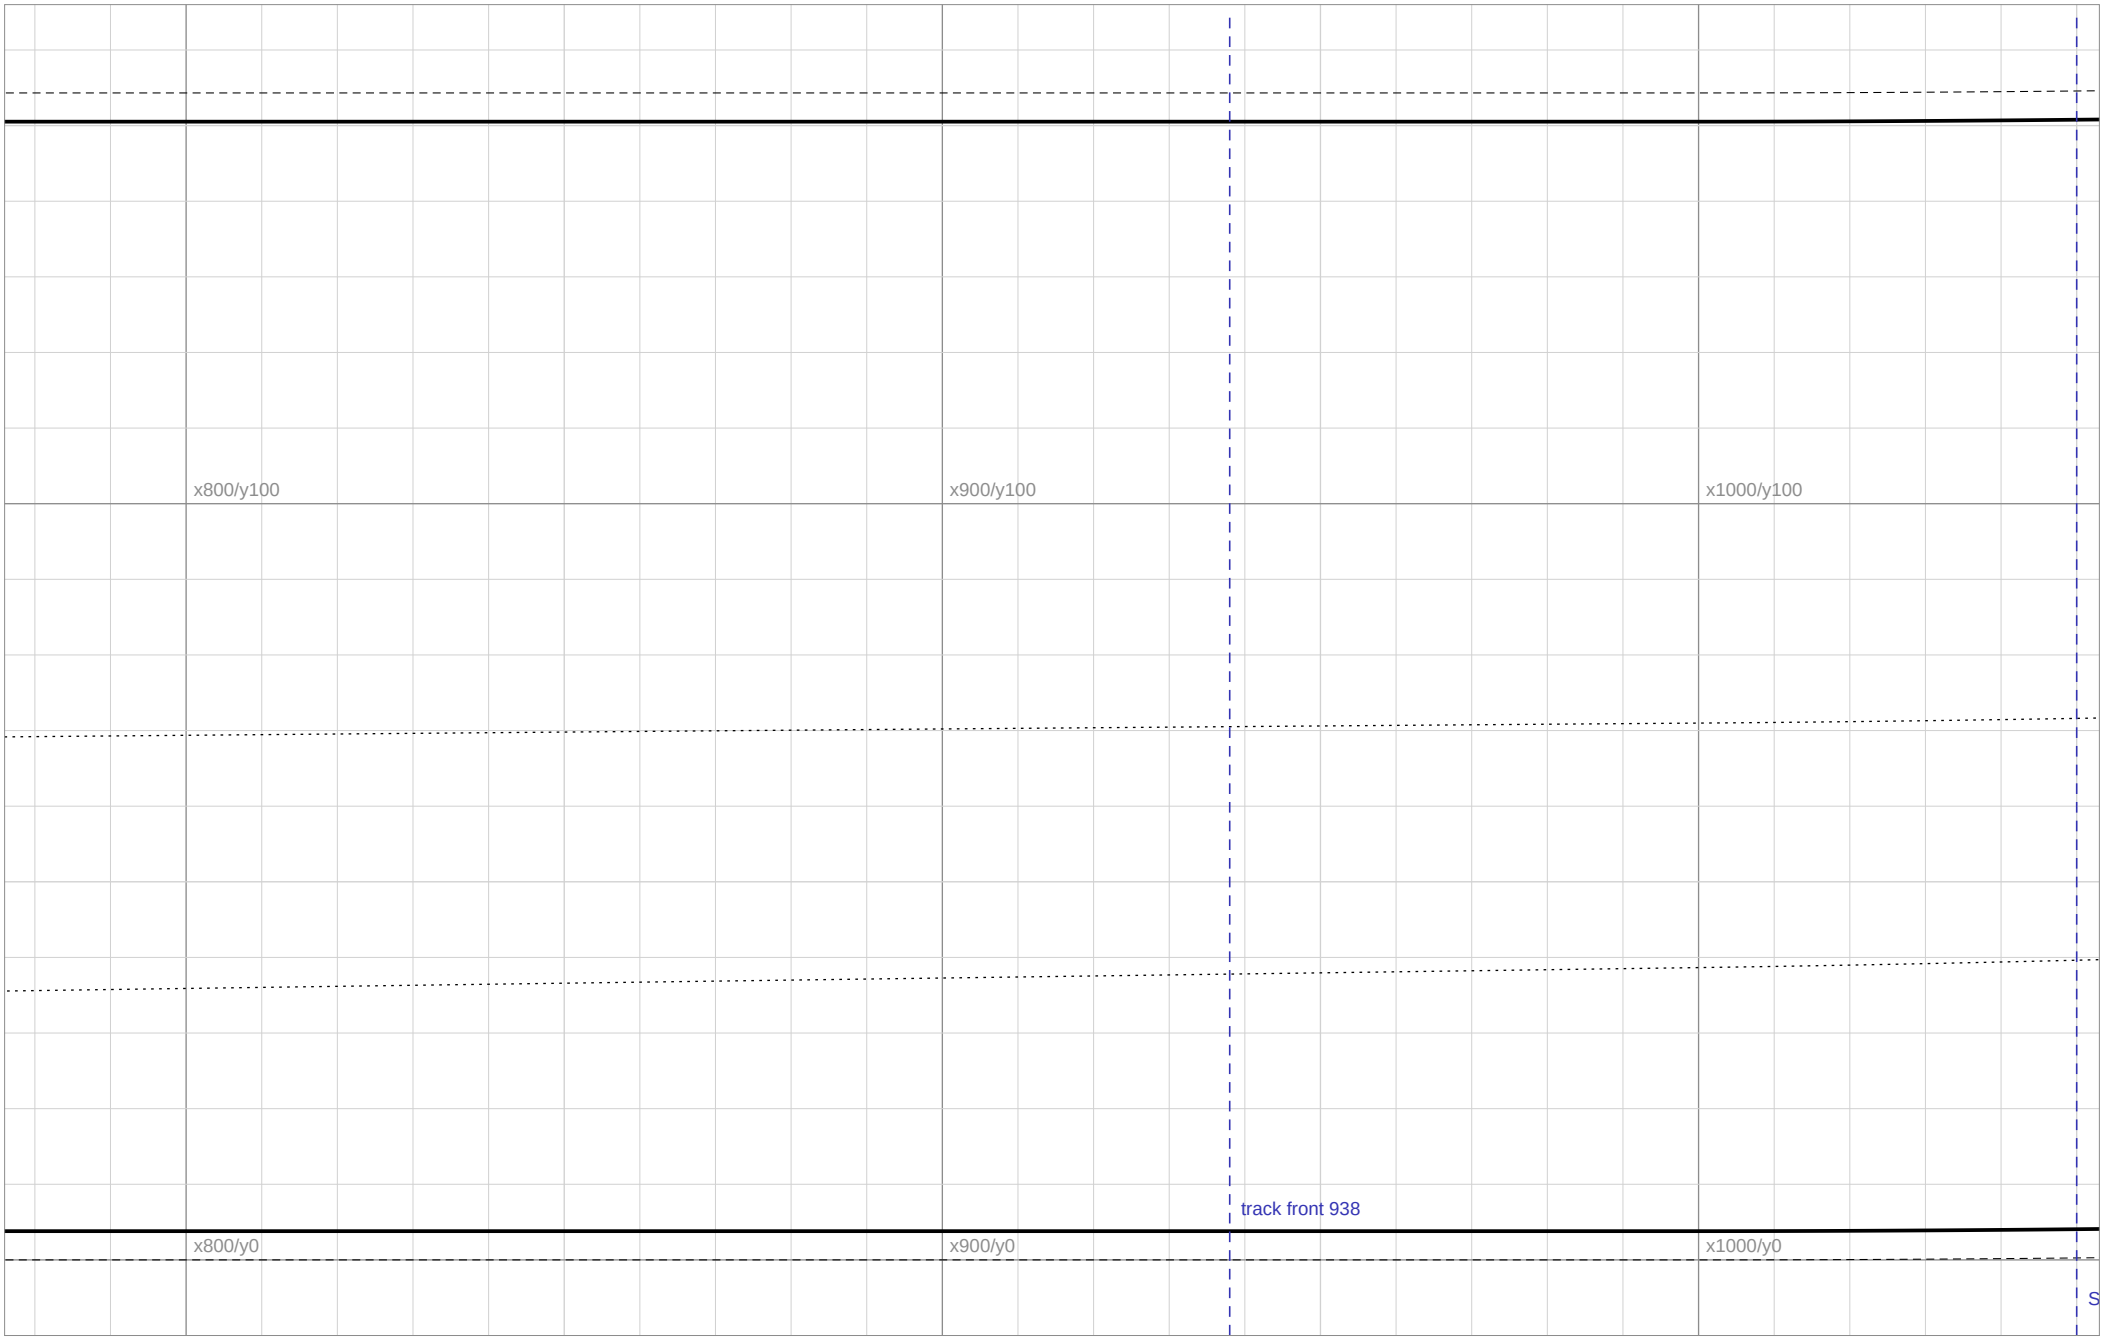

ROCKER / PROFILE at stringer

sheet row 1/1, col 4/8 (x 776 to 1053 mm, y -10 to 166 mm)


100 mm scale check: print at 100% / Actual size, no 'fit to page'

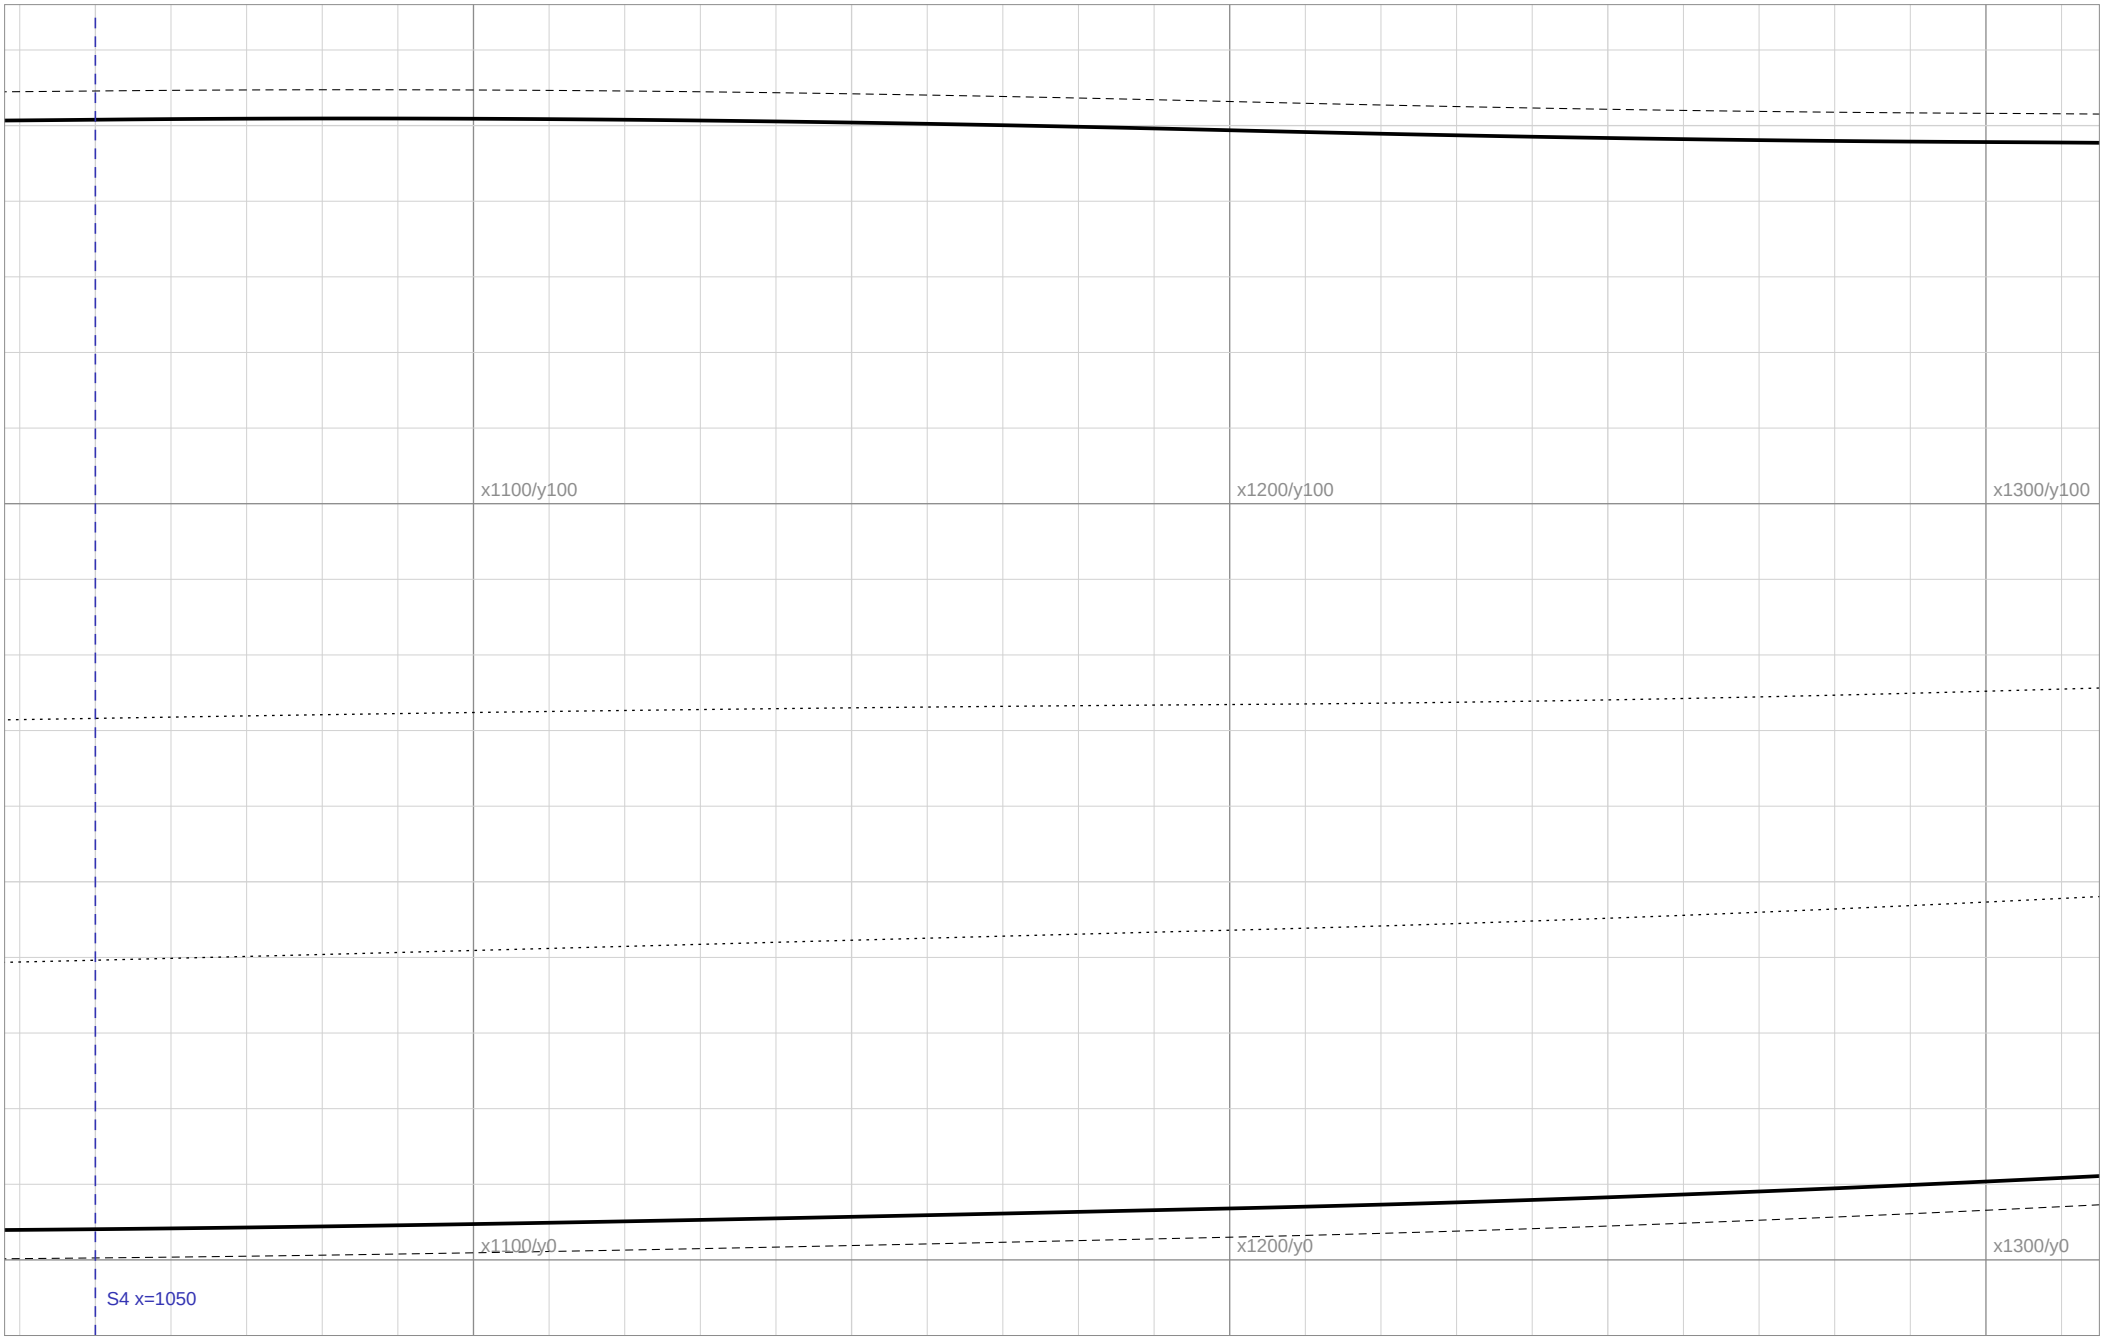

ROCKER / PROFILE at stringer

sheet row 1/1, col 5/8 (x 1038 to 1315 mm, y -10 to 166 mm)


100 mm scale check: print at 100% / Actual size, no 'fit to page'

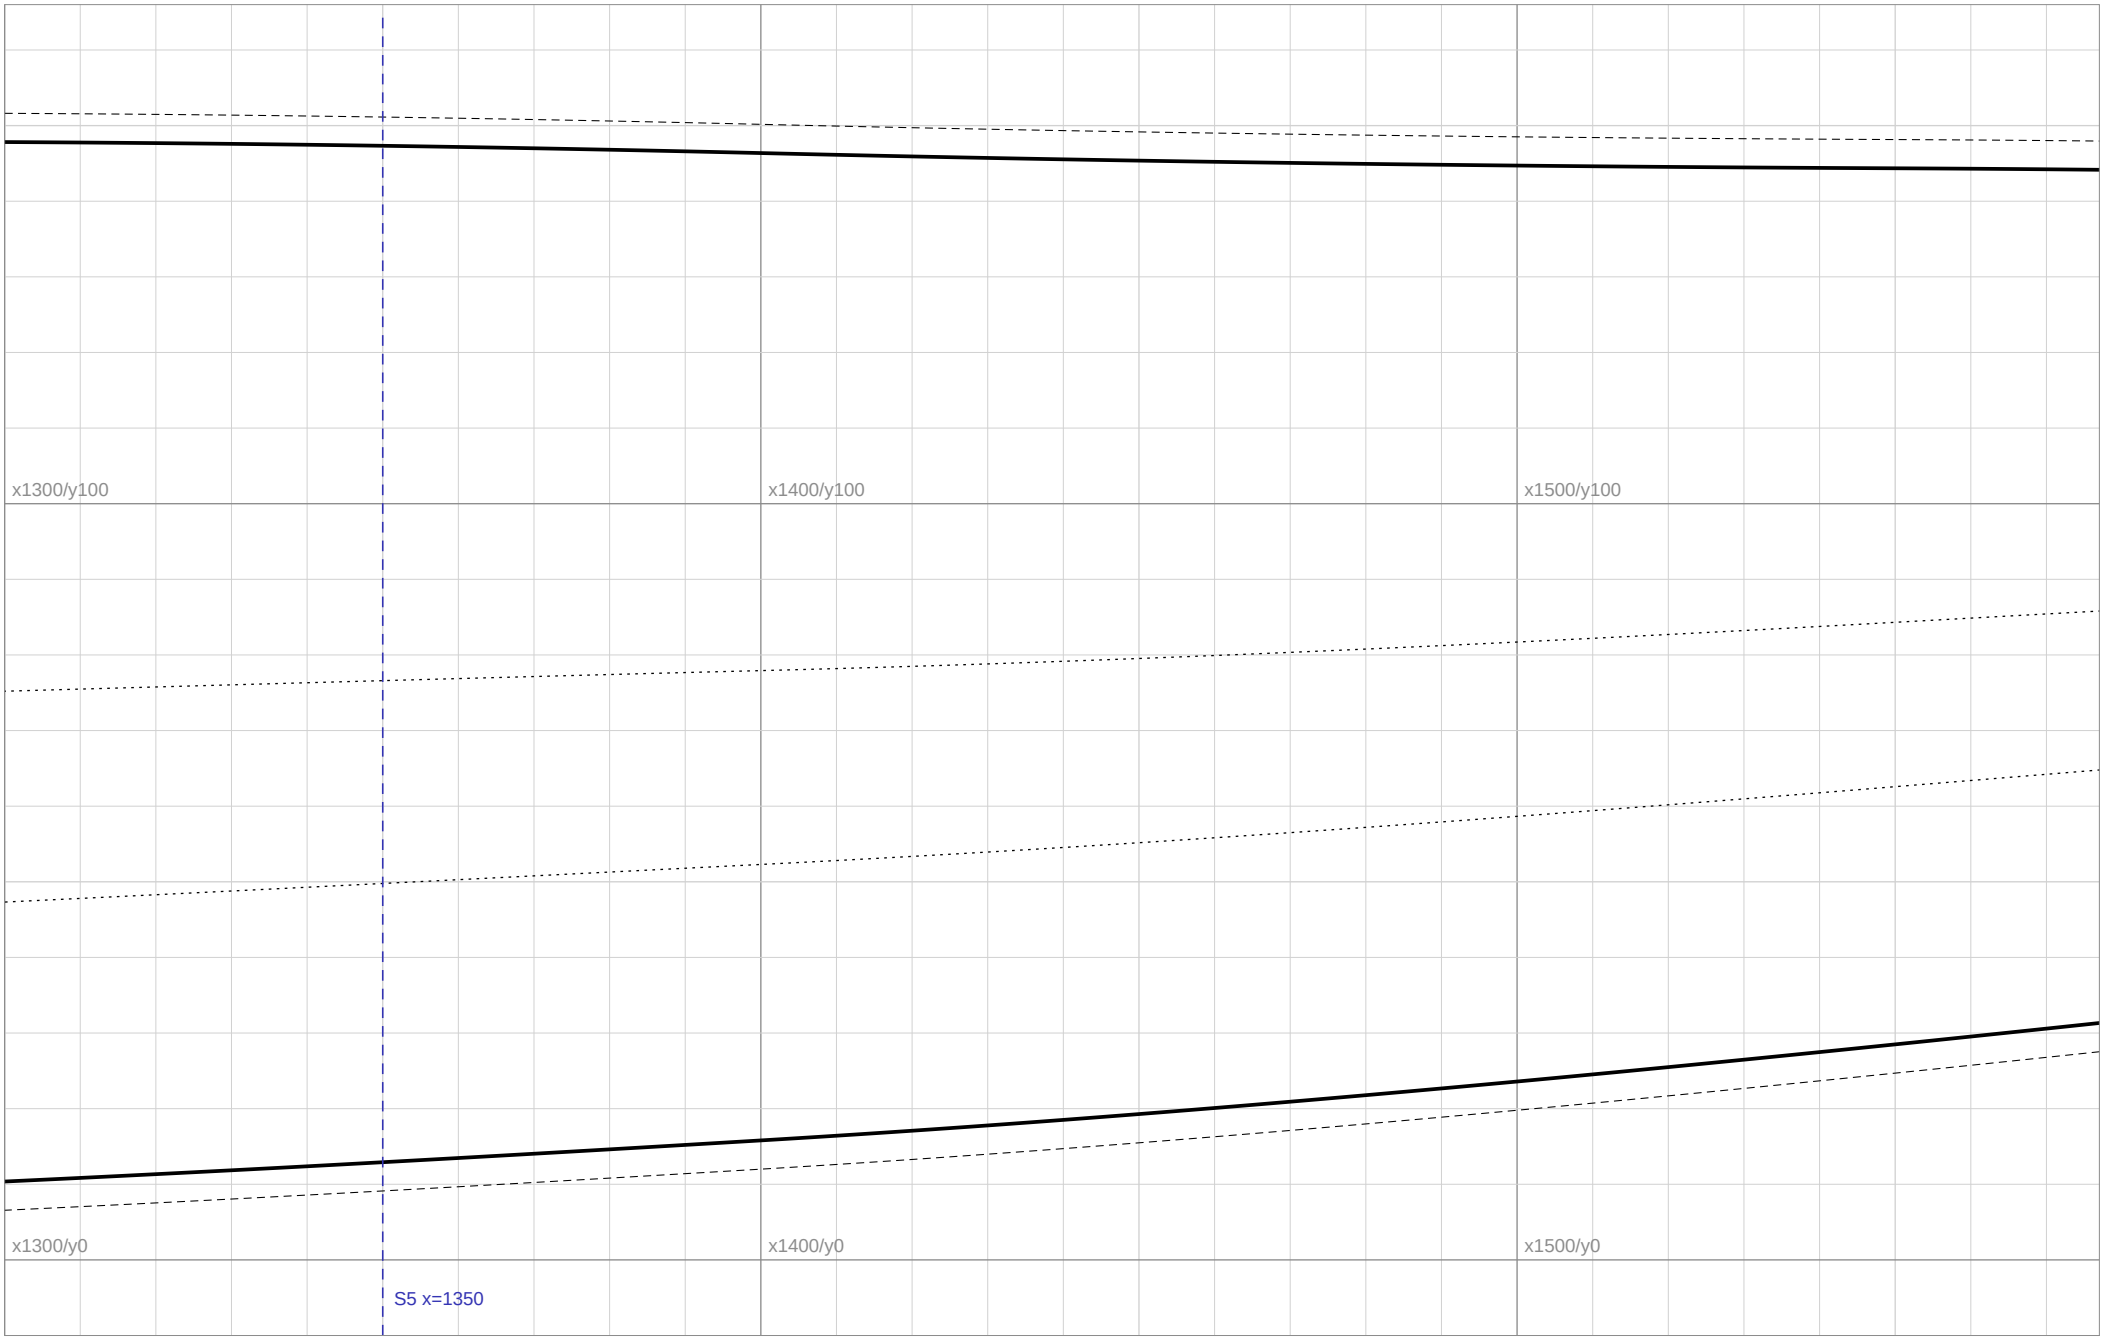

ROCKER / PROFILE at stringer

sheet row 1/1, col 6/8 (x 1300 to 1577 mm, y -10 to 166 mm)


100 mm scale check: print at 100% / Actual size, no 'fit to page'

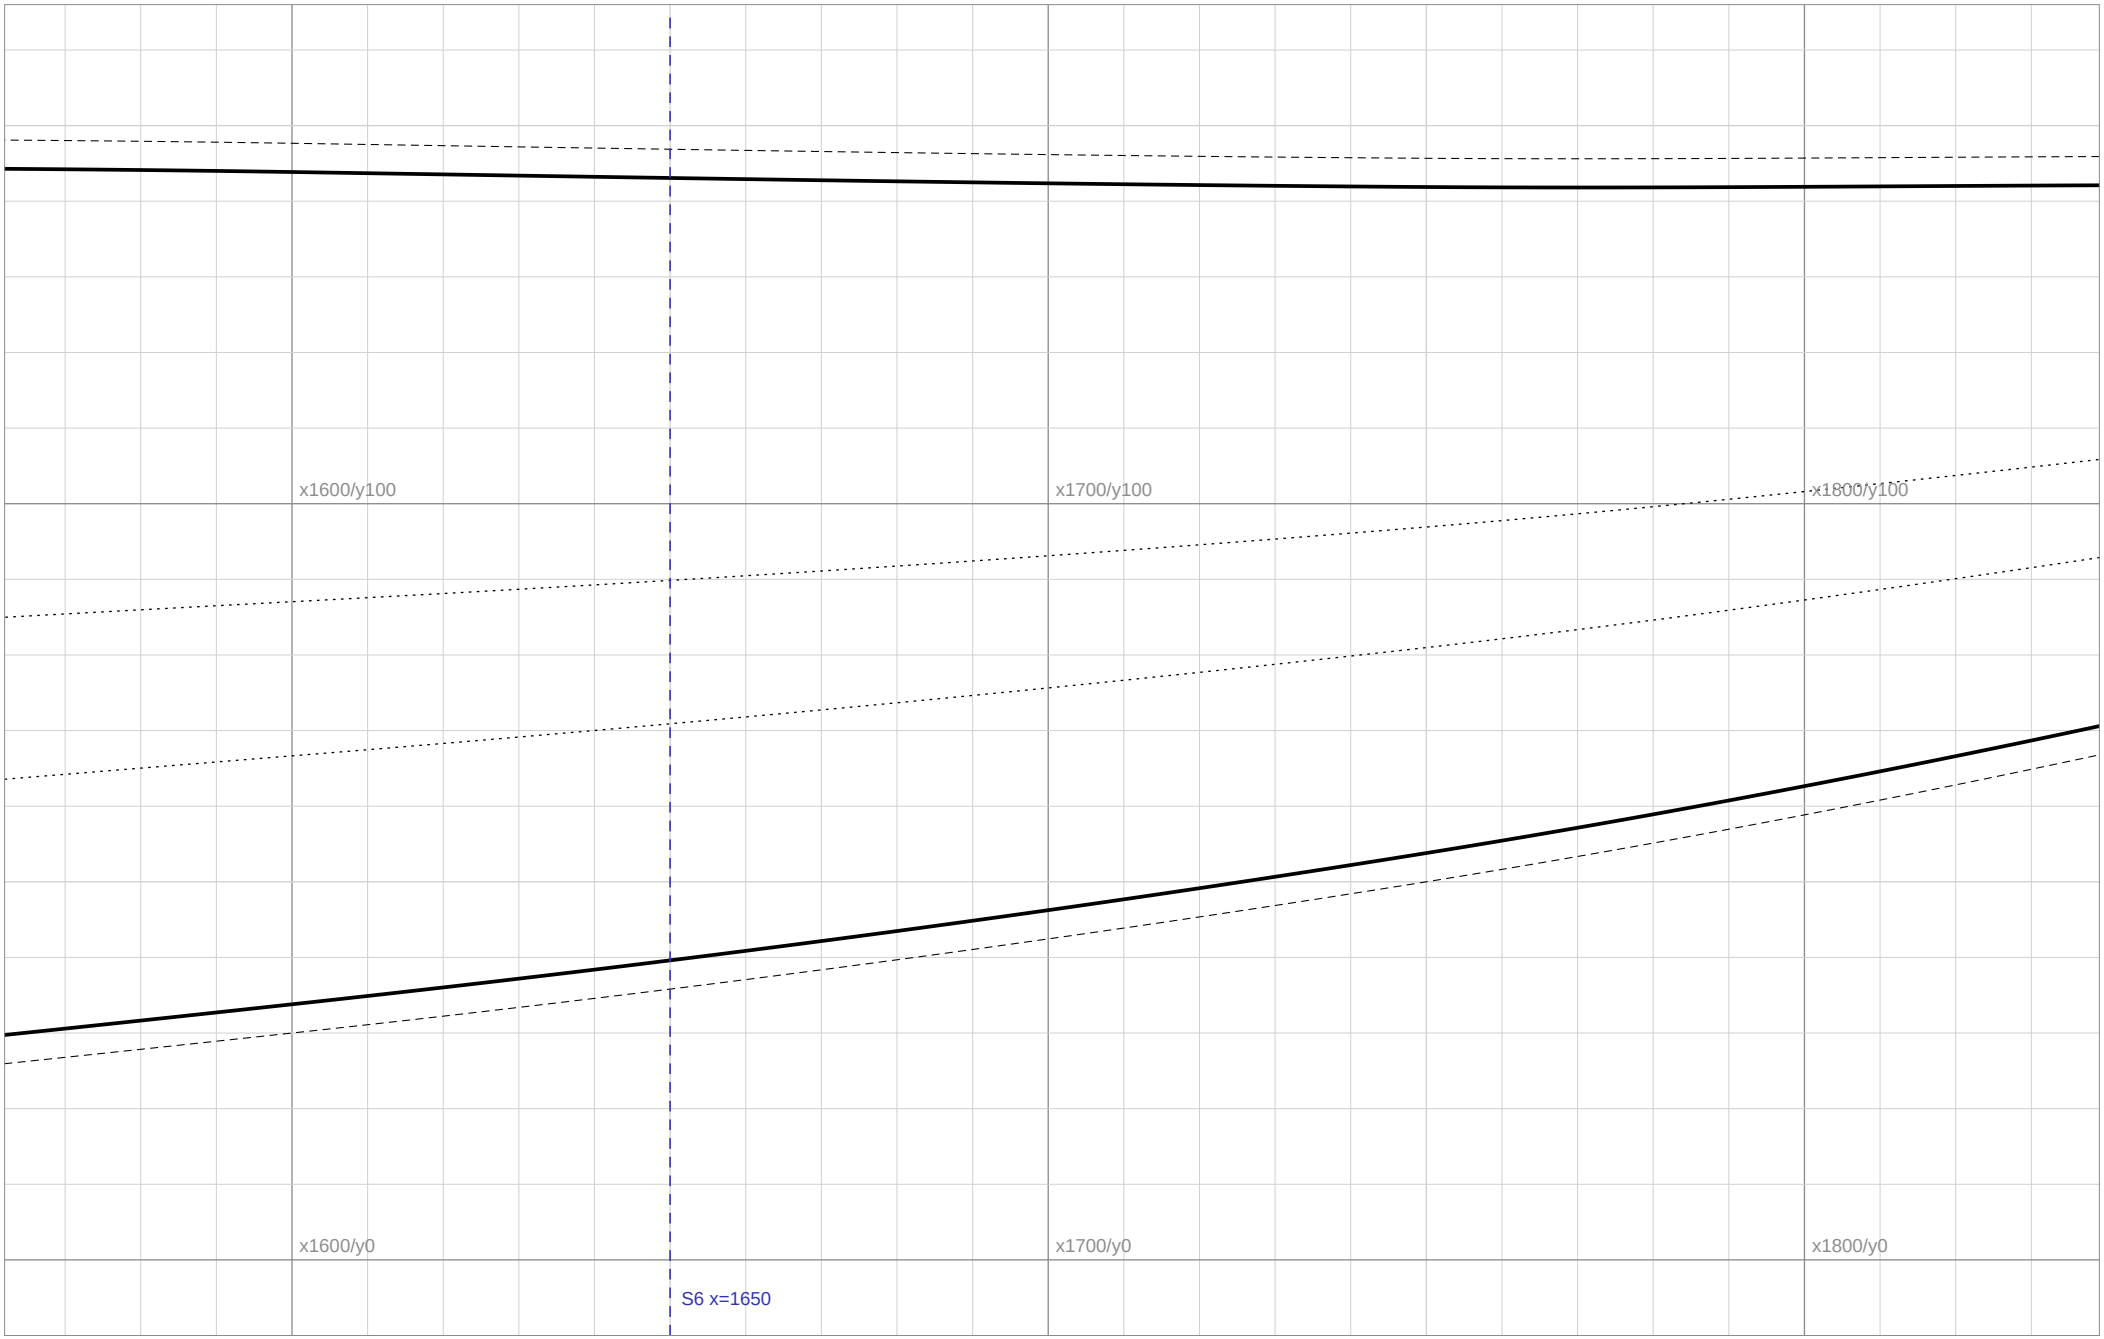

ROCKER / PROFILE at stringer

sheet row 1/1, col 7/8 (x 1562 to 1839 mm, y -10 to 166 mm)

100 mm scale check: print at 100% / Actual size, no 'fit to page'

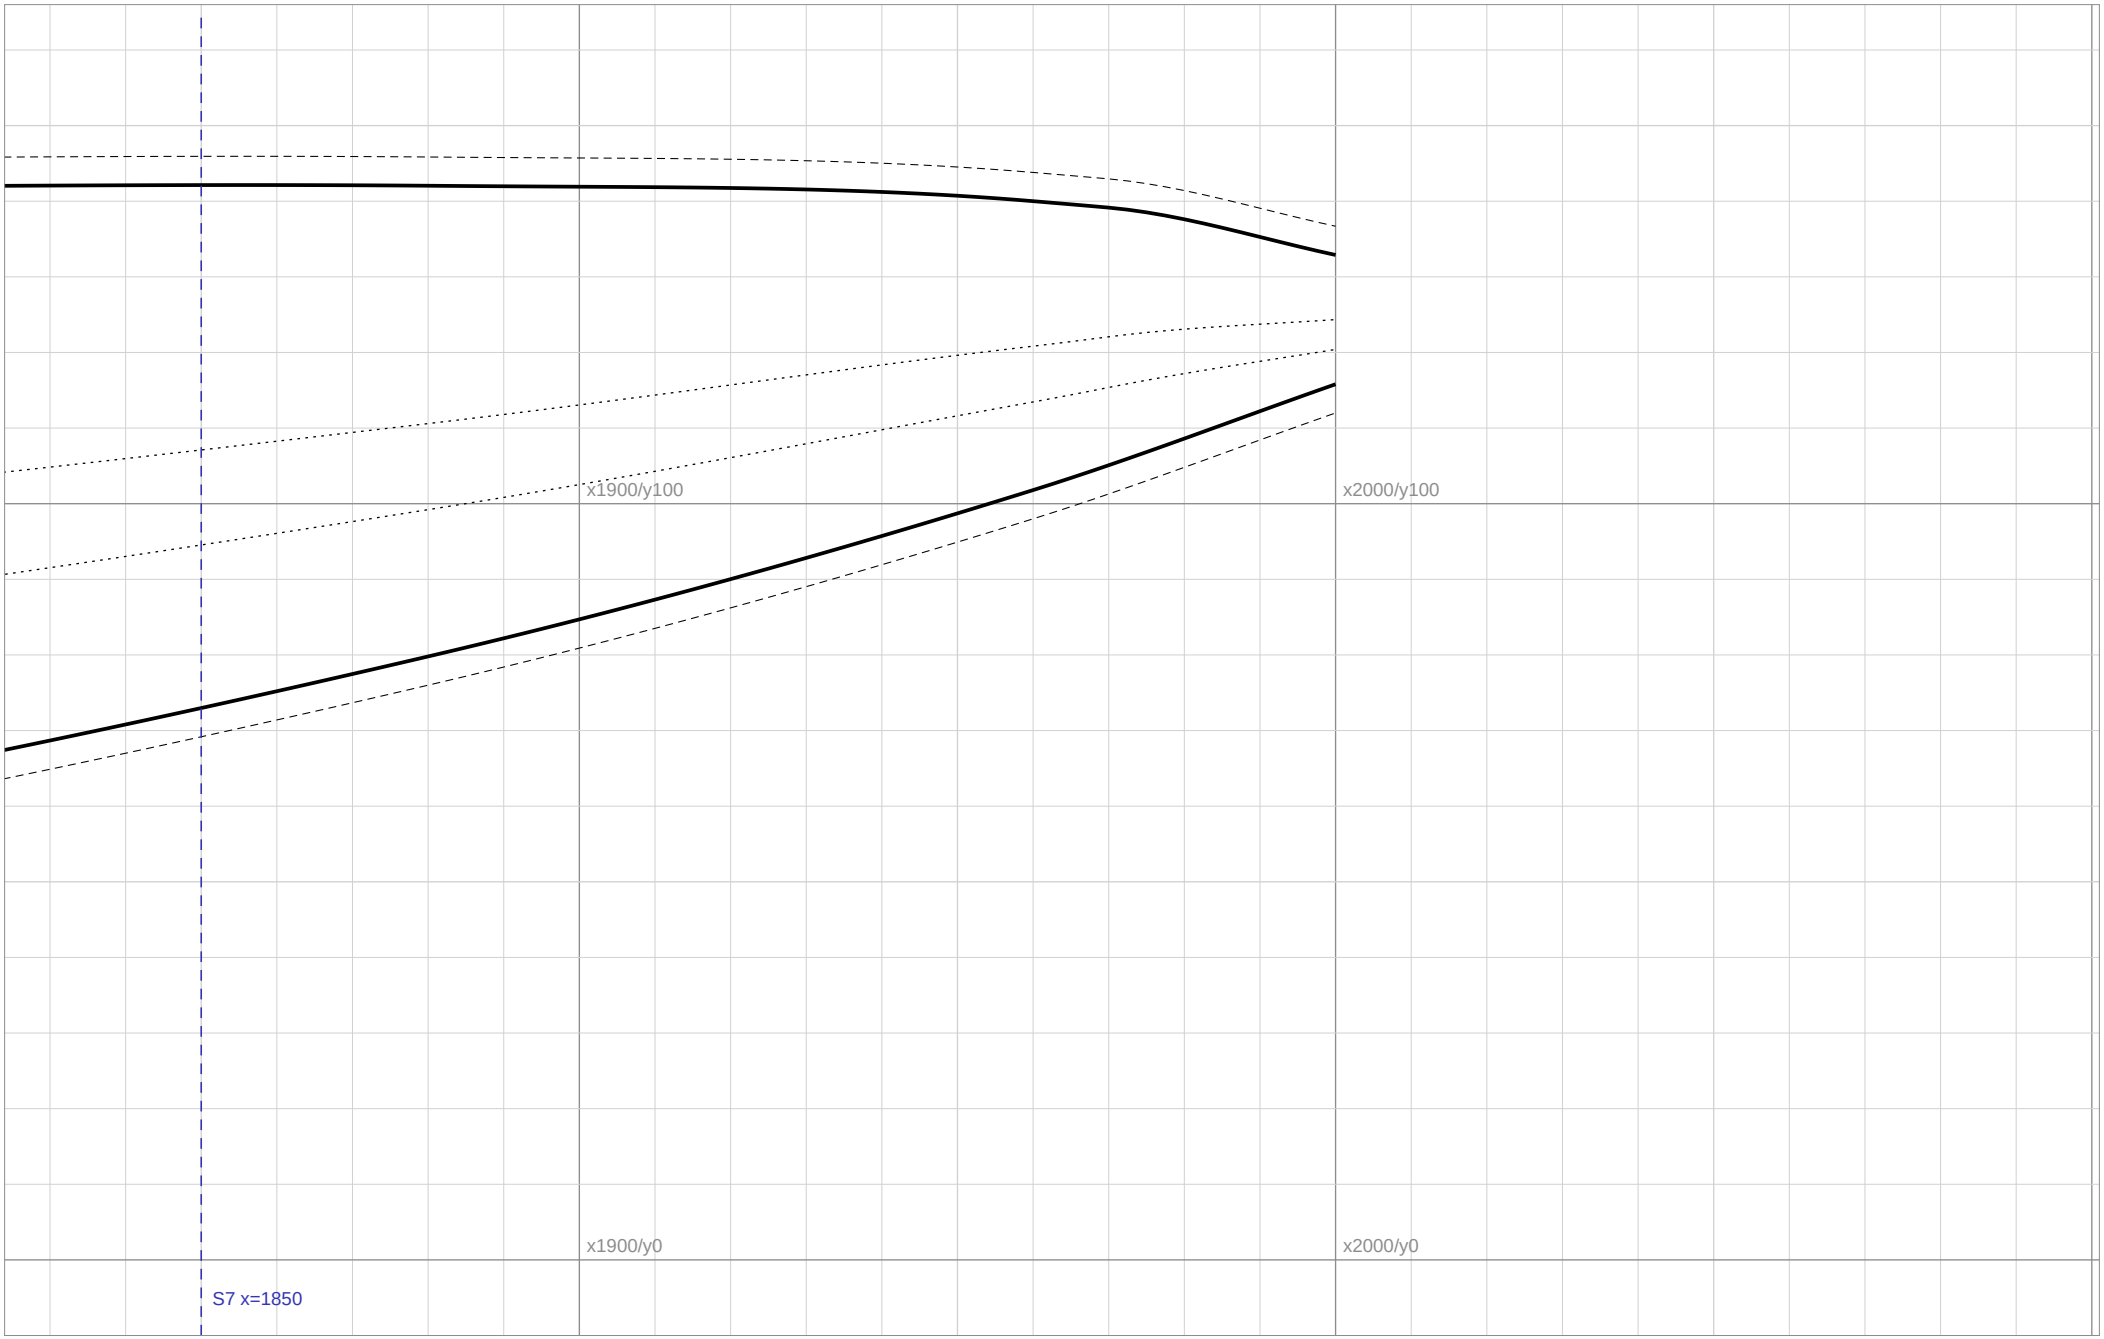

ROCKER / PROFILE at stringer

sheet row 1/1, col 8/8 (x 1824 to 2101 mm, y -10 to 166 mm)

100 mm scale check: print at 100% / Actual size, no 'fit to page'