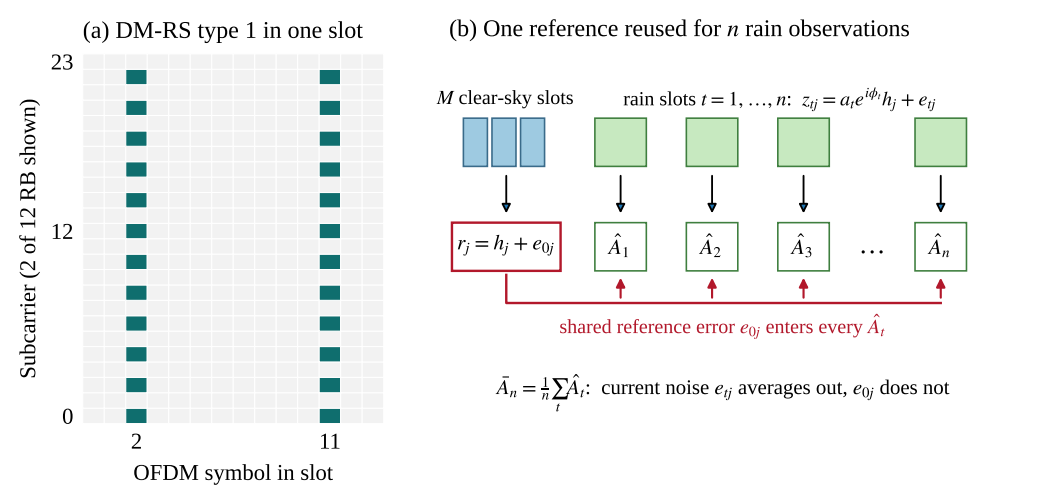
(a) DM-RS type 1 in one slot
23
12
0
Subcarrier (2 of 12 RB shown)
2
11
OFDM symbol in slot
(b) One reference reused for n rain observations
M clear-sky slots
rain slots t = 1, …, n: z_tj = a_t e^{iφ_t} h_j + e_tj
r_j = h_j + e_0j
Â_1
Â_2
Â_3
…
Â_n
shared reference error e_0j enters every Â_t
Ā_n = (1/n) Σ_t Â_t: current noise e_tj averages out, e_0j does not