


Red: Remove Parts


Green: Switch the fenders over the car wheels to shock towers

<https://traxxas.com/8216-trx-4-front-and-rear-shock-towers-lr>

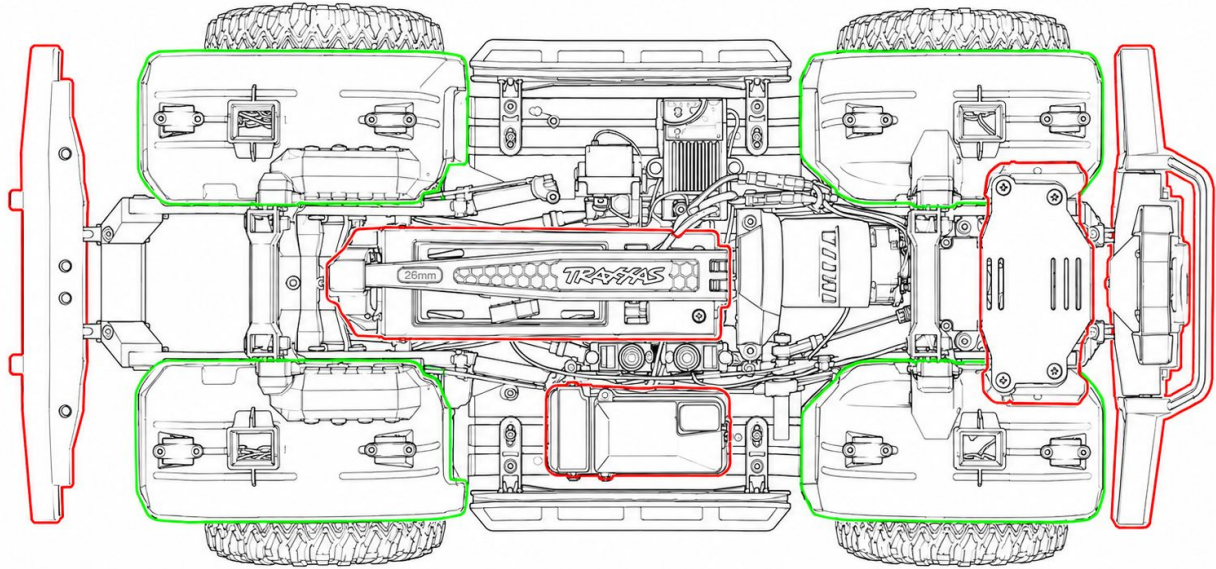


Result should look like the following image

Remember to label all the cables


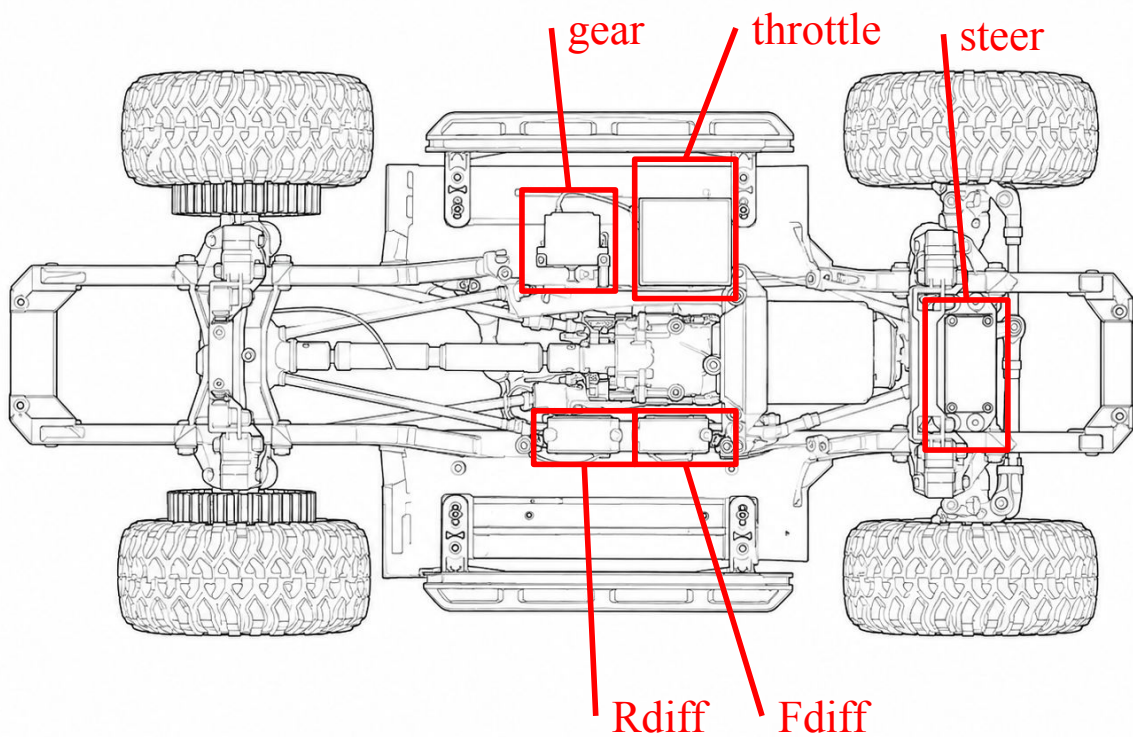


Remove the bolt in the Green circle temporarily

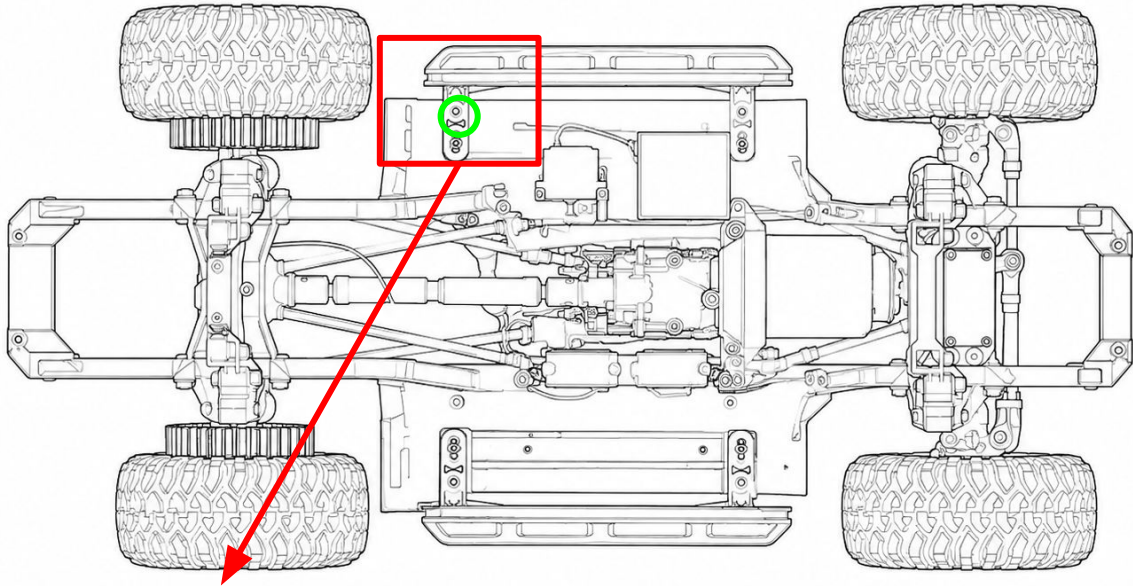


Place the receiver holder underneath the bar and put the screw back.


Place the receiver in the holder.

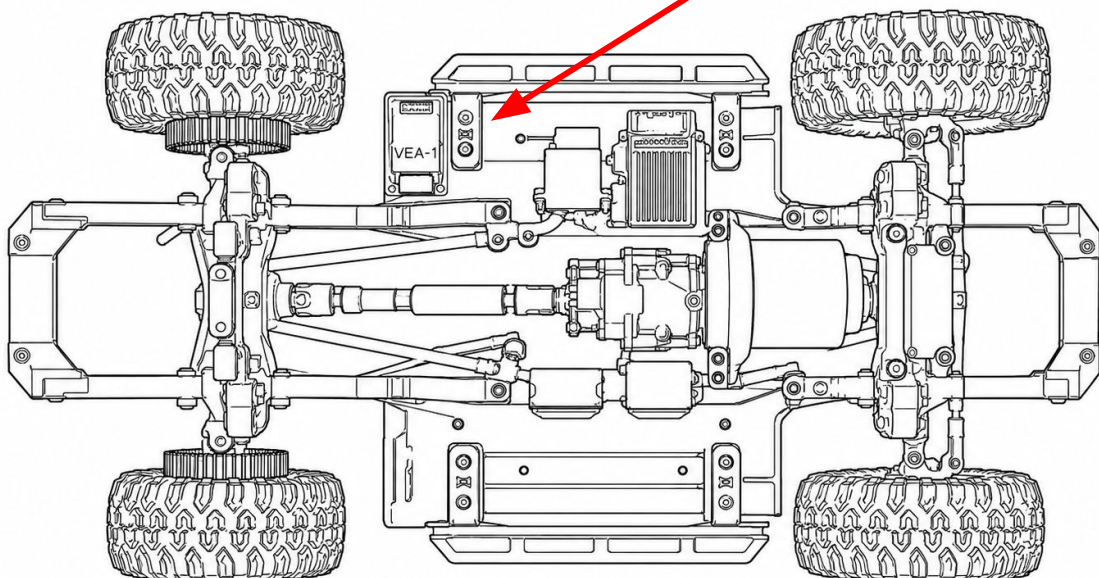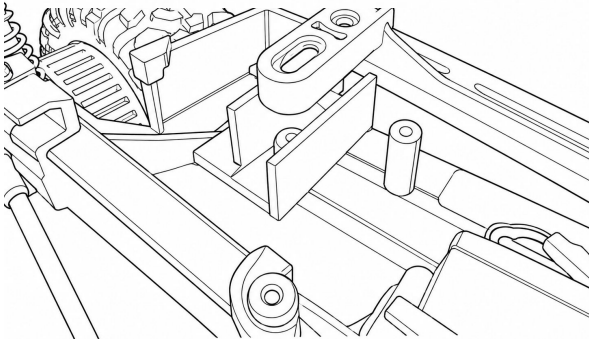


Thread the M3×60mm standoffs into the four threaded holes marked with **red** circles.

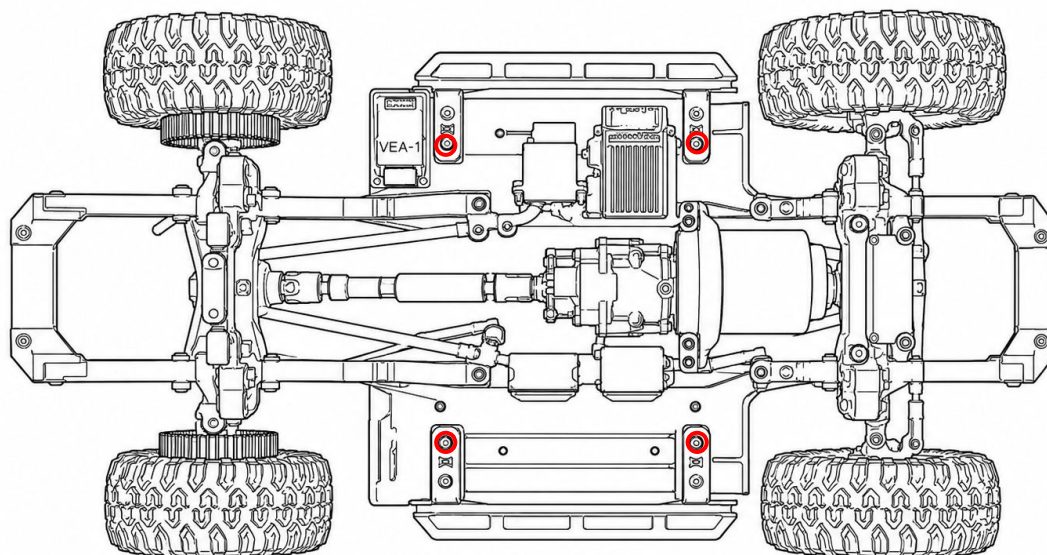


M3×60mm standoffs * 4

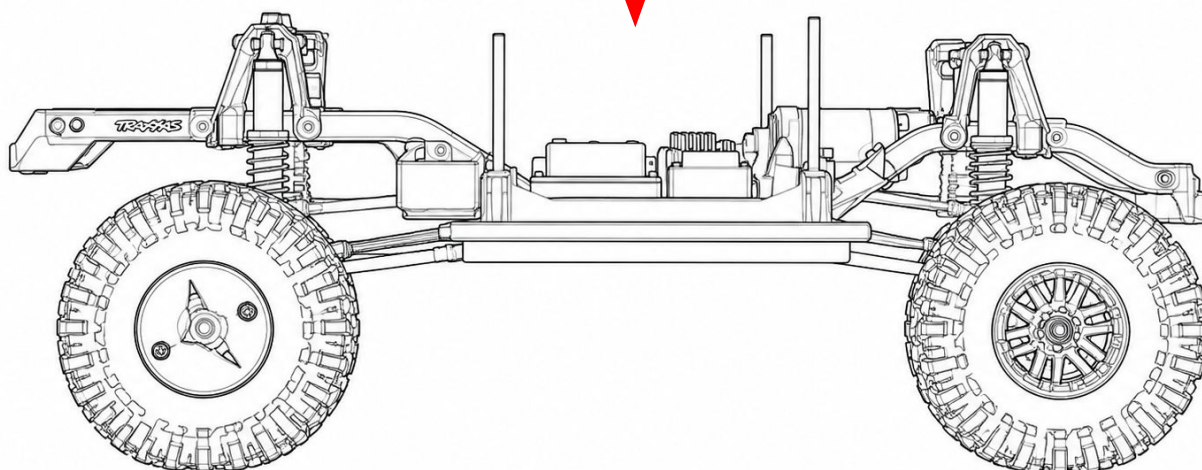


Insert 4 M3 heated inserts to the plate mount.

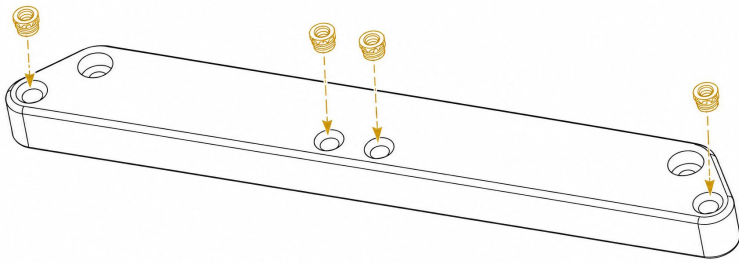


Insert 4 M3 heated inserts to another plate mount on the mirror side.

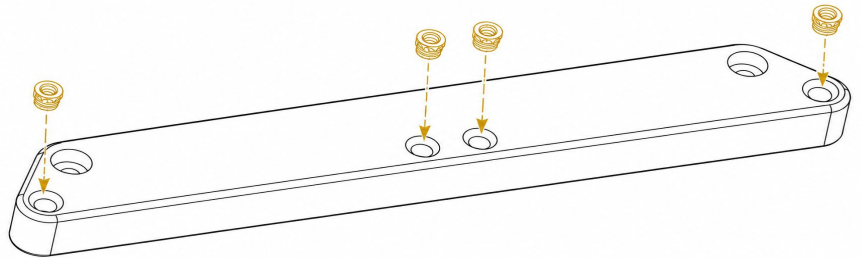



Install plate mount with M3*10mm socket head screws.

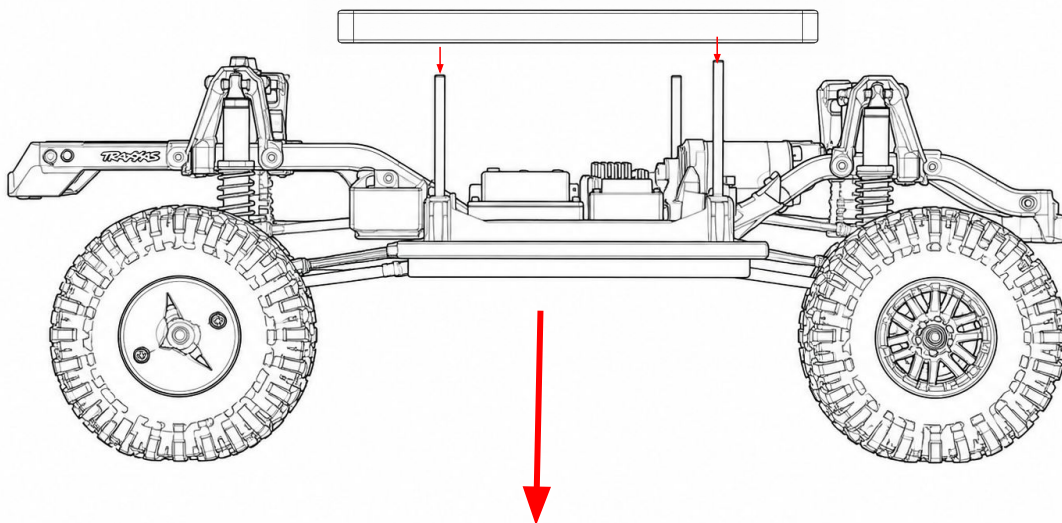

Shorter side should be toward the back.

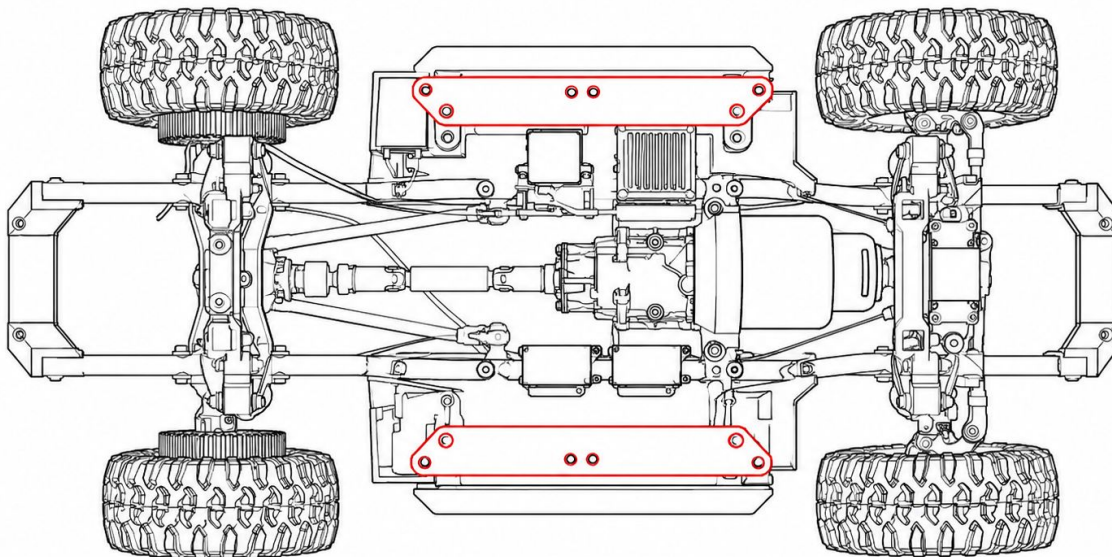

Recommended M3 heat inserts placement

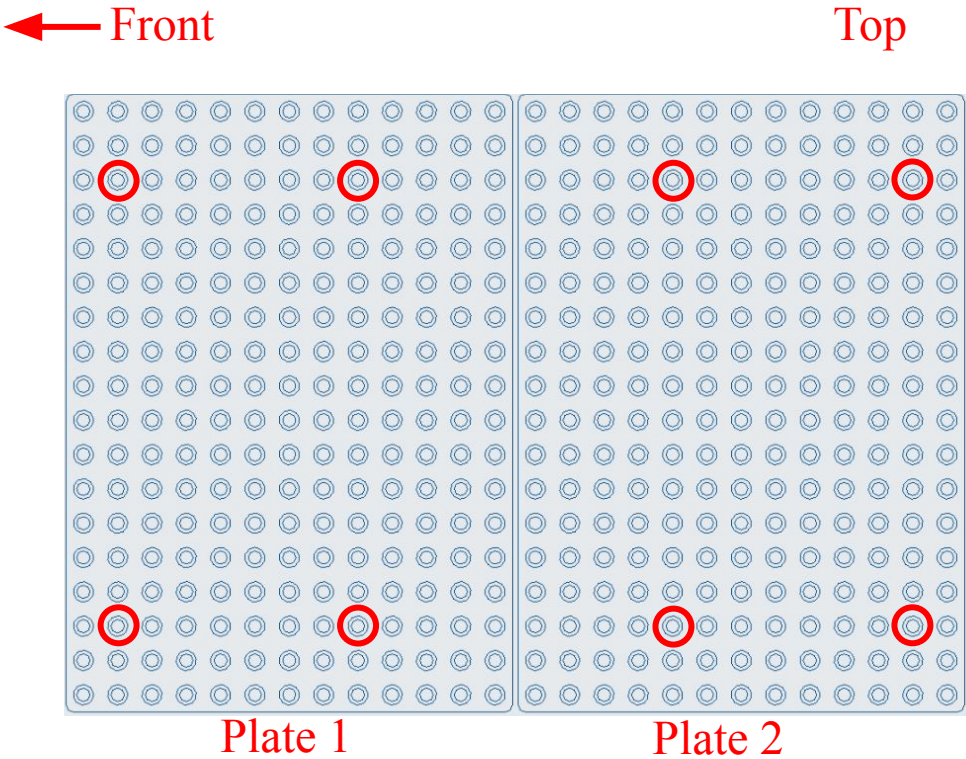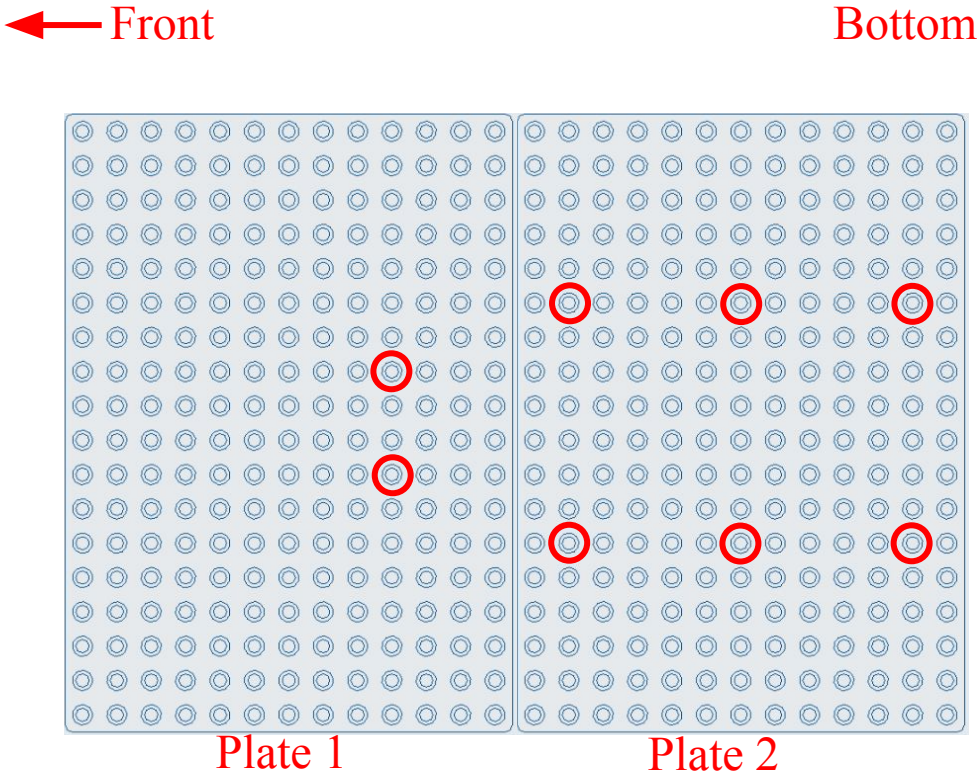

Use M3*6mm or M3*10mm Screws to install battery holder.

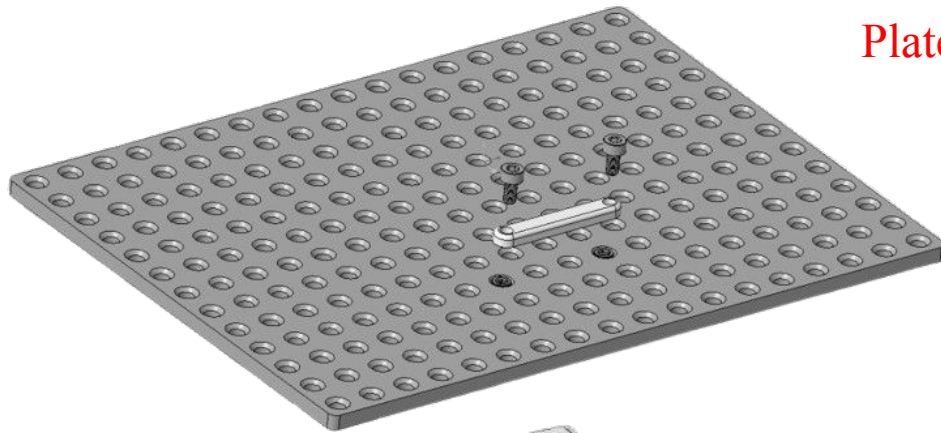


Plate 1 Bottom



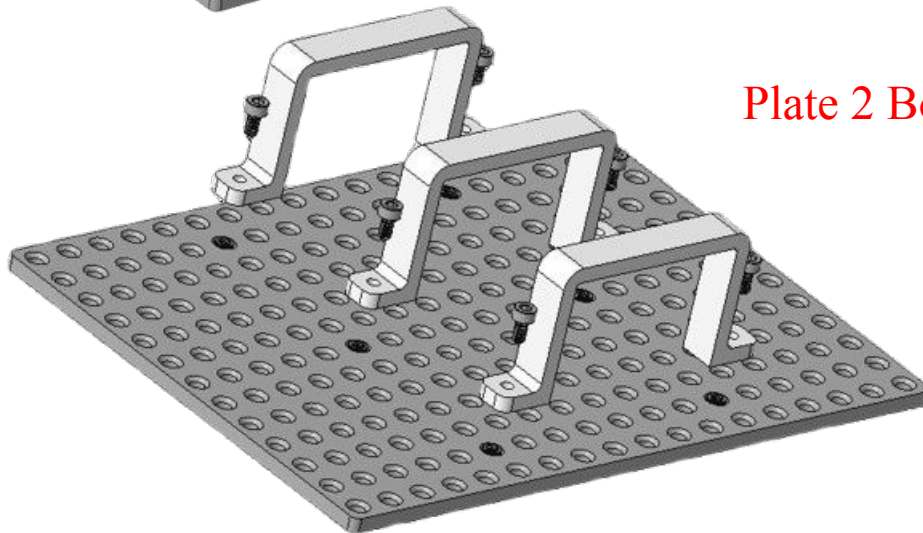


Plate 2 Bottom

Use M3*10mm sink head screws to install plates.

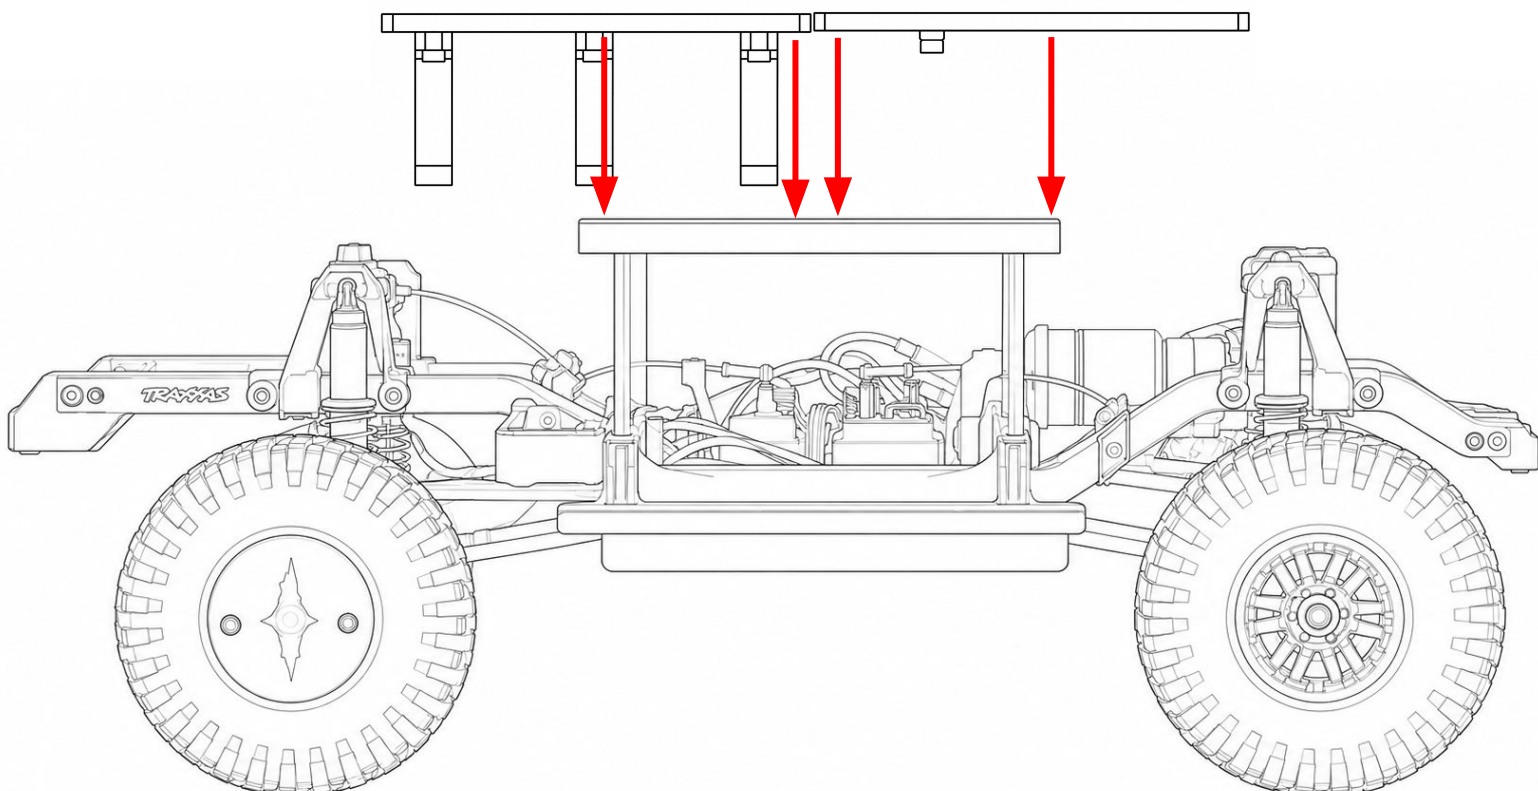


Insert M3*10mm screws to the outer holes and insert the M4*4.7mm heated insert to 4 inner holes.

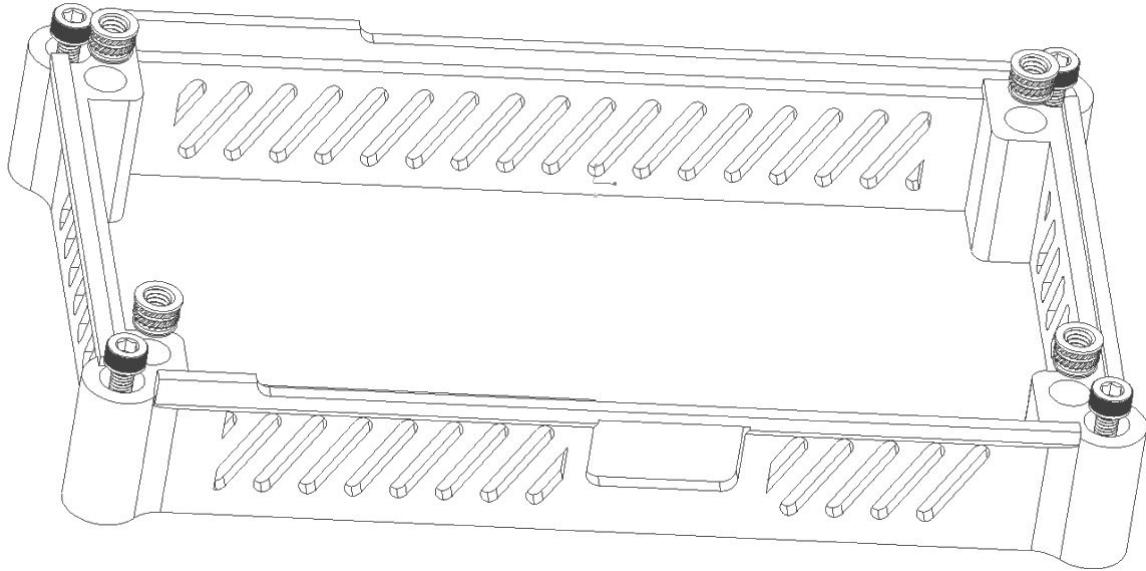


Install lower shell to the back of the board.


Opening towards back.

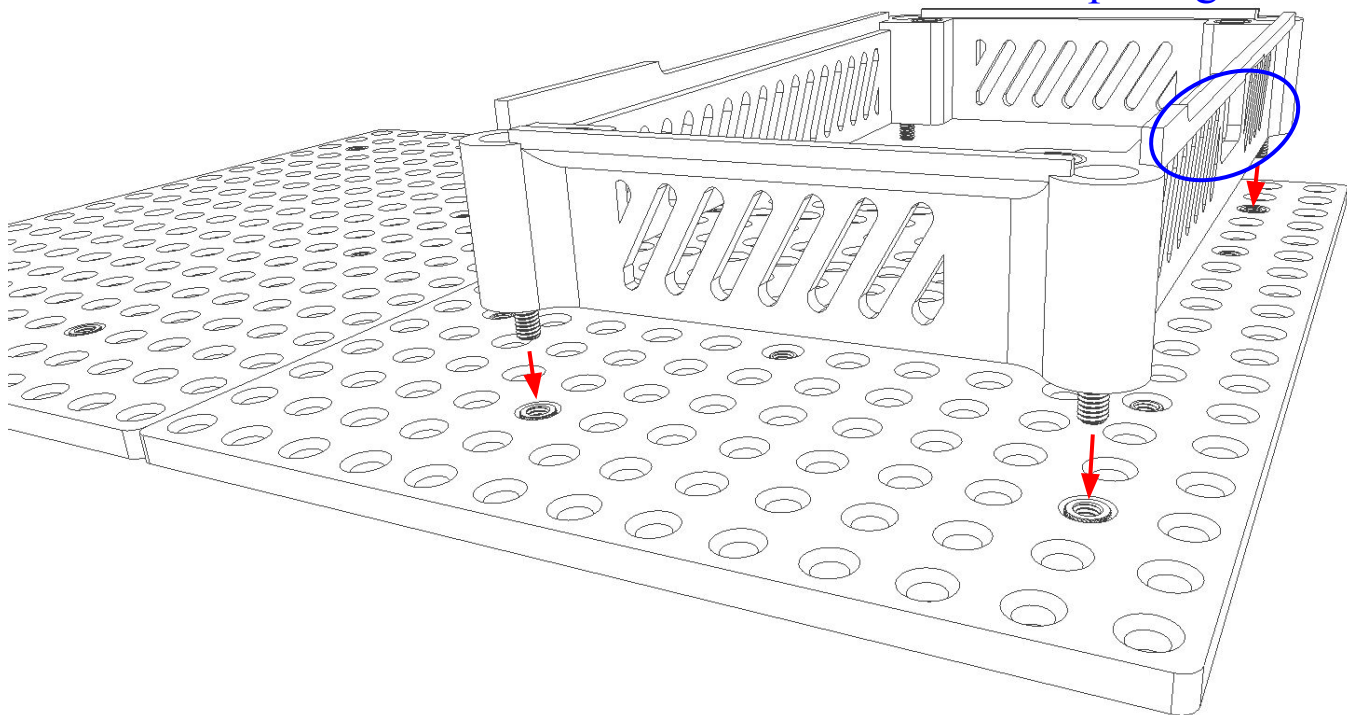


Install SVEA powerboard on the lower shell with M4 standoffs (preferably 40mm in total length)

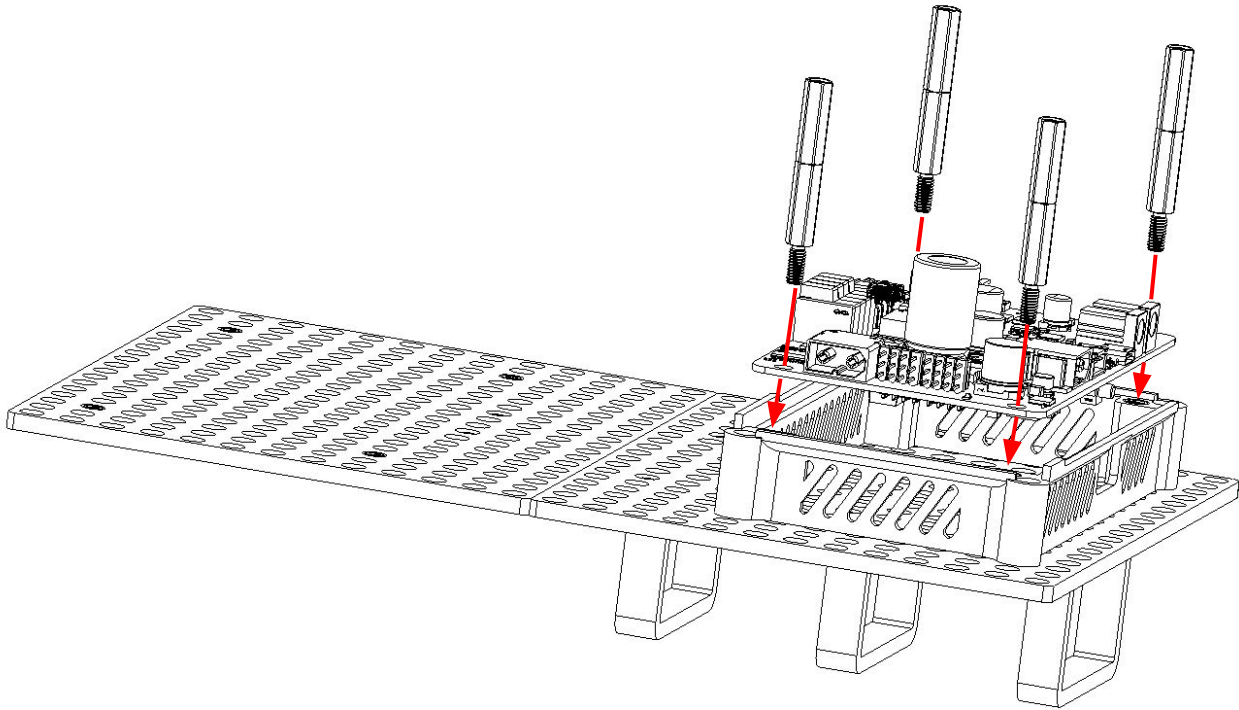


Slide the upper cover case in

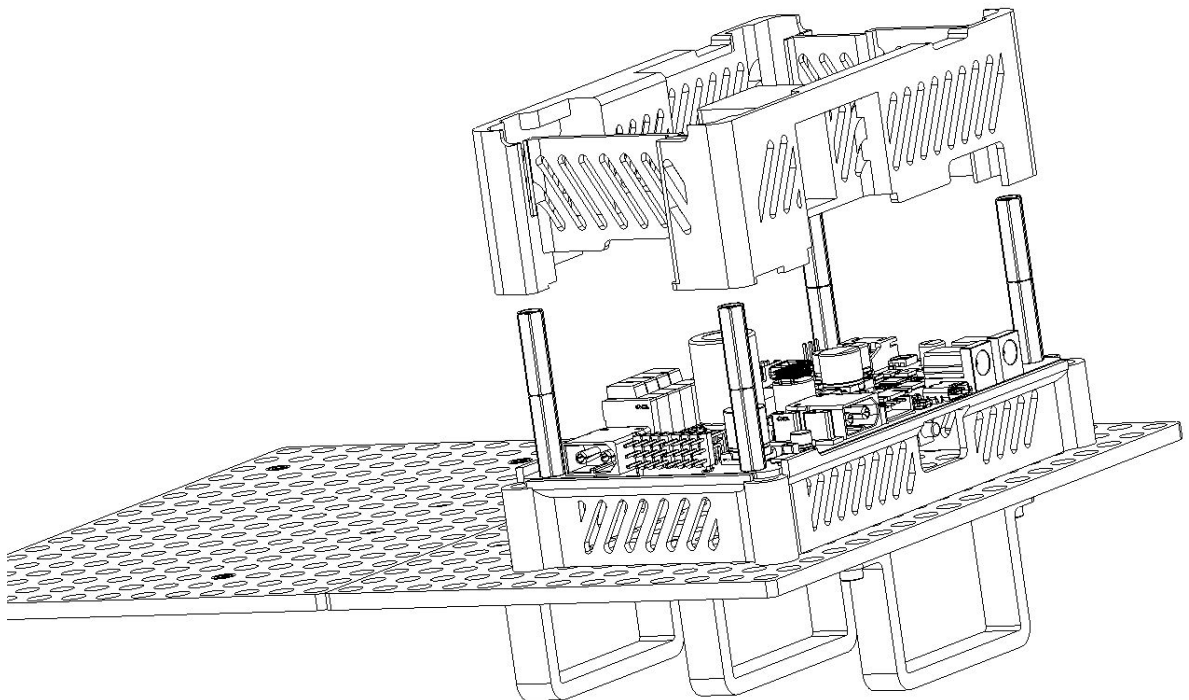

Install clicker 4 on the standoffs with M4*6mm or M4*10mm screws.

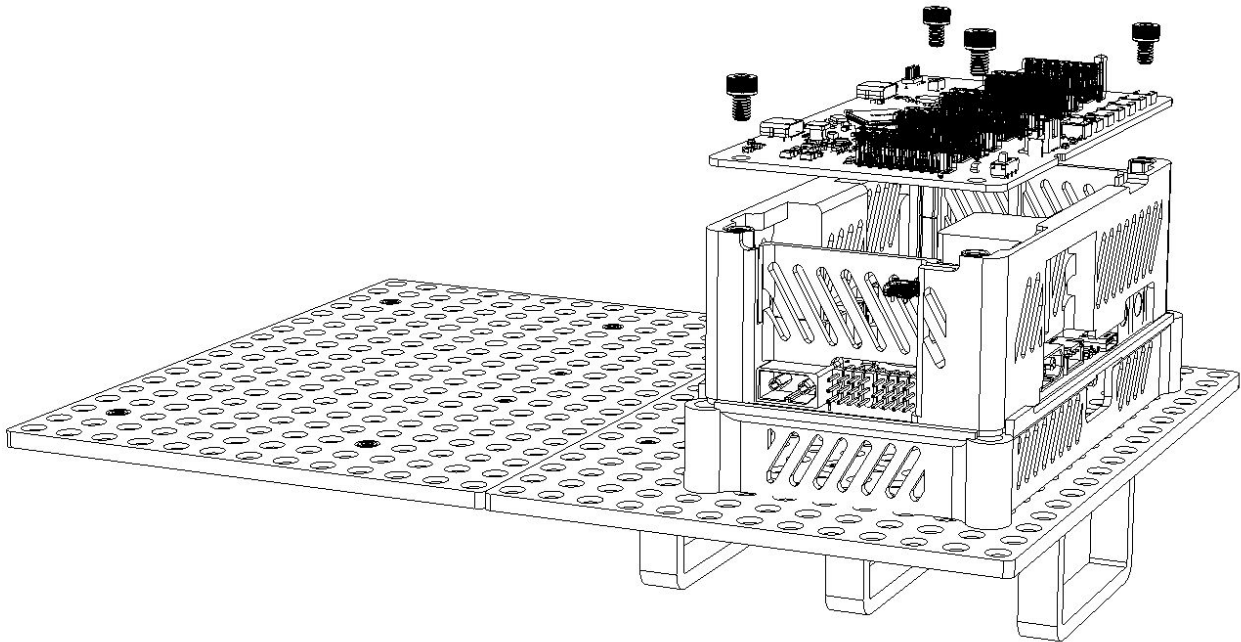


Install the zed box with 4 M3 screws

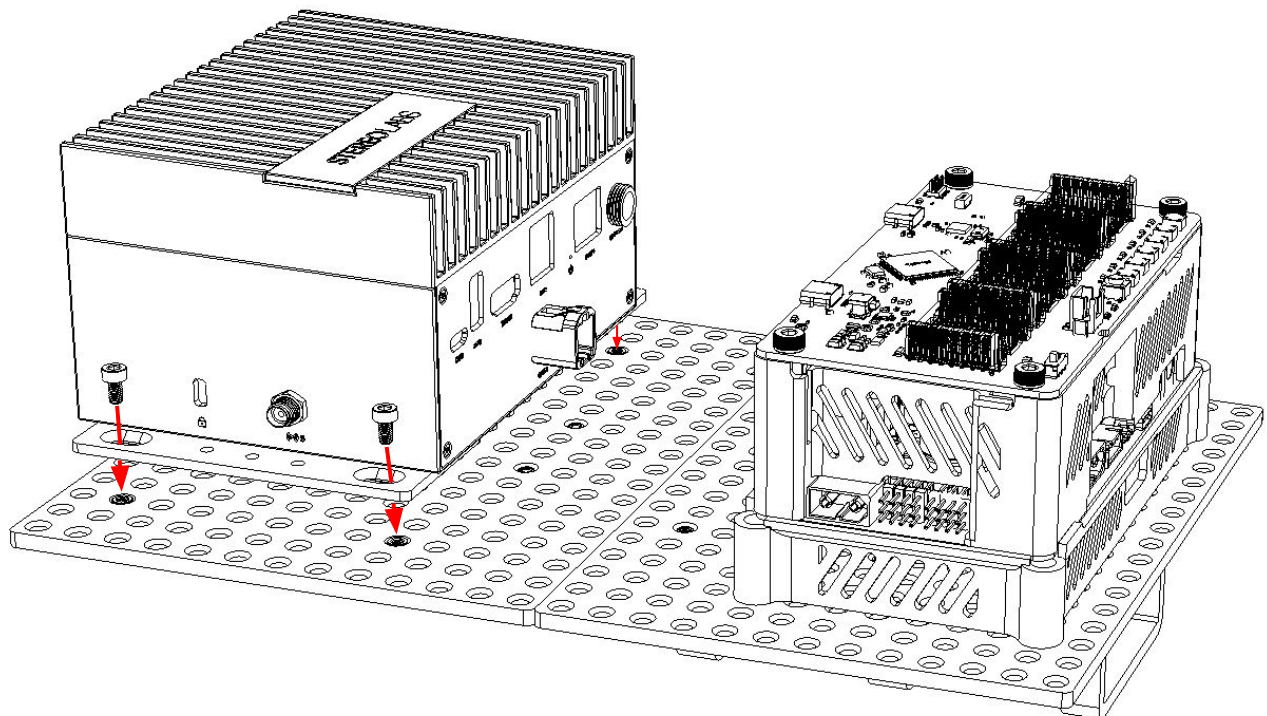


Encoder


Install h2010 IR sensor to the encoder mount back cover with M3*6mm screws and M3 nuts.

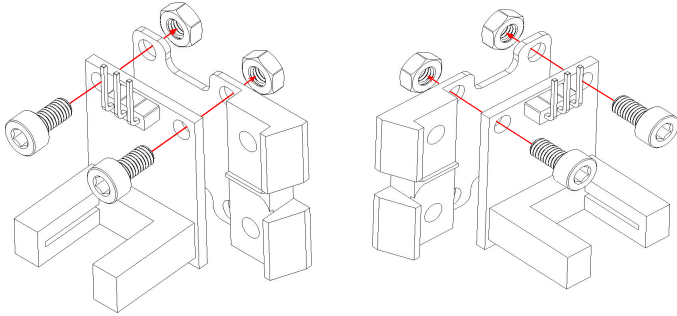

Insert the m3 heat insert to encoder mount.

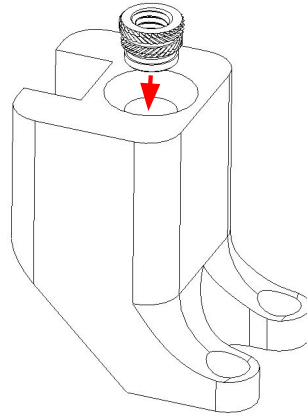


Remove these two screws for both sides.

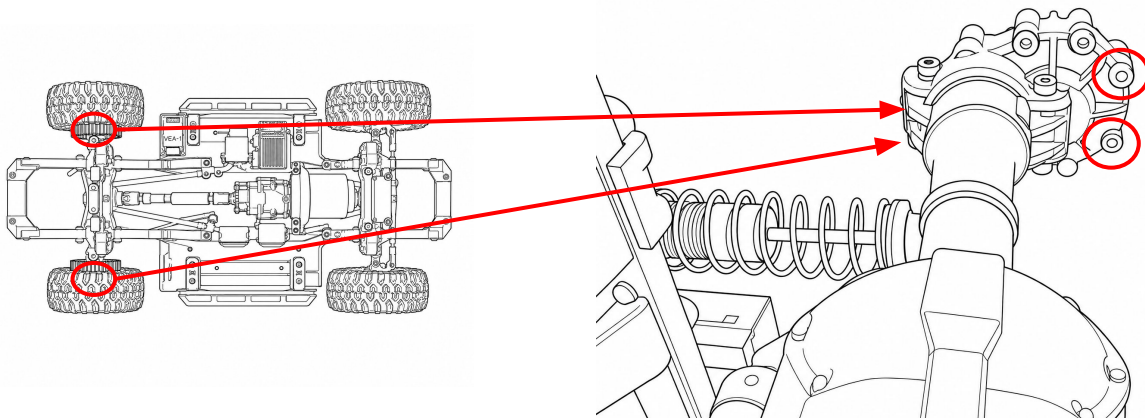


Use the screws to install the encoder mount for both side

Install the sensor with M3*10mm

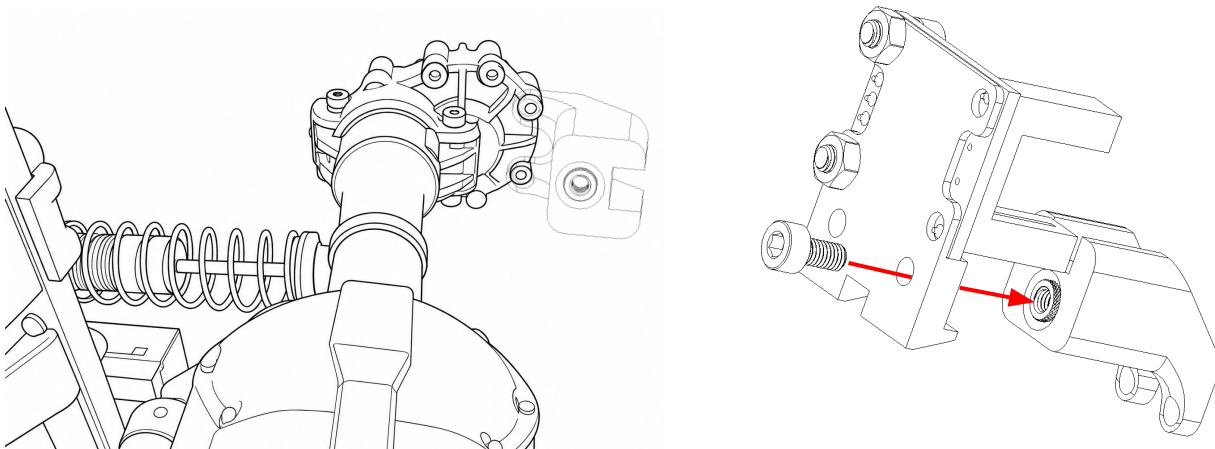


Encoder Disk

Remove the back two wheels.

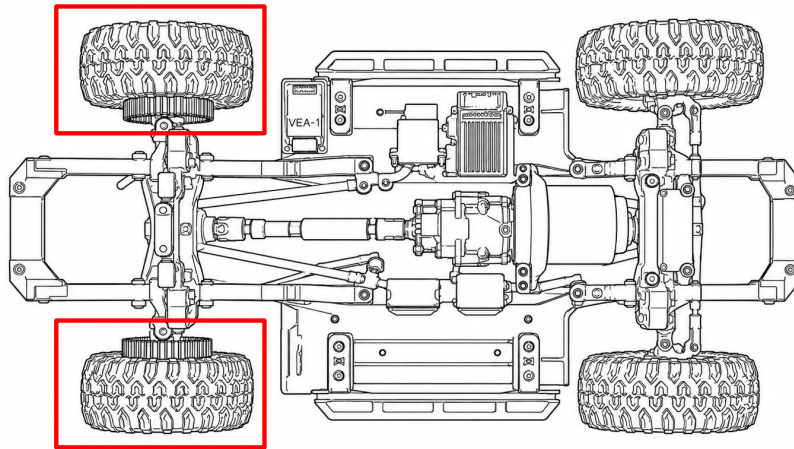


Install the wheel disk with two M3*18mm screws and 2 M3 nuts.

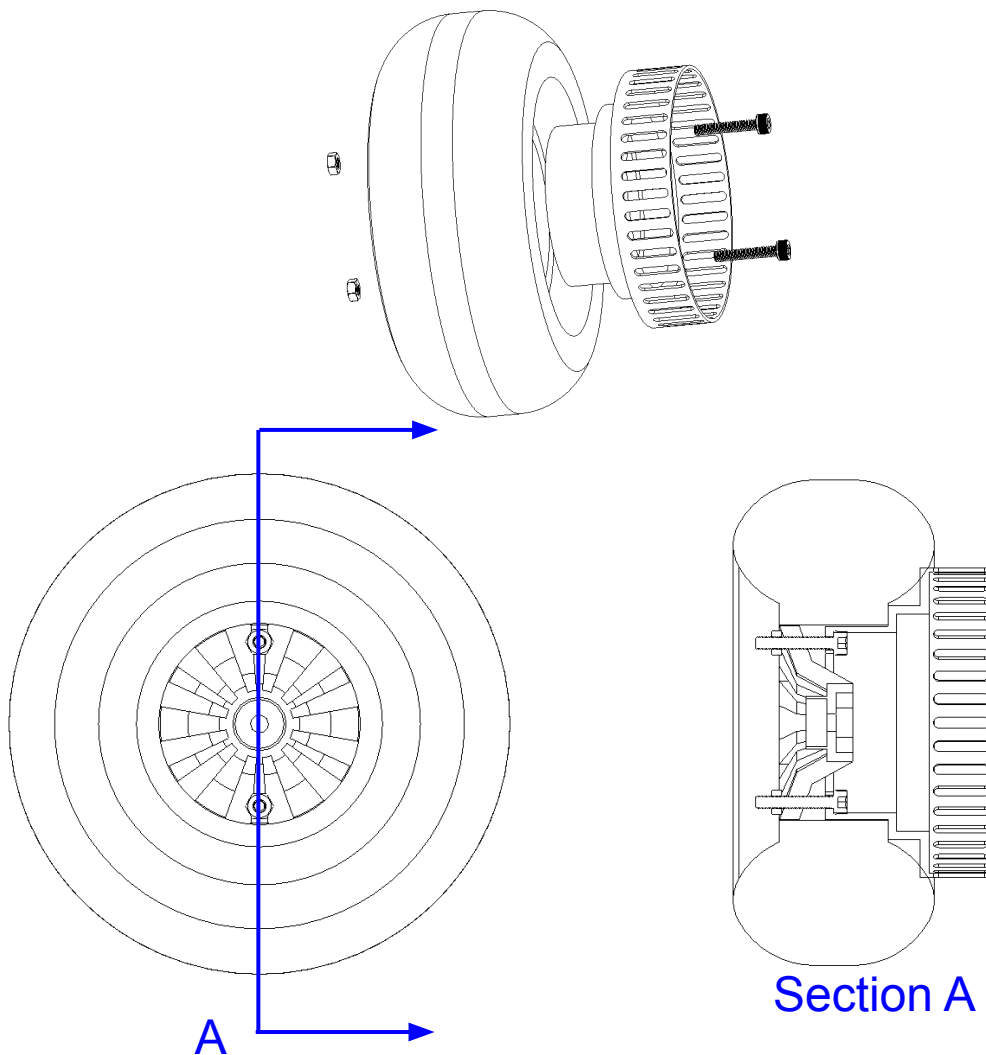


Put the wheel back.

Lidar


Temporarily remove the front bumper holder.

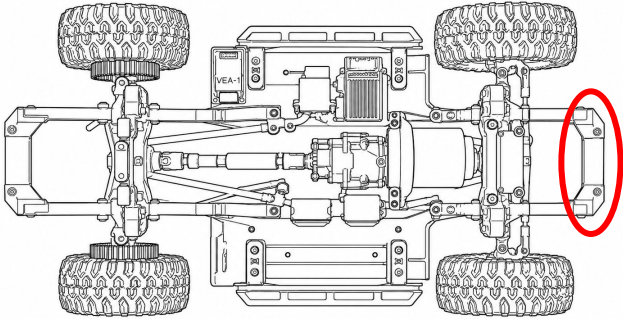


Place M3 nuts to the lidar mount assist bar.

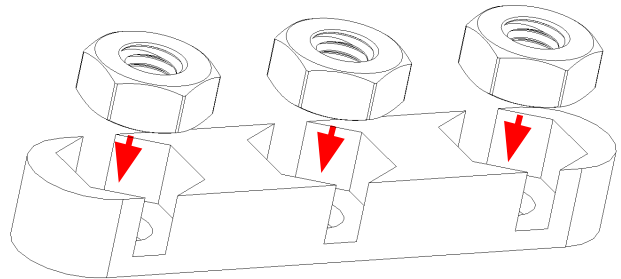

Place the lidar mount assist bar in the front bumper holder.

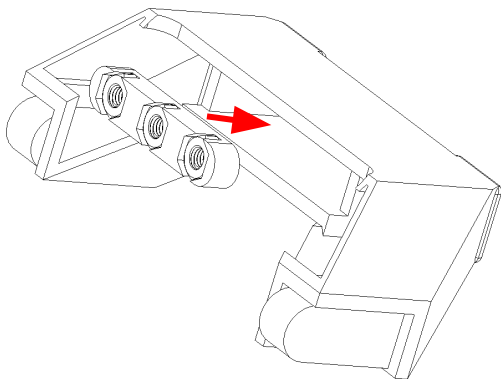

Install lidar to the lidar mount with two m3*10mm screws.

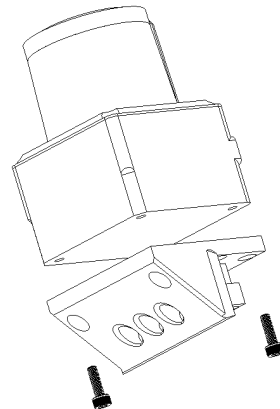

Install the mount to the bumper holder with 3 M3*10mm screws. And install the bumper back to the front of the car.

