

Lidar


Temporarily remove the front bumper holder.

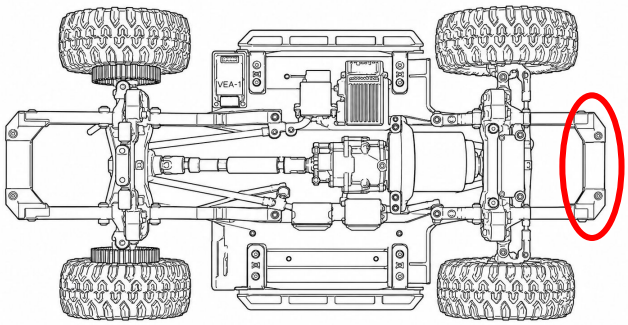


Place M3 nuts to the lidar mount assist bar.

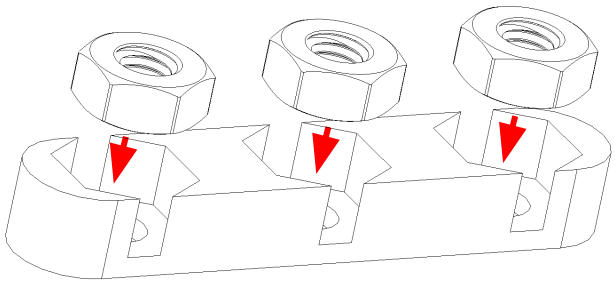


Place the lidar mount assist bar in the front bumper holder.

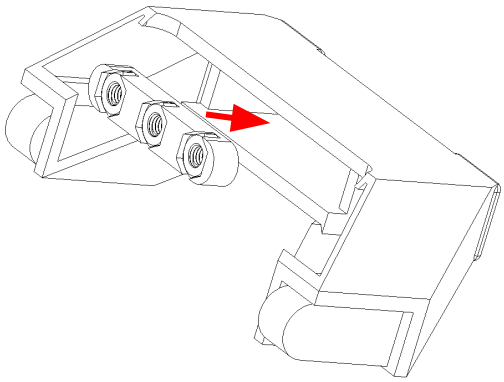


Install lidar to the lidar mount with two m3*10mm screws.

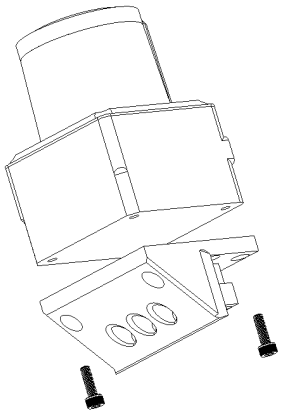


Install the mount to the bumper holder with 3 M3*10mm screws. And install the bumper back to the front of the car.

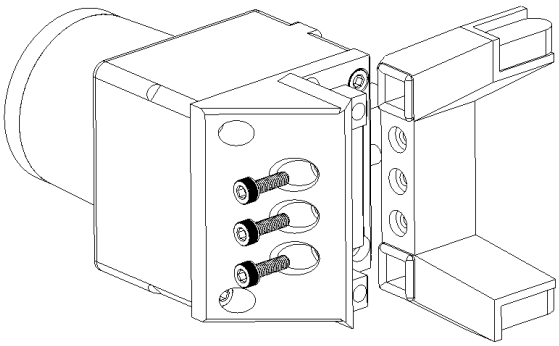

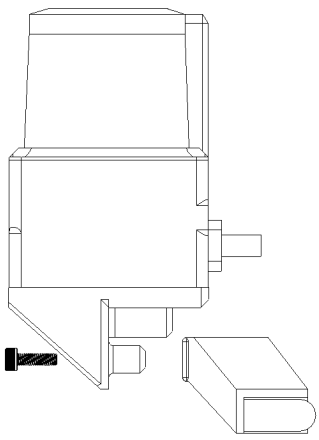

Camera Mount

Install camera on a 5 by 5 small platform with M3x10mm screws.

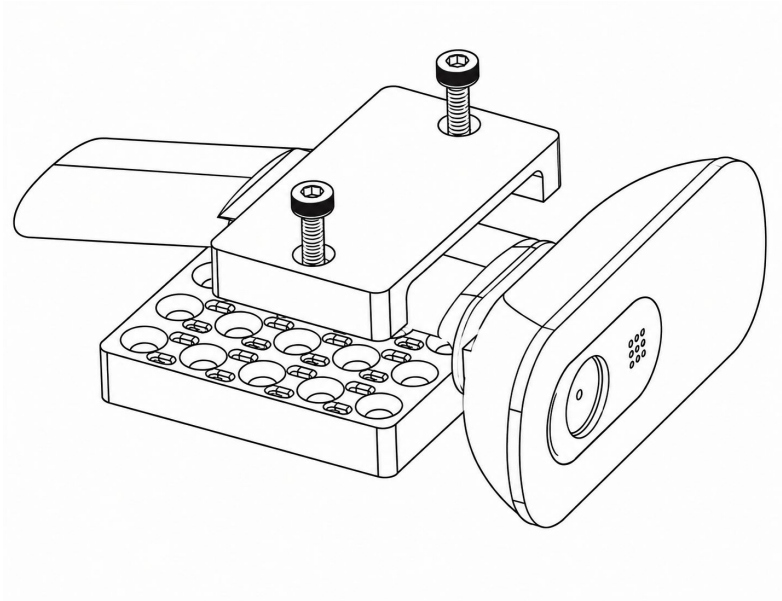


Budget version: Replace lidar


Normal version: On top of lidar hat

Tail Mount


Remove the highlight part from the chassy.

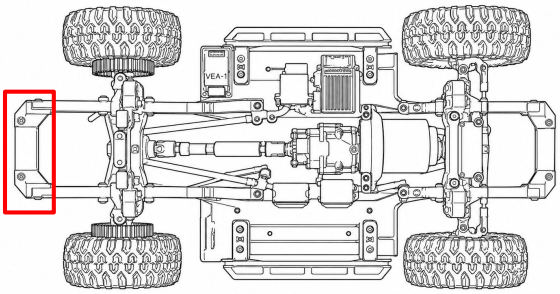


Install the tooth in the side beam with m3 x 6mm screws.

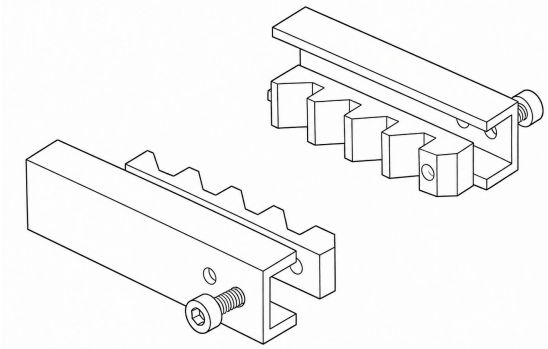


Install m3 heated insert at both side.

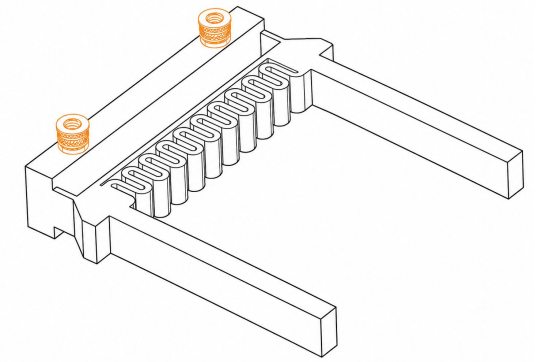

Install two custom plates with M3 x 10mm sink head screws.

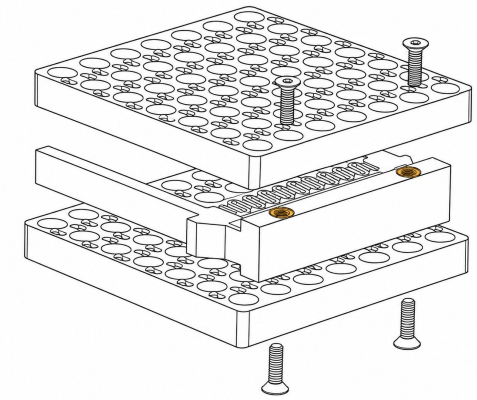

For quick install, push the back plate in to the tooth.

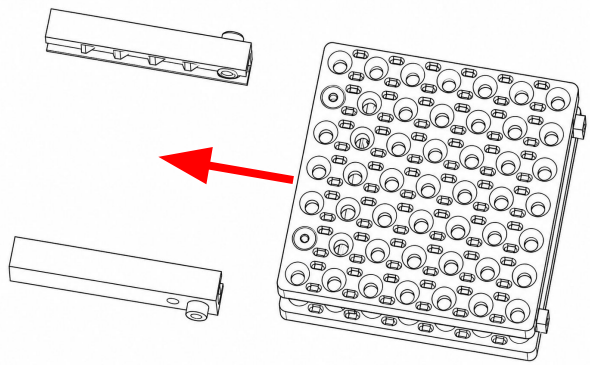

For quick removal, press the leverages and pull.

