


# ZED-F9P

# Moving base applications

**Application Note** 

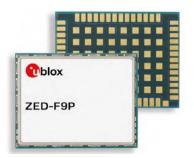

#### **Abstract**

This application note explains how the ZED-F9P multi-band GNSS receiver can be employed in applications that require high precision relative position output or heading and attitude information.





# **Document Information**

Title	Product Name		
Subtitle	ZED-F9P Moving base	application information	
Document type	Application Note		
Document number	UBX-19009093		
Revision and date	R01	16-May-2019	
Disclosure Restriction	1		

This document applies to the following products:

Product name	Type number	Firmware version	Product status
ZED-F9P	ZED-F9P-00B	HPG1.11	Initial Production

u-blox or third parties may hold intellectual property rights in the products, names, logos and designs included in this document. Copying, reproduction, modification or disclosure to third parties of this document or any part thereof is only permitted with the express written permission of u-blox.

The information contained herein is provided "as is" and u-blox assumes no liability for its use. No warranty, either express or implied, is given, including but not limited to, with respect to the accuracy, correctness, reliability and fitness for a particular purpose of the information. This document may be revised by u-blox at any time without notice. For the most recent documents, visit www.u-blox.com.

Copyright © u-blox AG.

UBX-19009093 - R01 Page 2 of 25



# Contents

Document Information	2
Contents	3
1 Introduction	4
1.1 Terminology and fundamentals	4
1.2 Real-world applications	5
2 System level consideration	9
2.1 GNSS antenna considerations for moving base RTK	9
2.1.1 Ground plane size and shape	9
2.1.2 Multipath/obscuration from surrounding structure	10
2.2 Providing corrections between base and rover	11
2.2.1 Wired connection between base and rover	12
2.2.2 Wirelessly connected base and rover moving independently	13
2.2.3 Testing and debugging an RF link application	15
2.2.4 Improving RF link performance	
2.3 Receiver configurations	17
2.3.1 Default 1 Hz navigation rate application	17
2.3.2 5 Hz navigation rate application	18
2.4 Using the heading output	20
3 Using the C099-F9P as a moving base application	21
3.1 Wired UART base and rover	22
Appendix	23
A Glossary	23
Related documents	24
Revision history	24
Combook	25



# 1 Introduction

The ZED-F9P multi-band GNSS receiver [1] has integrated u-blox multiband RTK technology for centimeter level accuracy. This Application Note explains how ZED-F9P can be employed in applications that require high precision relative position output or heading information. This is enabled by the so called moving base support in the module firmware.

In this first section, the basic terminology and essential elements of a moving base setup with two or more GNSS receivers will be introduced and typical application scenarios sketched. The following section covers in-depth system level considerations from antenna placement up to module configuration. This makes up the core of this Application Note and is addressed to practitioners. Finally, we present how a moving base application can be easily set up with the help of the C099-F9P application board.

# 1.1 Terminology and fundamentals

RTK technology introduces the concept of a **base** and a **rover**. In such a setup, the base sends a continuous differential correction data stream (complying with the RTCM 3.3 protocol) to one or more rovers via a communication link. This enables the rover to compute its position relative to the base with high accuracy. The distance between base and rover is called the **baseline**.

In the standard RTK mode, the base remains static in a known position, while in the moving base (MB) RTK mode, both base and rover receivers can move. The latter is ideal for applications where the relative position offset between two moving vehicles is required such as, for example, the follow-me feature on a UAV.

The moving base feature also enables derivation of the **vehicle orientation** by mounting two or three GNSS receivers on the same vehicle platform, i.e. by fixing the position of the GNSS antennas relative to each other.

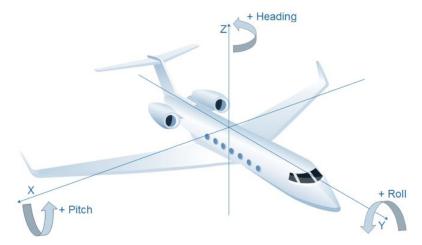


Figure 1: Orientation of a vehicle in space.

Mounting two antennas on the X-axis will give heading and roll information.

With three antennas you can derive full attitude; heading, roll and pitch.

The **heading** information and **relative position** is output by the rover. See Section 2.4 on the output from ZED-F9P.

UBX-19009093 - R01 Page 4 of 25



#### Using differential correction data for the base receiver

If the **absolute position** of the rover is required with high precision, the base unit can be provided with correction data, as well. See Figure 2 for such a setup. This will allow the base to enter **RTK Fixed mode** with the resultant improvement of absolute position accuracy. Without receiving corrections, the base will have standard 3D Fix position accuracy.

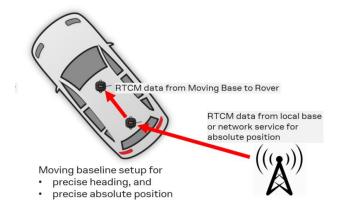


Figure 2: Moving base setup for precise heading and precise absolute position of the rover

In Figure 2, the rear antenna is the base antenna, front antenna is the rover antenna. Heading is from the base to the rover antenna.

# 1.2 Real-world applications

Moving base support can be used in a wide area of applications, for example:

- Drone attitude and heading determination
- Drone "follow me" sport and filming applications
- Ship heading determination
- Ship portable pilot units
- Vehicle heading determination
- Heavy machinery motion control
- Farming vehicle heading determination and control
- Traditional survey with moving base addition
- Sports data analysis
- Cellular base station antenna pointing

UBX-19009093 - R01 Page 5 of 25





Figure 3: Drone attitude determination – base and rover on drone



Figure 4: Farming application – position and heading, base and rover on vehicle

UBX-19009093 - R01 Page 6 of 25

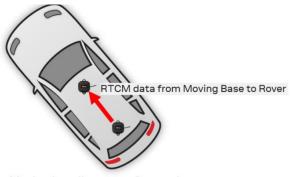




Figure 5: Drone - "follow me" filming, only a rover on the drone typically



Figure 6: Heavy machinery control - blade leveling and heading, base and rover on vehicle



Moving baseline setup for precise heading

Figure 7: Automotive vehicle heading determination - base and rover on vehicle

UBX-19009093 - R01 Page 7 of 25





Figure 8: Antenna pointing systems - base and rover on single cell antenna panel



Figure 9: Portable ship pilot systems for entering/exiting harbors - base and rover on ship

Table 1 describes typical parameters of the above mentioned applications.

Application	Key data	Number of GNSS receivers	Baseline length and type
Drone attitude and heading determination	Roll, pitch and yaw	3	Fixed baseline, 20-30 cm
Drone "follow me" sport and filming applications	Heading, relative position	2	Several meters
Precise ship navigation	Heading	2	Fixed baseline, up to 100 m
Automotive vehicle heading determination	Heading	2	Fixed baseline, 1-3 m
Antenna attitude measurement and control	Heading / attitude	2	Fixed baseline, 10-50 cm

Table 1: Typical moving base applications and key characteristics

UBX-19009093 - R01 Page 8 of 25



# 2 System level consideration

As outlined in the previous section, two or more GNSS receivers (with separate antennas) are required to determine the relative position between the GNSS receivers. We will now provide recommendations and detailed examples on how to develop high-performance moving base applications with u-blox ZED-F9P receivers.

## 2.1 GNSS antenna considerations for moving base RTK

Note: The following points only need to be considered if a patch antenna is used and the application has a short baseline and minimal space for ground planes. Typically, these points need to be considered for heading determination in drones and cellular antenna pointing. The use of a helix antenna would be ideal for such applications as they do not require ground planes. Long baselines (meters to kilometers) are not affected.

If used on the same vehicle for heading and precise attitude determination (a drone for example), the antennas should be identical and ideally on an identical ground plane size and shape. In addition the antennas should be orientated in the same plane:

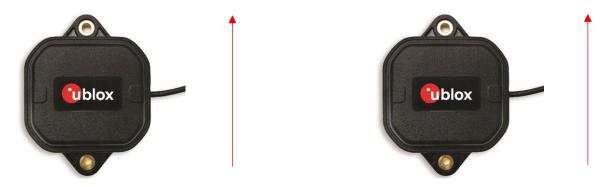


Figure 10: Very short baseline, heading application - patch antenna mounting

Note that the two antennas are mounted in exactly the same orientation.

## 2.1.1 Ground plane size and shape

In an application where the base and rover are far removed from each other, such as where the rover is on a drone and the base is on a ship, the ground plane shape will have much less effect as the baseline is very long – kilometers possibly. However there is still a requirement that each antenna has the minimum ground plane size, unless the antenna is a helix that does not require a ground plane for good RTK performance. Helix antennas do not require a ground plane.

A minimum ground plane size and uniform shape is required for best performance if using a patch antenna in a heading application on a moving object such as a drone with a short distance between the antennas. The shorter the distance between the two antennas is, the more critical this becomes. The ground plane shape could distort the antenna phase center offset and could create an error in position. The performance of a patch antenna for good RTK performance is also affected by the size and shape of the ground plane. A helix antenna would prevent such issues.

UBX-19009093 - R01 Page 9 of 25



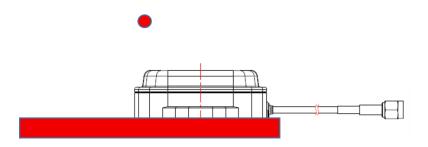


Figure 11: Average antenna phase center offset due to ground plane offset.

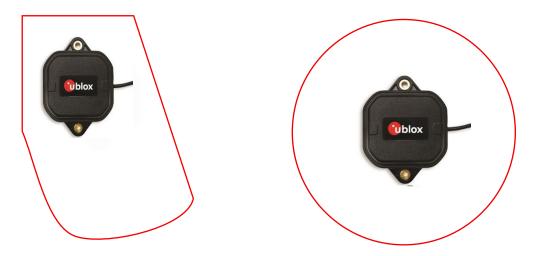


Figure 12: Non uniform ground plane shape will offset the phase center (image on the left), Uniform circular ground plane (10 cm) provides best accuracy and performance (image on the right).

# 2.1.2 Multipath/obscuration from surrounding structure

Any surrounding structure will cause multipath (causing position error) and obscure the satellites. Therefore ensure that the GNSS antenna are above any structures that may cause this issue.



Figure 13: Drone application and recommended position of the GNSS antennas.

UBX-19009093 - R01 Page 10 of 25





Mount antennas above metal back plane

Figure 14: Cellular base station antenna pointing application.



Antennas mounted up and away from structure

Figure 15: Antenna placement in heavy machinery/machine control application.

# 2.2 Providing corrections between base and rover

For each navigation epoch the base will produce a batch of RTCM 3.3 compliant messages:

RTCM 4072.0 Reference station PVT information
 RTCM 4072.1 Reference station timing information

• RTCM 1077 GPS MSM7

RTCM 1087 GLONASS MSM7
 RTCM 1097 Galileo MSM7
 RTCM 1127 BeiDou MSM7

RTCM 1230 GLONASS code-phase biases

UBX-19009093 - R01 Page 11 of 25



For optimal MB RTK operation, this group of messages should be received at the rover without transmission losses or errors. The size of the messages can vary dependent on the number of satellites received and the selected GNSS constellations.

The UART2 interface has been assigned as the default RTCM interface. By default the ZED-F9P UART2 is assigned a baud rate of 38400 baud. This will need to be increased for navigation rates above 1 Hz. For the UART interface a speed of 460800 baud is ideal.

The **latency** of RTCM data transfer at higher than 1 Hz navigation rates is critical to ensure best RTK performance and achievable navigation rate at the rover.

- The MB rover can only compute an optimal MB RTK solution if the time-matched RTCM observation and position messages are received within a predefined time limit. The MB rover will wait up to 700 ms for messages before falling back to an extrapolated MB RTK solution. The MB rover will extrapolate the MB reference observations and/or position for up to 3 s before falling back to standard GNSS operation.
- The achievable update rate of the MB RTK solution is limited by the communication link latency.
  As a rule of thumb, the communication link latency should be about half the desired navigation
  update period. If it exceeds 700 ms, the MB rover will not be able to compute an MB RTK solution,
  even at 1 Hz.
- Since the MB rover must wait for time-matched RTCM corrections from the MB RTK reference to compute its position, the overall latency of the MB RTK solution will be the sum of the communication link latency plus the MB RTK computation time.

#### 2.2.1 Wired connection between base and rover

For a standard moving platform heading determination application the corrections from the moving base are supplied via a serial port to the rover. This can be on any of the available ports:

- UART1
- UART2
- USB (only via a USB "slave master slave" implementation)
- I2C (only via an I2C "slave master slave" implementation)
- SPI (only via an SPI "slave master slave" implementation)

It is important to ensure that ideally only the RTCM correction data are supplied on the UART, I2C and SPI ports between the two units.

No other protocols other than RTCM are enabled by default. No RTCM messages are enabled by default to be output. This allows the UART2, base TX/rover RX, between the two devices to be connected together without issues such as buffer overflows or the wrong messages being sent into the rover ZED-F9P unit if powered on with default configuration. For example do not allow NMEA output messages to be fed back into a UART. They are disabled by default. Only enable the required RTCM messages to be output on the base ZED-F9P UART2.

Figure 16 shows a high-level schematics diagram of a design where base and rover are connected via the corresponding UART2 interfaces of the two ZED-F9P modules.

UBX-19009093 - R01 Page 12 of 25



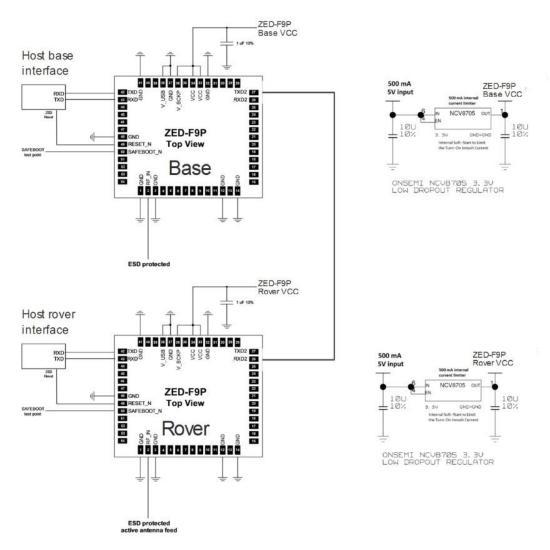


Figure 16: Schematics diagram of base and rover connected via their UART2 interfaces.

T

**Note:** Level converters and buffers may be required on the ZED-F9P RX/TX lines to the host. These must be supplied by the ZED VCC to ensure the correct ZED I/O states at power up and power off.

# 2.2.2 Wirelessly connected base and rover moving independently

In some of the moving base applications illustrated before, for example in a ship-to-drone application, both base and rover are moving independently of each other. They are connected via a wireless link.

Typically this wireless link will have a single RX/TX interface. Therefore ZED-F9P UART1 should be used as it supports both NMEA, UBX and RTCM 3.3 protocols.

- RTCM data would be streamed to the drone from the ZED-F9P base
- UBX and NMEA would be streamed back to the host (Note: not the ZED-F9P base)

The radio system must be capable of supporting the RTCM messages downstream and the NMEA upstream, ensuring that the RTCM message transmission can be completed fast enough to support the desired rover update rate.

The throughput requirements for the wireless link are stricter if the maximum MB navigation rate of 5 Hz is to be supported. In this case, the communication link must be able to stream RTCM messages to the rover with a latency of roughly 100 ms. This link must also be capable to stream back the NMEA/UBX data back to the host at 5 Hz. The amount of UBX messages and the type of messages (such as UBX debug info) will have a drastic effect on the link capacity and latency. Dependent on

UBX-19009093 - R01 Page 13 of 25



whether the RF link is also expected to carry a user system protocol and other data this could be more difficult than expected.

2.4 GHz technologies such Classic Bluetooth® and Wi-Fi are good for relatively short range applications¹. They have the RF throughput and low latency capacity as long as any user data does not load the data link to the detriment of the RTCM stream requirements.

Wi-Fi at 2.4 GHz offers good range with a 2.4 GHz single-band antenna due to better gain than a dual band 2.4/5 GHz Wi-Fi antenna. If the UDP protocol is used over the link, it offers the lowest latency and reduced data flow over the link.

Legacy low power RF devices are usually not suited due to their limited TX buffer size and real time link data transfer capacity.

Longer ranges will require RF links with greater RF transmit power/ lower frequency, but will need to have the same throughput and latency requirement if running the ZED-F9P at 5 Hz navigation rate. In most countries longer communication ranges will require the use of RF links in licensed bands, however other countries do allow much higher TX power on 2.4 GHz and 900 MHz bands than Europe for example.

Considering that the minimum baud rate is 38400 baud for a 1 Hz navigation rate application and 460800 baud is recommended for a 5 Hz navigation rate application this will usually limit what radio technology can be used as the gross data rate will need to be considerably higher to transfer data forwards and backwards.

Bluetooth LE and Bluetooth 5 are not ideal technologies for the RF link between base and rover considering required throughput and range. Consider these very carefully along with practical testing before implementing these as the RF solution.

Figure 17 shows the schema for a ZED-F9P base connected to a ZED-F9P rover via a wireless link.

UBX-19009093 - R01 Page 14 of 25

<sup>&</sup>lt;sup>1</sup> Bluetooth® is a registered trademark of Bluetooth SIG, Inc.



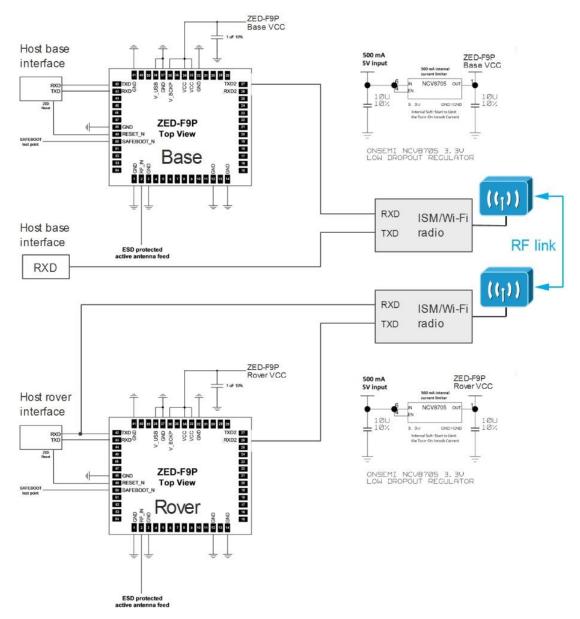


Figure 17: Schematics diagram of base and rover connected via a wireless link.

- Note: Level converters and buffers may be required on the ZED-F9P RX/TX lines. These must be supplied by the ZED VCC to ensure the correct ZED-F9P I/O states at power up and power off.
- Note: This circuit assumes the rover is already configured to provide the required output messages for the remote host. If dynamic message selection during use on the rover is required the base host will need to have a gate to interrupt the RTCM message flow from the base to the rover and insert UBX configuration commands. This will however result in a loss of RTCM messages at the rover during this transfer of commands.

## 2.2.3 Testing and debugging an RF link application

An RF link by definition and operation will be susceptible to loss of data, fading and limited RF link rate. In addition the TX/RX buffer size and any existing protocol used will have a dramatic effect on actual reception of RTCM messages. Moving baseline applications have more stringent requirements than standard static base RTK applications.

UBX-19009093 - R01 Page 15 of 25



The time tagged RTCM messages must arrive complete at the rover to be used for an RTK epoch. If we are already in RTK Fixed mode the rover will extrapolate the missing message data for a maximum time of 3 seconds. After this it will drop out of RTK mode entirely into 3D fix mode.

3

If running at higher than 1 Hz navigation rate the latency in the rover receiving a group a valid time tagged messages becomes a factor. This is most evident at 5 Hz navigation rate with default GNSS constellations. The rover RTK solution will effectively slow down its navigation rate if the latency is too high. A UART speed of 460800 baud is ideal for this application. However the effective RF link rate and TX/RX buffer size must be sufficient at this UART speed as the ZED-F9P does not support hardware flow control.

It is quite simple to monitor the effective rover navigation rate and if there are any missing messages:

- UBX-NAV-RELPOSNED message generated by the rover will indicate if there are any missing messages and their effect.
- 2. UBX-NAV-PVT or NMEA RMC message can be monitored to see the effective navigation rate achieved. Any other message could be used, but these are good examples as they should be set to be output at the effective navigation rate. UBX-NAV-RELPOSNED can also be used if it is set to be output at the selected navigation rate. In other words at a message rate of "1".

Note: Since the MB rover waits up to 700 ms for RTCM messages to arrive before falling back to an extrapolated MB RTK solution, a corruption or an interruption in the RTCM correction stream can result in the navigation rate temporarily dropping to 1 Hz. Once the RTCM stream is reliably restored, the navigation rate will return to the configured value. Any message set to be output at the navigation rate will drop to 1 Hz output during this time.

Ensuring the RF link reliability and throughput is important in achieving high navigation update rates.

Name	Description
gnssFixOK	A valid fix (i.e. within DOP and accuracy masks)
diffSoln	1 if differential corrections were applied
relPosValid	1 if relative position components and accuracies are valid and, in moving base mode only, if baseline is valid
carrSoln	Carrier phase range solution status:
	0 = no carrier phase range solution
	1 = carrier phase range solution with floating ambiguities
	2 = carrier phase range solution with fixed ambiguities
isMoving	1 if the receiver is operating in moving base mode
refPosMiss	1 if extrapolated reference position was used to compute moving base solution this epoch
refObsMiss	1 if extrapolated reference observations were used to compute moving base solution this epoch
relPosHeadingValid	1 if relPosHeading is valid

Table 2: UBX-NAV-RELPOSNED bit field flags for monitoring link missing messages and rover Moving base RTK status

For monitoring missing messages, the two important fields are refPosMiss and refObsMiss:

If the RTCM 4072.0 (Reference station PVT information) message is missing the refPosMiss field will be set to "1".

If any of the observation messages required are missing (1077, 1087, 1097, 1127) the refObsMiss field will be set to "1".

If any of these two fields are set at "1" for more than 3 seconds the rover will drop from RTK to standard 3D Fix mode.

## 2.2.4 Improving RF link performance

The following steps can be applied to optimize the performance of a wireless base-rover setup.

UBX-19009093 - R01 Page 16 of 25



- 1. Start by sending the minimum number of message back from the rover.
- 2. Select 1 Hz navigation rate and check UBX-NAV-RELPOSNED message flag fields for missing messages. Slowly increase navigation rate if required. Check UBX-NAV-RELPOSNED flags and the effective navigation rate by monitoring the rate message output. If NMEA RMC or UBX-NAV-PVT output does not match the set navigation rate the link latency and missing messages are having an effect. RF range will have a factor here. If the link cannot work as expected with the base and rover near each other it will not work at real ranges.
- 3. Test at the expected RF range and environment, monitor as indicated in point 2 above. If your expected range is not achieved, ensure that the antennas on base and rover have the maximum legal gain for the frequency you are transmitting at and are not obscured in any way. If the range you need is higher than the link can support reliably another RF technology could be required.
- 4. Reducing the GNSS systems being received on the base and rover will reduce the number of messages and message contents that need to be transferred. If in reality only GPS is needed, then the other systems can be disabled. Otherwise decide on the minimum GNSS constellations you may need and disable those you can do without to help reduce RF latency and load.

# 2.3 Receiver configurations

### 2.3.1 Default 1 Hz navigation rate application

Running at a default 1 Hz navigation rate is the simplest implementation especially when a wireless link is used between base and rover. The minimum baud rate is 38400 baud if using NMEA only and the required RTCM 3.3 compliant messages.

By default the receivers operate at 1 Hz, therefore no configuration of the navigation rate is required.

- The default UART2/UART1 baud rate of 38400 baud does not need changing.
- Set base ZED-F9P to output the required RTCM messages on UART2.

Note: The binary messages include writing the configuration to flash for each message.

1. Set the base ZED-F9P UART2 to output the required RTCM messages:

Key	Key ID	Type	Value	RAM	FLASH
CFG-MSGOUT-RTCM_3X_TYPE4072_0_UART2	0x20910300	U1	1 (0x1)	1	1

Binary message: B5 62 06 8A 09 00 00 05 00 00 00 03 91 20 01 53 51

Key	Key ID	Туре	Value	RAM	FLASH
CFG-MSGOUT-RTCM_3X_TYPE4072_1_UART2	0x20910383	U1	1 (0x1)	1	1

Binary message: B5 62 06 8A 09 00 00 05 00 00 83 03 91 20 01 D6 E0

Key	Key ID	Type	Value	RAM	FLASH
CFG-MSGOUT-RTCM_3X_TYPE1077_UART2	0x209102ce	U1	1 (0x1)	1	1

Binary message: B5 62 06 8A 09 00 00 05 00 00 CE 02 91 20 01 20 53

Key	Key ID	Type	Value	RAM	FLASH
CFG-MSGOUT-RTCM_3X_TYPE1087_UART2	0x209102d3	U1	1 (0x1)	1	1

Binary message: B5 62 06 8A 09 00 00 05 00 00 D3 02 91 20 01 25 6C

Key	Key ID	Type	Value	RAM	FLASH
CFG-MSGOUT-RTCM_3X_TYPE1097_UART2	0x2091031a	U1	1 (0x1)	1	1

Binary message: B5 62 06 8A 09 00 00 05 00 00 1A 03 91 20 01 6D D3

UBX-19009093 - R01 Page 17 of 25



Key	Key ID	Туре	Value	RAM	FLASH
CFG-MSGOUT-RTCM_3X_TYPE1127_UART2	0x209102d8	U1	1 (0x1)	1	1

#### Binary message: B5 62 06 8A 09 00 00 05 00 00 D8 02 91 20 01 2A 85

Key	Key ID	Туре	Value	RAM	FLASH
CFG-MSGOUT-RTCM_3X_TYPE1230_UART2	0x20910305	U1	1 (0x1)	1	1

#### Binary message: B5 62 06 8A 09 00 00 05 00 00 05 03 91 20 01 58 6A

With both base and rover having their own antenna connected, the base will output all the RTCM messages and the rover will go to RTK Fixed mode if GNSS signal conditions are ok.

The host UART1 interface will have additional messages enabled as per the user's requirement, however the rover must output UBX-NAV-RELPOSNED message to the host for the heading and base line length output.

2. Enable UBX-NAV-RELPOSNED on the rover UART1:

Key	Key ID	Type	Value	RAM	FLASH
CFG-MSGOUT-UBX_NAV_RELPOSNED_UART1	0x2091008e	U1	1 (0x1)	1	1

Binary message: B5 62 06 8A 09 00 00 05 00 00 8E 00 91 20 01 DE 0B

Ŧ

The UART2 interface of ZED-F9P currently does not support UBX messages.

## 2.3.2 5 Hz navigation rate application

The base and rover UART2 baud rate has to be configured to 460800 baud:

- Set navigation rate on base and rover to 5 Hz (200 ms).
- Set UART1 and UART2 on the base and rover to 460800 baud.
- Enable the required RTCM messages as shown above on the base.
- 1. Both base and rover navigation rate configuration done first:

Send this message to each unit.

Key	Key ID	Type	Value	RAM	FLASH
CFG-RATE-MEAS	0x30210001	U2	200 (0xc8)	1	1

Binary message: B5 62 06 8A 0A 00 00 05 00 00 01 00 21 30 C8 00 B9 A5

UBX-19009093 - R01 Page 18 of 25



#### 2. Both base and rover UART1 and UART2 configuration done next:

Send these messages to base and rover unit.

Key	Key ID	Туре	Value	RAM	FLASH
CFG-UART1-BAUDRATE	0x40520001	U4	460800	1	1
			(0x70800)		

#### Binary message: B5 62 06 8A 0C 00 00 05 00 00 01 00 52 40 00 08 07

Key	Key ID	Type	Value	RAM	FLASH
CFG-UART2-BAUDRATE	0x40530001	U4	460800 (0x70800)	1	1

Binary message: B5 62 06 8A 0C 00 00 05 00 00 01 00 53 40 00 08 07

#### 3. Now enable the required RTCM messages on the base UART2:

Key	Key ID	Type	Value	RAM	FLASH
CFG-MSGOUT-RTCM_3X_TYPE4072_0_UART2	0x20910300	U1	1 (0x1)	1	1

#### Binary message: B5 62 06 8A 09 00 00 05 00 00 00 03 91 20 01 53 51

Key	Key ID	Туре	Value	RAM	FLASH
CFG-MSGOUT-RTCM_3X_TYPE4072_1_UART2	0x20910383	U1	1 (0x1)	1	1

#### Binary message: B5 62 06 8A 09 00 00 05 00 00 83 03 91 20 01 D6 E0

Key	Key ID	Type	Value	RAM	FLASH
CFG-MSGOUT-RTCM_3X_TYPE1077_UART2	0x209102ce	U1	1 (0x1)	1	1

#### Binary message: B5 62 06 8A 09 00 00 05 00 00 CE 02 91 20 01 20 53

Key	Key ID	Type	Value	RAM	FLASH
CFG-MSGOUT-RTCM_3X_TYPE1087_UART2	0x209102d3	U1	1 (0x1)	1	1

#### Binary message: B5 62 06 8A 09 00 00 05 00 00 D3 02 91 20 01 25 6C

Key	Key ID	Туре	Value	RAM	FLASH
CFG-MSGOUT-RTCM_3X_TYPE1097_UART2	0x2091031a	U1	1 (0x1)	1	1

#### Binary message: B5 62 06 8A 09 00 00 05 00 00 1A 03 91 20 01 6D D3

Key	Key ID	Type	Value	RAM	FLASH
CFG-MSGOUT-RTCM_3X_TYPE1127_UART2	0x209102d8	U1	1 (0x1)	1	1

#### Binary message: B5 62 06 8A 09 00 00 05 00 00 D8 02 91 20 01 2A 85

Key	Key ID	Туре	Value	RAM	FLASH
CFG-MSGOUT-RTCM_3X_TYPE1230_UART2	0x20910305	U1	1 (0x1)	1	1

#### Binary message: B5 62 06 8A 09 00 00 05 00 00 05 03 91 20 01 58 6A

With both base and rover having their own GNSS antenna connected, the base will output all the RTCM messages and the rover will go to RTK Fixed mode if GNSS signal conditions are ok.

UBX-19009093 - R01 Page 19 of 25



The host UART1 interface will have additional messages enabled as per the user's requirement, however the rover must output UBX-NAV-RELPOSNED message to the host for the heading and base line length output.

#### 4. Enable UBX-NAV-RELPOSNED on the rover UART1:

Key	Key ID	Туре	Value	RAM	FLASH
CFG-MSGOUT-UBX_NAV_RELPOSNED_UART1	0x2091008e	U1	1 (0x1)	1	1

Binary message: B5 62 06 8A 09 00 00 05 00 00 8E 00 91 20 01 DE 0B



The UART2 interface of ZED-F9P currently does not support UBX messages.

## 2.4 Using the heading output

The heading output will be provided by the ZED-F9P rover in the UBX-NAV-RELPOSNED message, see the ZED-F9P Interface Description [3] for details. This message will provide the actual RTK calculated distance between the two antennas and the resultant RTK heading output.

For an application where two antenna are mounted on the same moving platform, the known precise distance between the two antennas can be used to validate the heading output.

If the RTK calculated distance does not match closely what the actual known baseline distance is, you know there will be a possibility of error in the heading output, especially if the distance between antennas is very short.

This measured RTK distance is a quality indicator as we know what the actual precise baseline distance is.

The UBX-NAV-RELPOSNED heading output has no additional low pass filtering. This allows the user application to add additional low pass filtering depending on the application-specific operating conditions and required heading output for the end application.

For example, for cellular base station antenna attitude applications there will be a maximum settling time requirement for any large physical antenna heading change. The low pass filtering can be adjusted to match this to prevent short term effects affecting the heading output in the application. Known dynamics of the antenna position changes can also be used to filter out any sudden angular rates.

For automotive applications a different filtering strategy could be used due to the dynamics and rapidly changing satellite visibility. However sudden large angular rates should be filtered. Angular rates of automobiles in an urban canyon environment could be surmised. It this kind of environment that has the most multi-path and satellite obstruction causing position inaccuracy.

UBX-19009093 - R01 Page 20 of 25



# 3 Using the C099-F9P as a moving base application

The C099-F9P application board can be used in a base and rover pair using the Wi-Fi or wired serial connection for moving base applications.

In addition, the base C099-F9P can receive RTCM 3.3 compliant correction data to improve absolute accuracy.

Further resources are listed here:

- 1. Using Wi-Fi base and rover pair is covered in the C099-F9P User Guides
  - C099-F9P-AppBoard-ODIN-W2-CSW\_UserGuide\_(UBX-18055649).pdf <a href="https://www.u-blox.com/sites/default/files/C099-F9P-AppBoard-ODIN-W2-CSW\_UserGuide">https://www.u-blox.com/sites/default/files/C099-F9P-AppBoard-ODIN-W2-CSW\_UserGuide</a> (UBX-18055649).pdf
  - C099-F9P-AppBoard-Mbed-OS3-FW\_UserGuide\_(UBX-18063024).pdf https://www.u-blox.com/sites/default/files/C099-F9P-AppBoard-Mbed-OS3-FW\_UserGuide\_(UBX-18063024).pdf
- 2. Configuration files for moving base are provided in the u-blox GitHub repository:
  - Base ZED-F9P moving base configuration file: https://github.com/u-blox/ublox-C099\_F9P-uCS/blob/master/zed-f9p/F9P%20Base%20moving%20base%20config%20C99.txt
  - Rover ZED-F9P configuration file: https://github.com/u-blox/ublox-C099\_F9P-uCS/blob/master/zed-f9p/F9P%20Rover%20config%20C99.txt

These files must be downloaded using the u-center View  $\rightarrow$  Generation 9 Configuration View. They cannot be downloaded using the legacy configuration file download.

3. There is a more detailed quick guide for downloading the moving base configuration files:

https://github.com/u-blox/ublox-C099\_F9P-uCS/blob/master/zed-f9p/C99%20quick%20configuration%20Moving%20Base.pdf

4. u-center evaluation software: https://www.u-blox.com/en/product/u-center

UBX-19009093 - R01 Page 21 of 25



## 3.1 Wired UART base and rover

If two units are to be located close together for a heading application the boards can be connected using wires and there is no need for a wireless link.

In this case we connect UART1 of two boards. As one board will only transmit, and one will only receive, we can achieve the needed communication by connecting the base TX line to the rover RX line. In addition we connect the ground between the two boards.

The connections needed are summarized in the table below and illustrated in Figure 18.

BASE	ROVER	Remark	
J9 pin 2	J9 pin 1	Connects base TX line to rover RX line	
J8 pin 7	J8 pin 7	Connects ground between the two boards	
-	J18 jumper	Connect a jumper to the jumper header pins marked 40E_N on the board. This is the second jumper header pins from the top. This jumper is only needed on the rover board.	

Table 3: C099 UART1 wired connection list

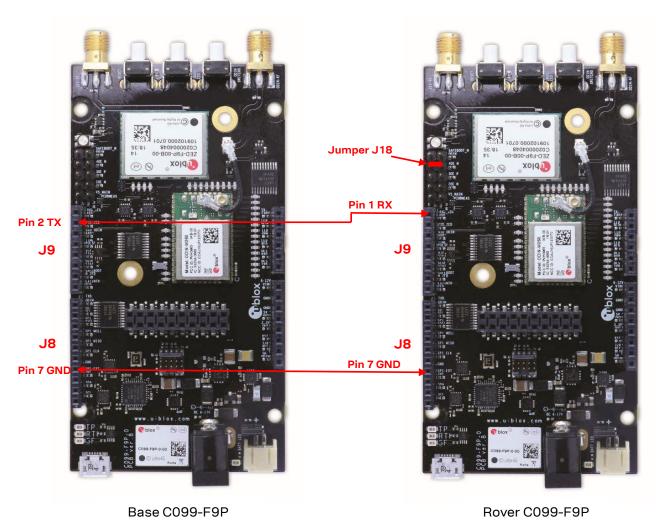


Figure 18: Two C099-F9P application boards connected via UART lines.

Use the ZED-F9P native USB ports to monitor and log the ZED-F9P modules output. Enable UBX-NAV-RELPOSNED message on the rover board to view the heading information.

UBX-19009093 - R01 Page 22 of 25



# **Appendix**

# A Glossary

Abbreviation	Definition			
GNSS	Global Navigation Satellite System			
ISM	Industrial, scientific and medical (radio band)			
NMEA	National Marine Electronics Association			
PVT	Position, Velocity and Time			
RF	Radio Frequency			
RMC	Recommended Minimum Sentence C			
RTCM	Radio Technical Commission for Maritime Services			
RTK	Real Time Kinematic			
RX	Reception			
TX	Transmission			
UART	Universal Asynchronous Receiver Transmitter			
UBX	Proprietary communication protocol for u-blox GNSS receivers. UBX messages have binary format.			
USB	Universal Serial Bus			
Wi-Fi	Wi-Fi is a technology for wireless local area networking of devices based on the IEEE 802.11 standards. a trademark of the Wi-Fi Alliance.			

Table 4: Explanation of the abbreviations and terms used.



# **Related documents**

- [1] ZED-F9P Data Sheet, Doc. No. UBX-17051259
- [2] ZED-F9P Integration Manual, Doc. No. UBX-18010802
- [3] ZED-F9P Interface Description, Doc. No. UBX-18010854
- [4] C099-F9P User Guide, Doc. No. UBX-18063024
- [5] ANN-MB DataSheet, Doc. No. UBX-18049862



For regular updates to u-blox documentation and to receive product change notifications, register on our homepage (www.u-blox.com).

# **Revision history**

Revision	Date	Name	Comments
R01	16-May-2019	ghun	Initial release



# Contact

For complete contact information, visit us at www.u-blox.com.

#### u-blox Offices

#### North, Central and South America

#### u-blox America, Inc.

Phone: +1 703 483 3180 E-mail: info\_us@u-blox.com

#### **Regional Office West Coast:**

Phone: +1 408 573 3640 E-mail: info\_us@u-blox.com

#### **Technical Support:**

Phone: +1 703 483 3185 E-mail: support@u-blox.com

#### Headquarters Europe, Middle East, Africa

#### u-blox AG

Phone: +41 44 722 74 44

E-mail: info@u-blox.com

Support: support@u-blox.com

#### Asia, Australia, Pacific

#### u-blox Singapore Pte. Ltd.

Phone: +65 6734 3811
E-mail: info\_ap@u-blox.com
Support: support\_ap@u-blox.com

#### Regional Office Australia:

Phone: +61 2 8448 2016 E-mail: info\_anz@u-blox.com Support: support\_ap@u-blox.com

#### Regional Office China (Beijing):

Phone: +86 10 68 133 545
E-mail: info\_cn@u-blox.com
Support: support\_cn@u-blox.com

#### Regional Office China (Chongqing):

Phone: +86 23 6815 1588
E-mail: info\_cn@u-blox.com
Support: support\_cn@u-blox.com

#### Regional Office China (Shanghai):

Phone: +86 21 6090 4832 E-mail: info\_cn@u-blox.com Support: support\_cn@u-blox.com

#### Regional Office China (Shenzhen):

Phone: +86 755 8627 1083
E-mail: info\_cn@u-blox.com
Support: support\_cn@u-blox.com

#### Regional Office India:

Phone: +91 80 405 092 00
E-mail: info\_in@u-blox.com
Support: support\_in@u-blox.com

#### Regional Office Japan (Osaka):

Phone: +81 6 6941 3660 E-mail: info\_jp@u-blox.com Support: support\_jp@u-blox.com

#### Regional Office Japan (Tokyo):

Phone: +81 3 5775 3850
E-mail: info\_jp@u-blox.com
Support: support\_jp@u-blox.com

## Regional Office Korea:

Phone: +82 2 542 0861
E-mail: info\_kr@u-blox.com
Support: support\_kr@u-blox.com

#### Regional Office Taiwan:

Phone: +886 2 2657 1090
E-mail: info\_tw@u-blox.com
Support: support\_tw@u-blox.com