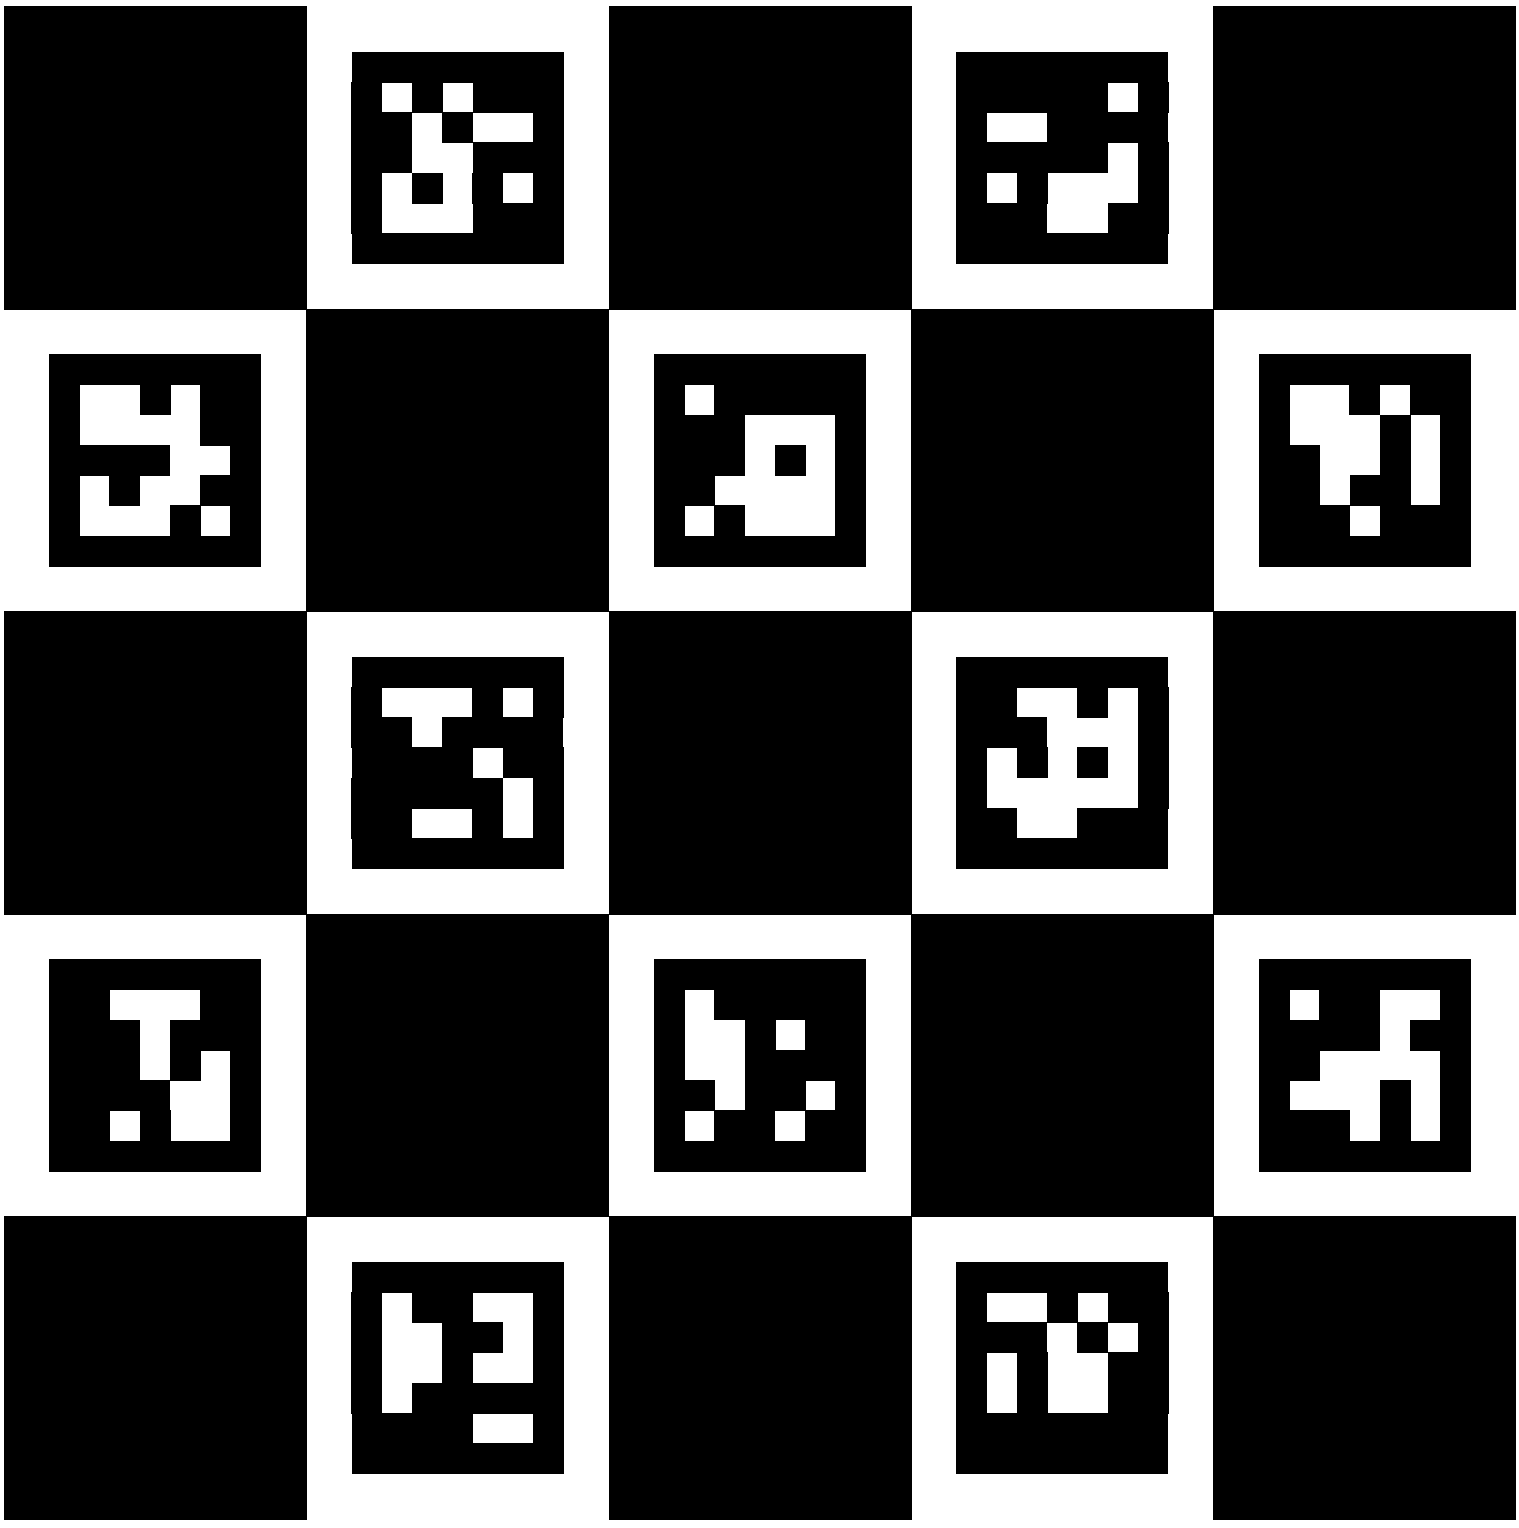



Conv-ChArT docking board: 5 x 5 ChArUco, 200 x 200 mm

DICT_5X5_50, markers 0-11, square 40.0 mm, marker 28.0 mm (ratio 0.7), 16 inner corners.
Config: cfg.yaml BOARD {squares: [5, 5], square_length_m: 0.040}; controller dock_demo.yaml board_square_m: 0.040.
Print on A4 at 100% / Actual size, with 'Fit to page' and 'Shrink oversized pages' turned off.
Then check with a ruler: the bar above must read 100 mm and the board 200 mm (each square 40.0 mm). If a square measures anything else, put the measured size (in metres) into both config entries: metric pose scales with it.
The board runs to 5 mm from the paper's sides. A printer that clips a millimetre of the outer black squares does no harm: the 16 corners are 40.0 mm in from the board's edge.
Mount flat on a rigid backing (foam board), board centre at the camera lens height. Matte paper, no gloss or laminate. If it is inkjet-printed, check the black squares still look black in the camera image.
As printed, corner 0 is the top-left inner corner (board x to the right, y down).

Generated by tools/board_pdf.py from cv2.aruco.CharucoBoard((5, 5), 1.0, 0.7, DICT_5X5_50) (Conv-ChArT dcc.board.get_board()), the layout the deployed models were trained on.