


GUIDE K35

Interface & Pinout

This document records the published GUIDE K35 Series 24-pin LCC assignments, signal directions, voltage levels, and carrier-board interface notes.

Pinout Diagram

Top view. Confirm package orientation before completing the PCB footprint or carrier-board layout.

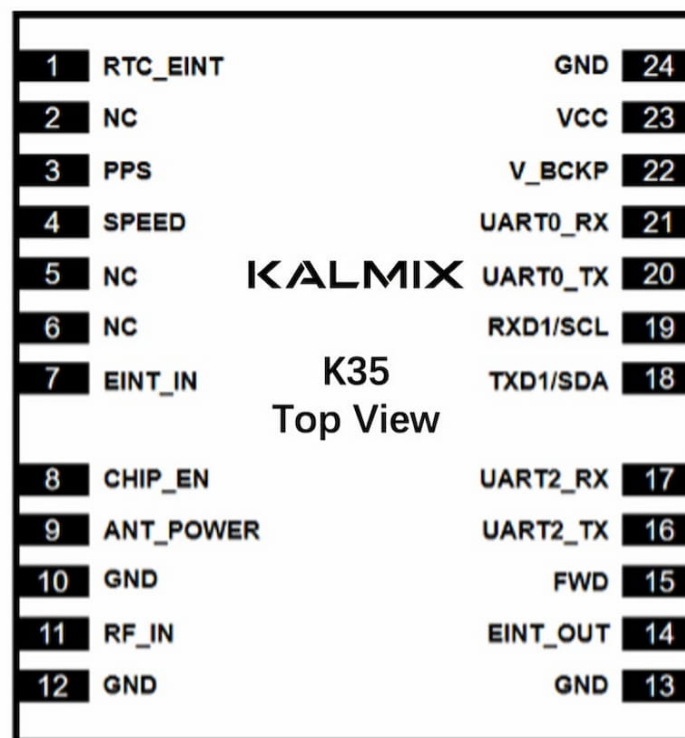

GUIDE K35 Series 24-pin LCC module pinout diagram, top view.

Interface Summary

UART0_TX and UART0_RX are the primary host interface. UART1 is multiplexed with I2C SDA/SCL, UART2 provides an additional serial pair, PPS provides timing output, and RF_IN / ANT_POWER support external GNSS antenna integration. SPEED and FWD are used for K35E dead-reckoning workflows.

Pin Descriptions

Leave unused NC pins unconnected. Verify every interface level and the RF/antenna requirements before finalizing the schematic.

Pin	Name	I/O	Description	Voltage / level
1	RTC_EINT	I	External interrupt input. Hold high for >10 ms to exit RTC mode. Leave unconnected if unused.	3.3 V
2	NC	-	Leave unconnected.	-
3	PPS	O	Timepulse output. Provides a 1 PPS timing signal.	2.8 V
4	SPEED	I	Wheel-speed pulse input for dead-reckoning workflows. Leave unconnected if unused.	2.8 V
5	NC	-	Leave unconnected.	-
6	NC	-	Leave unconnected.	-
7	EINT_IN	I	External interrupt input for sleep-mode wake-up.	1.8 V
8	CHIP_EN	I	Module enable and reset control. Active low.	3.3 V
9	ANT_POWER	O	Active-antenna power-supply output.	3.3 V
10	GND	G	Ground.	GND
11	RF_IN	I	GNSS antenna signal input. Use a 50 ohm RF path.	-
12	GND	G	Ground.	GND
13	GND	G	Ground.	GND
14	EINT_OUT	O	External host-enable output.	1.8 V
15	FWD	I	Forward/backward direction input for dead-reckoning workflows. Leave unconnected if unused.	2.8 V
16	UART2_TX	O	UART2 transmit output.	2.8 V
17	UART2_RX	I	UART2 receive input.	2.8 V
18	TXD1 / SDA	O / I/O	UART1 transmit output, multiplexed with I2C serial data (SDA).	2.8 V
19	RXD1 / SCL	I	UART1 receive input, multiplexed with I2C serial clock (SCL).	2.8 V
20	UART0_TX	O	UART0 transmit output. Primary serial port.	2.8 V
21	UART0_RX	I	UART0 receive input. Primary serial port.	2.8 V
22	V_BCKP	P	Backup-battery supply input.	2.2-3.6 V
23	VCC	P	Main power-supply input.	3.0-3.6 V
24	GND	G	Ground.	GND

Carrier-board note: confirm signal voltage compatibility, 50 ohm RF impedance, antenna-power requirements, grounding, package orientation, and PCB clearance before release. SPEED and FWD may remain unconnected when dead reckoning is not required.