

Installation [®] Instruction Wpc Fence



Installation list for 1 units(1800*1800mm):

A. Aluminum Post

1pcs

B. Top rail

1pcs

C. Bottom rail

1pcs

D. Fence board

12pcs

E. L bracket

4pcs

F. Post cap

1pcs

G. strip

2pcs

H. Anchoring

4pcs

I. Screws

16pcs

Extra accessories:

1. Deco slates

2. Steel holder

Install tools: Impact drill and tape



Dimension for each assembly units:

For example:

Height of screen : H	1800 × W 1800mm	1800	1500
		×1800mm	×1500mm
Height of post : H1 = H +150mm		H1 = 1950mm	H1 = 1650mm
Width of fence board: W1 = W-60mm		W1 = 1940mm	W1 = 1540mm
Width of top rail : W2 = W-95mm		W2 = 1705mm	W2 = 1505mm
Width of bottom rail : W3 = W-55mm		W3 = 1745mm	W3 = 1545mm
Length of strip : H2 = H1		H2 = 1950mm	H2 = 1650mm

Assembly unit

STRIP



ALUMINUM
POST



BOTTOM RAIL



TOP RAIL



ANCHORIN
G



FENCING BOARD



STEEL
HOLDER




L
BRACKET



POST CAP



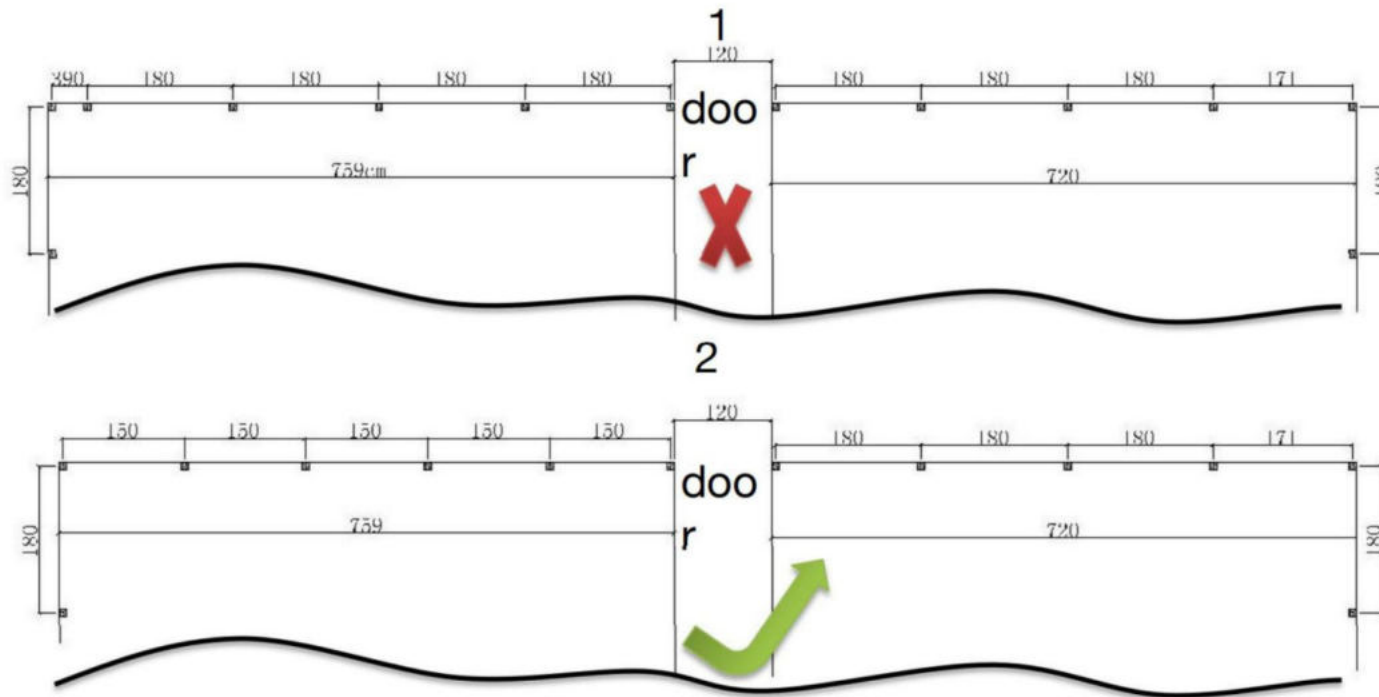

we advise you should measure the area before installation;
Trying to divide each sets of fence into same distance.




Before install steel holder, using the screws to make the combination between L bracket and Top rail (Bottom rail) , like pictures.







According to install request, Using the impact drill to make the holes on concrete ground and then put anchoring to fixing steel holder. Adjusting the distance between two aluminum posts.

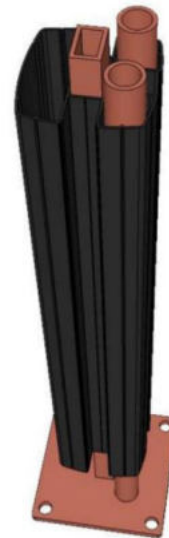


When steel holder finished, insert Aluminum post into steel holder.

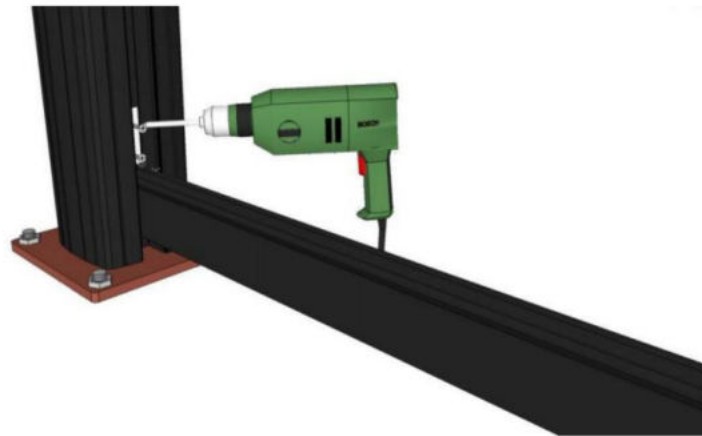


After aluminum post insert into steel holder, using impact drill to make holes and then make the connection between aluminum post and bottom rail by screws.

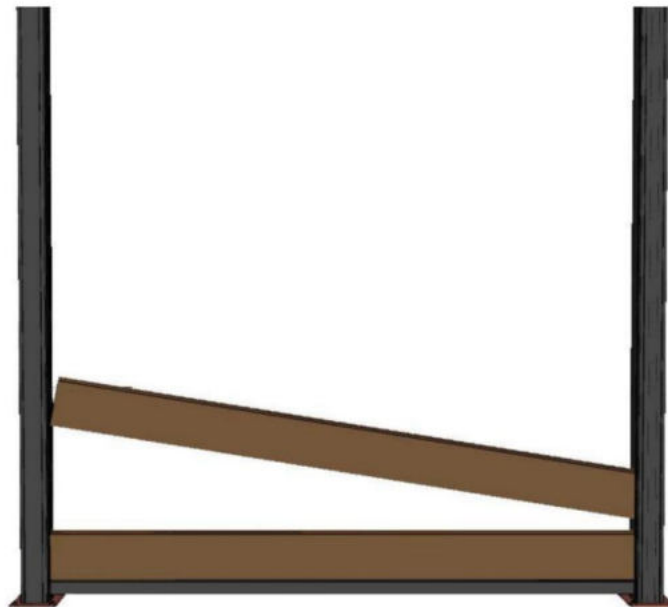


After install bottom rail, inserting the fence board directly, like picture.

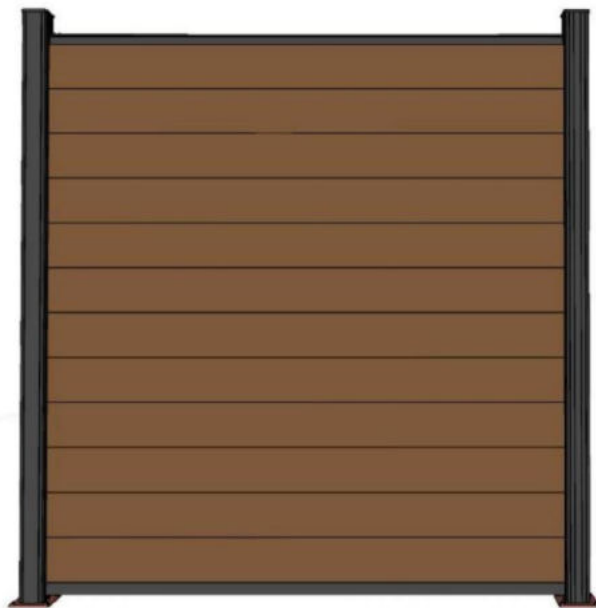

After install fence board, connect the top rail like picture.

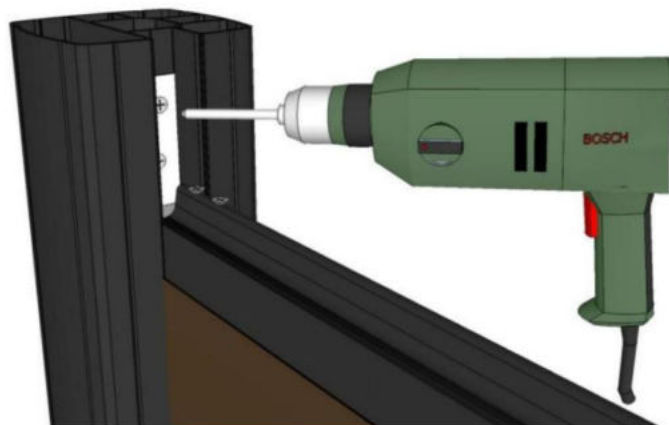

Using the impact drill to make holes then fixing top rail by screws.

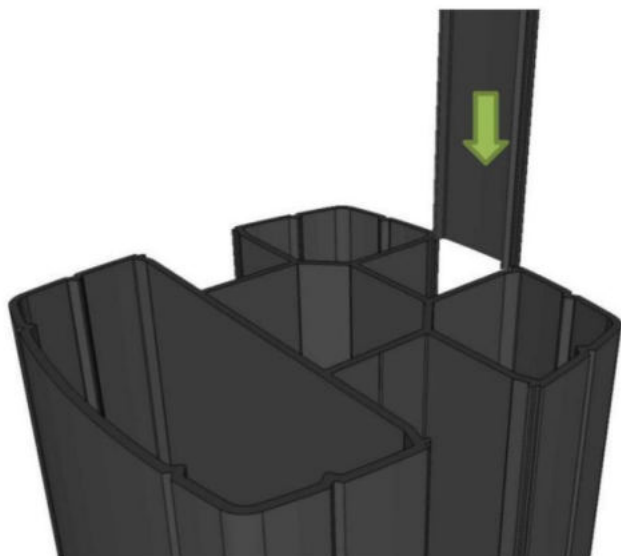

Finally inserting the strip and post cap as pictures.

