

Fencly WPC Fence — Ground Installation Guide

For standard in-ground post installation (not concrete/retaining wall mounting).


Installation **Instruction Wpc Fence**



Components



Assembly unit

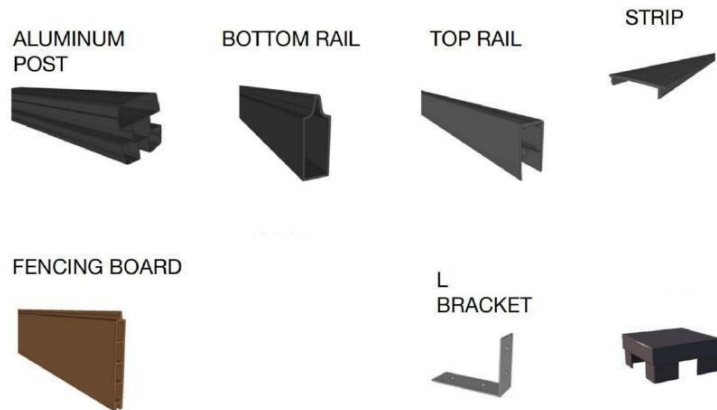

Aluminium post	Fence board	Top rail	Bottom rail
Strip	Post cap	L bracket	Screws

Confirmed Panel Dimensions

Each standard panel is 1800mm wide. Board, rail, and strip lengths below are fixed, factory-cut sizes, not calculated on site.

Component	Confirmed Size
Fence board	160 x 20mm x 1765mm
Top / bottom rail	30 x 20.6mm x 1760mm
Post (68 x 68mm), ground burial	2500mm (standard 1.8m height) or 3000mm (2.1m+ height)
Post (68 x 68mm), retaining wall or concrete surface	1950mm
Strip	2500mm or 3000mm, matches post length
Post cap	70 x 70mm

Step 1: Plan The Layout

Measure the full area before starting. Where possible, divide the run into equal panel sections rather than leaving one short, awkward section at the end. If a gate is included, plan its position first and work outward from there.

Use a fence board or rail with the L brackets attached as a spacing guide when marking post positions, this ensures the distance between posts is accurate and consistent, rather than relying on tape measurements alone.

Step 2: Mark And Dig Post Holes

Mark post positions at even spacing (standard panel width 1.8m). Dig holes to a minimum depth of 600mm for standard ground burial. Check each hole for underground services before digging.


Step 3: Set The Posts

Stand each post in its hole, checking it is level and plumb (vertical) using a spirit level on two adjacent faces. Fill the hole with concrete mix, working around the base to remove air pockets. Brace the post in position while the concrete cures (follow the concrete product's curing time, typically 24-48 hours before continuing).

Using the 2500mm post at 1.8m panel height gives roughly 700mm of burial depth once the post is set. For taller panels, use the 3000mm post instead.

Step 4: Attach The Bottom Rail And Insert Boards

Once posts are set and cured, attach the L bracket to the bottom rail using screws, then fix it between two posts at the correct height using the impact drill. With the bottom rail in place, slide each fence board down into position between the two posts, resting on the bottom rail, working board by board until the panel is complete.

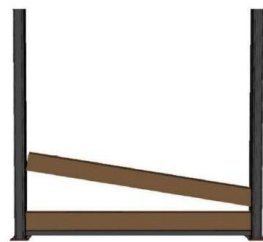

After install bottom rail,
inserting the fence
board directly, like
picture.

Step 5: Attach The Top Rail


Once all boards are in place, fit the top rail across the top of the panel in the same way as the bottom rail, using the L bracket and screws to fix it to each post.




After install fence board, connect the top rail like picture.

Step 6: Fit The Strip And Post Cap

Attach the strip along the post to cover the fixing points, then fit the post cap on top of each post to finish and weatherproof the installation.

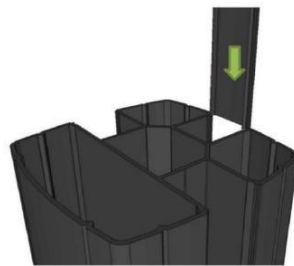

Finally inserting the strip and post cap as pictures.

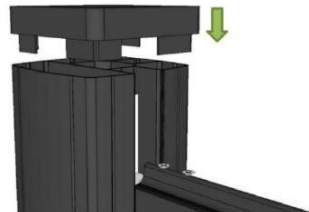

Step 7: Repeat For Each Panel

Continue this sequence across the full run, panel by panel, checking each section stays level and in line with the last.

General Notes

- Always allow concrete to fully cure before attaching rails or boards, an unset post can shift out of alignment.
- Check local council requirements before installing, particularly for pool fencing or boundary fences.
- For retaining wall or concrete-surface mounting, use the 1950mm post with a steel holder and anchoring bolts instead.