# MMAE 320: Thermofluid Dynamics — Reference Material Illinois Institute of Technology

# Karl Hallsby

Last Edited: November 13, 2020

# Contents

Li	et of Theorems	iv
1	Introduction  1.1 Fluid Mechanics 1.2 Units/Dimensions 1.2.1 SI System 1.2.2 English System 1.2.2.1 Mass 1.2.2.2 Force 1.2.2.3 Energy 1.2.2.4 Work	1 1 2 2 2 2 2 2 2 2 2 2 2 2 2 2
	1.2.2.5 Power	2
2	Basic Concepts         2.1       Systems         2.1.1       Type of Systems         2.1.2       Properties of Systems         2.1.3       Generalizations         2.2       Density         2.3       States         2.3.1       The State Postulate         2.4       Processes         2.4.1       iso- Processes         2.5.1       Subjective Temperature Scales         2.5.2       Objective Temperature Scales         2.6       Pressure         2.6.1       Pressure Inside a Fluid	2 2 2 3 4 4 4 4 4 5 5 5 6
3	Energy, and Energy Transfer  3.1 Energy Quality 3.2 Energy and Flows 3.3 Divisions of Energy 3.4 Energy Flow and Systems 3.5 Adiabatic Processes 3.6 Energy Efficiency 3.6.1 Combustion 3.6.2 Pumps 3.6.3 Turbines	66 77 77 88 10 10 10 10 10
4	Properties of Pure Substances 4.1 Phase Changes 4.2 Mixtures 4.3 Ideal Gas Equation	10 11 14 19

5	Ene	rgy Analysis of Closed Systems	<b>2</b> 0
	5.1	Mechanisms of Energy Transfer	20
	5.2	Heat and Specific Heat for Energy Transfer	23
		5.2.1 Constant Volume	23
		5.2.2 Constant Pressure	24
	5.3	Incompressible Substances	25
•	7. <i>(</i>		00
6		ss and Energy Analysis of Control Volumes	26
	6.1	Continuity Equation	26 28
	6.2	Energy Flows	28 29
		6.2.1 Nozzles and Diffusers	29 33
		6.2.2 Turbines and Compressors	35
		6.2.3 Throttling Valves	
		6.2.4 Mixing Chambers	37
		6.2.5 Heat Exchangers	38
		6.2.6 Pipe/Duct Flow	40
A	Con	nplex Numbers	42
_		Parts of a Complex Number	42
		Binary Operations	42
		A.2.1 Addition	42
		A.2.2 Multiplication	43
	A.3	Complex Conjugates	43
		A.3.1 Notable Complex Conjugate Expressions	43
		A.3.2 Properties of Complex Conjugates	44
	A.4	Geometry of Complex Numbers	44
		A.4.1 Modulus of a Complex Number	45
		A.4.1.1 Algebraic Effects of the Modulus' Property (i)	45
		A.4.1.2 Conceptual Effects of the Modulus' Property (i)	45
	A.5		45
		A.5.1 Annulus	46
	A.6	Polar Form	46
		A.6.1 Converting Between Cartesian and Polar Forms	47
		A.6.2 Benefits of Polar Form	47
		A.6.2.1 Multiplication	48
		A.6.2.2 Division	48
		A.6.2.3 Exponentiation	48
	A.7	Roots of a Complex Number	48
	A.8	Arguments	49
	A.9	Complex Exponentials	50
		A.9.1 Complex Conjugates of Exponentials	52
	A.10	Complex Logarithms	52
		A.10.1 Complex Conjugates of Logarithms	53
	A.11	Complex Trigonometry	53
		A.11.1 Complex Angle Sum and Difference Identities	54
		A.11.2 Complex Conjugates of Sinusoids	54
_	<b></b>		
В		gonometry	55
	B.1	0	55
	B.2	Euler Equivalents of Trigonometric Functions	55
	B.3	Angle Sum and Difference Identities	55
	B.4	Double-Angle Formulae	55
	B.5	Half-Angle Formulae	55
	B.6	Exponent Reduction Formulae	55
	B.7	Product-to-Sum Identities	55 E6
	B.8	Sum-to-Product Identities	56
	B.9	Pythagorean Theorem for Trig	56 E6
		Rectangular to Polar	56
	D.11	Polar to Rectangular	56

$\mathbf{C}$	Cal	culus	<b>57</b>
	C.1	L'Hôpital's Rule	57
	C.2	Fundamental Theorems of Calculus	57
	C.3	Rules of Calculus	57
		C.3.1 Chain Rule	57
	C.4	Useful Integrals	57
	C.5	Leibnitz's Rule	58
	C.6	Laplace's Equation	58
D	Lap	lace Transform	<b>59</b>
		Laplace Transform	59
		Inverse Laplace Transform	59
		Properties of the Laplace Transform	59
		D.3.1 Linearity	59
		D.3.2 Time Scaling	59
		D.3.3 Time Shift	59
		D.3.4 Frequency Shift	59
		D.3.5 Integration in Time	59
		D.3.6 Frequency Multiplication	59
		D.3.7 Relation to Fourier Transform	59
	D.4	Theorems	60
	D.5	Laplace Transform Pairs	60
	D 6	Higher-Order Transforms	60

# List of Theorems

1		(Energy)
2		(Law of Conservation of Energy)
3	Defn	(Law of Conservation of Mass)
4	Defn	$(\mathrm{Heat}) \ \ldots \ $
5	Defn	(Thermodynamics)
6	Defn	(Heat Transfer)
7	Defn	(Driving Force)
8		(Temperature Gradient)
9	Defn	(Stress)
10	Defn	(Work)
11		(Power)
12	Defn	(System)
13		(Open System)
14		(Closed System)
15		(Isolated System)
16		(Property)
17		(Intensive Property)
18	Dem	
19	Dem	(Specific Property)
20	Defn	(Density)
21	Defn	(Specific Volume)
22		(Specific Gravity)
23		(Specific Weight)
24		(State)
25		(Equilibrium)
26		(State Postulate)
27	Defn	(Process)
28	Defn	(Quasi-equilibrium)
29	Defn	(Cycle)
30		$(Isothermal) \ldots \ldots$
31		(Isobaric)
32		(Isometric)
33	Defn	(0th Law of Thermodynamics)
34		(Pressure)
35		(Gage Pressure)
36		$(Vacuum\ Pressure)\ .\ .\ .\ .\ .\ .\ .$
37	Defn	(Pascal's Law)
38	Defn	(Macroscopic Energy Form)
39		(Microscopic Energy Form)
40		$(Internal\ Energy)\ .\ .\ .\ .\ .\ .$
41	Defn	(Flow Energy)
42	Defn	(Specific Energy)
43		(Adiabatic)
44	Defn	(1st Law of Thermodynamics)
45	Defn	(Pure Substance)
46	Defn	(Phase Change)
47	Defn	(Compressed Liquid)
48	Defn	(Saturated Liquid)
49	Defn	(Saturated Mixture)
50		(Saturated Vapor)
51	Defn	(Superheated Vapor)
52		(Interpolate)
53		(Enthalpy of Vaporization)
54		(Mixture)
55		(Quality)
56		(Specific Volume)
57		(Enthalpy)
58		(Specific Enthalpy)

59 Defn	(Specific Heat)
	(Continuity Equation)
61 Defn	(Turbine)
	(Compressor)
	(Throttling Valve)
	(Isenthalpic)
	(Mixing Chamber)
	(Heat Exchanger)
	(Complex Number)
	(Real Part)
	(Imaginary Part)
A.3.1Defn	(Complex Conjugate)
A.4.1Defn	(Argand Plane)
A.4.2Defn	(Modulus)
	(Annulus)
A.6.1Defn	(de Moiver's Law)
A.8.1Defn	(Argument)
A.8.2Defn	(Principal Argument)
A.10.Defn	(Complex Logarithm)
	(First Fundamental Theorem of Calculus)
C.2.2Defn	(Second Fundamental Theorem of Calculus)
C.2.3Defn	(argmax)
C.3.1Defn	(Chain Rule)
D.1.1Defn	(Laplace Transform)
D.2.1Defn	(Inverse Laplace Transform)

## 1 Introduction

**Defn 1** (Energy). *Energy* is the stuff in the universe that can cause changes in material states. A change in energy is the ability to do Work. Energy can never be negative, but changes in energy can.

Some examples are:

- Thermal Energy
- Electrical Energy
- Mechanical Energy

One fundamental thing about Energy that was discovered was the Law of Conservation of Energy.

**Defn 2** (Law of Conservation of Energy). The *law of conservation of energy* states that energy cannot be created or destroyed; it can only change form. This means that the total amount of energy in an interaction is constant.

Expressed as an equation, this is recognized as

$$\sum_{i \in I} E_i = C \tag{1.1}$$

where

*I*: The set of all interactions of interest.

E: The energy of this particular interaction, i.

C: The total energy of the system, a constant.

Law of Conservation of Energy closely mirrors the other major fundamental physical law, the Law of Conservation of Mass.

**Defn 3** (Law of Conservation of Mass). The *law of conservation of mass* states that a Process cannot create nor destroy any matter; it can only change form/state.

The Law of Conservation of Energy leads to Equation (1.2), shown below.

$$E_{in} - E_{out} = \Delta E \tag{1.2}$$

In a typical use, we are concerned with Heat as the form of Energy.

**Defn 4** (Heat). Heat is the form of Energy that can be transferred from one System to another as a result of temperature difference. The variable letter for the energy in a system is Q.

**Defn 5** (Thermodynamics). Thermodynamics is the science of equilibrium states and changes between these states.

Pure thermodynamic analysis will show the toal amount of Energy moving through the system, but not the rate at which it occurs. This is where Heat Transfer comes in.

**Defn 6** (Heat Transfer). *Heat transfer* is the science that deals with the determination of the *rates* of Heat-based Energy transfers. This science deals with systems that lack a thermal equilibrium, meaning it cannot be based on only principles of Thermodynamics.

For every flow of energy in a system, there **MUST** be a Driving Force.

**Defn 7** (Driving Force). *Driving force* are the conditions of the system for the transfer of Energy to occur. There are any number of driving forces in the universe, some are listed here:

- Heat Transfer requires a temperature difference.
- Electric current flow requires a voltage difference.
- Fluid flow requires a pressure difference.

For Heat Transfer, the Temperature Gradient determines the rate of the transfer.

**Defn 8** (Temperature Gradient). *Temperature gradient* is the temperature difference per unit length, or the rate of change of temperature.

Remark 8.1 (Extension). The use of gradients extends to other Driving Forces as well.

## 1.1 Fluid Mechanics

**Defn 9** (Stress). Stress is defined as force per unit area.

$$\tau = \frac{F}{A} \tag{1.3}$$

Obeying Newton's third law, typically, there is a normal force per unit area, called the **normal stress**. In a fluid at rest, the normal stress is called **pressure**.

## 1.2 Units/Dimensions

#### 1.2.1 SI System

There are 7 fundamental dimensions and units in the SI system, shown in Table 1.1.

Dimension	Unit
Length	meter (m)
Mass	kilogram (kg)
Time	second (s)
Temperature	kelvin (K)
Electric Current	ampere (A)
Amount of Light	candela (cd)
Amount of Matter	mole (mol)

Table 1.1: The 7 Fundamental Dimensions and Units

## 1.2.2 English System

The English system uses a very different set of units to describe these dimensions.

1.2.2.1 Mass The English unit of mass is the pound-mass.

lbm

**1.2.2.2** Force The English unit of mass is the pound-force.

$$1 \, \text{lbf} = 32.174 \, \text{lbm ft/s}^2$$

**1.2.2.3** Energy The English unit of energy is the British Thermal Unit (BTU). 1 btu raises the temperature of 1 lbm of water at 68°F by 1°F.

## 1.2.2.4 Work

**Defn 10** (Work). Work is defined to be force multiplied by the path distance the force was applied over.

$$W = \vec{F}d \text{ btu} \tag{1.4}$$

## 1.2.2.5 Power

**Defn 11** (Power). *Power* is defined as energy per unit time.

$$P = \frac{E}{t} \text{ hp} \tag{1.5}$$

# 2 Basic Concepts

#### 2.1 Systems

**Defn 12** (System). A system is defined as a quantity of matter or a region in space chosen for study.

The mass or region outside the System is the **surroundings**. The surface that separates the System from the surroundings is the **boundary**.

## 2.1.1 Type of Systems

There are 2 types of systems:

- 1. Open System
- 2. Closed System

**Defn 13** (Open System). An *open system* is a System in which the mass of the system is **not** constant. Thus, mass and Energy can flow from the system to the surroundings. Energy can flow by either Work, or it can be Heat.

Remark 13.1 (Control Volume). Sometimes an Open System is called a *control volume*, because the volume of the system is constant.

Remark 13.2. Flow through these devices is typically easier by selecting the region based on volume, rather than mass.

**Defn 14** (Closed System). A *closed system* is a System where the mass of the system **is** constant, but Energy can move between the system and the surroundings. This type of system can either be Adiabatic or non-adiabatic. For each case:

Adiabatic There is an Energy transfer by Heat and Work.

Non-adiabatic The energy transfer is done by Work only.

Remark 14.1 (Control Mass). Sometimes a Closed System is called a control mass, because mass is constant.

There is also a third type of system, the Isolated System, which is a special case of the Closed System.

**Defn 15** (Isolated System). An *isolated system* is a System where **neither** mass or Energy can move from the system to the surroundings. This system has the properties of being Adiabatic **and** there is no Work done.

## 2.1.2 Properties of Systems

**Defn 16** (Property). A property of a System is a characteristic of the system.

Some common properties are:

- P, Pressure
- T, Temperature
- V, Volume
- m, Mass

There are 2 types of properties:

- 1. Intensive Property
- 2. Extensive Property

**Defn 17** (Intensive Property). *Intensive properties* are properties that are **independent** of the mass of the system. These include:

- P. Pressure
- T, Temperature
- $\rho$ , Density

**Defn 18** (Extensive Property). *Extensive properties* are properties that are **dependent** on the size or extent of the system. These include:

- Total mass
- Total volume
- Total momentum

Some extensive properties can be used to form a Specific Property.

**Defn 19** (Specific Property). A specific property is an Extensive Property per unit mass. Some examples are:

- Specific Volume  $\nu = \frac{V}{m}$
- Specific Total Energy  $e = \frac{E}{m}$

#### 2.1.3 Generalizations

We make some generalizations about the fluids we are working with to make calculations easier. For example, we treat fluids as a **continuum**, rather than the true atomic nature of the substance. This allows us to:

- Treat properties as point functions
- Assume properties vary continually in space with no discontinuities

This assumption is valid so long as the size of the System is relatively large compared to the space between the component molecules.

## 2.2 Density

**Defn 20** (Density). *Density* is defined as mass per unit volume.

$$\rho = \frac{m}{V} \text{ kg/m}^3 \tag{2.1}$$

**Defn 21** (Specific Volume). Specific volume is the reciprocal of Density, and is the amount of volume per unit mass.

$$\nu = \frac{V}{m} = \frac{1}{\rho} \tag{2.2}$$

For substances that lack a uniform mass and volume, density can also be realized by Equation (2.3).

$$\rho = \frac{dm}{dV} \tag{2.3}$$

Sometimes the density of a substance is given relative to another substance, usually water. This is Specific Gravity.

**Defn 22** (Specific Gravity). *Specific gravity* is the Density of a substance as a ratio to another substance, usually water. This is expressed as

$$SG = \frac{\rho}{\rho_{H_2O}} \tag{2.4}$$

**Defn 23** (Specific Weight). Specific weight is the weight of a unit volume of a substance. It is expressed as:

$$\gamma_s = \rho g \text{ N/m}^3 \tag{2.5}$$

#### 2.3 States

**Defn 24** (State). The *state* of the system includes all properties that can be measured or calculated which can completely describe the condition of the system.

In any given State, all the properties of a system will have fixed values. If any single property changes, all the others will change in accordance. We are typically interested in Equilibrium states.

**Defn 25** (Equilibrium). *Equilibrium* is a State of a System which does not change when isolated from it surroundings. A system will only leave equilibrium when disturbed by an outside Energy, or an unbalanced Driving Force.

There are several different types of Equilibrium:

Thermal Equilibrium If the temperature throughout the entire System is constant.

**Mechanical Equilibrium** If there is no change in pressure at any point of the System with regards to time. However, pressure can vary within the system, but for most of our concerns, this isn't a problem.

**Phase Equilibrium** If there is more than one phase of matter, this type of equilibrium is reached with each phase reaches its equilibrium level and stays there.

Chemical Equilibrium If the chemical composition of a System does not change with time, i.e. no chemical reactions could occur.

#### 2.3.1 The State Postulate

**Defn 26** (State Postulate). The *state postulate* states: the State of a simple compressible system is **completely** specific by 2 independent, intensive properties.

Remark 26.1 (Simple Compressible System). A system is called a simple compressible system in the absence of electrical, magnetic, gravitational, motion, and surface tension effects.

Properties are independent if one property can be varied and the other one remains constant.

#### 2.4 Processes

**Defn 27** (Process). A *process* is the change in a System from one Equilibrium state to another. The **path** of the process is the set of Quasi-equilibrium processes.

It is easiest to deal with paths where if one of the variables is changed just a small amount, the change becomes linear. This is similar to the concept of a derivative, because if we sample at a small/short enough rate, the changes introduced to the System will be linear.

**Defn 28** (Quasi-equilibrium). A quasi-equilibrium process is one that is sufficiently slow so that the System can adjust itself internally so that properties change constantly **throughout** the system.

Lastly, if the Process is a Cycle, then the initial and final States are the same.

**Defn 29** (Cycle). A cycle is a Process that returns to its initial state at the end of the process.

#### 2.4.1 iso- Processes

Some Processes are special in that one Property remains constant. There are several of these:

- Isothermal
- Isobaric
- Isometric

**Defn 30** (Isothermal). Isothermal Processes are ones where the temperature T remains constant.

**Defn 31** (Isobaric). *Isobaric* Processes are ones where the pressure P remains constant.

**Defn 32** (Isometric). Isometric (Isochoric) Processes are ones where the volume V remains constant.

## 2.5 Temperature

**Defn 33** (0th Law of Thermodynamics). The 0th law of thermodynamics states that if two bodies are in thermal Equilibrium with a third body, they are also in thermal equilibrium with each other.

## 2.5.1 Subjective Temperature Scales

There are 2 subjective temperature scales:

- 1. Celsius (°C)
- 2. Fahrenheit (°F)

These are based off of physical temperatures at certain points on Earth regarding water freezing and water boiling. These are useful for regular use, but not as well-suited for thermodynamic use.

$$\frac{5}{9}(T(^{\circ}F) - 32) = T(^{\circ}C)$$
 (2.6)

#### 2.5.2 Objective Temperature Scales

Objective temperature scales are ones that are based off of physical, universal constants. There are 2 objective temperature scales:

- 1. Kelvin (K)
- 2. Rankine (R)

Both of these have placed 0 at the point where all molecular motion stops.

The equations to convertion between Celsius and Kelvin is shown in Equation (2.7).

$$T(K) = T(^{\circ}C) + 273.15$$
 (2.7)

The equations to convertion between Fahrenheit and Rankine is shown in Equation (2.8).

$$T(R) = T(^{\circ}F) + 459.67$$
 (2.8)

#### 2.6 Pressure

**Defn 34** (Pressure). *Pressure* is the normal **scalar** force exerted per unit area. Because it is a scalar, it has no dependency on the direction of the normal force. It can be expressed using Density, gravity, and depth/length.

$$P = \rho g d \tag{2.9}$$

The SI unit of pressure is the pascal:

$$Pa = \frac{N}{m^2} \tag{2.10}$$

The bar is also used:

$$1 \, \text{bar} = 100 \, \text{kPa}$$

The English unit of pressure is the pound-force per square inch.

$$lbf/in^2 = psi (2.11)$$

We exist, roughly, at one atmosphere of pressure, or 1 atm. The equivalents of this are:

$$1 \text{ atm} = 101325 \text{ kPa}$$
  
 $1 \text{ atm} = 14.696 \text{ psi}$ 

Using this, we can measure pressure, typically with either Gage Pressure or Vacuum Pressure.

**Defn 35** (Gage Pressure). *Gage pressure* is the Pressure that a gage reads after being calibrated to some standard pressure, typically one atmosphere. Thus, the actual pressure of something read by the gage is represented by Equation (2.12) below.

$$P_{\rm abs} = P_{\rm atm} + P_{\rm gage} \tag{2.12}$$

**Defn 36** (Vacuum Pressure). *Vacuum pressure* is the Pressure that a gage reads after being calibrated to some standard pressure, typically one atmosphere. Thus, the actual pressure of something read by the gage is represented by Equation (2.13) below.

$$P_{\rm abs} = P_{\rm atm} - P_{\rm vacuum} \tag{2.13}$$

#### 2.6.1 Pressure Inside a Fluid

Pressure inside a fluid increases linearly with depth. This is seen in Equation (2.14), where  $\Delta z$  is the distance between the two measured points.

$$P_{\text{below}} = P_{\text{above}} + \rho g |\Delta z|$$

$$= P_{\text{above}} + \gamma_s |\Delta z|$$
(2.14)

 $\rho$ : The density of the fluid (kg/m<sup>3</sup>)

**Defn 37** (Pascal's Law). *Pascal's Law* states that the Pressure along any horizontal plane in the same fluid is the same pressure. This leads to Equation (2.15).

$$P_1 = P_2 
\frac{\vec{F_1}}{A_1} = \frac{\vec{F_2}}{A_2}$$
(2.15)

# 3 Energy, and Energy Transfer

**Defn 38** (Macroscopic Energy Form). *Macroscopic energy forms* are typically ones that have to deal with objects on a macroscopic level. These energies are:

- 1. Kinetic
- 2. Potential

Remark 38.1. This definition is included because the textbook makes use of it.

**Defn 39** (Microscopic Energy Form). *Microscopic energy forms* are energies that act on non-macroscopic levels. Namely, they affect their systems on microscopic levels. These energies include:

- 1. Sensible
  - Heat
  - Kinetic energy of molecules
- 2. Latent
  - Phase Changes
- 3. Chemical
  - Combustion
- 4. Nuclear

Remark 39.1. This definition is included because the textbook makes use of it.

**Defn 40** (Internal Energy). *Internal energy* is equivalent to Microscopic Energy Forms. It means the Energy that the object in question inherently has at that point in time.

## 3.1 Energy Quality

Energy has quality!

- Macroscopic Energy Form
  - Structured
  - Moves as a single unit
- Microscopic Energy Form
  - Not structures
  - Does **not** move as a single unit

These differences mean that we measure the efficiency of each type of energy form differently.

## 3.2 Energy and Flows

When moving a fluid through a pipe, we can find the amount of work done by the fluid flowing, called the Flow Energy.

$$P = rac{F}{ ext{Area}}$$
  $V_{ ext{Cylinder}} = \ell \cdot ext{Area}$   $W = F \cdot ext{Distance}$ 

If we substitute for the common terms in the formula for work, then we end up with Equation (3.1).

**Defn 41** (Flow Energy). Flow energy is the energy that a fluid flowing through a long, straight pipe has.

$$W = PV$$

$$FE = PV$$
(3.1)

Remark 41.1 (Energy Form). Typically, Flow Energy is categorized with the Macroscopic Energy Forms, because it behaves more like those and can be nearly as efficient as them. This is true even though this is technically an application of microscopic energies. This is because we are not worried about the internal energy of the fluid in the pipe, but are instead interested in the mechanical movement of it.

## 3.3 Divisions of Energy

We are always interested in the change in energy that occurs due to something. This is seen as Equation (3.2).

$$\Delta E = \Delta U + \Delta KE + \Delta PE + \Delta FE \tag{3.2}$$

But, we are typically more interested in dealing with Equation (3.2) using intensive properties of the system, so we can reduce with that, which produces the change in total Specific Energy.

- The internal energy cannot be completely converted into work.
- Mechanical energy is typically defined to be these types of energies. These can be completely converted into work by an ideal machine.
  - Kinetic energy (KE)
  - Potential energy (PE)
  - Flow energy (FE)

We are also interested in the Specific Energy of the system.

**Defn 42** (Specific Energy). *Specific energy* is an Intensive Property of a system. It is the total energy of a system divided by the total mass of the system.

$$e = \frac{E}{m}$$

$$= \frac{U}{m} + \frac{1}{2}v^2 + gh + \frac{PV}{m}$$

$$= \frac{U}{m} + \frac{1}{2}v^2 + gh + \frac{P}{\rho}$$
(3.3)

$$\Delta e = \frac{U_2 - U_1}{m} + \frac{v_2^2 - v_1^2}{2} + g(h_2 - h_1) + \frac{P_2 - P_1}{\rho}$$
(3.4)

The Specific Energy of a system can be used to find the change in energy per unit time, or the Power.

$$\Delta \dot{E} = \dot{m} \Delta e 
P = \dot{m} \Delta e$$
(3.5)

where  $\dot{m}$  is the mass flowrate, seen by Equation (3.6)

$$\dot{m} = \frac{m}{t} \tag{3.6}$$

## 3.4 Energy Flow and Systems

These systems have Energy interactions that cross the boundary of a System. This only has 2 options:

- 1. Heat transfer into or out of the System.
- 2. Work done on the system by the surroundings.

## Example 3.1: Power of Water. Lecture 4, Problem 3.12

Consider a river flowing towards a lake at an average velocity of  $v_{\text{River}} = 3 \,\text{m/s}$  and a volume flow rate of  $\dot{V} = 500 \,\text{m}^3/\text{s}$ . The  $500 \,\text{m}^3/\text{s}$  is at a location 90 m above the lake's surface. Determine the total mechanical energy in the river water per unit mass and the power generation potential of the entire river?

The question is really asking us to find the Specific Energy and the power generation.

**Assumption:** Assume the flow is constant, that we are in steady flow.

### Concepts and Explore:

There is no state change, likely meaning  $\Delta U = 0$ . The velocity of the water within the lake should be  $v_{\text{Lake}} = 0$  ( $\Delta \text{KE} \neq 0$ ). There is a potential energy change,  $\Delta \text{PE} \neq 0$ . There is a flow, but the only pressure involved is  $P_{atm}$ , and the height difference is so small that the change in pressure is negligible.

$$P = \dot{m}\Delta e$$

To find  $\dot{m}$ , we can multiply the density of water with the volume flow rate of the river, to find the mass flow rate.

$$\dot{m} = \rho_{H_2O} \dot{V}$$

#### Plan:

- 1. Solve for  $\Delta e$  using  $\Delta KE + \Delta PE$ .
- 2. Solve for mass flow rate,  $\dot{m} = \rho_{H_2O} \dot{V}$ .
- 3. Solve for  $P = \dot{m}\Delta e$ .

#### Solve:

$$\Delta e = \Delta KE + \Delta PE$$

$$= \frac{(3 \text{ m/s})^2 + (0 \text{ m/s})^2}{2} + 9.81 \text{ m/s}^2 (90 \text{ m} - 0 \text{ m})$$

$$= 4.5 \text{ m}^2/\text{s}^2 + 882 \text{ m}^2/\text{s}^2 = 886.5 \text{ J/kg}$$

$$\dot{m} = \rho \dot{V}$$

$$= 1000 \text{ kg/m}^3 (500 \text{ m}^3/\text{s})$$

$$= 500 000 \text{ kg/s}$$

$$P = \dot{m} \Delta e$$

$$= 886.5 \text{ J/kg} (500 000 \text{ kg/s})$$

Generalize: Most of the energy in this problem came from the water falling in height. Overall, the pressure change and the velocity of the water made very little impact on the total energy in the system, in comparison to the change in potential energy.

 $= 444\,000\,000\,W$ = 444 MW

## Example 3.2: Mechanical Energy of Air. Lecture 4, Problem 3.14

Wind is blowing steadily at  $v = 10 \,\mathrm{m/s}$ . Determine the mechanical energy of the air per unit mass and the power generation potential of a wind turbine with  $d = 60 \,\mathrm{m}$  diameter blades at that location? Take  $\rho_{\rm air} = 1.25 \,\mathrm{kg/m^3}$ .

## Concepts and Explore:

- The air is flowing steadily.
- There is no state change, so  $\Delta U = 0$ .
- There is a change in the blades' velocity,  $\Delta KE \neq 0$ .
- There is no change in the potential energy of the air, so  $\Delta PE = 0$ .
- There is no pressure change on the different sides of the turbine, so  $\Delta FE = 0$ .

$$P = \dot{m}\Delta e$$

$$\dot{m} = \rho_{\text{air}}\dot{V}$$

$$\dot{V} = v\left(\pi\left(\frac{d}{2}\right)^2\right)$$

#### Plan:

- 1. Solve for  $\Delta e$  using KE only.
- 2. Simplify  $\dot{m}$ .
- 3. Solve for  $P = \dot{m}\Delta e$ .

#### Solve:

$$\Delta e = \frac{1}{2} (10 \text{ m/s})^2$$
  
= 50 m<sup>2</sup>/s<sup>2</sup>  
= 50 J/kg

$$\begin{split} \dot{m} &= \rho_{\rm air} v \left( \pi \left( \frac{d}{2} \right)^2 \right) \\ &= 1.25 \, \mathrm{kg/m^3} (10 \, \mathrm{m/s}) \left( \frac{\pi 60^2}{4} \right) \\ &= 35 \, 343 \, \mathrm{kg/s} \end{split}$$

$$\begin{split} P &= \dot{m} \Delta e \\ &= 35\,343\,\mathrm{kg/s}(50\,\mathrm{J/kg}) \\ &= 1\,767\,150\,\mathrm{J/s} \\ &= 1767\,\mathrm{kW} \end{split}$$

Validate: Since we had a straightforward application of the equations, it is likely that the answers make sense. In addition, we did perform some dimensional analysis to figure out the way the units should be put together, which further reinforces the likelihood of this solution being the right one.

Generalize: Like Example 3.1, the value we received only holds true when the air is flowing steadily. If steady flow were not happening, then the received value will fluctuate.

Most of the power generated through this turbine is done because of the area of the blades that the air is moving through. This happens despite the very low density of air in this problem.

When looking through the equations, the velocity the air is moving becomes cubed, meaning a small change in velocity will have drastic changes in the power generated.

## 3.5 Adiabatic Processes

Heat is a form of energy transfer. However, there are two types of processes:

- 1. Processes that have **no** heat transfer (Adiabatic), Q = 0.
- 2. Processes that have heat transfer (Non-Adiabatic),  $Q \neq 0$ .

**Defn 43** (Adiabatic). A process is *adiabatic* when there is **no** transfer of Heat whatsoever. This can be achieved by a system that is heavily insulated, preventing a temperature difference from causing a heat transfer. Adiabatic processes yield the expression below:

$$\Delta Q = 0 \tag{3.7}$$

Remark 43.1. An Adiabatic process does **not** say anything about Work in the System. A process can be both adiabatic and have work done on it, meaning there is still a change in energy in the system.

**Defn 44** (1st Law of Thermodynamics). The 1st law of thermodynamics states that the total energy of a system **cannot** be created or destroyed during a Process; it can only change **forms**. Thus, the total change in energy of all energy forms must sum to zero.

Symbolically, this is represented as Equation (3.8).

$$\Delta E = 0 \tag{3.8}$$

If this law were to be violated in a problem, that means there is an energy form that is not being measured. Using Equation (3.2), we can "derive" a new equation that is useful.

$$\Delta E = \Delta Q + \Delta W_{\rm Mech}$$
 
$$E_{\rm In} - E_{\rm Out} = (W_{\rm In} - W_{\rm Out}) + (Q_{\rm In} - Q_{\rm Out})$$

 $\Delta Q$  is equivalent to  $\Delta U$ .

 $\Delta W_{\rm Mech}$  is equivalent to  $\Delta {\rm KE} + \Delta {\rm PE} + \Delta {\rm FE}.$ 

Remark 44.1 (Change Energy Flowrate). By the definition of the 1st Law of Thermodynamics, the change in energy flowrate (energy per unit time) is also defined to be zero, because the amount of energy in the system is constant.

$$\Delta \dot{E} = 0 \tag{3.9}$$

## 3.6 Energy Efficiency

Typically, we are concerned with how efficient a Process is at using the Energy it is provided to achieve a certain goal. This is typically defined as Equation (3.10).

$$\eta = \frac{\text{Desired Output}}{\text{Required Input}} \times 100 \tag{3.10}$$

3.6.1 Combustion

$$\eta_{\text{Combustion}} = \frac{\dot{Q}_{\text{Released}}}{\frac{\dot{Q}_{\text{Available}}}{m} \dot{m}}$$
(3.11)

3.6.2 Pumps

$$\eta_{\text{Pump}} = \frac{\text{Energy Increase of Fluid}}{\text{Energy Input}}$$
(3.12)

3.6.3 Turbines

$$\eta_{\text{Turbine}} = \frac{\text{Mechanical Energy Output}}{\text{Total Energy Decrease of Fluid}}$$
(3.13)

# 4 Properties of Pure Substances

Many of the substances that we study in Thermodynamics are what we call Pure Substances.

**Defn 45** (Pure Substance). A pure substance is one whose chemical composition is fixed throughout. Properties of these substances are completely known, and these properties are completely uniform throughout the substance.

In general, the pressure of a substance is an exponential function that is dependent on the temperature of the water. In addition, the pressure of the substance depends on its altitude. As you increase in altitude, this means that the temperature required to boil the substance at decreases. All of these are visualized in Figure 4.1.

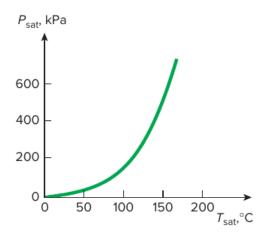


Figure 4.1: Temperature-Pressure (T-P) Liquid-Vapor Curve

## 4.1 Phase Changes

Phase changes in materials are unique, because they maintain a constant temperature **until** all the material undergoes the phase change, however, the volume increases **drastically**.

**Defn 46** (Phase Change). A *phase change* in a substance is when it changes from one state of matter to another. This means a substance goes from solid to liquid, liquid to gas, gas to solid, solid to gas, etc. Each of these "directions" has a name:

Solid to Liquid: Melting/Fusion

Liquid to Solid: Solidification/Crystallization Liquid to Gas: Evaporation/Vaporization

Gas to Liquid: Condensation Solid to Gas: Sublimation Gas to Solid: Desposition

This is visualized as the line between points A and B on the graph in Figure 4.2.

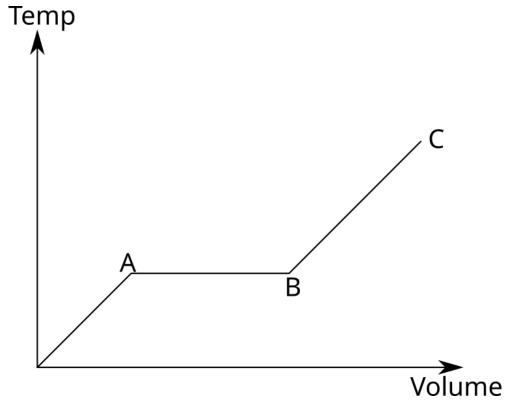


Figure 4.2: Phase Change Graph

The line drawn in Figure 4.2 assumes that the material undergoing the phase change is under Isobaric conditions, meaning the pressure is **not** changing. However, different pressures (under their own Isobaric conditions) will yield different, but similarly shaped, lines as well.

Remark. Figure 4.2 is also **NOT** drawn to proportion, as the angle on the first portion of the line is typically **very** sharp. Obviously, Figure 4.2 is an idealized graph for the temperature-volume graph of a substance and its respective phase change. Even though the graph is idealized, it is fine for our needs, and for most needs in Thermodynamics.

There are several notable points on the graph in Figure 4.2:

- 1. Between the origin and point A, the substance is called a Compressed Liquid. Table A.7 in the textbook has data points for some materials in this state, but the actual values vary very little.
- 2. At point A, the solid begins to boil, becoming a Saturated Liquid, and is denoted  $\nu_f$ .
- 3. Between points A and B, the substance is called a Saturated Mixture. Here, there are parts of the substance in the liquid phase and the other parts of the substance are in the vapor phase. In the textbook, Tables A.4 and A.5 are used here.
- 4. At point C, we have a Saturated Vapor and is denoted  $\nu_q$ . In the textbook, Tables A.4 and A.5 are used here.
- 5. Beyond point C, the substance is a Superheated Vapor. Table A.6 is used in the textbook for substances in this state.

**Defn 47** (Compressed Liquid). A compressed liquid is a substance, in its liquid state, as it is being heated and gaining volume, until right before it starts to boil. Table A.7 in the textbook has data points for some materials in this state, but the actual values vary very little. This is because Pressure does not change volume much. However, temperature **does** change the volume, therefore, treat compressed liquids as Saturated Liquid at temperature T, so use Table A.4.

**Defn 48** (Saturated Liquid). A saturated liquid is a substance, starting its Phase Change state between liquid and gas. The Specific Volume where a Compressed Liquid begins to boil is denoted  $\nu_f$ . Tables A.4, and A.5 in the textbook are used here.

**Defn 49** (Saturated Mixture). A *saturated mixture* is a substance in the middle of its Phase Change state betwen a liquid and a gas. Parts of the substance in the liquid phase and the other parts of the substance are in the vapor phase. In the textbook, Tables A.4 and A.5 are used here.

**Defn 50** (Saturated Vapor). A saturated vapor is a substance that has **JUST** completely undergone its Phase Change to fully become a gas. The Specific Volume where this occurs is denoted  $\nu_g$ . Table A.6 in the textbook contains data points for these vapors.

**Defn 51** (Superheated Vapor). A superheated vapor is a substance that has undergone a complete Phase Change to become a gas. Here, even if heat is removed, the substance remains a gas until it cools enough or increases in pressure enough to become a Saturated Vapor, then a Saturated Mixture again. Table A.6 in the textbook is used to find values for substances in this state.

Figure 4.2 can be overlayed with a curve that intersets the different isobars of that Pure Substance based on their Saturated Liquid and Saturated Vapor points.

**Defn 52** (Interpolate). Many of the values in the tables in the textbook are useful. However, sometimes the value we are interested in is *not* in these tables, but between some known entries in the table. So, we must *interpolate* a result to use.

$$y = y_0 + (x_1 - x) \left( \frac{y_1 - y_0}{x_1 - x_0} \right) \tag{4.1}$$

- y The value we intend to interpolate for.
- $y_0$  The "earlier" value to use. Typically, this is the known data point below our value of interest.
- $y_1$  The "later" value to use. Typically, this is the known data point above our value of interest.
- x The independent value that we are interested in interpolating at.
- $x_0$  The "earlier" value to use. Typically, this is the known data point below our value of interest.
- $x_1$  The "later" value to use. Typically, this is the known data point above our value of interest.

## Example 4.1: Properties of Water.

Given water at temperature T = 75 °C and a pressure P = 100 kPa. What is the water's current state?

We can start by looking in Table A.4 in the textbook.

At 75 °C, water boils at 38 kPa. This water will **not** boil at that temperature and pressure. Now going to Table A.5, which says that at our pressure, water boils at 99.61 °C.

This means that the water is in its liquid state, and is not in its Saturated Mixture state yet.

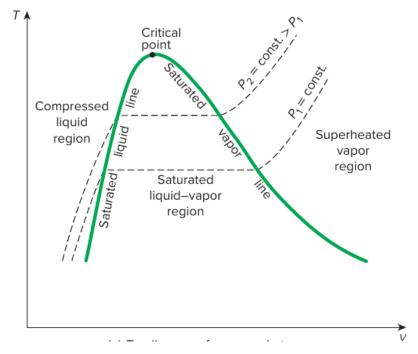


Figure 4.3: Temperature-Volume (T-V) Diagram

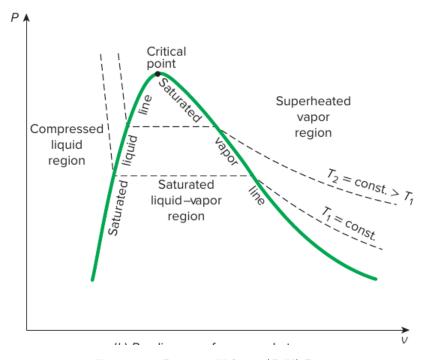


Figure 4.4: Pressure-Volume (P-V) Diagram

**Defn 53** (Enthalpy of Vaporization). The Specific Enthalpy of vaporization (or latent heat of vaporization) represents the amount of Energy required to vaporize a unit mass of Saturated Liquid at a given temperature or pressure. This value **decreases** as the temperature and/or pressure increase and becomes 0 at the critical point. This value is denoted using  $h_{fg}$ , and is composed using Equation (4.2) below.

$$h_{fg} = h_f - h_g \tag{4.2}$$

#### 4.2 Mixtures

In the real world, we come across Mixtures all the time. They do not have the same properties as their Pure Substance counterparts.

**Defn 54** (Mixture). A mixture is a substance or set of substances that contain at least more than one different Saturated Liquid and Saturated Vapor at a time.

When a Saturated Liquid is boiling to become a Saturated Vapor, (Points A and B in Figure 4.2), all of the liquid **must** turn to gas first. This Process has a Quality.

**Defn 55** (Quality). Quality is the ratio of a Mixture that is a Saturated Vapor to Saturated Liquid.

$$\begin{aligned} \text{Quality} &\equiv \frac{\text{Mass of Saturated Vapor}}{\text{Total mass of Mixture}} \\ x &= \frac{m_{Vapor}}{m_{Liquid} + m_{Vapor}} \end{aligned} \tag{4.3}$$

Equation (4.3) is always valued  $0 \le x \le 1$ . This is like Energy Efficiency,  $\eta$ .

**Defn 56** (Specific Volume). *Specific volume* is the volume per unit mass of a substance. This is typically well-defined for Saturated Mixtures, because the system is in 2 different phases. If we are interested in the specific volume of the Mixture, we have Equation (4.4).

$$\nu = \frac{\nu_g}{\nu_f} \tag{4.4}$$

 $\nu$ : The Specific Volume at any point in time during a Process.

 $\nu_q$ : The Saturated Liquid volume.

 $\nu_f$ : The Saturated Vapor volume.

$$x = \frac{V_{Gas}}{V_{Total}}$$

$$\nu = (1 - x)\nu_f + x\nu_g$$

$$= \nu_f + x(\nu_g - \nu_f)$$
(4.5)

From Equation (4.4), it is clear that to get the total volume of **one phase of the system**, we use Equation (4.6)

$$\nu m_{Phase} = V_{Phase} \tag{4.6}$$

Now, Equation (4.6) only finds the volume for a single phase in the system, but because volume is additive, we can use Equation (4.7).

$$\nu m_{Total} = m_{Liquid} \nu_f + m_{Gas} \nu_q \tag{4.7}$$

If using Mixtures, we can define Specific Enthalpy using Equation (4.8).

$$h = h_{Liquid} + xh_{Gas-Liquid} \tag{4.8}$$

where  $h_{Gas-Liquid} = h_{Gas} - h_{Liquid}$ 

If using Mixtures, we can define Specific Energy using Equation (4.9).

$$u = u_{Liquid} + xu_{Gas-Liquid} (4.9)$$

where  $u_{Gas-Liquid} = u_{Gas} - u_{Liquid}$ 

In fact, Equation (4.7) can be re-expressed using Quality, which gives us Equation (4.5).

$$\begin{split} \nu m_{Total} &= m_{Liquid}\nu_f + m_{Gas}\nu_g \\ \nu m_{Total} &= (m_{Total} - m_{Gas})\nu_f + m_{Gas}\nu_g \\ \nu &= \frac{1}{m_{Total}} \left( (m_{Total} - m_{Gas})\nu_f + m_{Gas}\nu_g \right) \\ &= \left( 1 - \frac{m_{Gas}}{m_{Total}} \right) \nu_f + \frac{m_{Gas}}{m_{Total}} \nu_g \\ x &= \frac{m_{Gas}}{m_{Total}} \\ \nu &= (1 - x)\nu_f + x\nu_g \\ &= \nu_f + x(\nu_g - \nu_f) \end{split}$$

The quantities  $\nu_f$  and  $\nu_g$  are fixed once pressure and temperature have been established.

## Example 4.2: Change in Mixture Properties.

Suppose there is a pot of water with  $m=3\,\mathrm{kg}$  of water at  $P=101\,\mathrm{kPa}$ , and temperature  $T=100\,\mathrm{^{\circ}C}$ . The pot is sitting at T to start with and continues to heat until all water is evaporated.

- What is the volume of the water at the start?
- What is the Quality of the Mixture at the start?
- If  $x = \frac{1}{2}$ , what is the volume of the resulting system?
- If  $x = \overline{1}$ , what is the volume of the resulting system?

Using the equations we have already, we know

$$V = \nu_f m_{Total}$$

From Table A.4 in the textbook, we know  $\nu_f = 0.001043 \,\mathrm{m}^3/\mathrm{kg}$ . Thus, we can just plug that value into the equation and solve for V.

$$V = \nu_f m_{Total}$$

At this pressure and temperature, the liquid water is not becoming a vapor due to boiling, so  $m_{Total} = m_{Liquid}$ 

= 
$$0.001 043 \,\mathrm{m}^3/\mathrm{kg}(3 \,\mathrm{kg})$$
  
=  $0.003 \,129 \,\mathrm{m}^3$   
=  $3.129 \,\mathrm{L}$ 

Now to solve for the "initial" Quality. Because the water has JUST reached its Saturated Liquid state, the water has **begun** boiling, but not yet started to vaporize. Thus,

$$x = 0$$

We are given the Quality of the system,  $x = \frac{1}{2}$ , meaning we have converted half the Saturated Liquid to vapor. We can easily find the mass of the vapor, then find its volume.

$$x = \frac{1}{2}$$

Remember, due to the Law of Conservation of Mass, all 3 kg of the water remains IN the system!

$$= \frac{m_{Gas}}{m_{Total}} = \frac{m_{Gas}}{3 \text{ kg}}$$

$$\frac{1}{2} = \frac{m_{Gas}}{3 \text{ kg}}$$

$$m_{Gas} = 1.5 \text{ kg}$$

Now that we know the mass of the vaporized liquid, we can use Equation (4.5) to solve for the total volume.

$$\nu = \nu_f + x(\nu_q - \nu_f)$$

The value for  $\nu_f$  remains constant throughout this entire Process, so we can reuse that value. The value for  $\nu_g$  is found in Table A.4 from the textbook.

$$= 0.001\,043\,\mathrm{m}^3/\mathrm{kg} + \frac{1}{2}(1.6720\,\mathrm{m}^3/\mathrm{kg} - 0.001\,043\,\mathrm{m}^3/\mathrm{kg})$$
  
=  $0.8365\,\mathrm{m}^3/\mathrm{kg}$ 

Now that we have the Specific Volume of the system, we can find the total volume of the system.

$$V_{Total} = \nu m_{Total}$$
$$= 0.8365 \,\mathrm{m}^3/\mathrm{kg}(3 \,\mathrm{kg})$$
$$= 2509 \,\mathrm{L}$$

Remember that  $V_{Total}$  contains the volume for **both** the steam **and** the water. If we are curious about the separate values for each, then we can solve for the individual terms in Equation (4.6).

$$V_{Water} = m_{Water} \nu_f$$
= 1.5 kg(0.001 043 m<sup>3</sup>/kg)
= 1.56 L
$$V_{Steam} = m_{Steam} \nu_g$$
= 1.5 kg(1.6720 m<sup>3</sup>/kg)
= 2508 L

Thus,

$$V_{Water} = 1.56 \,\mathrm{L}$$
  
 $V_{Steam} = 2508 \,\mathrm{L}$ 

For this last part, x=1, meaning that **all** the water has become steam. Thus,  $m_{Water}=0\,\mathrm{kg}$  and  $m_{Steam}=3\,\mathrm{kg}$ . Because we also know  $\nu_g=1.6720\,\mathrm{m}^3/\mathrm{kg}$ , we can easily just solve for Equation (4.6) as the total volume.

$$V_{Total} = V_{Steam}$$

$$V_{Steam} = \nu_g m_{Steam}$$

$$= (1.6720 \,\mathrm{m}^3/\mathrm{kg})(3 \,\mathrm{kg})$$

$$= 5016 \,\mathrm{L}$$

So, after the water has completely become steam, the total volume of the system is  $V_{Total} = 5016 \, \text{L}$ .

## Example 4.3: What's My State. Problem 4.23

Given certain intensive properties of the Pure Substance, water, fill in the table?

- 1. T = 50 °C and a volume of  $V = 4.16 \,\mathrm{m}^3/\mathrm{kg}$ .
- 2.  $P = 200 \,\mathrm{kPa}$  and the water is in the Saturated Vapor phase.
- 3.  $T = 250 \,^{\circ}\text{C}$ ,  $P = 400 \,\text{kPa}$ , and  $V = 0.595 \,\text{m}^3/\text{kg}$ .
- 4. T = 110 °C, P = 600 kPa.

	Temperature °C	Pressure kPa	Volume $m^3/kg$	Phase
1	50	12.352	4.16	Saturated Mixture
2	120.21	200	0.88578	Saturated Vapor
3	250	400	0.595	Superheated Vapor/Steam
4	110	600	0.001052	Compressed Liquid

- 1. Phase 1:
  - (a) We need to look at Table A.4 for phase 1's saturated pressure, and find it  $P_{\rm sat}$ .
  - (b) Now, looking at the values of  $\nu_f$  and  $\nu_q$  for water at T = 50 °C, we see the value we're given is somewhere

between those. Thus, this is a mixture of a Saturated Liquid and a Saturated Vapor, a Saturated Mixture.

#### 2. Phase 2:

- (a) We were told a pressure, so we should use Table A.5.
- (b) Look in Table A.5 and find  $P = 200 \,\mathrm{kPa}$ , and get the saturation temperature,  $T_{\mathrm{sat}}$ .
- (c) They told us it was a Saturated Vapor, so we know the value is somewhere on the saturated vapor line, meaning the volume is the same as  $\nu_q$ .

#### 3. Phase 3:

- (a) Because we are given both pressure and temperature, either Table A.4 or Table A.5 is applicable.
- (b) However, neither table seems to make much sense, as on the temperature table, the pressure is too low, and on the pressure table, the temperature is too low.
- (c) On both tables, our volume is significantly greater than even the  $\nu_q$ .
- (d) Because  $V > \nu_q$ , we go to Table A.6 for superheated water.
- (e) Using Table A.6, we see that  $\nu_q$  in the table matches the volume given to us.
- (f) This means the water is now in its superheated vapor phase.

## 4. Phase 4:

- (a) You can start by using Table A.4 or Table A.5, but I will start with Table A.4.
- (b) Find 110 °C in the table.
- (c) Once there, you'll notice their  $P_{\rm sat}$  is **much** lower than what we were given, so we move to the next table.
- (d) So, we move to Table A.5, and the temperature in the table is lower than what we were given, so we move onto the next table.
- (e) This means that the temperature is lower than is needed to start boiling the water at 600 kPa and the pressure is too high for the water to start boiling at 110 °C.
- (f) This means that it must be a Compressed Liquid.
- (g) But, we said to treat Compressed Liquids as Saturated Liquid at temperature T, so use Table A.4 instead.

## Example 4.4: Changing State of R-134a. Problem 4.112

Given m = 1 kg of R-134a fills a rigid container of volume  $V = 0.1450 \text{ m}^3$  at an initial temperature of  $T_i = -40 \text{ °C}$ , at a final pressure of  $P_f = 200 \text{ kPa}$ . If the container is heated, determine the initial pressure  $(P_i)$  and the final temperature  $(T_f)$ ?

## Concepts:

The vessel has rigid walls, meaning the vessel's volume will remain constant. The Law of Conservation of Mass states that the gas's mass will remain constant throughout the Process.

$$\nu = \frac{V}{m}$$

Finding a state requires knowing 2 of 3 Intensive Property,  $(P, T, \nu)$ .

## Explore:

Because both mass and volume are constant, the Specific Volume remains constant. Values for R-134a are present in Tables A.11 and A.12 in the textbook, which mirror Tables A.4 and A.5, respectively.

#### Plan:

Using P or T and  $\nu$ , solve for the state.

#### Solve:

We use Table A.11 in the textbook, because we are given a temperature. So, we know:

T	$P_{\mathrm{sat}}$	$ u_f$	$ u_g$
−40 °C	$51.25\mathrm{kPa}$	$0.0007053{\rm m}^3/{\rm kg}$	$0.36064{\rm m}^3/{\rm kg}$

Now, we can also find  $\nu$ :

$$\nu = \frac{V}{m}$$
=  $\frac{0.1450 \,\mathrm{m}^3}{1 \,\mathrm{kg}}$ 
=  $0.1450 \,\mathrm{m}^3/\mathrm{kg}$ 

Now, we notice that  $\nu$  is somewhere between  $\nu_f$  and  $\nu_g$ , meaning the R-134a is in its Saturated Mixture phase right now.

We use Table A.12 in the textbook, because we are given a pressure for the final state. So, we know:

P	$T_{ m sat}$	$ u_f$	$ u_g$
$200\mathrm{kPa}$	$-10.09^{\circ}\mathrm{C}$	$0.0007381{\rm m}^3/{\rm kg}$	$0.099951\mathrm{m^3/kg}$

Because we know  $\nu = 0.1450\,\mathrm{m}^3/\mathrm{kg}$ , and we have the values for  $\nu_f$  and  $\nu_g$ , we can tell that the gas is not in a superheated vapor state. Because the gas is superheated, we need to use Table A.13 instead.

That table says that a gas with  $\nu = 0.14504 \,\mathrm{m}^3/\mathrm{kg}$  is at  $T_{\mathrm{sat}} = 90 \,^{\circ}\mathrm{C}$ .

Thus,

$$P_i = 51.25 \,\mathrm{kPa}$$
  
 $T_f = 90 \,\mathrm{^{\circ}C}$ 

## Example 4.5: Changing State of Water English. Problem 4.113

Given m = 1 lbm of water at an initial temperature  $T_i = 400^{\circ}\text{F}$  fills a weighted piston cylinder device with movable lid of volume  $V_i = 2.649 \text{ ft}^3$ . If the vessel is cooled to  $T_f = 100^{\circ}\text{F}$ , determine the final pressure  $(P_f)$  and the final volume of the container  $V_f$ ?

### Concepts:

Weighted piston cylinder devices ensure that the pressure exerted by the fluid remains constant, although we don't know what it is. The mass of the water in this problem remained unchanged throughout the Process as well. We know the initial volume, initial temperature and the final temperature. Because we were given each temperature, we know the fluid in the vessel is being cooled.

#### Explore:

We want to get 2 of those 3 those Intensive Property  $(P, T, \text{ or } \nu)$ . We can find the  $\nu_i$  for the initial point in time, because we know the volume of the vessel initially and the mass is constant. We also know the initial temperature, so we have all the Intensive Propertys that we need to solve for the initial state.

#### Plan

Use Table A.4E to find P. Because the pressure is constant, we can use P and the final temperature  $T_f$  to solve for the final state's  $V_f$ .

#### Solve:

Fome Table A.4E, we can find and know

$T$ $P_{\rm sat}$		$ u_f$	$ u_g$	
400°F	$247\mathrm{psia}$	$0.01864{\rm ft^3/lbm}$	$1.864\mathrm{ft^3/lbm}$	

We also know that the Specific Volume of the water is:

$$\nu = \frac{V}{m}$$

$$= \frac{2.649 \text{ ft}^3}{1 \text{ lbm}}$$

$$= 2.649 \text{ ft}^3/\text{lbm}$$

Because  $\nu > \nu_q$ , we know that the fluid is a superheated vapor, steam.

Now, because the fluid is a superheated vapor, we need to use Table A.6E to find the pressure that the water/steam is under. Using the temperature and the Specific Volume of the water, we look those values up in Table A.6E, we see that P = 180 psia. The saturation pressure  $T_{\text{sat}} = 373^{\circ}\text{F}$ , which means that the final temperature  $T_f$  is likely a liquid. Because the water is likely a liquid at its final temperature, we use Table A.4E and look up the value of water at  $100^{\circ}\text{F}$ .

$\overline{T}$	$P_{\mathrm{sat}}$	$ u_f$	$\nu_g$
100°F	$0.95052\mathrm{psia}$	$0.01613\mathrm{ft^3/lbm}$	$349.83\mathrm{ft^3/lbm}$

If we use the pressure we got from Table A.6E  $P=180\,\mathrm{psia}$ , and look that value up in Table A.5E, we see that  $T_{\mathrm{sat}}=373.07^{\circ}\mathrm{F}$  to even boil the water. This likely means that the water is a Compressed Liquid, and because of our rule,  $\nu_f=0.016\,13\,\mathrm{ft^3/lbm}$ . Therefore, by multiplying  $\nu_f$  by the mass of the water, we can find the volume it is consuming.

$$V_f = \nu_f m$$
  
= 0.016 13 ft<sup>3</sup>/lbm(1 lbm)  
= 0.016 13 ft<sup>3</sup>

## 4.3 Ideal Gas Equation

The Ideal Gas Equation is used when:

- We have dry air.
- Air is **not** good under high pressures, like in turbines.
- Not good on for liquid water.
- Can occasionally be used for steam, when the pressure is  $P \leq 10 \,\mathrm{kPa}$ .
- Not good for steam at high temperatures or pressures.
- Good for the noble gases, and hydrogen.

$$P\nu = RT \tag{4.10}$$

where

- P: The absolute pressure.
- $\nu$ : The Specific Volume.
- R: Gas constant, specified in terms of gases and units.
- T: **Absolute** temperature (K or R).

There is an alternative to Equation (4.10), Equation (4.11).

$$PV = mRT (4.11)$$

#### Example 4.6: Ideal Gas in Tire. Problem 4.79

The air in a tire has its temperature and pressure measured, as the pressure inside the tire depends on the temperature of the air in the tire. Initially, at  $T_i = 25$  °C the pressure is  $P_{i,\text{Gage}} = 210 \,\text{kPa}$ . The volume of the tire is  $V = 0.025 \,\text{m}^3$ . Determine the air pressure in the tire when the tmeperature is  $T_f = 50$  °C? Also determine the amount of air that must be let out to restore the original pressure at the new temperature, assuming  $P_{atm} = 100 \,\text{kPa}$ ?

#### Concepts:

• The tire warms up when driven.

$$T_i = 25 \, ^{\circ}\text{C} \rightarrow T_f = 50 \, ^{\circ}\text{C}$$

- Air is an ideal gas.
- The pressure of the outside air is  $P_{atm} = 100 \,\mathrm{kPa}$
- We are given an initial volume, but no final volume.
- We are given a gage pressure, which is the atmospheric pressure plus the pressure in the tire.

$$P_{\text{gage}} = P_{abs} - P_{atm}$$

#### Explore:

The Ideal Gas Equation needs both  $P_{abs}$  and  $T_{abs}$ . We should use Equation (4.11), because we need to know how much air to let out.

$$PV = mRT$$

The volume is either unchanged, or changes very little.

$$\left(\frac{PV}{T}\right)_i = \left(\frac{PV}{T}\right)_f$$

## 5 Energy Analysis of Closed Systems

Gases can perform work, meaning they can expend Energy.

For example, in a piston, there is a contained gas, which can press one side up and out. Remember the equation for Work, Equation (1.4). But, because we are dealing with gas pressures, we rewrite Equation (1.4).

$$W = PAd$$
$$\Delta W = PA\Delta d$$
$$= P\Delta V$$

We can express the change in work using differentials too, so we can integrate.

$$dW = PdV$$

This leads to Equation (5.1)

$$W = \int_{\text{State 1}}^{\text{State 2}} PdV \tag{5.1}$$

Equation (5.1) has two possibilities:

Volume is Constant W = 0Pressure is Constant  $W = P(V_2 - V_1)$ 

Now, we may be interested in the total energy required to change or create a system. This is Enthalpy. For example, Enthalpy of Vaporization is the amount of energy required to convert a system from a Saturated Liquid to a Saturated Vapor.

**Defn 57** (Enthalpy). Another way to think of this, is *enthalpy* is the Energy required to create a new System. This can only be done if the current system performs work on its boundary, i.e. moves the boundary.

Enthalpy is typically the total Heat content of a System. It is equal to the Internal Energy of the system plus the product of Pressure and volume.

$$H = U + PV J \tag{5.2}$$

However, Enthalpy is an Extensive Property, but we would prefer to work with an Intensive Property. Thus, we more frequently use Specific Enthalpy.

**Defn 58** (Specific Enthalpy). *Specific enthalpy* is also commonly referred to as just *enthalpy*, as context makes clear which one is being discussed. Specific enthalpy is the total Heat content of a System per unit mass of that system. Specific Enthalpy is defined in Equation (5.3).

$$h = u + P\nu \text{ J/g} \tag{5.3}$$

## 5.1 Mechanisms of Energy Transfer

From our discussion of changes in energy in Section 3.3, we know that there are 3 main mechanisms of energy transfer:

- 1. Heat Transfer
- 2. Work
- 3. Mass Flow

In addition, according to the Law of Conservation of Energy, we know that the total amount of energy must be conserved throughout a process. This leads to 2 separate types of processes occurring.

Cyclical A cyclic process is one where the beginning and end states are identical. This also means that  $Q_{In} = W_{Out}$  and  $Q_{Out} = W_{In}$ , making  $\Delta E = 0$ , and  $E_{In} = E_{Out}$ .

**Regular** A regular process is the general way to deal with processes, and cyclic processes are ones that are special cases of a regular process. In this case, there is a change in energy  $\Delta E = (Q_{In} - Q_{Out}) + (W_{In} - W_{Out})$ .

Now, we can generalize Equation (3.2) even more, to allow for the changing of systems. We start with an equation that represents the energy of the entire System, Equation (5.4).

$$U + KE + PE + FE = Q + W \tag{5.4}$$

Now, if we want to discuss the change in the total energy of the system, we can use Equation (5.5).

$$\Delta U + \Delta KE + \Delta PE + \Delta FE = \Delta Q + \Delta W$$

$$= (Q_{In} - Q_{Out}) + (W_{In} - W_{Out})$$
(5.5)

The implications of Equation (5.5) are listed below.

- For stationary systems,  $\Delta KE = 0$ , and  $\Delta PE = 0$ .
- For stationary and Closed Systems (when there is **no** mass transfer)  $\Delta KE = 0$ ,  $\Delta PE = 0$ ,  $\Delta FE = 0$ . Therefore,  $\Delta U = \Delta Q + \Delta W$ .

### Example 5.1: Enthalpy of Saturated Water. Textbook Problem 5.29

Saturated water vapor at T = 200 °C and is Isothermally condensed into a Saturated Liquid in a piston-cylinder device. Calculate the Heat Transfer and Work done during this process in kJ/kg?

### Concepts:

A piston-cylinder means that the pressure is constant throughout the duration of a Process.

An Isothermal process is one in which the temperature is constant.

The water is moving from a Saturated Vapor to a Saturated Liquid.

The total energy is conserved throughout the Process

#### Explore:

From our understanding of Saturated Mixtures, we know that we should use Table A.4 from the textbook's appendix. This is both a stationary system and a Closed System, so  $\Delta KE = 0$ ,  $\Delta PE = 0$ , and  $\Delta FE = 0$ . Therefore, the only terms in Equation (5.5) we need to care about are

$$\Delta U = \Delta Q + \Delta W$$

To simplify this further, we can assume that at the starting state, there was no Heat going in and no Work being done. Therefore,  $Q_{In} = 0$  and  $W_{In} = 0$ . So, the equation above simplifies down to

$$U_2 - U_1 = -Q_{Out} + -W_{Out}$$
  
= -Q\_{Out} - P(V\_2 - V\_1)

The difference in Internal Energy is actually recorded in the textbook's Table A.4 as  $U_{fg}$ .

#### Plan

Solve for the above equation, using Table A.4 in the textbook to find the value of the change in Internal Energy of the system.

#### Solve:

From Table A.4, we know that at  $T=200\,^{\circ}\text{C}$ ,  $P_{\text{sat}}=1555\,\text{kPa}$ . We also know  $\nu_f=0.001\,157\,\text{m}^3/\text{kg}$  and  $\nu_g=0.127\,21\,\text{m}^3/\text{kg}$ . Lastly, we can also find  $u_g=2594\,\text{kJ/kg}$  and  $u_f=850.46\,\text{kJ/kg}$ .

$$W_{Out} = 1555(0.001157 - 0.12621)$$

$$= -196 \,\mathrm{kPa} \,\mathrm{m^3/kg}$$

$$= -196 \,\mathrm{kJ/kg}$$

$$u_f - U_g = 850 - 2594$$

$$= -1744 \,\mathrm{kJ/kg}$$

$$u_f - U_g = -Q_{Out} - W_{Out}$$

$$-1744 \,\mathrm{kJ/kg} = -Q_{Out} - -196 \,\mathrm{kJ/kg}$$

$$Q_{Out} = 1940 \,\mathrm{kJ/kg}$$

Thus, the vapor is cooling and condensing in the piston-cylinder, which makes sense in this case.

#### Validate:

We can validate this by performing the same calculations using the change in Specific Enthalpy instead.

$$\Delta h = -Q_{Out}$$
 
$$h_f - h_g = -Q_{Out}$$

The change in specific enthalpy can be found in Table A.4 again.

$$(852.3 - 2792) \text{kJ/kg} = -Q_{Out}$$
  
 $Q_{Out} = 1939.7 \text{ kJ/kg}$ 

Now, taking significant figures.

$$Q_{Out} = 1940 \,\mathrm{kJ/kg}$$

#### Generalize:

Any time the system is changing states, we can use Enthalpy and/or Specific Enthalpy. This helps us avoid these longer calculations using all the other forms of Energy in the System.

## Example 5.2: Case when Enthalpy Cannot be Used. Textbook Problem 5.34

Rigid  $V = 1 \,\text{ft}^3$  vessel that contains R-134a. The refrigerant is at  $T_1 = -20 \,^{\circ}\text{F}$  with Quality 27.7%. It is heated until it reaches  $T_2 = 100 \,^{\circ}\text{F}$ . Calculate the Heat Transfer required to do this?

### Concepts:

Because we are told the Quality, we know this is a Saturated Mixture.

This is a rigid vessel, so the volume is constant, implying this is both a stationary and closed system.

Because Q is an Energy, not Specific Energy, we need to keep it as an Extensive Property. Using all of these facts,  $\Delta U = \Delta Q + \Delta W$ .

#### Explore:

We can start by looking at the various components of the equation above. There is no cooling going on in this system, so  $Q_{Out} = 0$ . There is no work being done on the refrigerant, so both  $W_{In} = 0$  and  $W_{Out} = 0$ . Therefore,  $\Delta U = Q_{In}$ , which makes sense, as we were told we were only heating the refrigerant. Lastly, because the refrigerant starts as a Saturated Mixture, we need to use:

$$\nu_x = \nu_f + x(\nu_g - \nu_f)$$
  
$$u_x = U_f + x(U_g - U_f)$$

#### Plan:

Solve  $\Delta u = Q_{In}$  by finding the Internal Energy values in the English appendix table for R-134a.

#### Solve:

When  $T = -20^{\circ}\text{F}$ ,  $P_{\text{sat}} = 12.9 \,\text{psia}$ . In addition, the Quality is x = 0.227. Because this is in a rigid vessel, the volume is constant, which also means the Specific Volume is constant.

$$\nu_x = \nu_f + x(\nu_g - \nu_f)$$

Grabbing  $\nu_f$  and  $\nu_g$  from the Table in the textbook's appendix.

= 
$$0.01156 + 0.277(3.4424 - 0.01156)$$
  
=  $0.961843 \,\text{ft}^3/\text{lbm}$ 

Now we focus on finding the Internal Energy of the Saturated Mixture at the given Quality.

$$u_x = u_f + x(u_g - u_f)$$
  
= 6.014 + 0.277(91.90 - 6.014)  
= 29.8044 btu/lbm

Now, we focus on the end state. Keep in mind that the Specific Volume is constant. Looking in the Saturated Mixture tables for this temperature shows us the refrigerant is actually a Superheated Vapor now. When looking at Table A.13E, we notice that the Specific Volume does not have a single entry in the table. So, we must Interpolate instead.

$$y = y_0 + (x_1 - x)\frac{y_1 - y_0}{x_1 - x_0}$$

Interpolate the Pressure.

$$P = P_0 + (\nu - \nu_1) \frac{P_1 - P_0}{\nu_1 - \nu_0}$$
  
= 50 psia + (0.961843 - .9072) \frac{60 - 50}{1.1043 - 0.9072}  
= 52.7 psia

Now, interpolating the Internal Energy.

$$u_2 = u_1 + (\nu - \nu_1) \frac{u_1 - u_0}{\nu_1 - \nu_0}$$
= 111.16 btu/lbm + (0.961843 - 0.9072)  $\frac{111.17 - 111.56}{0.90762 - 1.1043}$ 
= 111.3 btu/lbm

Now that we have the beginning and end values of the pressure and internal energy, we can calculate the change in internal energy.

$$\Delta u = u_1 - u_x$$
  
= 111.3 - 29.8044  
= 81.49 btu/lbm

However, because the change we actually got was the change in specific Internal Energy, we must multiply it by the mass of the refrigerant in the system. We know the Specific Volume and the volume of the vessel, so we can find the mass.

$$\nu = \frac{V}{m}$$

$$m = \frac{V}{\nu}$$

$$= \frac{1}{0.961843}$$

$$= 1.03967 \,\text{lbm}$$

Now, multiplying  $\Delta u$  with the mass, we get

$$U = mu$$
  
= 1.03967 × 81.49  
= 84.7228  
= 84.73 btu

## 5.2 Heat and Specific Heat for Energy Transfer

**Defn 59** (Specific Heat). *Specific heat* is the Energy required to raise the termperature of a unit mass of a material by one degree. Specific heat is denoted with c. This is a **linear** term between temperature and energy. Like any other Specific Property, specific heat is also an Intensive Property.

*Remark* 59.1 (Possible Materials to Apply to). This Intensive Property only works for the following materials, given they **do** not undergo phase changes:

- Noble Gases and Air
- Liquids
- Solids

*Remark* 59.2 (Other Notable Properties). Specific Heat is **not** always linear over large temperature changes or when under very high pressures or temperatures.

There are 2 cases of using Specific Heat:

- 1. Constant Volume
- 2. Constant Pressure

Both of these cases are **NOT** the same, meaning  $c_V \neq c_P$ . **However**, there is a relation between  $c_V$  and  $c_P$ , shown in Equation (5.6).

$$c_P = c_V + R \tag{5.6}$$

## 5.2.1 Constant Volume

If the material in question has a Specific Heat and undergoes a process at constant volume, then:

$$c_V \equiv \left[\frac{\partial U}{\partial T}\right]_V$$

The equation above is approximately linear for smaller changes in both temperature and volume, which yields Equation (5.7)

$$\Delta U = c_V m \Delta T \tag{5.7}$$

#### 5.2.2 Constant Pressure

If the material in question has a Specific Heat and undergoes a process at constant pressure, then:

$$c_P \equiv \left[\frac{\partial H}{\partial T}\right]_P$$

The equation above is approximately linear for smaller changes in both temperature and volume, which yields Equation (5.8)

$$\Delta H = c_P m \Delta T \tag{5.8}$$

## Example 5.3: Energy Required by Heater. Textbook Problem 5.79

A mass of  $m=15\,\mathrm{kg}$  of air in a piston-cylinder device is heated from  $T_1=25\,^{\circ}\mathrm{C}$  to  $T_2=77\,^{\circ}\mathrm{C}$  by passing electric current through a resistance heater inside the cylinder. The Pressure inside the cylinder is held constant at  $P=300\,\mathrm{kPa}$  throughout the Process. The Heat loss in the cylidner is  $Q=60\,\mathrm{kJ}$ . Determine the electric energy required by the electric heater in kW h?

#### Concepts:

Because this is a piston-cylinder, the Pressure is constant.

This has no limitation on the volume of the air inside the piston-cylinder. Because the heating is greater than the heat loss, the air will expand.

This is a Closed System, so there is a heat transfer and it is possible to do work.

The electric output of the heater is measured in kWh, which is power multiplied by time. Thus, 1 kW h = 3600 kJ.

The energy balance for this problem is summarized by  $\Delta U = \Delta Q + \Delta W$ .

Enthalpy exists in a system only when a new System is being created. There was work done by the air as it expanded on the piston, and it moved the air outside of the piston too, so we can use Enthalpy here.

### Explore:

We start by looking at  $\Delta Q$ . Because there is no heat going into the system from the surroundings,  $Q_{In} = 0$ . However, because the system is losing heat to the surroundings,  $Q_{Out} = 60 \,\text{kJ}$ .

Now, looking at  $\Delta W$ . The electric heater is doing work on the air, by heating it up,  $W_{In}$  is equal to the work done by the electric heater. Then, because the air is expanding, it is also performing work on the piston-cylinder to move the piston. Thus, we determine this is flow energy, where the pressure is constant, so  $W_{Out} = PV$ .

Lastly, because we are dealing with a system that is changing, we can use Enthalpy instead. In  $\Delta H = -Q_{Out} + W_{In}$ , the  $W_{Out}$  is actually implicitly added to the  $\Delta H$  side, so it doesn't need to be recorded twice. This is because H = U + PV, from Equation (5.2).

$$\Delta U = -Q_{Out} + W_{In} - W_{Out}$$

$$= -Q_{Out} + W_{In} - P\Delta V$$

$$\Delta U + P\Delta V = -Q_{Out} + W_{In}$$

$$\Delta H = -Q_{Out} + W_{In}$$

#### Plan:

Solve  $\Delta H = -Q_{Out} + W_{In}$ .

Find the states from tables in the back of the textbook, namely Table A.21. We need to keep in mine that the tables will have the Specific Enthalpy, so we must change it into just Enthalpy with H = mh.

#### Solve:

From Table A.21 in the textbook: at  $T_1 = 25$  °C,  $h_1 = 298.18$  kJ/kg. Likewise, at  $T_2 = 77$  °C,  $h_2 = 350.5$  kJ/kg. Now that we have every term in our equation to use for solving, we solve it.

$$\Delta H = -Q_{Out} + W_{In}$$

$$m\Delta h = -60 + W_{In}$$

$$m(h_2 - h_1) + 60 = W_{In}$$

$$W_{In} = 15(350.5 - 298.18) + 60$$

$$= 844.8 \text{ kJ}$$

Now, we have to divide by 1 kW h = 3600 kJ.

$$W_{In} = 844.8 \text{ kJ}$$
  
=  $\frac{844.8}{3600}$   
=  $0.235 \text{ kW h}$ 

#### Validate:

We could do this with Specific Heat as well.

$$\Delta U = c_V m \Delta T$$
$$\Delta H = c_P m \Delta T$$

But, because this Process was done under constant Pressure, we need to use the second one.  $c_P = 1.0065 \,\mathrm{kJ}\,\mathrm{K/kg}$  is taken from Table A.2, and was averaged over the  $c_P$  values for the range 0 °C and 100 °C. Because of the way  $c_P$  is defined, we must convert our temperatures into Kelvin too, which is simple. Once done, we can solve this equation.

$$\Delta H = c_P m \Delta T$$
  
= 1.0065(15 kg)(350 - 298)K  
= 785.07 kJ

Now, if we account for the  $60 \,\mathrm{kJ}$  of heat loss, then  $785.07 + 60 = 845.07 \,\mathrm{kJ}$ , which is about the same.

#### Generalize:

We can use the state of the System and the energy balance equation or the Specific Heat to find the total Energy of the system.

## 5.3 Incompressible Substances

In general, because there is little that the substance *can* do, because it is incompressible, it leads to the Specific Heats being equal to each other.

$$c_P = c_V$$

#### Example 5.4: Using Specific Heat. Textbook Problem 5.66

A  $4 \text{ m} \times 5 \text{ m} \times 6 \text{ m}$  room is to be heated by a baseboard resistance heater. This heater must raise the temperature from 7 °C to 23 °C within 15 minutes. Assuming no heat losses in the room, and an absolute pressure of P = 100 kPa determine the required power of the resistance heater assuming a constant Specific Heat at room temperature?

#### Concepts:

Room has air at roughly 1 atm.

This is ideally a Closed System, but if the room is leaky, then it is an Open System.

Air can be treated as an ideal gas.

The resistance heater is inside the room and no mention is made of temperature outside the room, meaning there is no heat gain nor is there any heat loss.

#### Explore:

We could use different Specific Heats depending on the system types. However, we can assume that the problem meant this system to be a Closed System. This implies a constant volume, so  $c_V$  should be used. We need Table A.2 in the textbook's appendix. Under the implication of constant volume, for air,  $c_V = 0.718 \,\mathrm{kJ}\,\mathrm{K/kg}$ . However, for air under constant pressure, an Open System,  $c_P = 1.005 \,\mathrm{kJ}\,\mathrm{K/kg}$ .

Now, as a discussion of the energy balance of this system, we use the equation below.

$$\Delta U = \Delta Q + \Delta W$$

We were tole that  $\Delta Q = 0$  because there is no heat loss in the room, and likewise, there are no heat gains. Therefore,

$$\Delta U = W_{In} - W_{Out}$$

If the room were leaky, and this were an Open System, then  $W_{Out} \neq 0$ . We know that  $W_{In}$  is the work done on the room due to the heater.

In addition, we know that we can calculate the change in Internal Energy by using the Specific Heat.

$$\Delta U = c_V m \Delta T$$
$$= \dot{W} \Delta t$$

Plan:

Find all the mass in the system. Use  $c_V$  to solve for this.

Solve:

Start by finding the mass of the air in the room.

$$m = \frac{PV}{RT}$$
$$= 149 \, \text{kg}$$

Now, move onto finding the change in Internal Energy.

$$\Delta U = c_V m \Delta T$$
  
= 0.718(149)(23 - 7)  
= 1711 kJ

Now plug that into our equation about the work done multiplied by the time.

$$\Delta U = \dot{W} \Delta t$$

$$1711 \,\text{kJ} = \dot{W} \left( 15 \min \frac{60 \,\text{s}}{1 \min} \right)$$

$$\dot{W} = 1.9 \,\text{kW}$$

# 6 Mass and Energy Analysis of Control Volumes

## 6.1 Continuity Equation

We perform this analysis when we are interested in the matter flow of a System. We still need to have Law of Conservation of Energy. The important thing to remember here is that there is no change of mass of the control volume, meaning there is **no** storage of the mass in the system. This means we have *steady flow*. This also means we could have an unsteady flow, but we deal with that later in this section.

Now, to motivate the Continuity Equation, imagine an expandable tank. If there are n flows inwards and m flows outwards, we can construct an equation that looks like this.

$$(m\dot{I}_{n,1} + m\dot{I}_{n,2}) - m\dot{O}_{ut} = \left[\frac{dm}{dt}\right]_{\text{Control Volume}}$$
$$\sum_{\text{Inlets}} \dot{m} - \sum_{\text{Outlets}} \dot{m} = \dot{m}_{\text{Control Volume}}$$

**Defn 60** (Continuity Equation). The *continuity equation* states the relationship between the mass flow into a point in a System and its output. Succinctly, it can be stated:

$$\sum_{\text{Inlets}} \dot{m} - \sum_{\text{Outlets}} \dot{m} = \dot{m}_{\text{Control Volume}} 
\sum_{\text{Inlets}} \dot{V} - \sum_{\text{Outlets}} \dot{V} = \dot{V}_{\text{Control Volume}}$$
(6.1)

 $\dot{m}_{\rm Control\ Volume}$  is the storage possible in a vessel, in mass. Likewise,  $\dot{V}_{\rm Control\ Volume}$  is the possible storage of a vessel, in volume.

Remark 60.1 (Alternate Definitions of Mass Flowrate). It will be useful to remember alternative versions of mass flowrate for this particular section. Namely,

$$\dot{m}_1 = \dot{m}_2$$

$$\rho_1 v_1 A_1 = \rho_2 v_2 A_2$$

There are 2 situations that can arise from the Continuity Equation.

- 1. Rigid control volumes,  $\dot{m}_{\rm Control\ Volume} = 0$ .
- 2. Non-rigid control volumes,  $\dot{m}_{\rm Control\ Volume} \neq 0$ .

## Example 6.1: Use Continuity Equation.

A nozzle is attached to a 20 gal bucket to fill it. The inner diameter of the hose is 1 in and reduces to 0.5 in at the nozzle's exit. If the average velocity of the water in the hose is 8 ft/s determine the volume and mass flow rates,  $\dot{V}$  and  $\dot{m}$  of the water through the hose and how long it will take to fill the bucket? Also determine the average velocity at the tip of the nozzle,  $v_{Out}$ ?

### Concepts:

A nozzle has 1 inlet and 1 outlet. The diameter of the nozzle at the inlet is  $d_{In} = 1$  in, and the outlet  $d_{Out} = 0.5$  in. There is no temperature change in the hose, so the density of the water is constant,  $\Delta \rho_{Water} = 0$ .

Because the host does not have any storage,  $\dot{m}_{\text{Control Volume}} = 0$ . Therefore,  $\dot{m}_{In} = \dot{m}_{Out}$  and  $\dot{V}_{In} = \dot{V}_{Out}$ .

## Explore

 $\rho_{\text{Water}} = 62.3 \,\text{lbm/ft}^3$ , as  $32^{\circ}\text{F}$ .

The bucket has a capacity of 20 gal, which means  $20 = \dot{V} \times \text{Time to fill.}$ 

#### Plan:

Solve for  $\dot{V}$ ,  $\dot{m}$ ,  $V_2$ .

#### Solve:

Start with a definition of volume flowrate.

$$\dot{V}_{In} = A_{In}v_{In}$$

$$= \frac{\pi d_{In}^2}{4} 8 \text{ ft/s}$$

$$= 0.0436 \text{ ft}^3/\text{s}$$

Now, we can find the mass flowrate through the inlet of the hose.

$$\dot{m} = \rho_{Water} \dot{V}$$
  
= 62.3 lbm/ft<sup>3</sup>(0.0436 ft<sup>3</sup>/s)  
= 2.72 lbm/s

Because the flowrates at the inlet and outlet of the hose are the same, we can reuse these values to solve for the time to fill the bucket.

$$20 \operatorname{gal} \frac{1 \operatorname{ft}^3}{7.48 \operatorname{gal}} = \dot{V}t$$
$$t = 61.3 \operatorname{s}$$

Lastly, we need to solve for the velocity of the flowing water at the tip of the nozzle. We can use the relation between mass flowrates, shown in Remark 60.1.

$$\rho_{Water} A_{In} v_{In} = \rho_{Water} A_{Out} v_{Out}$$

$$A_{In} v_{In} = A_{Out} v_{Out}$$

$$v_{Out} = \frac{A_{In} v_{In}}{A_{Out}}$$

$$= \frac{\frac{\pi d_{In}^2}{4} v_{In}}{\frac{\pi d_{Out}^2}{4}}$$

$$v_{Out} = 32 \text{ ft/s}$$

#### Validate:

We can validate that our answer for volume flowrate makes sense by multiplying the outlet volume flowrate by the outlet velocity and the outlet cross-sectional area.

$$\dot{V}_{Out} = v_{Out} \times A_{Out}$$
$$= 32 \,\text{ft/s} \frac{\pi d_{Out}^2}{4}$$

If we look at this closely, we notice that when the diameter of the outlet was halved, the total area was quartered. Correspondingly, there was a four times increase in the velocity of the water at the outlet.

#### Generalize:

Constant mass flow and constant fluid density reuislts in a change at the outlet based on the change in area.

## Example 6.2: Flow with Changing Mass Density. Textbook Problem 6.7

Air enters a nozzle at a steady rate of  $\rho_{In}=2.21\,\mathrm{kg/m^3}$  at  $v_{In}=40\,\mathrm{m/s}$  and leaves at  $\rho_{Out}=0.762\,\mathrm{kg/m^3}$  and  $v_{Out}=180\,\mathrm{m/s}$ . If the inlet of the nozzle is  $A_{In}=90\,\mathrm{cm^2}$ , determine the mass flowrate,  $\dot{m}$ , through the nozzle and the outlet area of the nozzle,  $A_{Out}$ ?

#### Concepts:

Nozzles take a low  $v_{In}$  and increase it to a high  $v_{Out}$ .

This is a steady flow problem, meaning we can use the Continuity Equation freely. Also, the nozzle has no storage capacity for the air, so  $\dot{m}_{In} = \dot{m}_{Out}$ .

The mass density is changing in this problem. This is happening because air is an ideal gas, and/thus, it is compressible.

### Explore:

Remember, because the nozzle does **not** store any air,  $\dot{m}_{In} = \dot{m}_{Out}$ . This occurs even though  $\rho$  is changing. If we expand this equation, we get:

$$(\rho vA)_{In} = (\rho vA)_{Out}$$

#### Plan:

Solve the expanded mass flowrate equation above.

#### Solve:

$$\dot{m}_{In} = \rho_{In} v_{In} A_{In}$$
  
= 2.21 kg/m<sup>3</sup> (40 m/s)(90 m<sup>2</sup>) ( $\frac{1 \text{ m}}{100 \text{ cm}}$ )<sup>2</sup>  
= 0.7956 kg/s

Now, we can solve for the other side of the equation.

$$\dot{m}_{Out} = \rho_{Out} v_{Out} A_{Out}$$

$$0.7956 \,\text{kg/s} = (0.762 \,\text{kg/m}^3)(180 \,\text{m/s}) A_{Out}$$

$$A_{Out} = 0.0058 \,\text{m}^2$$

$$= 58 \,\text{cm}^2$$

#### Validate:

Our equations have been consistent with our knowledge of how nozzles work.

We checked our units as we solved, so we are likely correct.

If we wanted to be thorough, we should check that  $\dot{m}_{In} = \dot{m}_{Out}$  is actually a valid assumption.

## 6.2 Energy Flows

	Internal Energy	Kinetic Energy	Potential Energy	Flow Energy
Specific Energy, $e$	u	$\frac{v^2}{2}$	gd	$\frac{P}{\rho}$
Energy, $E$	U	$rac{mv^2}{2}$	mgd	$\dot{PV}$

Table 6.1: Types of Energy for Mass Flow

We can often connect the Internal Energy and the Flow Energy of a process and call that Enthalpy, h or H for a particular

control volume.

$$h = u + \frac{P}{\rho}$$
$$H = U + FE$$

And we know that power is the time-rate of change of energy.

$$P = \dot{E}$$
$$= \dot{m}e$$

Just like with mass flows, if a control volume has not storage capacity, then it also has no energy. Thus, if there is no storage, and the Law of Conservation of Energy is abided by, then:

$$\dot{m}_{In} - \dot{m}_{Out} = \dot{m}_{\mathrm{Control\ Volume}}$$
 $\dot{E}_{In} - \dot{E}_{Out} = \dot{E}_{\mathrm{Control\ Volume}}$ 
 $\dot{m}_{In} = \dot{m}_{Out}$ 
 $\dot{E}_{In} = \dot{E}_{Out}$ 

Looking at the equations received, it is obvious that we can apply any kind of Energy that may be present in the system to the above equations and solve for any term we may be interested in. If we now expand our Continuity Equation to energies, we get Equation (6.2).

$$\dot{Q}_{In} + \dot{W}_{In} + \sum_{\text{In}} \dot{m}e = \dot{Q}_{Out} + \dot{W}_{Out} + \sum_{\text{Out}} \dot{m}e$$

$$\dot{Q}_{In} + \dot{W}_{In} + \sum_{\text{In}} \dot{m}(h + \frac{v^2}{2} + gd) = \dot{Q}_{Out} + \dot{W}_{Out} + \sum_{\text{Out}} \dot{m}(h + \frac{v^2}{2} + gd)$$
(6.2)

If we have a steady flow, then Equation (6.2) can be simplified a bit.

$$\Delta \dot{Q} - \Delta \dot{W} = \dot{m} \left( \Delta h + \Delta KE + \Delta PE \right) 
= \dot{m} \left( (h_2 - h_1) + \frac{v_2^2 - v_1^2}{2} + g(d_2 - d_1) \right)$$
(6.3)

The work in Equation (6.3) is shaft work. This could be a propeller turning the fluid, or the fluid doing work on the shaft to achieve something.

#### 6.2.1 Nozzles and Diffusers

There are some general properties about nozzles and diffusers that are useful to remember.

- For nozzles,  $v_2 \gg v_1$ . The energy gained from the change in kinetic energy is changed from the Flow Energy, because  $P_2 < P_1$ .
- For diffusers,  $v_2 \ll v_1$ . The energy lost from the change in kinetic energy is given to the Flow Energy, because  $P_2 > P_1$ .
- In general,  $\Delta \dot{Q} \approx 0$ . There is very little Heat Transfer.
- In general,  $\Delta \dot{W} \approx 0$ . There are no propellers or outside shafts.
- In general,  $\dot{KE} \neq 0$ . The kinetic energy changes dramatically.
- In general,  $h \neq 0$ . There is a large volume change.

#### Example 6.3: Behavior of Nozzles. Textbook Problem 6.31

Given a nozzle that pressures air in an Adiabatic Process at an initial pressure of  $P_1 = 300 \,\mathrm{kPa}$ , initial temperature of  $T_1 = 200 \,^{\circ}\mathrm{C}$ , an inlet velocity of  $v_1 = 30 \,\mathrm{m/s}$ , and an inlet cross-sectional area of  $A_1 = 80 \,\mathrm{cm^2}$ . The outlet pressure is  $P_2 = 100 \,\mathrm{kPa}$  and a velocity of  $v_2 = 180 \,\mathrm{m/s}$ . Find the mass flow rate,  $\dot{m}$ , the temperature of the output air,  $T_2$ , and the cross-sectional area of the outlet,  $A_2$ ?

#### Concepts

A nozzle has a much greater outlet velocity compared to its inlet velocity,  $v_{Out} \gg v_{In}$ , and  $P_{In} > P_{Out}$ . Air is an ideal gas and is compressible. So, we might have to deal with different densities of the air at the inlet and outlet,  $\rho_1$  may not necessarily be equal to  $\rho_2$ . This system seems to be under steady flow conditions, so  $\dot{m}_{In} = \dot{m}_{Out}$ .

Due to the Law of Conservation of Energy, we can say  $\dot{E}_{In} = \dot{E}_{Out}$ . Namely, there is no energy storage in this system.

$$\dot{m}_{In} = \dot{m}_{Out}$$
$$(\rho v A)_{In} = (\rho v A)_{Out}$$

Now, we can find the density of the inlet air by using the tables for it. But, to find the density of the air at the outlet, we can use Equation (4.10), and take the inverse of the Specific Volume.

$$\dot{m}_{In} = \rho_2 v_2 A_2$$
$$= \frac{1}{\nu_2} v_2 A_2$$

Find the Specific Volume using Equation (4.10).

$$P\nu = RT$$
 
$$\nu = \frac{RT}{P}$$
 
$$\dot{m}_{In} = \frac{P}{RT}v_2A_2$$

We also have several other key pieces of information to solve this.

$$\Delta \dot{Q} = 0$$
$$\Delta \dot{W} = 0$$
$$\Delta PE = 0$$

Therefore, only kinetic energy and enthalpy change,  $\Delta KE$  and  $\Delta h$ , respectively. We can calculate the change in Specific Enthalpy using a slightly modified version of Equation (5.8).

$$\Delta H = c_P m \Delta T$$

$$\Delta h = \frac{\Delta H}{m}$$

$$= \frac{c_P m \Delta T}{m}$$

$$= c_P \Delta T$$

We use  $c_P$ , Specific Heat under constant pressure, because once the air leaves the nozzle, it is in an environment with constant pressure.

#### Plan:

Solve for  $\nu_2$  using the Equation (4.10).

Solve for  $A_2$  using the relation  $\dot{m} = \frac{\dot{A}_1 v_1}{v_2}$ . Use our energy conservation relation to solve for  $T_2$  using  $\Delta T$ .

#### Solve:

$$\nu_1 = \frac{RT_1}{P}$$
$$= 0.4525 \,\mathrm{m}^3/\mathrm{kg}$$

Now that we have the initial Specific Volume, we can find the mass flowrate.

$$\dot{m}_1 = \frac{A_1 v_1}{\nu_1}$$
$$= 0.5304 \,\mathrm{kg/s}$$

Now, we can solve for our energy conservation equation, Equation (6.2) to find the final temperature,  $T_2$ .

$$\Delta \dot{Q} - \Delta \dot{W} = \dot{m} \left( \Delta h - \frac{\Delta KE}{m} \right)$$
$$0 - 0 = \dot{m} \left( c_P \Delta T + \frac{v_2^2 - v_1^2}{2} \right)$$

Refer to the textbook's Table A.2 for  $c_P$ . Some interpolation is needed.

$$0 = 0.5304 \,\mathrm{kg/s} \left( 1.02 \,\mathrm{kJ/kg} (T_2 - (200 + 273.15) \mathrm{K}) - \frac{180 \,\mathrm{m/s} - 30 \,\mathrm{m/s}}{2} \right)$$

Now, rearrange the equation such that you solve for  $T_2$ .

$$T_2 = 184.25 \,^{\circ}\text{C}$$

Now, we can solve for the final Specific Volume.

$$\nu_2 = \frac{RT_2}{P_2}$$
$$= 1.312 \,\mathrm{m}^3/\mathrm{kg}$$

Plugging that into the mass flow equation we have, to find the outlet cross-sectional area,  $A_2$ .

$$\Delta m_1 = \Delta m_2$$
 $0.5304 \,\mathrm{kg/s} = \frac{A_2 v_2}{v_2}$ 
 $A_2 = 0.003 \,86 \,\mathrm{m}^2$ 
 $= 38.6 \,\mathrm{cm}^2$ 

#### Validate:

The area decreased, so it definitely is a nozzle. In particular, all the other factors help us confirm that. The pressure decreased, the enthalpy decreased, the velocity increased, and the cross-sectional area decreased. Thus, this is definitely a nozzle.

In	Out
Pressure High	Pressure Low
Velocity Low	Velocity High
Start Temperature	Temperature Decreased
Start Enthalpy	Enthalpy Decreased

#### Generalize:

In a nozzle, velocity and pressure change occurs at the expense of the Enthalpy.

#### Example 6.4: Steam Nozzle. Textbook Problem 6.35

A nozzle is handling steam that enters at  $P_1 = 5 \,\mathrm{MPa}$  and  $T_1 = 400\,^\circ\mathrm{C}$  steadily at  $v_1 = 80 \,\mathrm{m/s}$ . The steam leaves at  $P_2 = 2 \,\mathrm{MPa}$  and  $T_2 = 300\,^\circ\mathrm{C}$ . The inlet of the nozzle is  $A_1 = 50 \,\mathrm{cm^2}$ . Heat is being lost at a rate of  $Q_{Out} = 120 \,\mathrm{kJ/s}$ . Find the mass flowrate of the steam  $\dot{m}$ , the exit velocity of the steam  $v_2$ , and the cross-sectional area of the nozzle's outlet  $A_2$ ?

## Concepts:

The **nozzle** has steady flow, with *steam*.

A nozzle has no storage capacity, so  $\dot{m}_{In} = \dot{m}_{Out}$ .

Steam is *not* an ideal gas, so we have to use the Tables in the back of the textbook.

#### Explore

Tables A.4, A.5, and A.6 will be of use. Initially, the steam is superheated, so we start by using Table A.6.

Expanding the definition of mass flowrate, we get the relation:

$$\dot{m} = \rho A v$$

It is also useful to remember

$$\rho = \frac{1}{\nu}$$

We assume that  $\dot{Q}_{In} = 0$ , because we are not told otherwise.

A nozzle is a rigid body, so it does not undergo any pressure changes. Thus,  $\dot{W}_{In} = \dot{W}_{Out}$ , meaning  $\Delta \dot{W} = 0$ . Again,  $\Delta PE = 0$ , because there is no change in height.

#### Plans

Find the Specific Volume for each state ( $\nu_1$  and  $\nu_2$ ), and their respective Enthalpy ( $h_1$  and  $h_2$ ). Use these values, along with the ones given in the problem statement to solve Equation (6.3).

#### Solve:

From Table A.6 at  $P_1 = 5 \text{ MPa}$  and  $T_1 = 400 \,^{\circ}\text{C}$ :

$$\nu_1 = 0.057 \, 84 \,\mathrm{m}^3/\mathrm{kg}$$
 $h_1 = 3196.7 \,\mathrm{kJ/kg}$ 

Likewise, for the output, at  $P_2 = 2 \text{ MPa}$  and  $T_2 = 300 \,^{\circ}\text{C}$ :

$$\nu_2 = 0.12551 \,\mathrm{m}^3/\mathrm{kg}$$
 $h_2 = 3024.2 \,\mathrm{kJ/kg}$ 

First, we find the mass flowrate through the nozzle,  $\dot{m}$ .

$$\dot{m} = \frac{v_1 A_1}{v_1}$$
$$= 6.92 \,\mathrm{kg/s}$$

Now, solve Equation (6.3), to find the final velocity  $v_2$ :

$$\dot{Q}_{In} - \dot{Q}_{Out} + \Delta \dot{W} = \dot{m} \left( \Delta h + \frac{\Delta KE}{m} \right)$$

The Flow Energy is handled by the use of Specific Enthalpy in this problem.

$$0 - \dot{Q}_{Out} + 0 = \dot{m} \left( h_2 - h_1 + \frac{v_2^2 - v_1^2}{2} \right)$$
$$-\dot{Q}_{Out} = \dot{m} \left( h_2 - h_1 + \frac{v_2^2 - v_1^2}{2} \right)$$
$$\dot{m}(h_1 - h_2) - \dot{Q}_{Out} = \dot{m} \left( \frac{v_2^2}{2} - \frac{v_1^2}{2} \right)$$
$$\dot{m} \left( h_1 - h_2 + \frac{v_1^2}{2} \right) - \dot{Q}_{Out} = \dot{m} \frac{v_2^2}{2}$$
$$v_2^2 = 562 \,\text{m/s}$$

Lastly, we find the outlet's cross-sectional area,  $A_2$ .

$$\dot{m} = \frac{v_2 A_2}{\nu_2}$$

$$A_2 = \dot{m} \left(\frac{\nu_2}{v_2}\right)$$

$$= 0.00154 \,\mathrm{m}^2$$

Validate:

In	Out
Pressure High	Pressure Low
Velocity Low	Velocity High
Start Temperature	Temperature Decreased
Start Enthalpy	Enthalpy Decreased

#### Generalize:

The reduction in Enthalpy allowed the steam to gain its velocity, increasing the steam's kinetic energy. The temperature also decreased, because the enthalpy decreased. From the energy balance:

$$\dot{Q}_{Out} = \Delta h + \Delta KE$$
$$-120 \text{ kJ/s} = -1194 \text{ kJ/s} + 1073 \text{ kJ/s}$$

## 6.2.2 Turbines and Compressors

**Defn 61** (Turbine). A *turbine* takes some of the Energy in the fluid and transfers it to a shaft. The mass flowrate is constant. This means that there is a flowrate of Work out of the System.

A Turbine is the opposite of a Compressor.

**Defn 62** (Compressor). A *compressor* increases the Energy of a fluid by performing Work with the shaft. The mass flowrate is constant. This means that there is a flowrate of Work into the System.

Turbines	Compressors
$\dot{W}_{In} = 0$	$\dot{W}_{In} \neq 0$
$\dot{W}_{Out} \neq 0$	$\dot{W}_{Out} = 0$
$\dot{Q}_{In} \approx 0$	$\dot{Q}_{In} \neq 0$
$\dot{Q}_{Out} \approx 0$	$\dot{Q}_{Out} \neq 0$
$\Delta PE = 0$	$\Delta PE = 0$
$\Delta \text{KE} \neq 0$	$\Delta \text{KE} \approx 0$
$\Delta H \neq 0$	$\Delta H \neq 0$

Table 6.2: Properties of Turbines and Compressors

### Example 6.5: Adiabatic Turbines. Textbook Problem 6.52

Steam flows steadily through an Adiabatic Turbine. The inlet conditions of the steam are  $P_{In} = 10 \,\mathrm{MPa}$ ,  $T_{In} = 450\,^{\circ}\mathrm{C}$ , and  $v_{In} = 80 \,\mathrm{m/s}$ . The outlet conditions are  $P_{Out} = 10 \,\mathrm{kPa}$ , x = 0.92, and  $v_{Out} = 50 \,\mathrm{m/s}$ . The mass flowrate of the steam is  $\dot{m} = 12 \,\mathrm{kg/s}$ . Find the change in kinetic energy  $\Delta \mathrm{KE}$ , the power output  $\dot{W}_{Out}$ , and the inlet cross-sectional area  $A_{In}$ ?

#### Concepts:

This is a Turbine with a steady flow. So, we use the properties in Table 6.2.

 $\dot{W}_{Out}$  is at the shaft. This is gathered at the expense of the mass flow's energy, both kinetic and enthalpy. Thus,  $\Delta KE \neq 0$  and  $\Delta h \neq 0$ .

The fluid at the outlet is a Saturated Mixture.

 $\dot{m}_{In} = \dot{m}_{Out}.$ 

 $\dot{E}_{In} = \dot{E}_{Out}$ .

### Explore:

For kinetic energy, we need  $\dot{m}$  and the velocities at the inlet and outlet.

To solve for the output power, we need the Specific Enthalpy for the steam at the states at the inlet and the outlet. To find these, we can use Tables A.4, A.5, and A.6 from the textbook.

Due to the Law of Conservation of Energy, and the steady mass flow, we get Equation (6.3).

$$\begin{split} \Delta \dot{Q} + \Delta \dot{W} &= \sum_{\text{Inlet}} \dot{m}e - \sum_{\text{Outlet}} \dot{m}e \\ (\dot{Q}_{In} - \dot{Q}_{Out}) + (\dot{W}_{In} - \dot{W}_{Out}) &= \sum_{\text{Inlet}} \dot{m}e - \sum_{\text{Outlet}} \dot{m}e \\ (0 - 0) + (0 - \dot{W}_{Out}) &= \sum_{\text{Inlet}} \dot{m}e - \sum_{\text{Outlet}} \dot{m}e \end{split}$$

Lastly, at the outlet, we know that the steam is a Saturated Mixture, so we need to use the Quality to determine the Specific Enthalpy of the steam.

$$h = h_f + x(h_g - h_f)$$

### Plan:

Solve for the change in kinetic energy  $\Delta KE$ .

Solve the energy balance equation we have to find the power output,  $\dot{W}_{Out}$ .

Using the mass flowrate and the inlet velocity, find the inlet's cross-sectional area,  $A_{In}$ . This can be found using the equations in Remark 60.1.

#### Solve:

Find the inlet's information from Table A.6 in the textbook. At  $P_{In} = 10 \,\mathrm{MPa}$ ,  $T_{In} = 450\,^{\circ}\mathrm{C}$ 

$$\nu_{In} = 0.02978 \,\mathrm{m}^3/\mathrm{kg}$$
 $h_{In} = 3242 \,\mathrm{kJ/kg}$ 

Find the outlet's information from Table A.5 in the textbook. At  $P_{Out} = 10 \,\mathrm{kPa}, \, x = 0.92$ 

$$T_{\text{sat}} = 45.81 \,^{\circ}\text{C}$$
  
 $h_f = 191.81 \,\text{kJ/kg}$   
 $h_g = 2583.9 \,\text{kJ/kg}$   
 $h = h_f + x(h_g - h_f)$   
 $= 2392 \,\text{kJ/kg}$ 

Now that we have some background information, we will solve for the change in kinetic energy.

$$\begin{split} \Delta \text{KE} &= \frac{\text{KE}_{Out} - \text{KE}_{In}}{m} \\ &= \frac{v_{Out}^2 - v_{In}^2}{2} \\ &= \frac{50^2 - 80^2}{2} \left( \frac{1 \, \text{kJ/kg}}{1000 \, \text{m}^2/\text{s}^2} \right) \\ &= -1.95 \, \text{kJ/kg} \end{split}$$

Now, we solve our energy balance equation for the power output.

$$-\dot{W}_{Out} = \dot{m}(\Delta h + \Delta KE)$$

$$\dot{W}_{Out} = -\dot{m}((h_{Out} - h_{In}) + \Delta KE)$$

$$= \dot{m}((h_{In} - h_{Out}) - \Delta KE)$$

$$= 12 \text{ kg/s}((3242 - 2392)\text{kJ/kg} - (-1.95 \text{ kJ/kg}))$$

$$= 10.2 \text{ MJ/s}$$

$$= 10.2 \text{ MW}$$

Lastly, find the inlet's cross-sectional area:

$$\dot{m}\nu_{In} = A_{In}v_{In}$$
$$A_{In} = 44.67 \,\mathrm{cm}^2$$

#### Validate:

We need to double check that we actually have an energy balance.

$$\dot{W}_{Out} = 10.22 \,\text{MW}$$
  
= 10.2 MW + 0.027 MW

The values for properties of the states were from the textbook's tables.

For Turbine operation,  $\Delta h$ ,  $\Delta KE$ ,  $\Delta P$ , and  $\Delta T$ .

# Generalize:

Most of the work comes from  $\Delta h$ , very little comes from  $\Delta KE$ .

If this was not Adiabatic, then  $\Delta Q$  would be very small, like  $\Delta KE$ .

The mass flowrate as a large effect on the power generated.

### Example 6.6: Compressor. Textbook Problem 6.58

Helium is to be compressed from  $P_{In} = 120 \,\mathrm{kPa}$  and  $T_{In} = 310 \,\mathrm{K}$  to  $P_{Out} = 700 \,\mathrm{kPa}$  and  $T_{Out} = 430 \,\mathrm{K}$ . A heat loss of  $\dot{Q}_{Out} = 20 \,\mathrm{kJ/kg}$  occurs during the compression process. Neglecting kinetic energy changes, determine the power required to complete this  $\dot{W}_{In}$  for  $\dot{m} = 90 \,\mathrm{kg/min}$ ?

# Concepts:

Helium is an ideal gas, we can use Equation (4.10).

A compressor will increase the energy of a fluid by increasing its pressure and enthalpy.

We are told that the helium is flowing steadily because  $\dot{m}$  is provided for us.

We can find the change in enthalpy by using the Specific Heat under constant pressure. We are told enough to say that our energy balance equation in this problem is Equation (6.3).

$$\Delta \dot{Q} + \Delta \dot{W} = \dot{m}(\Delta h + \Delta KE + \Delta PE)$$

### Explore:

We are told to neglect kinetic energy changes, so  $\Delta KE = 0$ .

We also know that there is no change in potential energy, because the height doesn't change,  $\Delta PE = 0$ .

We can find the change in enthalpy by using the Specific Heat under constant pressure,  $\Delta h = c_P \Delta T$ .

We are not told anything about any heat in or work out, so assume those are zero,  $Q_{In} = 0$ ,  $W_{Out} = 0$ . Using all of this,

$$-\dot{Q}_{Out} + \dot{W}_{In} = \dot{m}(c_P \Delta T)$$

#### Plan:

Find the Specific Heat under constant pressure from Table A.3.

Solve for  $W_{In}$ .

### Solve:

From the textbook,

$$c_P = 5.1426 \, \text{kJ K/kg}$$

$$-20 \,\text{kJ/kg} + \dot{W}_{In} = 90 \,\text{kg/min} \left(\frac{60 \,\text{s}}{1 \,\text{min}}\right) \left(5.1426(450 - 310)\right)$$
$$\dot{W}_{In} = 965 \,\text{kJ/s}$$
$$= 965 \,\text{kW}$$

#### 6.2.3 Throttling Valves

**Defn 63** (Throttling Valve). *Throttling valves* are flow restriction devices that produce large pressure and temperature drops. This is achieved with either an actual valve or a highly porous material.

**Defn 64** (Isenthalpic). A Process that is *isenthalpic*, just like a process that is Isothermal, is one where the Enthalpy (or Specific Enthalpy) is constant.

Because the Specific Enthalpy remains constant for a Throttling Valve, we can expand the definition of Specific Enthalpy to solve.

$$(u + PV)_{In} = (u + PV)_{Out} (6.4)$$

Throttling Valve
$\Delta \dot{Q} = 0$
$\Delta \dot{W} = 0$
$\Delta KE = 0$
$\Delta PE = 0$
$h_{In} = h_{Out}$

Table 6.3: Properties of Throttling Valves

# Example 6.7: Throttling Valve. Textbook Problem 6.68

An Adiabatic capilliary tube is used in a refrigeration system to drop the pressure from the condenser level to the evaporator level. R-134a enters the capilliary tube as a Saturated Liquid at  $T_{In} = 50$  °C and leaves at  $T_{Out} = -12$  °C. Determine the Quality of the refrigerant at the inlet of the evaporator?

### Concepts:

Throttling Valves are Isenthalpic, their Enthalpy remains constant. We also know Equation (6.4).

$$(u+PV)_{In} = (u+PV)_{Out}$$

We assume that this operates under steady flow conditions, so  $\dot{m}_{In} = \dot{m}_{Out}$ .

We are told this is Adiabatic, so  $\Delta Q = 0$ .

There are no moving parts, so  $\Delta W = 0$ .

### Explore:

We can find the Specific Enthalpy for each state from the tables in the back of the textbook. It is implied that the refrigerant at the outlet is a Saturated Mixture, which has a quality.

$$h = h_f + x(h_g - h_f)$$

### Plan:

Find Specific Enthalpy values from Table A.11 from the textbook.

Solve for  $h_{Out}$ .

Then solve for Quality, x.

#### Solve

From Table A.11 at  $T_{In} = 50$  °C, we know that this fluid is a Saturated Liquid, so we can use  $h_f$  directly. However, we must Interpolate the results.

$$h_{In} = h_f = 123.45 \,\text{kJ/kg}$$

From Table A.11 at  $T_{In} = -12$  °C.

$$h_f = 35.92 \,\mathrm{kJ/kg}$$
  
 $h_{fg} = 207.38 \,\mathrm{kJ/kg}$ 

Now, we plug these values into our Isenthalpic equation.

$$h_{In} = h_{Out}$$

$$h_{Out} = h_f + x(h_{fg})$$

$$h_{In} = h_f + x(h_{fg})$$

$$123.45 = 35.92 + x(207.38)$$

$$x = 0.422$$

### Validate:

We know at the inlet that

$$h = u + PV$$
$$123 = 122 + PV$$
$$PV \approx 1$$

Then, at the outlet, we see

$$h = u + PV$$

Remember that a Throttling Valve is Isenthalpic.

$$123 = 36 + PV$$
$$PV \approx 87$$

Because the Internal Energy decreased, the temperature of the fluid decreased as well.

#### Generalize:

A Throttling Valve is similar to a nozzle or a diffuser, because they re-apportion the Energy in the mass flow.

# 6.2.4 Mixing Chambers

**Defn 65** (Mixing Chamber). *Mixing chambers* are used whenever two different fluid streams together that have the same  $\rho$ . Each of the different streams comes in through a different inlet. There is a steady flow in from each of the inlets, so

$$\dot{m}_{Out} = \dot{m}_{In,1} + \dot{m}_{In,2}$$

In general, we assume that the fluids entering the chamber are the same, preventing possible chemical reactions. For example, we do not mix water and alcohol.

Mixing Chamber
$\Delta Q = 0$
$\Delta W = 0$
$\Delta KE = 0$
$\Delta PE = 0$
$\dot{E}_{In} = \dot{E}_{Out}$

Table 6.4: Mixing Chamber Properties

Due to these properties, the general energy balance equation for Mixing Chambers is shown in Equation (6.5).

$$\sum_{Inlets} h\dot{m} = \sum_{Outlets} h\dot{m} \tag{6.5}$$

### Example 6.8: Mixing Chamber. Textbook Problem 6.78

A hot water stream of  $T_{In,1} = 80$  °C enters a Mixing Chamber with a mass flowrate of  $\dot{m}_{In,1} = 0.5$  kg/s. It is mixed with a stream of cold water at  $T_{In,2} = 20$  °C. If it is desired that the water leave the chamber at  $T_{Out} = 42$  °C, determine the mass flowrate of the cold water stream,  $\dot{m}_{In,2}$ ? Assume all streams are at a pressure of P = 250 kPa.

#### Concepts:

This is a Mixing Chamber with steady flow.

#### Explore

Our initial concepts about a Mixing Chamber yield the equations:

$$\dot{m}_{In,1} + \dot{m}_{In,2} = \dot{m}_{Out}$$
 $(h\dot{m})_{In,1} + (h\dot{m})_{In,2} = (h\dot{m})_{Out}$ 

Use the tables in the back of the textbook to find the various h, by the given P and T for water. This water is under a lot of pressure, and is in a liquid state, so we should start by going to Table A.4 and A.5. The thing that affects the Specific Enthalpy more is the temperature of the water, so we use Table A.4 rather than A.5.

There may need to be some extrapolation to get the Specific Enthalpy.

### Plan:

Use the tables in the textbook to find the Specific Enthalpy for the various streams.

Solve for the energy balance equation and the mass flowrate equation simultaneously.

#### Solve:

From Table A.4 at  $T_{In,1} = 80$  °C:

$$h_{In,1} = 335 \, \text{kJ/kg}$$

From Table A.4 at  $T_{In,2} = 20$  °C:

$$h_{In.2} = 84 \,\mathrm{kJ/kg}$$

From Table A.4 at  $T_{Out} = 42$  °C, which requires us to Interpolate:

$$h = 175.9 \,\mathrm{kJ/kg}$$

Now, solve

$$\dot{m}_{In,1}h_{In,1} + \dot{m}_{In,2}h_{In,2} + = \dot{m}_{Out}h_{Out}$$

According to our relationship between our mass flowrates, the inlets are equal to the outlet.

$$= h_{Out}(\dot{m}_{In,1} + \dot{m}_{In,2})$$

Rearranging to get the second inlet's mass flowrate by itself, we can solve.

$$\dot{m}_{In,2} = \frac{h_{In,1} - h_{Out}}{h_{Out} - h_{In,2}} \dot{m}_{In,1}$$
$$= 0.865 \,\text{kg/s}$$

#### Validate:

Now that we know the mass flowrate out of the chamber, we can solve the energy balance equation directly.  $\dot{m}_{Out} = 1.365 \,\mathrm{kg/s}$ .

$$h_{In,1}\dot{m}_{In,1} + h_{In,2}\dot{m}_{In,2} = h_{Out}\dot{m}_{Out}$$
  
 $167 + 73 = 240$ 

### Generalize:

For a mass flow for a liquid under constant pressure, the Specific Enthalpy (h) dominates the outcome.

#### 6.2.5 Heat Exchangers

**Defn 66** (Heat Exchanger). *Heat exchangers* allow two or more flows of fluid which are separated so that the flows do **not** mix, but exchange Heat.

Heat Exchanger	
$\Delta \dot{Q} = \dot{m}\Delta h \neq 0$	
$\Delta W = 0$	
$\Delta KE = 0$	
$\Delta PE = 0$	
$\Delta H \neq 0$	

Table 6.5: Properties of Heat Exchangers

To solve these kinds of problems, we treat them as if they were two separate problems. We have two control volumes that we interact with, CONTROL VOLUME 1 and CONTROL VOLUME 2. Each control volume exists under steady flow (state) conditions, so  $\dot{m}_{In} = \dot{m}_{Out}$  for each fluid flow. They are related by an energy balance.

$$(\dot{m}_{In}h_{In})_1 + (\dot{m}_{In}h_{In})_2 = (\dot{m}_{Out}h_{Out})_1 + (\dot{m}_{Out}h_{Out})_2 \tag{6.6}$$

### Example 6.9: Heat Exchanger. Textbook Problem 6.82

R-134a at  $P_1 = 700 \,\mathrm{kPa}$  and  $T_{1,In} = 70 \,\mathrm{^{\circ}C}$  and moving at  $\dot{m}_1 = 8 \,\mathrm{kg/min}$  is cooled by water in a condenser until it exists as a Saturated Liquid at the same pressure. The cooling water enters the condenser at  $P_2 = 300 \,\mathrm{kPa}$  and

 $T_{2,In} = 15$  °C and leaves at  $T_{2,Out} = 25$  °C. Determine the mass flowrate  $\dot{m}_2$  of the water required to cool the refrigerant?

# Concepts:

Heat Exchanger that is under steady state conditions. Water is cooling the R-134a, so the water is warmed. Treat this as a mixing chamber problem combined with a nozzle problem.

### Explore

By exploring the R-134a pipe in more detail, we see:

$$\Delta \dot{W} = 0$$

$$\dot{Q}_{In} = 0$$

$$\dot{Q}_{Out} \neq 0$$

$$\Delta KE = 0$$

$$\Delta PE = 0$$

Using the tables for R-134a, we can find the Specific Enthalpy at the inlet and outlet (1 and 2, respectively). This yields an energy balance equation of:

$$-\dot{Q}_{1,Out} = \dot{m}_1(h_{1,Out} - h_{1,In})$$

For the water block, we assume that there is no heat entering or leaving the heat exchanger, so  $\Delta \dot{Q}_2 = 0$ . Now, we apply Equation (6.6):

$$\dot{E}_{In} = \dot{E}_{Out}$$

$$(\dot{m}h)_{1,In} + (\dot{m}h)_{2,In} = (\dot{m}h)_{1,Out} + (\dot{m}h)_{2,Out}$$

$$(\dot{m}h)_{R-134a,In} + (\dot{m}h)_{Water,In} = (\dot{m}h)_{R-134a,Out} + (\dot{m}h)_{Water,Out}$$

#### Plan:

Use the tables in the back of the textbook to find the various values of h.

#### Solve:

First, we know that we will eventually have to get the mass flowrate of the R-134a into seconds, so

$$\dot{m}_1 = 0.133 \, \text{kg/s}$$

Next up, the various Specific Enthalpy values from the tables. From Table A.12 at  $P_1 = 700 \,\mathrm{kPa}$  we find that  $T_{1,Sat} = 27 \,^{\circ}\mathrm{C}$ . This means that the R-134a is a Superheated Vapor right now. We move to Table A.13.

$$h_{1.In} = 308 \, \text{kJ/kg}$$

For the R-134a outlet's Specific Enthalpy, we are told the refrigerant is a Saturated Liquid, so  $h_{1,Out} = h_f$ . From Table A.12 at  $P = 700 \,\mathrm{kPa}$ , we know

$$T_{1,Out} = T_{1,Sat}$$
  
= 27 °C  
 $h_{1,Out} = 89 \,\mathrm{kJ/kg}$ 

From Table A.4 at  $P = 300 \,\mathrm{kPa}$ , we see that  $T_{2,In} < T_{Sat}$  and  $T_{2,Out} < T_{Sat}$ , so the water remains a liquid. For  $T_{2,In} = 15 \,\mathrm{^{\circ}C}$ ,

$$h_{2.In} = 63 \,\mathrm{kJ/kg}$$

For  $T_{2,Out} = 25$  °C,

$$h_{2,Out} = 105 \, \text{kJ/kg}$$

Now, we can solve for the R-134a's energy balance equation.

$$-\dot{Q}_{1,Out} = \dot{m}_1(h_{1,Out} - h_{1,In})$$

$$= 0.133 \text{ kg/s}(89 - 365) \text{kJ/kg}$$

$$\dot{Q}_{1,Out} = 29 \text{ kJ/s}$$

$$= 29 \text{ kW}$$

If we rearrange the terms in the energy balance equation, for the larger system, we can get:

$$\dot{m}_2 = \dot{m}_1 \left( \frac{h_{1,In} - h_{1,Out}}{h_{2,In} - h_{2,Out}} \right)$$
$$= 8 \frac{89 - 308}{67 - 105}$$
$$= 42 \text{ kg/min}$$

#### Validate:

Check that we have energy balance. Namely, directly solve

$$(\dot{m}h)_{\text{R-134a},In} + (\dot{m}h)_{\text{Water},In} = (\dot{m}h)_{\text{R-134a},Out} + (\dot{m}h)_{\text{Water},Out}$$

## 6.2.6 Pipe/Duct Flow

This is a subset of problems from the Heat Exchanger.

Pipe/Duct Flow 
$$\begin{aligned} \Delta \dot{Q} &= \dot{m} \Delta h \neq 0 \\ \Delta \dot{W} &= 0 \\ \Delta KE &= 0 \\ \Delta PE &= 0 \\ \Delta H &\neq 0 \end{aligned}$$

Table 6.6: Pipe/Duct Flow Properteis

Something to note is that in Table 6.6, we say  $\Delta \dot{W} = 0$ . This only holds true for the purest case of this. If a propeller were inserted to the piping, then the work done would change.

Likewise, if the gas that is moving through the pipe is an ideal gas, we can use an ideal gas equation to determine  $\Delta h = c_P \Delta T$ .

### Example 6.10: Pipe Flow. Textbook Problem 6.98

Saturated Liquid water is heated in a steady-flow steam boiler at a constant pressure of  $P = 5 \,\mathrm{MPa}$  at a rate of  $\dot{m} = 10 \,\mathrm{kg/s}$  to an outlet temperature of  $T_{Out} = 350 \,^{\circ}\mathrm{C}$ . Determine the rate of Heat Transfer in the boiler?

#### Concepts:

Same set of concepts of a Heat Exchanger. Namely, this is a sub-class of problems.

#### Explore

The only change in heat comes from the surrounding boiler, with  $\dot{Q}_{In}$ .

$$\dot{Q}_{In} = \dot{m}\Delta h$$

To find the Specific Enthalpy, we can use Table A.4 or A.7 (if Superheated Vapor).

#### Plan:

Use Table A.4 and/or Table A.7 from the back of the textbook to find the Specific Enthalpy, h. Solve the heat energy-balance equation.

#### Solve:

From Table A.5 at P = 5 MPa, we get:

$$T_{Sat} = 263 \,^{\circ}\text{C}$$
 
$$SpecificEnthalpy_f = 1154 \, \text{kJ/kg}$$

From the previous table, we notice that the final temperature, is greater than the saturation temperature,  $T_{Out} > T_{Sat}$ . This means the fluid becomes a Superheated Vapor.

$$h_{Out} = 3069 \,\mathrm{kJ/kg}$$

Now, solving our energy balance equation:

$$\dot{Q}_{In} = \dot{m}\Delta h$$
  
=  $\dot{m}(h_{Out} - h_{In})$   
=  $10(3069 - 1154)$   
=  $19150 \,\text{kJ/kg}$ 

# A Complex Numbers

**Defn A.0.1** (Complex Number). A *complex number* is a hyper real number system. This means that two real numbers,  $a, b \in \mathbb{R}$ , are used to construct the set of complex numbers, denoted  $\mathbb{C}$ .

A complex number is written, in Cartesian form, as shown in Equation (A.1) below.

$$z = a \pm ib \tag{A.1}$$

where

$$i = \sqrt{-1} \tag{A.2}$$

Remark (i vs. j for Imaginary Numbers). Complex numbers are generally denoted with either i or j. Electrical engineering regularly makes use of j as the imaginary value. This is because alternating current i is already taken, so j is used as the imaginary value instad.

# A.1 Parts of a Complex Number

A Complex Number is made of up 2 parts:

- 1. Real Part
- 2. Imaginary Part

**Defn A.1.1** (Real Part). The *real part* of an imaginary number, denoted with the Re operator, is the portion of the Complex Number with no part of the imaginary value i present.

If 
$$z = x + iy$$
, then

$$Re\{z\} = x \tag{A.3}$$

Remark A.1.1.1 (Alternative Notation). The Real Part of a number sometimes uses a slightly different symbol for denoting the operation. It is:

Re

**Defn A.1.2** (Imaginary Part). The *imaginary part* of an imaginary number, denoted with the Im operator, is the portion of the Complex Number where the imaginary value i is present.

If 
$$z = x + iy$$
, then

$$Im\{z\} = y \tag{A.4}$$

Remark A.1.2.1 (Alternative Notation). The Imaginary Part of a number sometimes uses a slightly different symbol for denoting the operation. It is:

 $\mathfrak{Im}$ 

# A.2 Binary Operations

The question here is if we are given 2 complex numbers, how should these binary operations work such that we end up with just one resulting complex number. There are only 2 real operations that we need to worry about, and the other 3 can be defined in terms of these two:

- 1. Addition
- 2. Multiplication

For the sections below, assume:

$$z = x_1 + iy_1$$
$$w = x_2 + iy_2$$

### A.2.1 Addition

The addition operation, still denoted with the + symbol is done pairwise. You should treat i like a variable in regular algebra, and not move it around.

$$z + w := (x_1 + x_2) + i(y_1 + y_2)$$
 (A.5)

### A.2.2 Multiplication

The multiplication operation, like in traditional algebra, usually lacks a multiplication symbol. You should treat i like a variable in regular algebra, and not move it around.

$$zw := (x_1 + iy_1)(x_2 + iy_2)$$

$$= (x_1x_2) + (iy_1x_2) + (ix_1y_2) + (i^2y_1y_2)$$

$$= (x_1x_2) + i(y_1x_2 + x_1y_2) + (-1y_1y_2)$$

$$= (x_1x_2 - y_1y_2) + i(y_1x_2 + x_1y_2)$$
(A.6)

# A.3 Complex Conjugates

**Defn A.3.1** (Complex Conjugate). The conjugate of a complex number is called its *complex conjugate*. The complex conjugate of a complex number is the number with an equal real part and an imaginary part equal in magnitude but opposite in sign. If we have a complex number as shown below,

$$z = a \pm bi$$

then, the conjugate is denoted and calculated as shown below.

$$\overline{z} = a \mp bi \tag{A.7}$$

The Complex Conjugate can also be denoted with an asterisk (\*). This is generally done for complex functions, rather than single variables.

$$z^* = \overline{z} \tag{A.8}$$

# A.3.1 Notable Complex Conjugate Expressions

There are 2 interesting things that we can perform with just the concept of a Complex Number and a Complex Conjugate:

- 1.  $z\overline{z}$
- $2. \frac{z}{z}$

The first is interesting because of this simplification:

$$z\overline{z} = (x+iy)(x-iy)$$

$$= x^2 - xyi + xyi - i^2y^2$$

$$= x^2 - (-1)y^2$$

$$= x^2 + y^2$$

Thus.

$$z\overline{z} = x^2 + y^2 \tag{A.9}$$

which is interesting because, in comparison to the input values, the output is completely real.

The other interesting Complex Conjugate is dividing a Complex Number by its conjugate.

$$\frac{z}{\overline{z}} = \frac{x + iy}{x - iy}$$

We want to have this end up in a form of a + ib, so we multiply the entire fraction by z, to cause the denominator to be completely real.

$$z\left(\frac{z}{\overline{z}}\right) = \frac{z^2}{z\overline{z}}$$

Using our solution from Equation (A.9):

$$= \frac{(x+iy)^2}{x^2 + y^2}$$
$$= \frac{x^2 + 2xyi + i^2y^2}{x^2 + y^2}$$

By breaking up the fraction's numerator, we can more easily recognize this to be teh Cartesian form of the Complex Number.

$$= \frac{(x^2 - y^2) + 2xyi}{x^2 + y^2}$$
$$= \frac{x^2 - y^2}{x^2 + y^2} + \frac{2xyi}{x^2 + y^2}$$

This is an interesting development because, unlike the multiplication of a Complex Number by its Complex Conjugate, the division of these two values does **not** yield a purely real number.

$$\frac{z}{\overline{z}} = \frac{x^2 - y^2}{x^2 + y^2} + \frac{2xyi}{x^2 + y^2} \tag{A.10}$$

### A.3.2 Properties of Complex Conjugates

Conjugation follows some of the traditional algebraic properties that you are already familiar with, namely commutativity. First, start by defining some expressions so that we can prove some of these properties:

$$z = x + iy$$
$$\overline{z} = x - iy$$

- (i) The conjugation operation is commutative.
- (ii) The conjugation operation can be distributed over addition and multiplication.

$$\overline{z+w} = \overline{z} + \overline{w}$$
$$\overline{zw} = \overline{zw}$$

Property (ii) can be proven by just performing a simplification.

Prove Property (ii). Let z and w be complex numbers  $(z, w \in \mathbb{C})$  where  $z = x_1 + iy_1$  and  $w = x_2 + iy_2$ . Prove that  $\overline{z + w} = \overline{z} + \overline{w}$ .

We start by simplifying the left-hand side of the equation  $(\overline{z+w})$ .

$$\overline{z+w} = \overline{(x_1+iy_1) + (x_2+iy_2)}$$

$$= \overline{(x_1+x_2) + i(y_1+y_2)}$$

$$= (x_1+x_2) - i(y_1+y_2)$$

Now, we simplify the other side  $(\overline{z} + \overline{w})$ .

$$\overline{z} + \overline{w} = \overline{(x_1 + iy_1)} + \overline{(x_2 + iy_2)}$$
  
=  $(x_1 - iy_1) + (x_2 - iy_2)$   
=  $(x_1 + x_2) - i(y_1 + y_2)$ 

We can see that both sides are equivalent, thus the addition portion of Property (ii) is correct.

*Remark.* The proof of the multiplication portion of Property (ii) is left as an exercise to the reader. However, that proof is quite similar to this proof of addition.

# A.4 Geometry of Complex Numbers

So far, we have viewed Complex Numbers only algebraically. However, we can also view them geometrically as points on a 2 dimensional Argand Plane.

**Defn A.4.1** (Argand Plane). An *Argane Plane* is a standard two dimensional plane whose points are all elements of the complex numbers,  $z \in \mathbb{C}$ . This is taken from Descarte's definition of a completely real plane.

The Argand plane contains 2 lines that form the axes, that indicate the real component and the imaginary component of the complex number specified.

A Complex Number can be viewed as a point in the Argand Plane, where the Real Part is the "x"-component and the Imaginary Part is the "y"-component.

By plotting this, you see that we form a right triangle, so we can find the hypotenuse of that triangle. This hypotenuse is the distance the point p is from the origin, referred to as the Modulus.

Remark. When working with Complex Numbers geometrically, we refer to the points, where they are defined like so:

$$z = x + iy = p(x, y)$$

Note that p is **not** a function of x and y. Those are the values that inform us where p is located on the Argand Plane.

### A.4.1 Modulus of a Complex Number

**Defn A.4.2** (Modulus). The *modulus* of a Complex Number is the distance from the origin to the complex point p. This is based off the Pythagorean Theorem.

$$|z|^2 = x^2 + y^2 = z\overline{z}$$

$$|z| = \sqrt{x^2 + y^2}$$
(A.11)

(i) The Law of Moduli states that |zw| = |z||w|..

We can prove Property (i) using an algebraic identity.

Prove Property (i). Let z and w be complex numbers  $(z, w \in \mathbb{C})$ . We are asked to prove

$$|zw| = |z||w|$$

But, it is actually easier to prove

$$\left|zw\right|^2 = \left|z\right|^2 \left|w\right|^2$$

We start by simplifying the  $|zw|^2$  equation above.

$$\left|zw\right|^2 = \left|z\right|^2 \left|w\right|^2$$

Using the definition of the Modulus of a Complex Number in Equation (A.11), we can expand the modulus.

$$=(zw)(\overline{zw})$$

Using Property (ii) for multiplication allows us to do the next step.

$$=(zw)(\overline{zw})$$

Using Multiplicative Associativity and Multiplicative Commutativity, we can simplify this further.

$$= (z\overline{z})(w\overline{w})$$
$$= |z|^2 |w|^2$$

Note how we never needed to define z or w, so this is as general a result as possible.

**A.4.1.1** Algebraic Effects of the Modulus' Property (i) For this section, let  $z = x_1 + iy_1$  and  $w = x_2 + iy_2$ . Now,

$$zw = (x_1x_2 - y_1y_2) + i(x_1y_2 + x_2y_1)$$
$$|zw|^2 = (x_1x_2 - y_1y_2)^2 + (x_1y_2 + x_2y_1)^2$$
$$= (x_1^2 + x_2^2)(x_2^2 + y_2^2)$$
$$= |z|^2|w|^2$$

However, the Law of Moduli (Property (i)) does **not** hold for a hyper complex number system one that uses 2 or more imaginaries, i.e. z = a + iy + jz. But, the Law of Moduli (Property (i)) does hold for hyper complex number system that uses 3 imaginaries,  $a = z + iy + jz + k\ell$ .

**A.4.1.2** Conceptual Effects of the Modulus' Property (i) We are interested in seeing if  $|zw| = (x_1^2 + y_1^2)(x_2^2 + y_2^2)$  can be extended to more complex terms (3 terms in the complex number).

However, Langrange proved that the equation below always holds. Note that the z below has no relation to the z above.

$$(x_1 + y_1 + z_1) \neq X^2 + Y^2 + Z^2$$

# A.5 Circles and Complex Numbers

We need to define both a center and a radius, just like with regular purely real values. Equation (A.12) defines the relation required for a circle using Complex Numbers.

$$|z - a| = r \tag{A.12}$$

## Example A.1: Convert to Circle. Lecture 2, Example 1

Given the expression below, find the location of the center of the circle and the radius of the circle?

$$|5iz + 10| = 7$$

This is just a matter of simplification and moving terms around.

$$|5iz + 10| = 7$$

$$|5i(z + \frac{10}{5i})| = 7$$

$$|5i(z + \frac{2}{i})| = 7$$

$$|5i(z + \frac{2}{i})| = 7$$

$$|5i(z - 2i)| = 7$$

Now using the Law of Moduli (Property (i)) |ab| = |a||b|, we can simplify out the extra imaginary term.

$$|5i||z - 2i| = 7$$

$$5|z - 2i| = 7$$

$$|z - 2i| = \frac{7}{5}$$

Thus, the circle formed by the equation |5iz + 10| = 7 is actually  $|z - 2i| = \frac{7}{5}$ , with a center at a = 2i and a radius of  $\frac{7}{5}$ .

#### A.5.1 Annulus

**Defn A.5.1** (Annulus). An annulus is a region that is bounded by 2 concentric circles. This takes the form of Equation (A.13).

$$r_1 \le |z - a| \le r_2 \tag{A.13}$$

In Equation (A.13), each of the  $\leq$  symbols could also be replaced with <. This leads to 3 different possibilities for the annulus:

- 1. If both inequality symbols are  $\leq$ , then it is a **Closed Annulus**.
- 2. If both inequality symbols are <, then it is an **Open Annulus**.
- 3. If only one inequality symbol < and the other  $\le$ , then it is not an **Open Annulus**.

The concept of an Annulus can be extended to angles and arguments of a Complex Number. A general example of this is shown below.

$$\theta_1 \le \arg(z) \le \theta_2$$

Angular Annuli follow all the same rules as regular annuli.

### A.6 Polar Form

The polar form of a Complex Number is an alternative, but equally useful way to express a complex number. In polar form, we express the distance the complex number is from the origin and the angle it sits at from the real axis. This is seen in Equation (A.14).

$$z = r(\cos(\theta) + i\sin(\theta)) \tag{A.14}$$

*Remark.* Note that in the definition of polar form (Equation (A.14)), there is no allowance for the radius, r, to be negative. You must fix this by figuring out the angle change that is required for the radius to become positive.

Thus,

$$r = |z|$$
$$\theta = \arg(z)$$

# Example A.2: Find Polar Coordinates from Cartesian Coordinates. Lecture 2, Example 1

Find the complex number's  $z = -\sqrt{3} + i$  polar coordinates?

We start by finding the radius of z (modulus of z).

$$r = |z|$$

$$= \sqrt{\text{Re}\{z\}^2 + \text{Im}\{z\}^2}$$

$$= \sqrt{(-\sqrt{3})^2 + 1^2}$$

$$= \sqrt{3+1}$$

$$= \sqrt{4}$$

$$= 2$$

Thus, the point is 2 units away from the origin, the radius is 2 r = 2. Now, we need to find the angle, the argument, of the Complex Number.

$$\cos(\theta) = \frac{-\sqrt{3}}{2}$$
$$\theta = \cos^{-1}\left(\frac{-\sqrt{3}}{2}\right)$$
$$= \frac{5\pi}{6}$$

Now that we have one angle for the point, we also need to consider the possibility that there have been an unknown amount of rotations around the entire plane, meaning there have been  $2\pi k$ , where  $k=0,1,\ldots$  We now have all the information required to reconstruct this point using polar coordinates:

$$r = 2$$
 
$$\theta = \frac{5\pi}{6}$$
 
$$\arg(z) = \frac{5\pi}{6} + 2\pi k$$

# A.6.1 Converting Between Cartesian and Polar Forms

Using Equation (A.14) and Equation (A.1), it is easy to see the relation between r,  $\theta$ , x, and y.

Definition of a Complex Number in Cartesian form.

$$z = x + iy$$

Definition of a Complex Number in polar form.

$$z = r(\cos(\theta) + i\sin(\theta))$$
$$= r\cos(\theta) + ir\sin(\theta)$$

Thus,

$$x = r\cos(\theta)$$

$$y = r\sin(\theta)$$
(A.15)

### A.6.2 Benefits of Polar Form

Polar form is good for multiplication of Complex Numbers because of the way sin and cos multiply together. The Cartesian form is good for addition and subtraction. Take the examples below to show what I mean.

**A.6.2.1** Multiplication For multiplication, the radii are multiplied together, and the angles are added.

$$\left(r_1(\cos(\theta) + i\sin(\theta))\right)\left(r_2(\cos(\phi) + i\sin(\phi))\right) = r_1r_2(\cos(\theta + \phi) + i\sin(\theta + \phi)) \tag{A.16}$$

A.6.2.2 Division For division, the radii are divided by each other, and the angles are subtracted.

$$\frac{r_1(\cos(\theta) + i\sin(\theta))}{r_2(\cos(\phi) + i\sin(\phi))} = \frac{r_1}{r_2}(\cos(\theta - \phi) + i\sin(\theta - \phi))$$
(A.17)

**A.6.2.3 Exponentiation** Because exponentiation is defined to be repeated multiplication, Paragraph A.6.2.1 applies. That this generalization is true was proven by de Moiver, and is called de Moiver's Law.

**Defn A.6.1** (de Moiver's Law). Given a complex number  $z, z \in \mathbb{C}$  and a rational number  $n, n \in \mathbb{Q}$ , the exponentiation of  $z^n$  is defined as Equation (A.18).

$$z^{n} = r^{n} (\cos(n\theta) + i\sin(n\theta)) \tag{A.18}$$

# A.7 Roots of a Complex Number

de Moiver's Law also applies to finding roots of a Complex Number.

$$z^{\frac{1}{n}} = r^{\frac{1}{n}} \left( \cos \left( \frac{\arg z}{n} \right) + i \sin \left( \frac{\arg z}{n} \right) \right) \tag{A.19}$$

Remark. As the entire arg z term is being divided by n, the  $2\pi k$  is **ALSO** divided by n.

Roots of a Complex Number satisfy Equation (A.20). To demonstrate that equation,  $z = r(\cos(\theta) + i\sin(\theta))$  and  $w = \rho(\cos(\phi) + i\sin(\phi))$ .

$$w^n = z \tag{A.20}$$

A w that satisfies Equation (A.20) is an nth root of z.

# Example A.3: Roots of a Complex Number. Lecture 2, Example 2

Find the cube roots of  $z = -\sqrt{3} + i$ ?

From Example A.2, we know that the polar form of z is

$$z = 2\left(\cos\left(\frac{5\pi}{6} + 2\pi k\right) + i\sin\left(\frac{5\pi}{6} + 2\pi k\right)\right)$$

Because the question is asking for **cube** roots, that means there are 3 roots. Using Equation (A.19), we can find the general form of the roots.

$$z = 2\left(\cos\left(\frac{5\pi}{6} + 2\pi k\right) + i\sin\left(\frac{5\pi}{6} + 2\pi k\right)\right)$$
$$z^{\frac{1}{3}} = \sqrt[3]{2}\left(\cos\left(\frac{1}{3}\left(\frac{5\pi}{6} + 2\pi k\right)\right) + i\sin\left(\frac{1}{3}\left(\frac{5\pi}{6} + 2\pi k\right)\right)\right)$$
$$= \sqrt[3]{2}\left(\cos\left(\frac{\pi + 12\pi k}{18}\right) + i\sin\left(\frac{\pi + 12\pi k}{18}\right)\right)$$

Now that we have a general equation for all possible cube roots, we need to find all the unique ones. This is because after k=n roots, the roots start to repeat themselves, because the  $2\pi k$  part of the expression becomes effective, making the angle a full rotation. We simply enumerate  $k \in \mathbb{Z}^+$ , so  $k=0,1,2,\ldots$ 

$$k = 0$$

$$\sqrt[3]{2} \left( \cos \left( \frac{\pi + 12\pi(0)}{18} \right) + i \sin \left( \frac{\pi + 12\pi(0)}{18} \right) \right) = \sqrt[3]{2} \left( \cos \left( \frac{\pi}{18} \right) + i \sin \left( \frac{\pi}{18} \right) \right)$$

$$k = 1$$

$$\sqrt[3]{2} \left( \cos \left( \frac{\pi + 12\pi(1)}{18} \right) + i \sin \left( \frac{\pi + 12\pi(1)}{18} \right) \right) = \sqrt[3]{2} \left( \cos \left( \frac{13\pi}{18} \right) + i \sin \left( \frac{13\pi}{18} \right) \right)$$

$$\begin{aligned} &\mathbf{k} = 2 \\ &\sqrt[3]{2} \left( \cos \left( \frac{\pi + 12\pi(2)}{18} \right) + i \sin \left( \frac{\pi + 12\pi(2)}{18} \right) \right) = \sqrt[3]{2} \left( \cos \left( \frac{25\pi}{18} \right) + i \sin \left( \frac{25\pi}{18} \right) \right) \\ &\mathbf{k} = 3 \end{aligned}$$

$$&\sqrt[3]{2} \left( \cos \left( \frac{\pi + 12\pi(3)}{18} \right) + i \sin \left( \frac{\pi + 12\pi(3)}{18} \right) \right) = \sqrt[3]{2} \left( \cos \left( \frac{\pi}{18} + \frac{36\pi}{18} \right) + i \sin \left( \frac{\pi}{18} + \frac{36\pi}{18} \right) \right)$$

$$&= \sqrt[3]{2} \left( \cos \left( \frac{\pi}{18} + 2\pi \right) + i \sin \left( \frac{\pi}{18} + 2\pi \right) \right)$$

$$&= \sqrt[3]{2} \left( \cos \left( \frac{\pi}{18} + 2\pi \right) + i \sin \left( \frac{\pi}{18} + 2\pi \right) \right)$$

$$&= \sqrt[3]{2} \left( \cos \left( \frac{\pi}{18} + 2\pi \right) + i \sin \left( \frac{\pi}{18} + 2\pi \right) \right)$$

Thus, the 3 cube roots of z are:

$$\begin{split} z_1^{\frac{1}{3}} &= \sqrt[3]{2} \bigg( \cos \left( \frac{\pi}{18} \right) + i \sin \left( \frac{\pi}{18} \right) \bigg) \\ z_2^{\frac{1}{3}} &= \sqrt[3]{2} \bigg( \cos \left( \frac{13\pi}{18} \right) + i \sin \left( \frac{13\pi}{18} \right) \bigg) \\ z_3^{\frac{1}{3}} &= \sqrt[3]{2} \bigg( \cos \left( \frac{25\pi}{18} \right) + i \sin \left( \frac{25\pi}{18} \right) \bigg) \end{split}$$

# A.8 Arguments

There are 2 types of arguments that we can talk about for a Complex Number.

- 1. The Argument
- 2. The Principal Argument

**Defn A.8.1** (Argument). The *argument* of a Complex Number refers to **all** possible angles that can satisfy the angle requirement of a Complex Number.

# Example A.4: Argument of Complex Number. Lecture 3, Example 1

If z = -1 - i, then what is its **Argument**?

You can plot this value on the Argand Plane and find the angle graphically/geometrically, or you can "cheat" and use  $\tan^{-1}$  (so long as you correct for the proper quadrant). I will "cheat", as I cannot plot easily.

$$z = -1 - i$$

$$\arg(z) = \tan(\theta) = \frac{-i}{-1}$$

$$= \frac{\pi}{4}$$

Remember to correct for the proper quadrant. We are in quadrant IV.

$$=\frac{5\pi}{4}$$

Now, we have to account for all possible angles that form this angle.

$$\arg(z) = \frac{5\pi}{4} + 2\pi k$$

Thus, the argument of z = -1 - i is  $\arg(z) = \frac{5\pi}{4} + 2\pi k$ .

**Defn A.8.2** (Principal Argument). The *principal argument* is the exact or reference angle of the Complex Number. By convention, the principal Argument of a complex number z is defined to be bounded like so:  $-\pi < \text{Arg}(z) \le \pi$ .

# Example A.5: Principal Argument of Complex Number. Lecture 3, Example 1

If z = -1 - i, then what is its **Principal Argument**?

You can plot this value on the Argand Plane and find the angle graphically/geometrically, or you can "cheat" and use tan<sup>-1</sup> (so long as you correct for the proper quadrant). I will "cheat", as I cannot plot easily.

$$z = -1 - i$$

$$\arg(z) = \tan(\theta) = \frac{-i}{-1}$$

$$= \frac{\pi}{4}$$

Remember to correct for the proper quadrant. We are in quadrant IV.

$$=\frac{5\pi}{4}$$

Thus, the Principal Argument of z=-1-i is  $\operatorname{Arg}(z)=\frac{5\pi}{4}$ .

# A.9 Complex Exponentials

The definition of an exponential with a Complex Number as its exponent is defined in Equation (A.21).

$$e^z = e^{x+iy} = e^x(\cos(y) + i\sin(y))$$
 (A.21)

If instead of e as the base, we have some value a, then we have Equation (A.22).

$$a^{z} = e^{z \ln(a)}$$

$$= e^{\operatorname{Re}\{z \ln(a)\}} \left( \cos(\operatorname{Im}\{z \ln(a)\}) + i \sin(\operatorname{Im}\{z \ln(a)\}) \right)$$
(A.22)

In the case of Equation (A.21), z can be presented in either Cartesian or polar form, they are equivalent.

### Example A.6: Simplify Simple Complex Exponential. Lecture 3

Simplify the expression below, then find its Modulus, Argument, and its Principal Argument?

$$e^{-1+i\sqrt{3}}$$

If we look at the exponent on the exponential, we see

$$z = -1 + i\sqrt{3}$$

which means

$$x = -1$$

$$y = \sqrt{3}$$

With this information, we can simplify the expression **just** by observation, with no calculations required.

$$e^{-1+i\sqrt{3}} = e^{-1}(\cos(\sqrt{3}) + i\sin(\sqrt{3}))$$

Now, we can solve the other 3 parts of this example by observation.

$$\begin{aligned} \left| e^{-1+i\sqrt{3}} \right| &= \left| e^{-1} \left( \cos(\sqrt{3}) + i \sin(\sqrt{3}) \right) \right| \\ &= e^{-1} \\ \arg\left( e^{-1+i\sqrt{3}} \right) &= \arg\left( e^{-1} \left( \cos(\sqrt{3}) + i \sin(\sqrt{3}) \right) \right) \\ &= \sqrt{3} + 2\pi k \\ \operatorname{Arg}\left( e^{-1+i\sqrt{3}} \right) &= \operatorname{Arg}\left( e^{-1} \left( \cos(\sqrt{3}) + i \sin(\sqrt{3}) \right) \right) \\ &= \sqrt{3} \end{aligned}$$

# Example A.7: Simplify Complex Exponential Exponent. Lecture 3

Given  $z = e^{-e^{-i}}$ , what is this expression in polar form, what is its Modulus, its Argument, and its Principal Argument?

We start by simplifying the exponent of the base exponential, i.e.  $e^{-i}$ .

$$e^{-i} = e^{0-i}$$
=  $e^{0} (\cos(-1) + i\sin(-1))$   
=  $1(\cos(-1) + i\sin(-1))$ 

Now, with that exponent simplified, we can solve the main question.

$$e^{-e^{-i}} = e^{-1(\cos(-1)+i\sin(-1))}$$
$$= e^{-1(\cos(1)-i\sin(1))}$$
$$= e^{-\cos(1)+i\sin(1)}$$

If we refer back to Equation (A.21), then it becomes obvious what x and y are.

$$x = -\cos(1)$$

$$y = \sin(1)$$

$$e^{-e^{-i}} = e^{-\cos(1)} \left(\cos(\sin(1)) + i\sin(\sin(1))\right)$$

Now that we have "simplified" this exponential, we can solve the other 3 questions by observation.

$$\begin{aligned} \left| e^{-e^{-i}} \right| &= \left| e^{-\cos(1)} \left( \cos\left(\sin(1)\right) + i \sin\left(\sin(1)\right) \right) \right| \\ &= e^{-\cos(1)} \\ \arg\left( e^{-e^{-i}} \right) &= \arg\left( e^{-\cos(1)} \left( \cos\left(\sin(1)\right) + i \sin\left(\sin(1)\right) \right) \right) \\ &= \sin(1) + 2\pi k \\ \operatorname{Arg}\left( e^{-e^{-i}} \right) &= \operatorname{Arg}\left( e^{-\cos(1)} \left( \cos\left(\sin(1)\right) + i \sin\left(\sin(1)\right) \right) \right) \\ &= \sin(1) \end{aligned}$$

### Example A.8: Non-e Complex Exponential. Lecture 3

Find all values of  $z = 1^i$ ?

Use Equation (A.22) to simplify this to a base of e, where we can use the usual Equation (A.21) to solve this.

$$a^z = e^{z \ln(a)}$$
$$1^i = e^{i \ln(1)}$$

Simplify the logarithm in the exponent first, ln(1).

$$\begin{split} \ln(1) &= \log_e |1| + i \arg(1) \\ &= \log_e(1) + i(0 + 2\pi k) \\ &= 0 + 2\pi k i \\ &= 2\pi k i \end{split}$$

Now, plug ln(1) back into the exponent, and solve the exponential.

$$e^{i(2\pi ki)} = e^{2\pi ki^2}$$
$$= e^{2\pi k(-1)}$$
$$z = e^{-2\pi k}$$

Thus, all values of  $z = e^{-2\pi k}$  where  $k = 0, 1, \ldots$ 

$$\overline{e^z} = e^{\overline{z}} \tag{A.23}$$

# A.10 Complex Logarithms

There are some denotational changes that need to be made for this to work. The traditional real-number natural logarithm ln needs to be redefined to its defining form  $\log_e$ .

With that denotational change, we can now use ln for the Complex Logarithm.

**Defn A.10.1** (Complex Logarithm). The *complex logarithm* is defined in Equation (A.24). The only requirement for this equation to hold true is that  $w \neq 0$ .

$$e^{z} = w$$

$$z = \ln(w)$$

$$= \log_{e} |w| + i \arg(w)$$
(A.24)

Remark A.10.1.1. The Complex Logarithm is different than it's purely-real cousin because we allow negative numbers to be input. This means it is more general, but we must lose the precision of the purely-real logarithm. This means that each nonzero number has infinitely many logarithms.

# Example A.9: All Complex Logarithms of Simple Expression. Lecture 3

What are all Complex Logarithms of z = -1?

We can apply the definition of a Complex Logarithm (Equation (A.24)) directly.

$$\begin{aligned} \ln(z) &= \log_e |z| + i \arg(z) \\ &= \log_e |-1| + i \arg(-1) \\ &= \log_e(1) + i(\pi + 2\pi k) \\ &= 0 + i(\pi + 2\pi k) \\ &= i(\pi + 2\pi k) \end{aligned}$$

Thus, all logarithms of z=-1 are defined by the expression  $i(\pi+2\pi k), k=0,1,\ldots$ 

Remark. You can see the loss of specificity in the Complex Logarithm because the variable k is still present in the final answer.

### Example A.10: All Complex Logarithms of Complex Logarithm. Lecture 3

What are all the Complex Logarithms of  $z = \ln(1)$ ?

We start by simplifying z, before finding  $\ln(z)$ . We can make use of Equation (A.24), to simplify this value.

$$\begin{aligned} \ln(w) &= \log_e |w| + i \arg(w) \\ \ln(1) &= \log_e |1| + i \arg(1) \\ &= \log_e 1 + i(0 + 2\pi k) \\ &= 0 + 2\pi ki \\ &= 2\pi ki \end{aligned}$$

Now that we have simplified z, we can solve for  $\ln(z)$ .

$$\begin{split} \ln(z) &= \ln(2\pi ki) \\ &= \log_e |2\pi ki| + i \arg(2\pi ki) \\ &= \log_e (2\pi |k|) + \left(i \begin{cases} \frac{\pi}{2} + 2\pi m & k > 0 \\ \frac{-\pi}{2} + 2\pi m & k < 0 \end{cases}\right) \end{split}$$

The |k| is the **absolute value** of k, because k is an integer.

Thus, our solution of 
$$\ln(\ln(1)) = \log_e(2\pi|k|) + \left(i \begin{cases} \frac{\pi}{2} + 2\pi m & k > 0 \\ \frac{-\pi}{2} + 2\pi m & k < 0 \end{cases}\right)$$
.

# A.10.1 Complex Conjugates of Logarithms

$$\overline{\log(z)} = \log(\overline{z}) \tag{A.25}$$

# A.11 Complex Trigonometry

For the equations below,  $z \in \mathbb{C}$ . These equations are based on Euler's relationship, Appendix B.2

$$\cos(z) = \frac{e^{iz} + e^{-iz}}{2} \tag{A.26}$$

$$\sin(z) = \frac{e^{iz} - e^{-iz}}{2i} \tag{A.27}$$

# Example A.11: Simplify Complex Sinusoid. Lecture 3

Solve for z in the equation cos(z) = 5?

We start by using the defintion of complex cosine Equation (A.26).

$$\cos(z) = 5$$

$$\frac{e^{iz} + e^{-iz}}{2} = 5$$

$$e^{iz} + e^{-iz} = 10$$

$$e^{iz} (e^{iz} + e^{-iz}) = e^{iz} (10)$$

$$e^{iz^2} + 1 = 10e^{iz}$$

$$e^{iz^2} - 10e^{iz} + 1 = 0$$

Solve this quadratic equation by using the Quadratic Equation.

$$e^{iz} = \frac{-(-10) \pm \sqrt{(-10)^2 - 4(1)(1)}}{2(1)}$$

$$= \frac{10 \pm \sqrt{100 - 4}}{2}$$

$$= \frac{10 \pm \sqrt{96}}{2}$$

$$= \frac{10 \pm 4\sqrt{6}}{2}$$

$$= 5 \pm 2\sqrt{6}$$

Use the definition of complex logarithms to simplify the exponential.

$$\begin{split} iz &= \ln(5 \pm 2\sqrt{6}) \\ &= \log_e \left| 5 \pm 2\sqrt{6} \right| + i \arg(5 \pm 2\sqrt{6}) \\ &= \log_e \left| 5 \pm 2\sqrt{6} \right| + i(0 + 2\pi k) \\ &= \log_e \left| 5 \pm 2\sqrt{6} \right| + 2\pi ki \\ z &= \frac{1}{i} \left( \log_e \left| 5 \pm 2\sqrt{6} \right| + 2\pi ki \right) \\ &= \frac{-i}{-i} \frac{1}{i} \left( \log_e \left| 5 \pm 2\sqrt{6} \right| \right) + 2\pi k \\ &= 2\pi k - i \log_e \left| 5 \pm 2\sqrt{6} \right| \end{split}$$

Thus,  $z = 2\pi k - i \log_e |5 \pm 2\sqrt{6}|$ .

# A.11.1 Complex Angle Sum and Difference Identities

Because the definitions of sine and cosine are unsatisfactory in their Euler definitions, we can use angle sum and difference formulas and their Euler definitions to yield a set of Cartesian equations.

$$\cos(x \pm iy) = (\cos(x)\cosh(y)) \mp i(\sin(x)\sinh(y)) \tag{A.28}$$

$$\sin(x \pm iy) = (\sin(x)\cosh(y)) \pm i(\cos(x)\sinh(y)) \tag{A.29}$$

## Example A.12: Simplify Trigonometric Exponential. Lecture 3

Simplify  $z = e^{\cos(2+3i)}$ , and find z's Modulus, Argument, and Principal Argument?

We start by simplifying the cos using Equation (A.28).

$$\cos(x+iy) = (\cos(x)\cosh(y)) - i(\sin(x)\sinh(y))$$
$$\cos(2+3i) = (\cos(2)\cosh(3)) - i(\sin(2)\sinh(3))$$

Now that we have put the cos into a Cartesian form, one that is usable with Equation (A.21), we can solve this.

$$\begin{split} e^z &= e^{x+iy} = e^x \big( \cos(y) + i \sin(y) \big) \\ x &= \cos(2) \cosh(3) \\ y &= -\sin(2) \sinh(3) \\ e^{\cos(2) \cosh(3) - i \sin(2) \sinh(3)} &= e^{\cos(2) \cosh(3)} \Big( \cos \big( -\sin(2) \sinh(3) \big) + i \sin \big( -\sin(2) \sinh(3) \big) \Big) \end{split}$$

Now that we have simplified z, we can solve for the modulus, argument, and principal argument by observation.

$$\begin{split} |z| &= \left| e^{\cos(2)\cosh(3)} \left( \cos\left(-\sin(2)\sinh(3)\right) + i\sin\left(-\sin(2)\sinh(3)\right) \right) \right| \\ &= e^{\cos(2)\cosh(3)} \\ \arg(z) &= \arg(e^{\cos(2)\cosh(3)} \left( \cos\left(-\sin(2)\sinh(3)\right) + i\sin\left(-\sin(2)\sinh(3)\right) \right) \\ &= -\sin(2)\sinh(3) + 2\pi k \\ \operatorname{Arg}(z) &= \operatorname{Arg}(e^{\cos(2)\cosh(3)} \left( \cos\left(-\sin(2)\sinh(3)\right) + i\sin\left(-\sin(2)\sinh(3)\right) \right) \\ &= -\sin(2)\sinh(3) \end{split}$$

# A.11.2 Complex Conjugates of Sinusoids

Since sinusoids can be represented by complex exponentials, as shown in Appendix B.2, we could calculate their complex conjugate.

$$\overline{\cos(x)} = \cos(x) 
= \frac{1}{2} \left( e^{ix} + e^{-ix} \right)$$
(A.30)

$$\overline{\sin(x)} = \sin(x) 
= \frac{1}{2i} \left( e^{ix} - e^{-ix} \right)$$
(A.31)

# B Trigonometry

# **B.1** Trigonometric Formulas

$$\sin(\alpha) \pm \sin(\beta) = 2\sin\left(\frac{\alpha \pm \beta}{2}\right)\cos\left(\frac{\alpha \mp \beta}{2}\right)$$
 (B.1)

$$\cos(\theta)\sin(\theta) = \frac{1}{2}\sin(2\theta) \tag{B.2}$$

# B.2 Euler Equivalents of Trigonometric Functions

$$e^{\pm j\alpha} = \cos(\alpha) \pm j\sin(\alpha)$$
 (B.3)

$$\cos(x) = \frac{e^{jx} + e^{-jx}}{2} \tag{B.4}$$

$$\sin\left(x\right) = \frac{e^{jx} - e^{-jx}}{2j} \tag{B.5}$$

$$\sinh(x) = \frac{e^x - e^{-x}}{2}$$
 (B.6)

$$\cosh\left(x\right) = \frac{e^x + e^{-x}}{2} \tag{B.7}$$

# B.3 Angle Sum and Difference Identities

$$\sin(\alpha \pm \beta) = \sin(\alpha)\cos(\beta) \pm \cos(\alpha)\sin(\beta) \tag{B.8}$$

$$\cos(\alpha \pm \beta) = \cos(\alpha)\cos(\beta) \mp \sin(\alpha)\sin(\beta) \tag{B.9}$$

# B.4 Double-Angle Formulae

$$\sin(2\alpha) = 2\sin(\alpha)\cos(\alpha) \tag{B.10}$$

$$\cos(2\alpha) = \cos^2(\alpha) - \sin^2(\alpha) \tag{B.11}$$

# B.5 Half-Angle Formulae

$$\sin\left(\frac{\alpha}{2}\right) = \sqrt{\frac{1 - \cos\left(\alpha\right)}{2}}\tag{B.12}$$

$$\cos\left(\frac{\alpha}{2}\right) = \sqrt{\frac{1 + \cos\left(\alpha\right)}{2}}\tag{B.13}$$

# B.6 Exponent Reduction Formulae

$$\sin^2(\alpha) = \left(\sin(\alpha)\right) = \frac{1 - \cos(2\alpha)}{2} \tag{B.14}$$

$$\cos^2(\alpha) = (\cos(\alpha)) = \frac{1 + \cos(2\alpha)}{2}$$
(B.15)

# B.7 Product-to-Sum Identities

$$2\cos(\alpha)\cos(\beta) = \cos(\alpha - \beta) + \cos(\alpha + \beta) \tag{B.16}$$

$$2\sin(\alpha)\sin(\beta) = \cos(\alpha - \beta) - \cos(\alpha + \beta) \tag{B.17}$$

$$2\sin(\alpha)\cos(\beta) = \sin(\alpha + \beta) + \sin(\alpha - \beta)$$
(B.18)

$$2\cos(\alpha)\sin(\beta) = \sin(\alpha + \beta) - \sin(\alpha - \beta) \tag{B.19}$$

# B.8 Sum-to-Product Identities

$$\sin(\alpha) \pm \sin(\beta) = 2\sin\left(\frac{\alpha \pm \beta}{2}\right)\cos\left(\frac{\alpha \mp \beta}{2}\right)$$
 (B.20)

$$\cos(\alpha) + \cos(\beta) = 2\cos\left(\frac{\alpha + \beta}{2}\right)\cos\left(\frac{\alpha - \beta}{2}\right)$$
(B.21)

$$\cos(\alpha) - \cos(\beta) = -2\sin\left(\frac{\alpha + \beta}{2}\right)\sin\left(\frac{\alpha - \beta}{2}\right)$$
(B.22)

# B.9 Pythagorean Theorem for Trig

$$\cos^2(\alpha) + \sin^2(\alpha) = 1^2 \tag{B.23}$$

$$\cosh^2(\alpha) - \sinh^2(\alpha) = 1^2 \tag{B.24}$$

# B.10 Rectangular to Polar

$$a + jb = \sqrt{a^2 + b^2}e^{j\theta} = re^{j\theta} \tag{B.25}$$

$$\theta = \begin{cases} \arctan\left(\frac{b}{a}\right) & a > 0\\ \pi - \arctan\left(\frac{b}{a}\right) & a < 0 \end{cases}$$
(B.26)

# B.11 Polar to Rectangular

$$re^{j\theta} = r\cos(\theta) + jr\sin(\theta) \tag{B.27}$$

# C Calculus

# C.1 L'Hôpital's Rule

L'Hôpital's Rule can be used to simplify and solve expressions regarding limits that yield irreconcilable results.

Lemma C.0.1 (L'Hôpital's Rule). If the equation

$$\lim_{x \to a} \frac{f(x)}{g(x)} = \begin{cases} \frac{0}{0} \\ \frac{\infty}{\infty} \end{cases}$$

then Equation (C.1) holds.

$$\lim_{x \to a} \frac{f(x)}{g(x)} = \lim_{x \to a} \frac{f'(x)}{g'(x)} \tag{C.1}$$

### C.2 Fundamental Theorems of Calculus

**Defn C.2.1** (First Fundamental Theorem of Calculus). The first fundamental theorem of calculus states that, if f is continuous on the closed interval [a, b] and F is the indefinite integral of f on [a, b], then

$$\int_{a}^{b} f(x) dx = F(b) - F(a)$$
(C.2)

**Defn C.2.2** (Second Fundamental Theorem of Calculus). The second fundamental theorem of calculus holds for f a continuous function on an open interval I and a any point in I, and states that if F is defined by

 $F(x) = \int_{a}^{x} f(t) dt,$ 

then

$$\frac{d}{dx} \int_{a}^{x} f(t) dt = f(x)$$

$$F'(x) = f(x)$$
(C.3)

**Defn C.2.3** (argmax). The arguments to the *argmax* function are to be maximized by using their derivatives. You must take the derivative of the function, find critical points, then determine if that critical point is a global maxima. This is denoted as

 $\operatorname*{argmax}_{x}$ 

## C.3 Rules of Calculus

## C.3.1 Chain Rule

**Defn C.3.1** (Chain Rule). The *chain rule* is a way to differentiate a function that has 2 functions multiplied together. If

$$f(x) = g(x) \cdot h(x)$$

then,

$$f'(x) = g'(x) \cdot h(x) + g(x) \cdot h'(x)$$

$$\frac{df(x)}{dx} = \frac{dg(x)}{dx} \cdot g(x) + g(x) \cdot \frac{dh(x)}{dx}$$
(C.4)

# C.4 Useful Integrals

$$\int \cos(x) \ dx = \sin(x) \tag{C.5}$$

$$\int \sin(x) \, dx = -\cos(x) \tag{C.6}$$

$$\int x \cos(x) dx = \cos(x) + x \sin(x)$$
(C.7)

Equation (C.7) simplified with Integration by Parts.

$$\int x \sin(x) dx = \sin(x) - x \cos(x)$$
 (C.8)

Equation (C.8) simplified with Integration by Parts.

$$\int x^2 \cos(x) \, dx = 2x \cos(x) + (x^2 - 2) \sin(x) \tag{C.9}$$

Equation (C.9) simplified by using Integration by Parts twice.

$$\int x^2 \sin(x) \, dx = 2x \sin(x) - (x^2 - 2) \cos(x) \tag{C.10}$$

Equation (C.10) simplified by using Integration by Parts twice.

$$\int e^{\alpha x} \cos(\beta x) \, dx = \frac{e^{\alpha x} \left(\alpha \cos(\beta x) + \beta \sin(\beta x)\right)}{\alpha^2 + \beta^2} + C \tag{C.11}$$

$$\int e^{\alpha x} \sin(\beta x) \, dx = \frac{e^{\alpha x} \left(\alpha \sin(\beta x) - \beta \cos(\beta x)\right)}{\alpha^2 + \beta^2} + C \tag{C.12}$$

$$\int e^{\alpha x} dx = \frac{e^{\alpha x}}{\alpha} \tag{C.13}$$

$$\int xe^{\alpha x} dx = e^{\alpha x} \left( \frac{x}{\alpha} - \frac{1}{\alpha^2} \right) \tag{C.14}$$

Equation (C.14) simplified with Integration by Parts.

$$\int \frac{dx}{\alpha + \beta x} = \int \frac{1}{\alpha + \beta x} dx = \frac{1}{\beta} \ln(\alpha + \beta x)$$
 (C.15)

$$\int \frac{dx}{\alpha^2 + \beta^2 x^2} = \int \frac{1}{\alpha^2 + \beta^2 x^2} dx = \frac{1}{\alpha \beta} \arctan\left(\frac{\beta x}{\alpha}\right)$$
 (C.16)

$$\int \alpha^x \, dx = \frac{\alpha^x}{\ln(\alpha)} \tag{C.17}$$

$$\frac{d}{dx}\alpha^x = \frac{d\alpha^x}{dx} = \alpha^x \ln(x) \tag{C.18}$$

# C.5 Leibnitz's Rule

Lemma C.0.2 (Leibnitz's Rule). Given

$$g(t) = \int_{a(t)}^{b(t)} f(x, t) dx$$

with a(t) and b(t) differentiable in t and  $\frac{\partial f(x,t)}{\partial t}$  continuous in both t and x, then

$$\frac{d}{dt}g(t) = \frac{dg(t)}{dt} = \int_{a(t)}^{b(t)} \frac{\partial f(x,t)}{\partial t} dx + f[b(t),t] \frac{db(t)}{dt} - f[a(t),t] \frac{da(t)}{dt}$$
(C.19)

# C.6 Laplace's Equation

Laplace's Equation is used to define a harmonic equation. These functions are twice continuously differentiable  $f: U \to R$ , where U is an open subset of  $\mathbb{R}^n$ , that satisfies Equation (C.20).

$$\frac{\partial^2 f}{\partial x_1^2} + \frac{\partial^2 f}{\partial x_2^2} + \dots + \frac{\partial^2 f}{\partial x_n^2} = 0 \tag{C.20}$$

This is usually simplified down to

$$\nabla^2 f = 0 \tag{C.21}$$

# D Laplace Transform

# D.1 Laplace Transform

**Defn D.1.1** (Laplace Transform). The Laplace transformation operation is denoted as  $\mathcal{L}\{x(t)\}$  and is defined as

$$X(s) = \int_{-\infty}^{\infty} x(t)e^{-st}dt$$
 (D.1)

# D.2 Inverse Laplace Transform

**Defn D.2.1** (Inverse Laplace Transform). The *inverse Laplace transformation* operation is denoted as  $\mathcal{L}^{-1}\{X(s)\}$  and is defined as

$$x(t) = \frac{1}{2j\pi} \int_{\sigma - \infty}^{\sigma + \infty} X(s)e^{st} ds$$
 (D.2)

# D.3 Properties of the Laplace Transform

# D.3.1 Linearity

The Laplace Transform is a linear operation, meaning it obeys the laws of linearity. This means Equation (D.3) must hold.

$$x(t) = \alpha_1 x_1(t) + \alpha_2 x_2(t) \tag{D.3a}$$

$$X(s) = \alpha_1 X_1(s) + \alpha_2 X_2(s) \tag{D.3b}$$

# D.3.2 Time Scaling

Scaling in the time domain (expanding or contracting) yields a slightly different transform. However, this only makes sense for  $\alpha > 0$  in this case. This is seen in Equation (D.4).

$$\mathcal{L}\left\{x(\alpha t)\right\} = \frac{1}{\alpha} X\left(\frac{s}{\alpha}\right) \tag{D.4}$$

#### D.3.3 Time Shift

Shifting in the time domain means to change the point at which we consider t = 0. Equation (D.5) below holds for shifting both forward in time and backward.

$$\mathcal{L}\left\{x(t-a)\right\} = X(s)e^{-as} \tag{D.5}$$

### D.3.4 Frequency Shift

Shifting in the frequency domain means to change the complex exponential in the time domain.

$$\mathcal{L}^{-1}\left\{X(s-a)\right\} = x(t)e^{at} \tag{D.6}$$

## D.3.5 Integration in Time

Integrating in time is equivalent to scaling in the frequency domain.

$$\mathcal{L}\left\{ \int_0^t x(\lambda) \, d\lambda \right\} = \frac{1}{s} X(s) \tag{D.7}$$

### D.3.6 Frequency Multiplication

Multiplication of two signals in the frequency domain is equivalent to a convolution of the signals in the time domain.

$$\mathcal{L}\{x(t) * v(t)\} = X(s)V(s) \tag{D.8}$$

# D.3.7 Relation to Fourier Transform

The Fourier transform looks and behaves very similarly to the Laplace transform. In fact, if  $X(\omega)$  exists, then Equation (D.9) holds.

$$X(s) = X(\omega)|_{\omega = \frac{s}{2}} \tag{D.9}$$

# D.4 Theorems

There are 2 theorems that are most useful here:

- 1. Intial Value Theorem
- 2. Final Value Theorem

**Theorem D.1** (Intial Value Theorem). The Initial Value Theorem states that when the signal is treated at its starting time, i.e.  $t = 0^+$ , it is the same as taking the limit of the signal in the frequency domain.

$$x(0^+) = \lim_{s \to \infty} sX(s)$$

**Theorem D.2** (Final Value Theorem). The Final Value Theorem states that when taking a signal in time to infinity, it is equivalent to taking the signal in frequency to zero.

$$\lim_{t\to\infty}x(t)=\lim_{s\to0}sX(s)$$

# D.5 Laplace Transform Pairs

Time Domain	Frequency Domain
x(t)	X(s)
$\delta(t)$	1
$\delta(t-T_0)$	$e^{-sT_0}$
$\mathcal{U}(t)$	$\frac{1}{s}$
$t^n\mathcal{U}(t)$	$\frac{n!}{s^{n+1}}$
$\mathcal{U}(t-T_0)$	$\frac{e^{-sT_0}}{s}$
$e^{at}\mathcal{U}(t)$	$\frac{1}{s-a}$
$t^n e^{at} \mathcal{U}(t)$	$\frac{n!}{(s-a)^{n+1}}$
$\cos(bt)\mathcal{U}(t)$	$\frac{s}{s^2+b^2}$
$\sin(bt)\mathcal{U}(t)$	$\frac{b}{s^2+b^2}$
$e^{-at}\cos(bt)\mathcal{U}(t)$	$\frac{s+a}{(s+a)^2+b^2}$
$e^{-at}\sin(bt)\mathcal{U}(t)$	$\frac{b}{(s+a)^2+b^2}$
	$a: \frac{sr\cos(\theta) + ar\cos(\theta) - br\sin(\theta)}{s^2 + 2as + (a^2 + b^2)}$
$re^{-at}\cos(bt+\theta)\mathcal{U}(t)$	$b: \frac{1}{2} \left( \frac{re^{j\theta}}{\frac{re^{j\theta}}{s+a-jb}} + \frac{re^{-j\theta}}{\frac{re^{j\theta}}{s+a+jb}} \right)$
	$\begin{cases} r = \sqrt{\frac{A^2c + B^2 - 2ABa}{a^2c^2}} \end{cases}$
	$\begin{cases} a: & \frac{sr\cos(\theta) + ar\cos(\theta) - br\sin(\theta)}{s^2 + 2as + (a^2 + b^2)} \\ b: & \frac{1}{2} \left( \frac{re^{j\theta}}{s + a - jb} + \frac{re^{-j\theta}}{s + a + jb} \right) \\ c: & \frac{As + B}{s^2 + 2as + c} \begin{cases} r & = \sqrt{\frac{A^2c + B^2 - 2ABa}{c - a^2}} \\ \theta & = \arctan\left( \frac{Aa - B}{A\sqrt{c - a^2}} \right) \end{cases}$
$e^{-at} \left( A\cos(\sqrt{c-a^2}t) + \frac{B-Aa}{\sqrt{c-a^2}}\sin(\sqrt{c-a^2}t) \right) \mathcal{U}(t)$	$\frac{As+B}{s^2+2as+c}$

# D.6 Higher-Order Transforms

Time Domain	Frequency Domain
x(t)	X(s)
$x(t)\sin(\omega_0 t)$	$\frac{j}{2}\left(X(s+j\omega_0)-X(s-j\omega_0)\right)$
$x(t)\cos(\omega_0 t)$	$\frac{1}{2}\left(X(s+j\omega_0)+X(s-j\omega_0)\right)$
$t^n x(t)$	$(-1)^n \frac{d^n}{ds^n} X(s) \ n \in \mathbb{N}$
$\frac{d^n}{dt^n}x(t)$	$s^{n}X(s) - \sum_{0}^{n-1} s^{n-1-i} \frac{d^{i}}{dt^{i}} x(t) _{t=0^{-}} n \in \mathbb{N}$