
DeathDonky Prints

SharKa-50/CP3 Lever Mod Install Instructions:

1.

Start by removing all 4 stock knobs from your panel. Set the 8 screws you removed with your lever mod kit, you will need these later, and put your stock knobs in a safe place. You will not need them after install.


A.

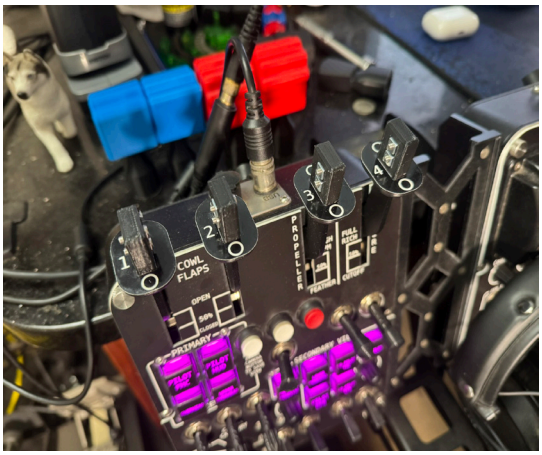

2.

Separate your 8 screws, square nuts, and 4 lever anchors numbered 1 through 4. Attach and position each lever anchor as shown in the photo(A). The square recess should be on the left of each lever and the number should be oriented in a manner that would allow for normal reading.

B.

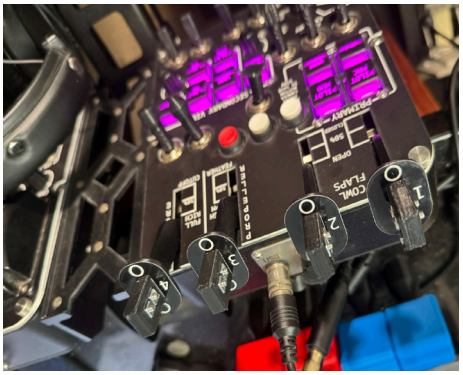


Its important to note that if you have inverted your control panel so that the levers are on the bottom as you use it, you should install the anchors in the same manner as above where 1 is far left and 4 is the farthest right.

3.

When installing the extensions and handles, ensure the number on the base of the handle corresponds to the anchor number. Place them in a manner the numbers align like in the photo(C).

C.

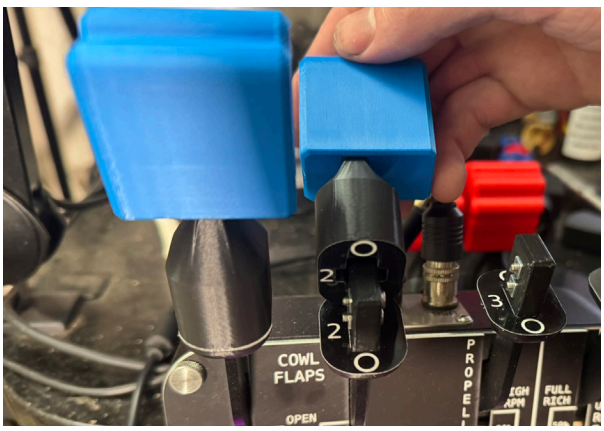

Thank you for your purchase from DeathDonky Prints!