

RJX Mark4 V2 9-inch 387 mm

Verified manual - exact kit photo, no reconstructed parts

EXACT KIT CONTENTS



Inventory transcribed from the exact kit photo


- Top plate x1 - 2.0 mm
- Mid plate x1 - 3.0 mm
- Bottom plate x1 - 3.0 mm
- Arms x4 - 6.0 mm
- Arm bracers x2 - 2.0 mm
- Camera plates x2 - 2.5 mm
- Front plate x1 - 2.0 mm
- Back plate x1 - 2.0 mm
- Anti-slip silicone pad x1 - 2 mm
- Sponge damping pads x4
- M3x6 screws x8
- M3x8 screws x4
- M3x10 screws x8
- M3x14 screws x4
- M3x16 screws x4
- M3x25 screws x4
- M3 press nuts x16 - built into carbon
- M3 nylon nuts x4
- M3x35 D5 standoffs x8
- Battery straps x2

RJX Mark4 V2 9-inch 387 mm

Official exploded assembly drawing - enlarged, not redrawn

OFFICIAL EXPLODED VIEW

RJXHOBBY Mark4 V2 9inch 387mm Assembly Manual

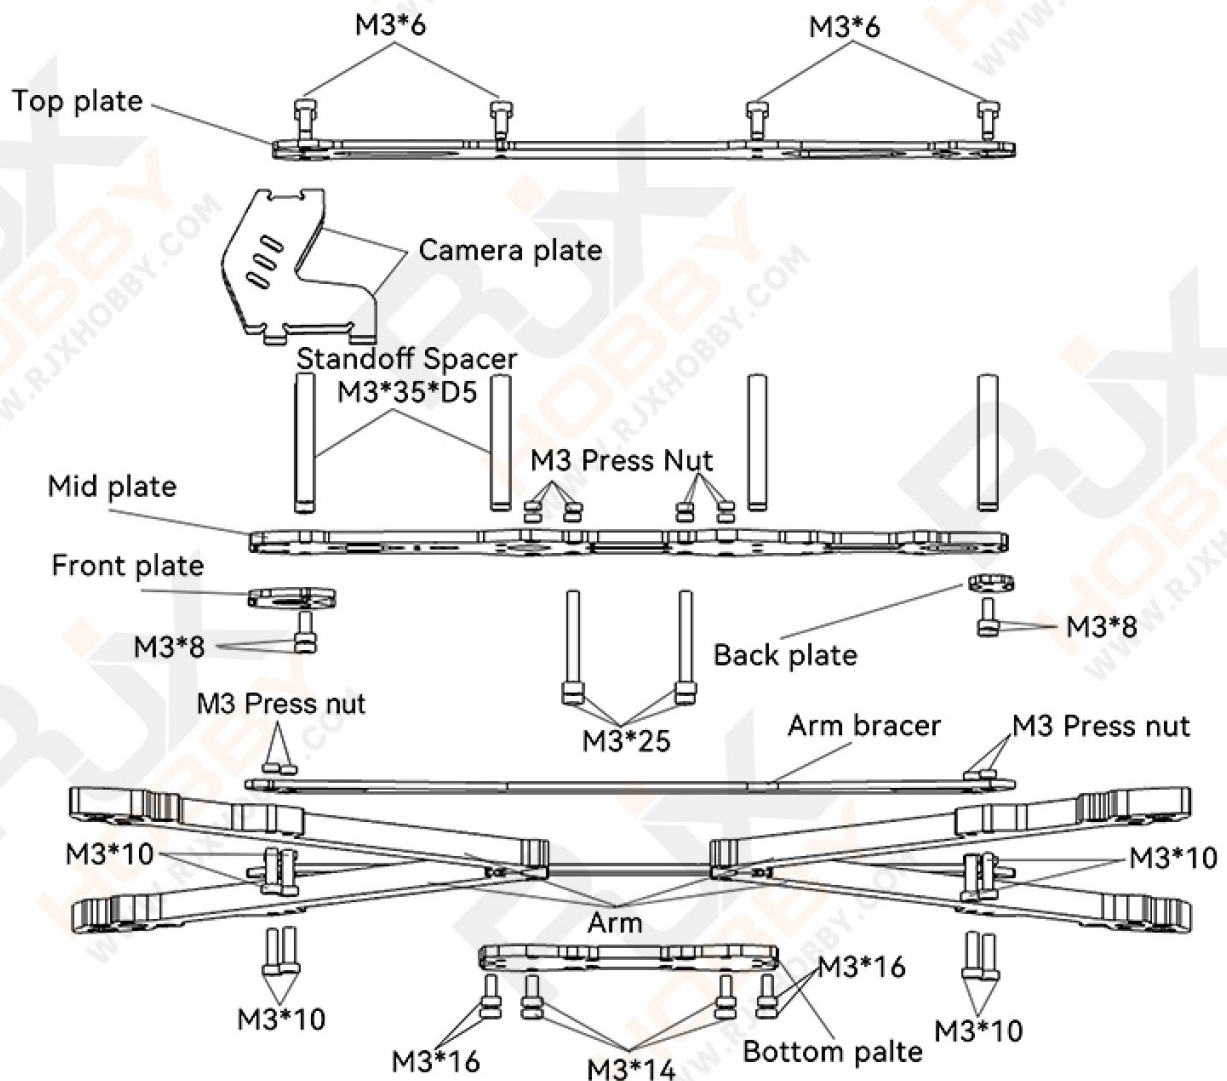


Assembly order shown by the manufacturer drawing

- Bottom plate and lower screws form the base of the arm sandwich.
- Four 6 mm arms and the two long arm bracers sit in the lower frame assembly.
- Mid plate sits above the arm assembly. Front and back plates are fixed with M3x8 hardware.
- The two M3x25 fasteners are shown in the center area of the official drawing.
- Eight M3x35 D5 standoffs support the upper body.
- Two camera plates fit at the front, followed by the top plate with M3x6 screws.
- M3 nylon nuts: x4. All four are present in the kit specification.

RJX Mark4 V2 9-inch 387 mm

Lower frame - only enlarged/cropped sections of the official RJX drawing

LOWER FRAME - OFFICIAL DRAWING

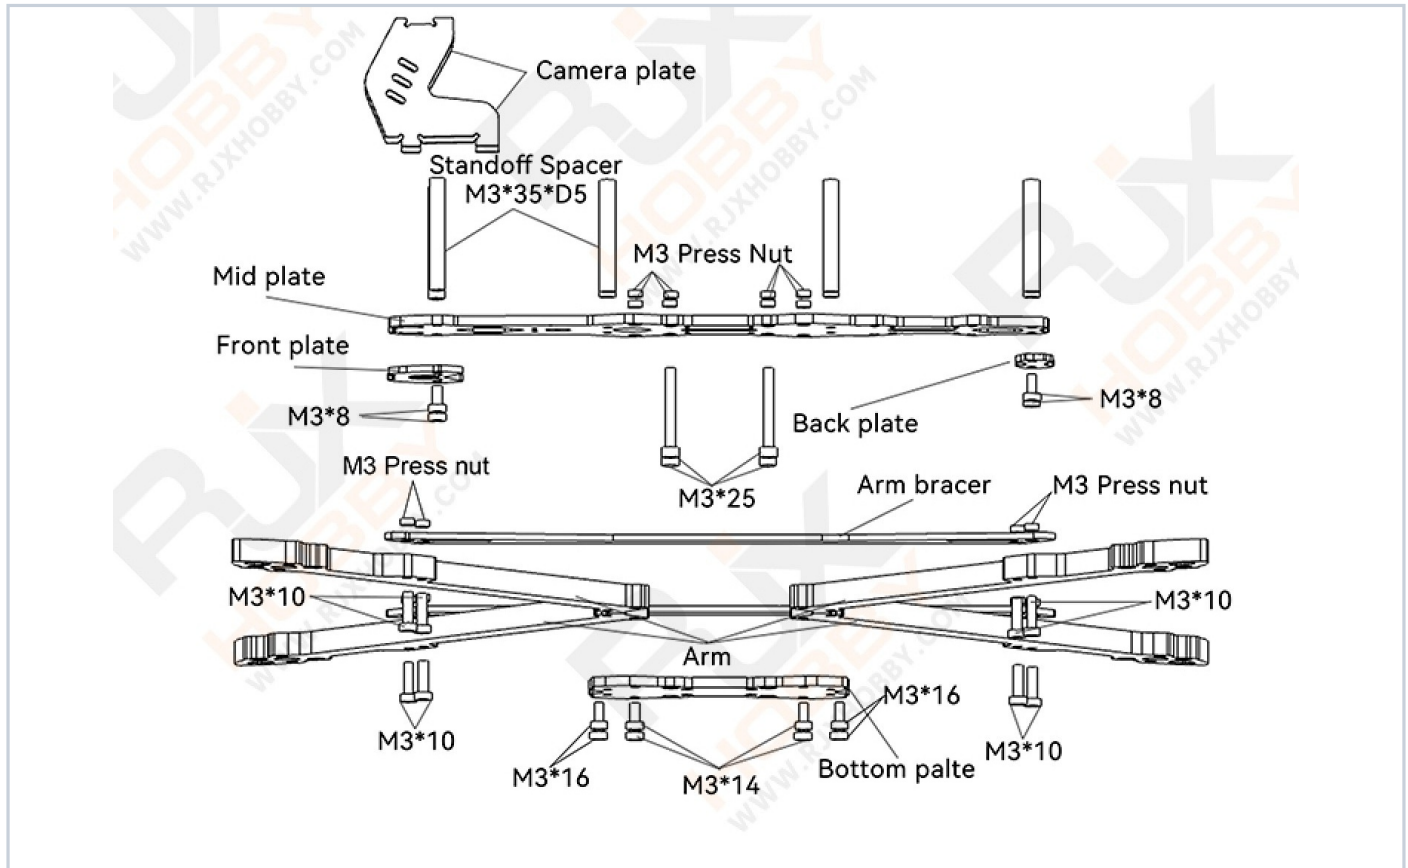

ASSEMBLY SEQUENCE

1. Dry-fit the four arms

Lay the four 6 mm arms in their final X positions. Keep the motor ends symmetric and do not tighten yet.

2. Fit both arm bracers

Use the two long 2 mm brace pieces exactly as shown in the RJX exploded drawing. There are only two braces in this kit.

3. Fit the bottom plate

Align the bottom plate with the lower arm-sandwich holes. The official drawing calls out M3x14 and M3x16 in this lower area.

4. Fit the mid plate

Place the 3 mm mid plate above the arm/bracer assembly. Make sure all press-nut and screw holes align before tightening.

5. Front/back + center hardware

The front and back plates are shown with M3x8 hardware. The two M3x25 fasteners are shown in the center region.

6. Tighten progressively

Snug hardware gradually and alternately. Stop if a screw bottoms out or if the carbon begins to bow.


Important: This page uses only the original RJX manufacturer diagram; no frame geometry is redrawn.

RJX Mark4 V2 9-inch 387 mm

Upper frame, exact hardware reference and final checks

UPPER FRAME - OFFICIAL DRAWING

RJXHOBBY Mark4 V2 9inch 387mm Assembly Manual

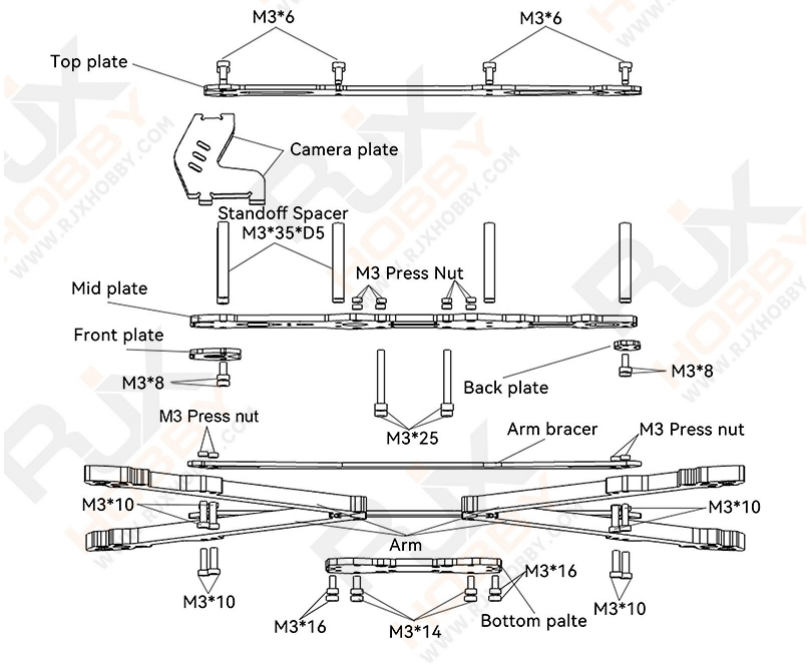

The complete RJX exploded drawing is shown here deliberately without cropping. For the upper assembly, follow the top plate, camera plate, M3x35 D5 standoffs, mid plate, M3 press nuts and M3x6 callouts exactly as shown.

EXACT HARDWARE FROM THE KIT PHOTO



Hardware count check

M3x6 screws	8	M3x8 screws	4
M3x10 screws	8	M3x14 screws	4
M3x16 screws	4	M3x25 screws	4
M3 press nuts (built into carbon)	16	M3 nylon nuts	4
M3x35 D5 standoffs	8	Battery straps	2

FINAL CHECKS

- All four arms are symmetrical and flat.
- Both arm bracers are installed and aligned.
- All eight standoffs are vertical.
- Camera plates are at the front end.
- No screw protrudes into the electronics area.
- M3 nylon nuts: 4 total - verify all four.
- Battery strap path is clear.
- Re-check frame hardware after the first flight.