OPERATIONS

JIT (Just-In-Time)

Produce or deliver exactly what is needed, when it is needed, in the exact quantity required — eliminating overproduction

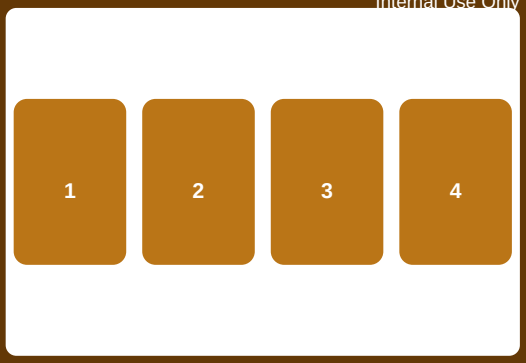

WHEN TO USE

When inventory levels are high, storage costs are significant, or lead times need to be dramatically shortened.

HOW TO APPLY — STEPS

1. Map current material flow and identify all inventory buffers
2. Define takt time based on actual customer demand rate
3. Size production quantities to match demand signal, not forecast
4. Implement pull triggers using kanban or actual demand signals
5. Stabilise supply chain reliability before reducing safety stock

PRACTITIONER TIP

! JIT fails without reliable supply. Fix supplier on-time delivery before you reduce safety stock — sequence matters.

KEY OUTPUTS

- Material flow map
- Pull system design document
- Inventory reduction phasing plan

HOW TO MEASURE SUCCESS

Inventory turns per year; days on hand reduction; overproduction incidents per month

TOOL CATEGORY
Operations