

Chapter 9

Mobile Communication Systems



Outline


- Cellular System Infrastructure
- Registration
- Handoff Parameters and Underlying Support
- Roaming Support
- Ultra Wide Band
- Femto Cells

Classical Mail Forwarding by Mail

Mail from the world Washington DC Post Office Cincinnati Post Office Washington, DC




Automatic Location Update

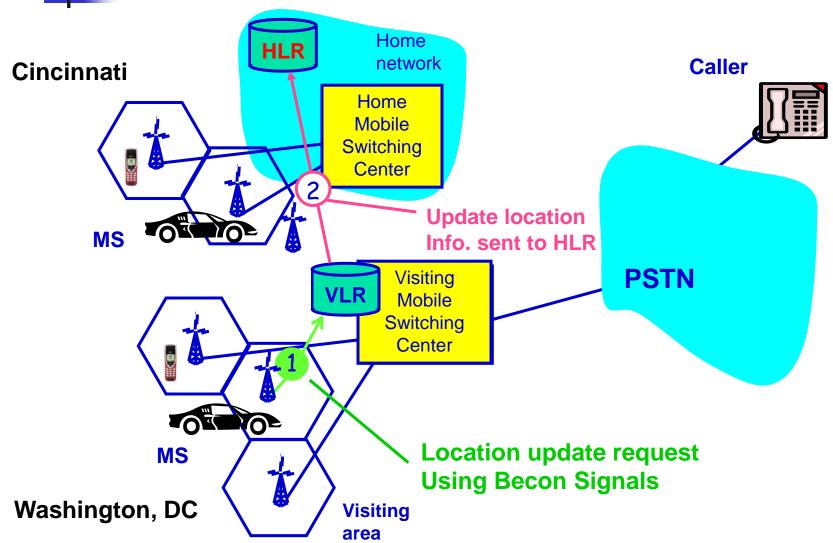




Automatic Call Forwarding using HLR-VLR

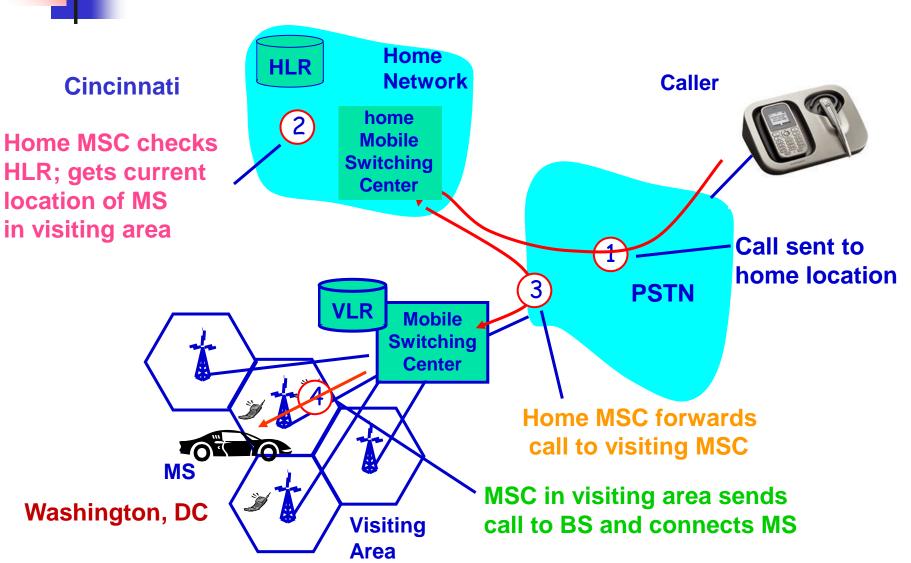



Cellular System Infrastructure

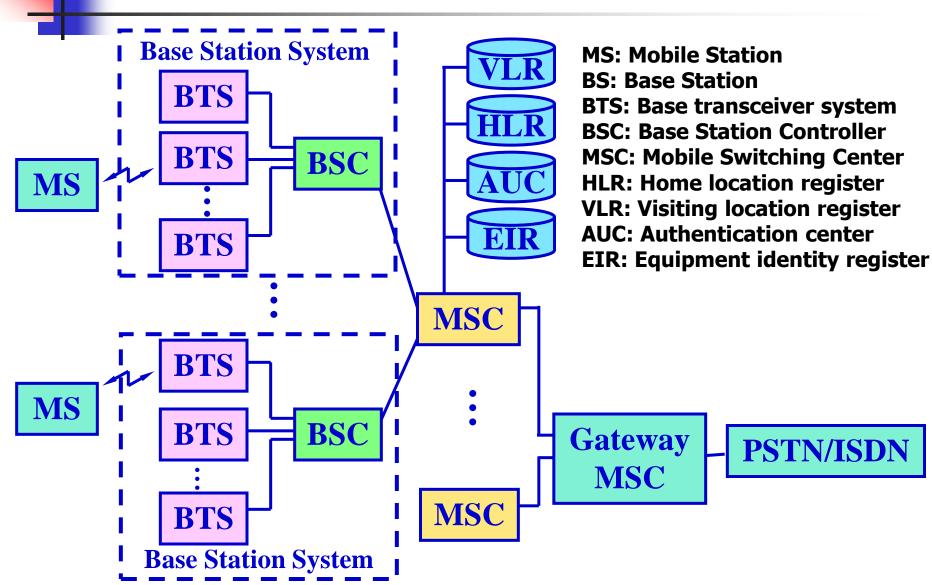




VLR/HLR/AUC/EIR

- VLR contains information about all visiting MSs in that particular area of MSC
- VLR has pointers to the HLR's of visiting MS
- VLR helps in billing and access permission to the visiting MS
- AUC provides authentication and encryption parameters
- EIR contains identity of equipments that prevents service to unauthorized MSs



Redirection of Call to MS at a Visiting Location

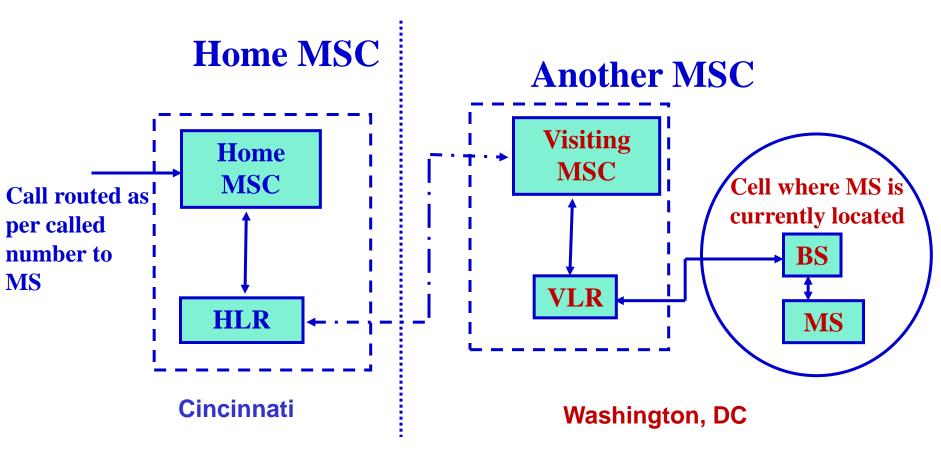


Through backbone

Registration

- Wireless system needs to know whether MS is currently located in its home area or some other area (routing of incoming calls)
- This is done by periodically exchanging signals between BS and MS known as *Beacons*
- BS periodically broadcasts beacon signal (1 signal few second) to determine and test the MSs around
- Each MS listens to the beacon, if it has not heard it previously, then it adds it to the active beacon kernel table
- This information is used by the MS to locate the nearest BS
- Information carried by beacon signal: cellular network identifier, timestamp, gateway address ID of the paging area, etc.




Using a Mobile Phone Outside the Subscription Area

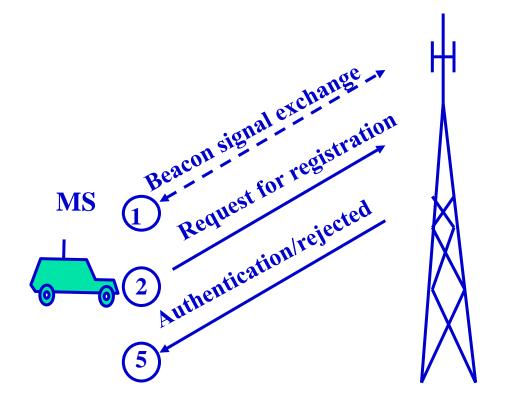

Through backbone

- 3 Authentication request
- **4 Authentication response**



Visiting BS (Visiting MSC)

Home BS (Home MSC)

Steps for Registration

- MS listens to a new beacon, if it's a new one, MS adds it to the active beacon kernel table
- If MS decides that it has to communicate through a new BS, kernel modulation initiates handoff process
- MS locates the nearest BS via user level processing
- The visiting BS performs user level processing and decides:
 - Who the user is?
 - What are its access permissions?
 - What is the billing status
- Home site sends appropriate authentication response to the current serving BS
- The BS approves/disapproves the user access



Application	Frequency band	Information carried	
Cellular networks	824-849 MHz (AMPS/CDPD), 1,850-1,910 MHz (GSM)	Cellular IP network identifier, Gateway IP address, Paging area ID, Timestamp	
Ad hoc networks (discussed in Chapter 13)	902-928 MHz (ISM band for analog and mixed signals) 2.4-2.5 GHz (ISM band for digital signals)	Network node identify	
Wireless LANs (discussed in Chapter 15)	902-928 MHz (industrial, scientific, and medical band for analog and mixed signals) 2.4-2.5GHz (ISM band for digital signals)	Traffic indication map	
GPS (discussed in Chapter 17)	1575.42 MHz	Timestamped orbital map and astronomical information	
Search and rescue	406 and 121.5 MHz	Registration country and ID of vessel or aircraft in distress	
Mobile robotics	100 KHz - 1 MHz	Position of pallet or payload	
Location tracking	300 GHz - 810 THz (infrared)	Digitally encoded signal to identify user's location	
Aid to the impaired	176 MHz	Digitally coded signal uniquely identifying physical locations	



Handoff Parameters and Underlying Support

- Change of radio resources from one cell to an adjacent one
- Handoff depends on cell size, boundary length, signal strength, fading, reflection, etc.
- Handoff can be initiated by MS or BS and could be due to:
 - Radio link
 - Network management
 - Service issues



Handoff Parameters (Cont'd)

- Radio link handoff is due to mobility of MS
- It depends on:
 - Number of MSs in the cell
 - Number of MSs that have left the cell
 - Number of calls generated in the cell
 - Number of calls transferred from the neighboring cells
 - Number and duration of calls terminated in the cell
 - Number of calls that were handoff to neighboring cells
 - Cell dwell time



Handoff Parameters (Cont'd)

- Network management may cause handoff if there is drastic imbalance of traffic in adjacent cells and optimal balance of resources is required
- Service related handoff is due to the degradation of QoS (quality of service)




Time for Handoff

Factors deciding right time for handoff:

- Signal strength
- Signal phase
- Combination of above two
- Bit error rate (BER)
- Distance

Need for Handoff is determined by:

- Signal strength
- CIR (carrier to interference ratio)

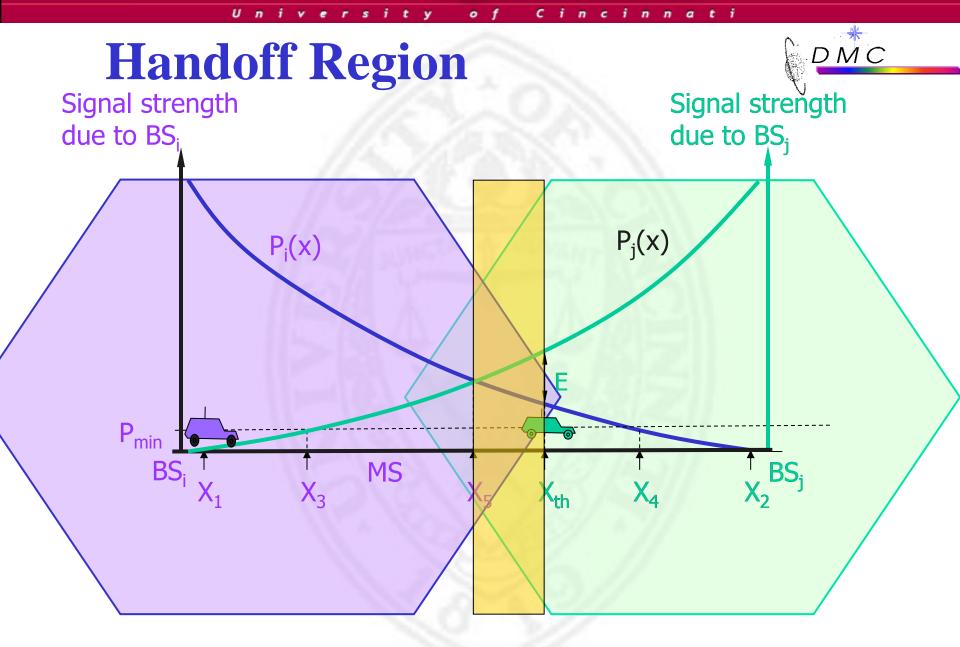




By looking at the variation of signal strength from either base station it is possible to decide on the optimum area where handoff can take place 17




Handoff initiation (Cont'd)

- Region X₃-X₄ indicates the handoff area, where depending on other factors, the handoff needs to be performed
- One option is to do handoff at X₅ where the two signal strengths are equal
- If MS moves back and forth around X_5 , it will result in too frequent handoffs (*ping-pong effect*)
- Therefore MS is allowed to continue with the existing BS till the signal strength decreases by a threshold value E
- Different cellular systems follow different handoff procedure

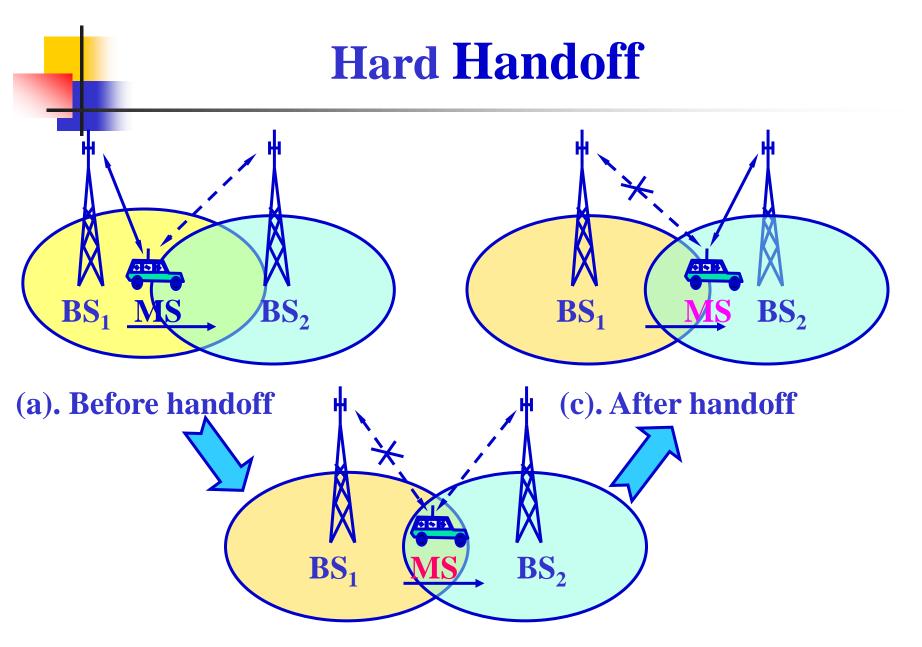

(b). During handoff (No connection)

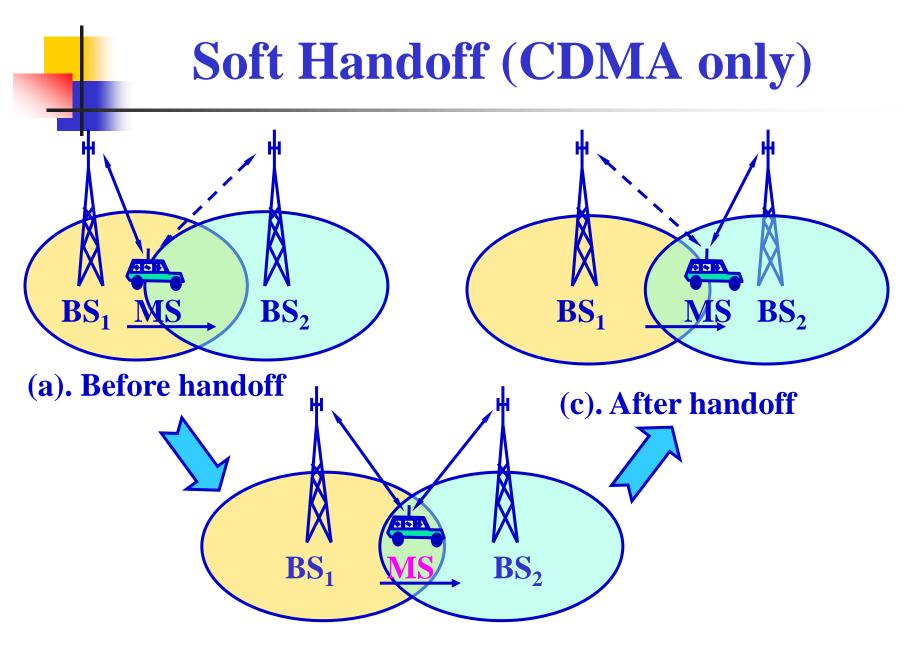

(b). During handoff




Types of Handoff

- Hard Handoff (break before make)
 - Releasing current resources from the prior BS before acquiring resources from the next BS
 - FDMA,TDMA follow this type of handoff
- Soft Handoff (make before break)
 - In CDMA, since the same channel is used, we can use the same if the code in the next BS is orthogonal
 - Therefore, it is possible for the MS to communicate simultaneously with the prior BS as well as the new BS





Roaming Support

- To move from a cell controlled by one MSC area to a cell connected to another MSC
- Beacon signals and the use of HLR-VLR allow the MS to roam anywhere provided the same service provider using that particular frequency band, is there in that region

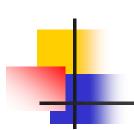

Roaming Support

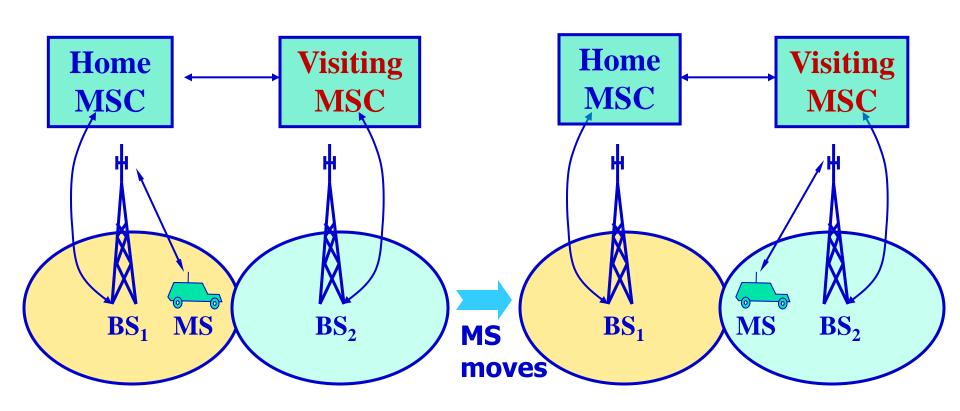

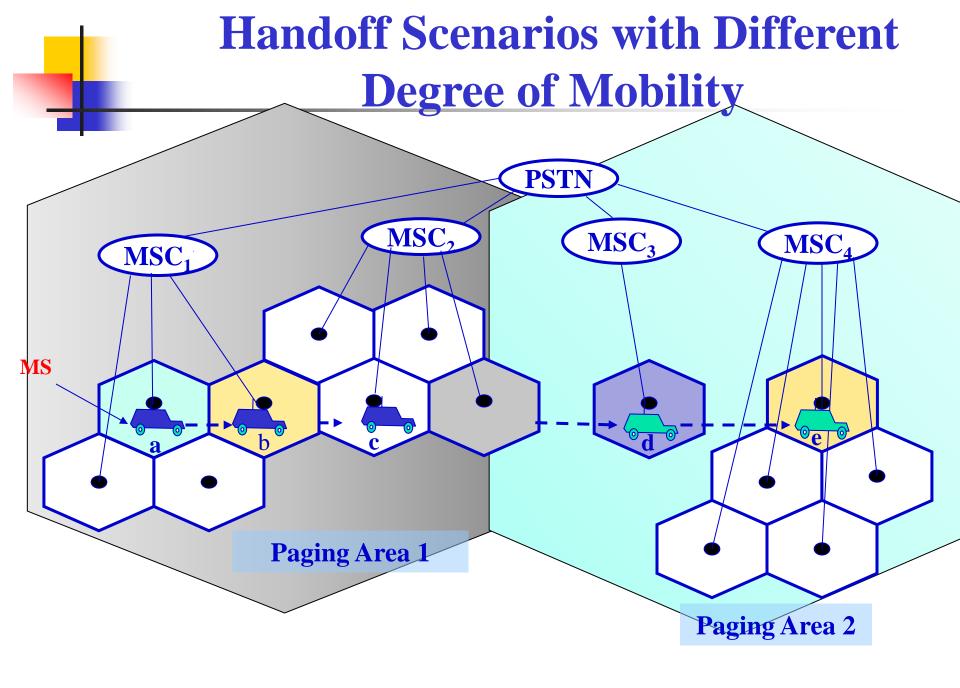



Possible Handoff Situations

- Assume MSC₁ to be the home of the MS for registration, billing, authentication, etc.
- When handoff is from position "a" to "b", the routing can be done by MSC₁ itself
- When handoff is from position "b" to "c", then bi-directional pointers are set up to link the HLR of MSC₁ to VLR of MSC₂
- When handoff occurs at "d" or "e", routing of information using HLR-VLR may not be adequate ("d" is in a different *paging area*)
- Concept of Backbone network



Information Transmission Path when MS Hands Off from "b" to "c"


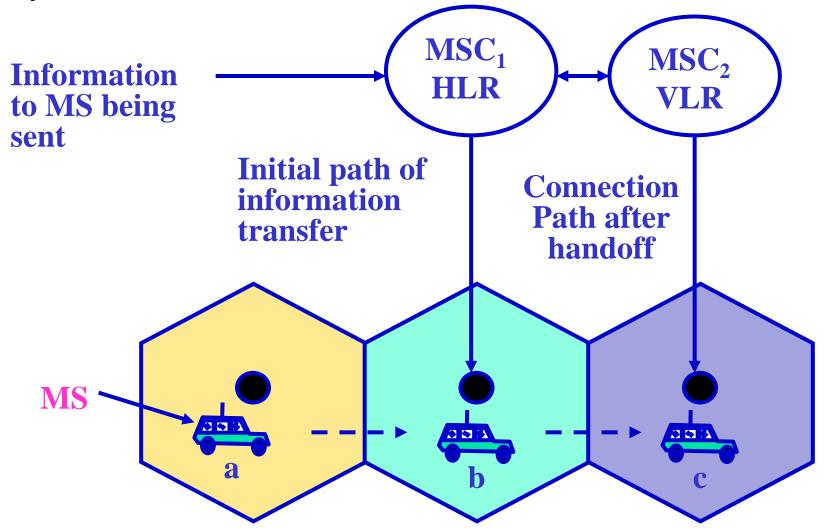


Illustration of MSC Connections to Backbone Network and Routing/Rerouting



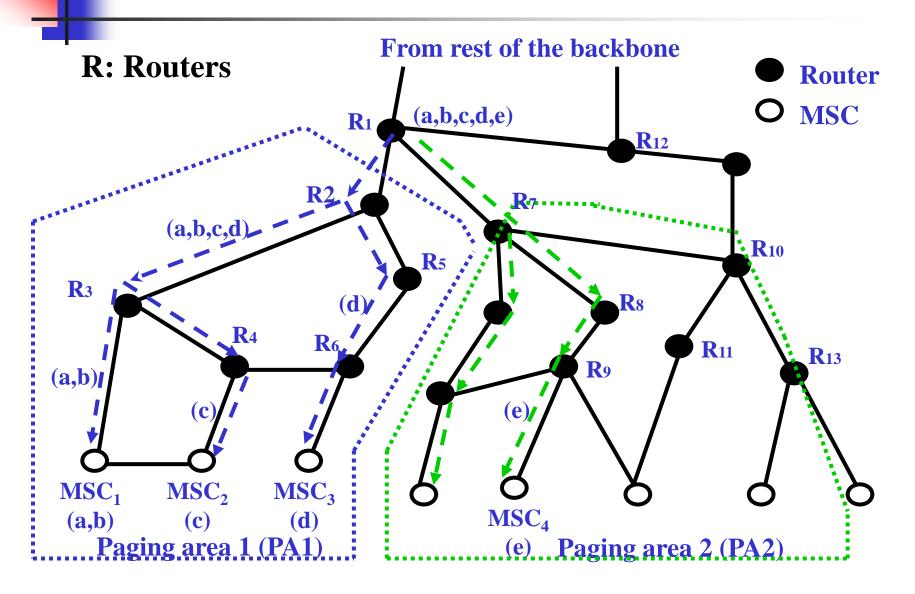

Backbone Network

- Routing done according to the topology and connectivity of the backbone network
- The dotted lines show the possible paths for a call headed for different MS locations
- One option is to find a router along the original path, from where a new path needs to start to reach the MSC along the shortest path




Home Agents (HA), Foreign Agents (FA) and Mobile IP

- Two important software modules are associated with routers, home agent (HA) and foreign agent (FA)
- MS is registered with a router, mostly a router closest to the home MSC can be used to maintain its HA
- A router other than closest one could also serve as an HA
- Once a MS moves from the home network, a software module in the new network FA assists MS by forwarding packets for the MS
- This functionality is somewhat similar to HLR-VLR



Home MSC and Home Agent (HA) for the Previous Network

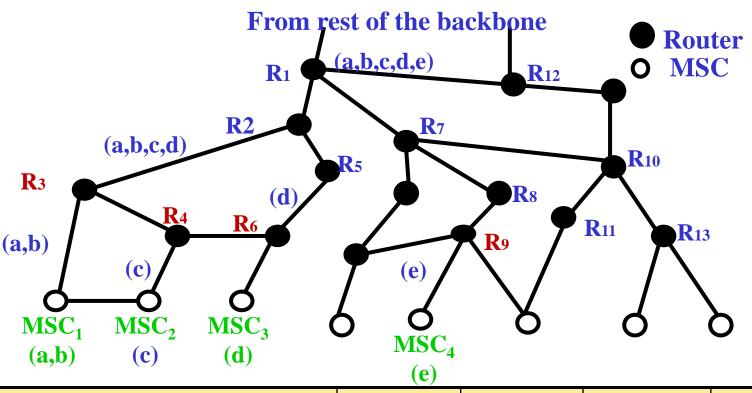


Home MSC	MSC_1	MSC ₂	MSC ₃	MSC ₄
Selected router for	R_3	\mathbf{R}_4	R_6	\mathbf{R}_{9}
maintaining its home agent				



Call Establishment using HA-FA


- Whenever a MS moves to a new network, it still retains its initial HA
- The MS detects the FA of the new network, by sensing the periodic beacon signals which FA transmits
- MS can also itself send agent solicitation messages to which FA responds
- When FA detects a new MS, it allocates a CoA (care of address) to the MS, using dynamic host configuration protocol (DHCP)
- Once MS receives CoA, it registers its CoA with its HA and the time limit binding for its validity
- Such registration is initiated either directly by MS to the HA of the home router or indirectly through FA

Registration Process Between FA, MS, and HA When the MS Moves to a Paging area

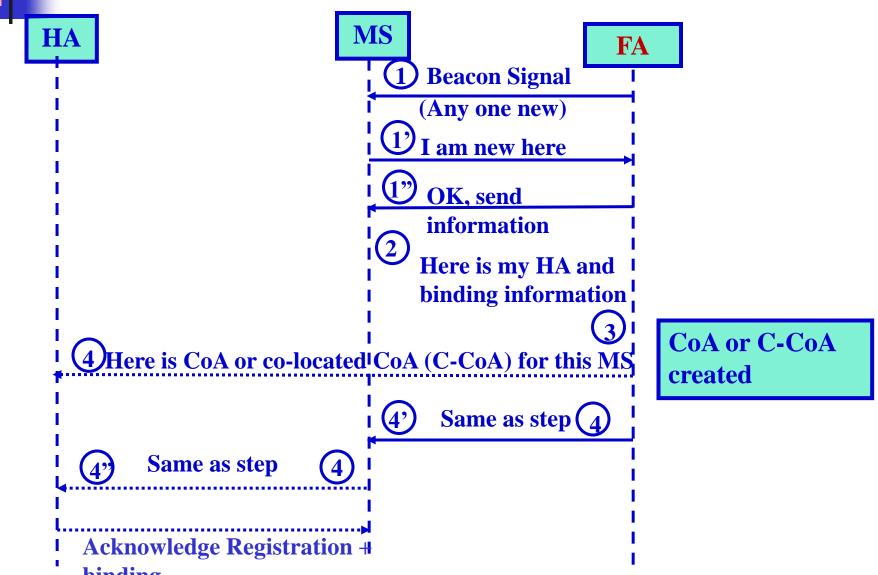

Call Establishment (Cont'd)

- HA confirms its binding through a reply to the MS
- A message sent from an arbitrary source to the MS at the home address is received by the HA
- Binding is checked, the CoA of the MS is encapsulated in the packet and forwarded to the network
- If CoA of the FA is used, then packet reaches FA, it decapsulates packet and passes to MS at the link layer
- In an internet environment, it is called *Mobile IP*
- After binding time, if MS still wants to have packets forwarded through HA, it needs to renew its registration
- When MS returns to its home network, it intimates its

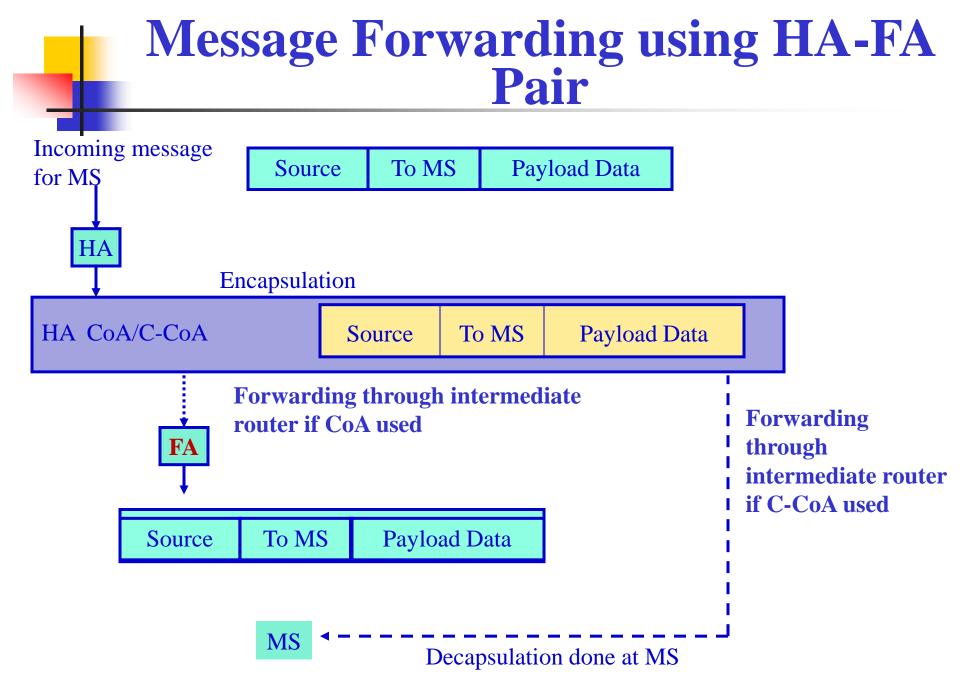




Routing in Backbone Routers

- How FA finds HA of the MS?
- One approach is to have a global table at each router of each MSC so that the route from FA to HA for that MS can be determined
- Disadvantages: Information too large, one network might not like to give out information about all its routers to any external network (only gateways information is provided)
- Use of Distributed Routing Scheme

Illustration of Paging Areas (PAs) and Backbone Router Interconnect

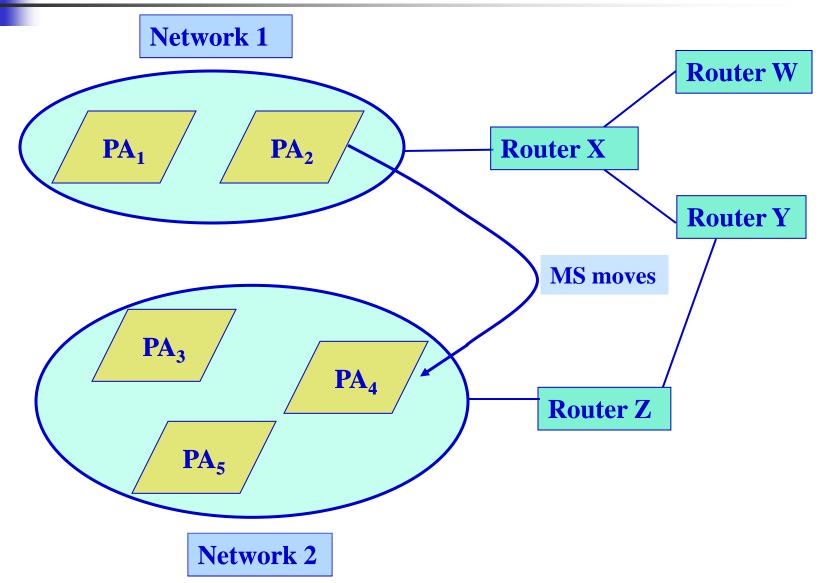



Distributed Routing Table and Location PAs


	t routei V		t router X	Table a	t router Y	_	t router Z
Route to PA	Next hop						
1	X	1	-	1	X	1	Y
2	X	2	-	2	X	2	Y
3	X	3	Y	3	Z	3	-
4	X	4	Y	4	Z	4	-
5	X	5	Y	5	Z	5	-




- Process of transmitting messages from a source to multiple recipients by using a group address for all hosts that wish to be the members of the group
- Reduces number of messages to be transmitted as compared to multiple unicasting
- Useful in video/audio conferencing, multi party games

Tree-based Multicasting

- Multicasting can be performed either by building a source based tree or core based tree
- In source based tree, for each source of the group a shortest path is maintained, encompassing all the members of the group, with the source being the root of the tree

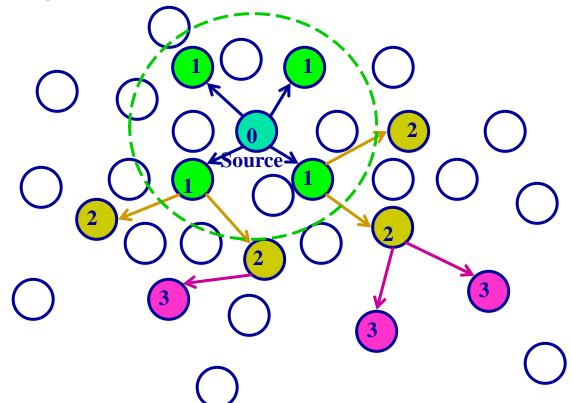


Nodes not a part of Multicast group

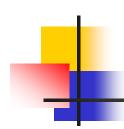

Core-based Multicasting

- •In core based tree, a particular router is chosen as a core and a tree is maintained with the core being the root
- Every source forwards the packet to a core router, which then forwards it on the tree to reach all members of the multicast group

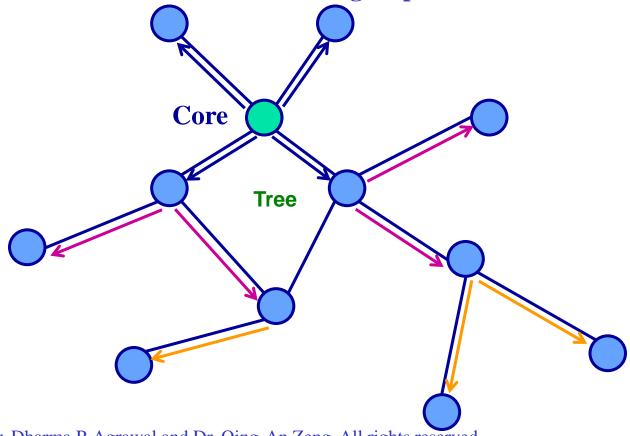




- Bi-directional Tunneling (BT) and Remote
 Subscription approaches have been proposed by IETF for providing multicast over Mobile IP
- In BT approach, whenever a MS moves to a foreign network, HA is responsible for forwarding the multicast packets to the MS via FA
- In Remote Subscription protocol, whenever a MS moves to a foreign network, the FA (if not already a member of multicast group) sends a tree join request



- Remote Subscription based approach is simple and prevents packet duplication and non optimal path delivery
- It can cause data interruption till the FA is connected to the tree
- It results in a number of tree join and tree leave requests when MS are in continuous motion
- In contrast, in the BT approach, the HA creates a bi-directional tunnel to FA and encapsulates the packets for MS
- FA then forwards the packets to the MS



Packet Duplication in BT Tunnel Approach

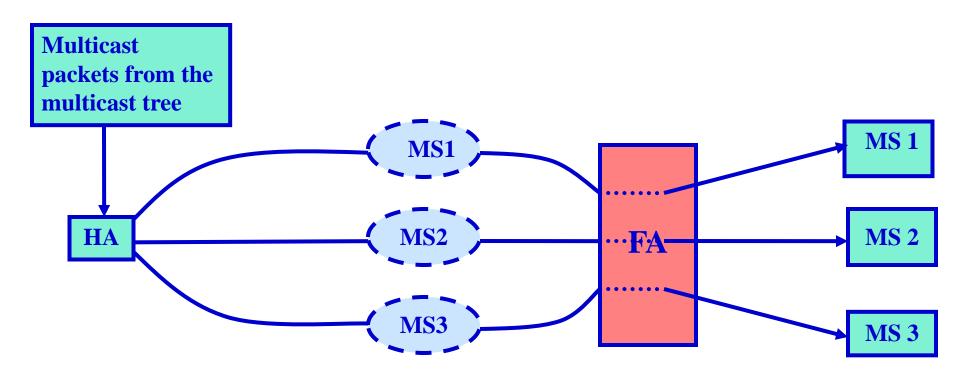




- BT approach prevents data disruption due to the movement of MS
- But causes packet duplication if several MSs of the same HA, that have subscribed to the same multicast group move to same FA
- Also causes Tunnel Convergence Problem, where one FA may have several MSs subscribed to the same group, belonging to different HAs and each HA may forward a packet for its MSs to the same FA



Tunnel Convergence Problem

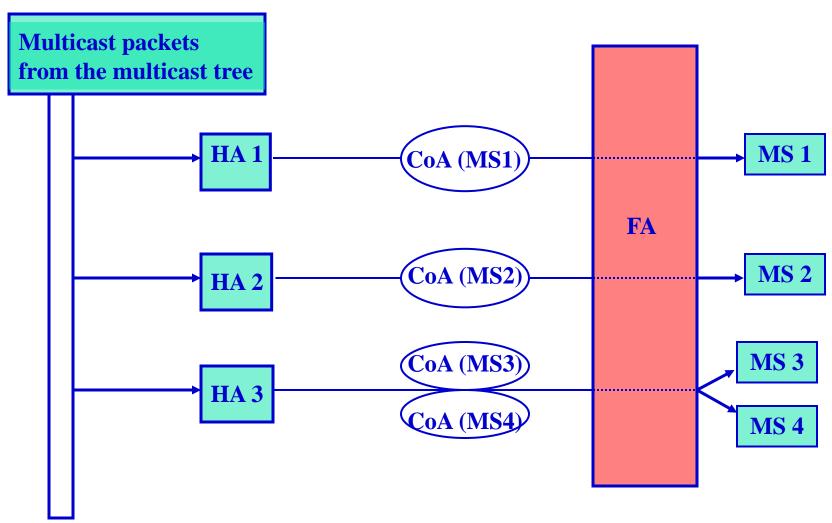




- To overcome Tunnel Convergence Problem, MoM (Mobile Multicast) protocol is proposed wherein the FA selects one of the HAs, called the Designated Multicast Service Provider (DMSP), from the HA List for a particular group
- The remaining HAs do not forward packets to FA




Illustration of MoM Protocol

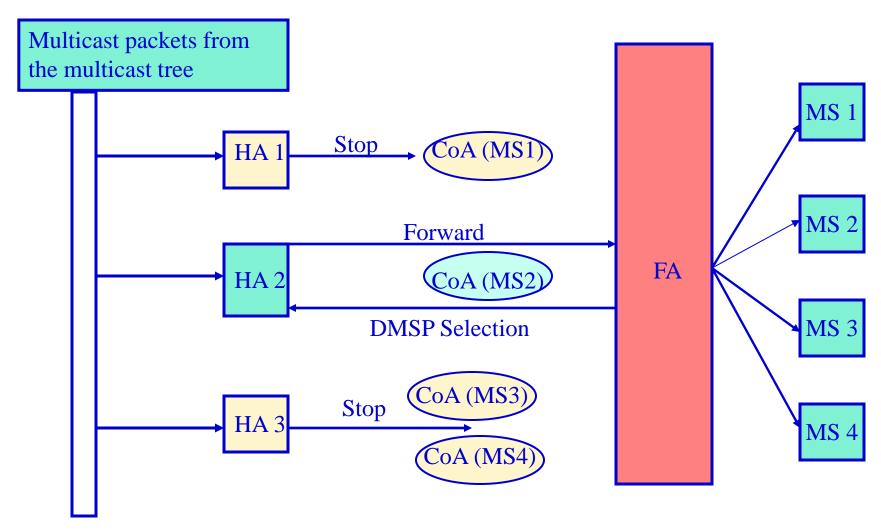




Ultra-Wideband Technology (UWB)

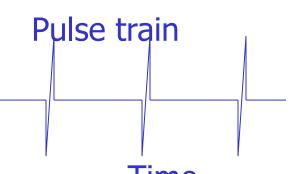

Time
•Pulse-modulation scheme:
one that communicates
information and reduces the
amplitude of the "comblines"

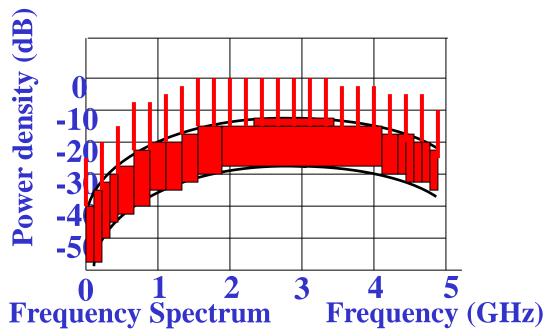

- •A UWB system uses a long sequence of pulses for communication
- •A regular pulse train produces energy spikes (comb-lines) at regular intervals
- •Pulse train carries no information and "comb-lines" interfere with conventional radios



Ultra-Wideband Technology (UWB)

- UWB Radio : Radio System having large bandwidth
 - Bandwidth > 25% of center frequency or > 1GHz
- Wide bandwidth makes it possible to share spectrum with other users with certain cocoverage sense
- Wide band signals are naturally suited for location determination applications



UWB Basics - TM-UWB (Time Modulated Ultra-Wideband)

- Basic element : Ultra short monocycle wavelet
 - Wavelet pulse width between 0.2 and 1.5 nsecs
 - Center frequency between 5 GHz and 600 MHz
 - Pulse-to-pulse interval between 25 and 1000 nsecs
- System uses pulse position modulation
- No Intermediate frequency stage
 - Reduces complexity
- Single bit of information is spread over multiple monocycels



TM-UWB Modulation and DSC-UWB

- Pulse position modulation
 - Positions signal one quarter cycle early or late relative to the nominal PN coded location or pulse polarity
 - Modulation further soothes the spectrum of the signal, thus making the system less detectable
- DSC-UWB (Direct Sequence Code Ultra-Wideband)
 - Wavelet pulse trains at duty cycles approaching that of a sine wave carrier are direct sequence modulated to spread the signal
 - A PN sequence provides spectrum spreading, channelization and modulation



UWB Signal Propagation

- Generally follow a free space propagation law
- Millions of coded pulses transmitted per second
- Emissions below conventional receiver noise floor and across an ultra wide bandwidth
- Very low extant RF signature, providing intrinsically secure transmissions
- Low probability of detection and interception



UWB Applications

- Communications:
 - Noise like spectral characteristics of UWB signals enables secure communication with less detection
 - Suitable for robust in-building communications
- Advanced Radar Sensing:
 - Through the wall radar, terrain mapping radar, ground penetrating radar
- Precision Location and Tracking:
 - Remote, secure and real time tracking system



Difference Between UWB and Spread Spectrum Techniques

- UWB uses an extremely wide band of RF spectrum to transmit more data in a given period of time, which is a time-domain concept
- Spread spectrum technique, including direct sequence spread spectrum or frequency hopping spread spectrum, is a transforming technique in frequency domain




UWB Advantages & Limitations

- UWB radio systems have large bandwidth (> 1 GHz).
- UWB has potential to address today's "spectrum drought"
- Emissions below conventional level
- Single technology with 3 distinct capabilities
- Secure transmission, low probability of interception or detection and anti-jam immunity
- Not appropriate for a WAN (Wide Area Network) deployment such as wireless broadband access
- UWB devices are power limited



Need for Femtocell

- Advanced cellular standards such as 3GPP's UMTS and LTE; 3GPP2's CDMA2000, 1x, EVDO and WiMAX
- High data rate and seamless coverage important objective
- Signal strength is weak inside buildings
- More than 50% voice call and more than 70% data traffic start from an indoor environment
- Easier solution is to deploy some indoor devices serving only the indoor users
- Femtocell Network is an effective way to remedy coverage holes

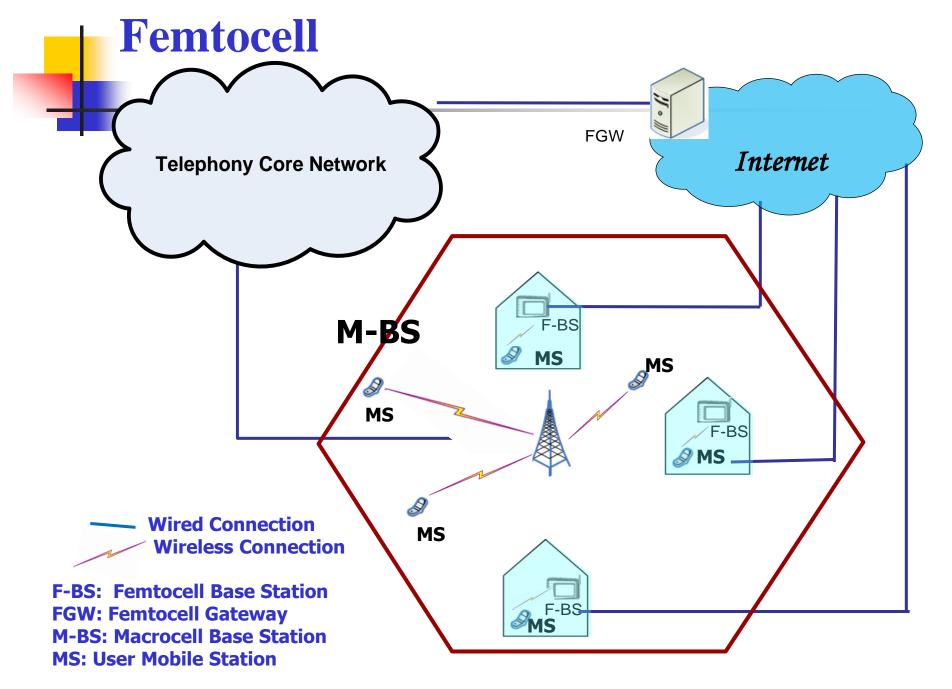

Femtocell Characteristics

- **Femtocell Base Station (F-BS)**
 - Wireless Interface
 - Internet Interface
- Internet Link
- **Femtocell Gateway (FGW)**
- Benefits of Femtocell Network
 - Better and seamless coverage
 - Enhanced capacity
 - Lower transmit power
 - Prolong handset battery life
 - Higher signal-to-interference-noise ratio (SINR)
- Hand off
- Synchronization
- Self-Configuration, Self-Operation and Location Tracking
- Security Issues

Characteri stics	Femtocell	Macrocell	
Air interface	Telecommuni cation standard	Telecommuni cation standard	
Backhaul	Broadband Internet	Telephony network	
Cost	\$200/year	\$60,000/year	
UE	Power consumption low	high	
Radio Range	10-50 meters	300-2000 meters	



Femtocell Characteristics

Characteristics	Femtocell	Macrocell
Air interface	Telecommunica tion standard	Telecommunication standard
Backhaul	Broadband Internet	Telephony network
Cost	\$200/year	\$60,000/year
UE	Power consumption low	high
Radio Range	10-50 meters	300-2000 meters



Comparing F-BS with AP

Characteristics	F-BS	AP
Spectrum	Licensed	Unlicensed
Wireless MAC	Connection-based	Contention-based
Backhaul	Broadband	Broadband
	Internet	Internet
Power	100mW	~1.5 W
Air interface	Telecommunication	802.11a/b/g/n
	standard	
Range	10-50m	35-70m
Service	Primarily voice	Primarily data
Current cost	\$200-\$250	\$50-\$100



Handoff

Three hand off categories:

- Hand-Out: user handset handoff from a Femtocell to a macrocell
- Hand-In: user handset handoff from a Femtocell to a macrocell
- Hand off: user handset handoff from a
 Femtocell to close-by another Femtocell