
## !!! Beware of C12 on I/O board. Make sure you don't short it by ADCIn board !!!

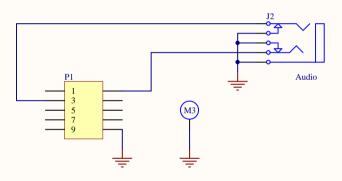

Trim P1 and J2 pins as short as possible to avoid puncture of I/O board. Remove pin1 from P1 socket before soldering.

Spacer board is not required but highly recommended.

Board thickness (both ADCin and Spacer) is 1.2mm

Title	ADC input board for MiSTer			
Size	Number		Revision	1.1
A4				1.1
Date:	20.04.2019	Sheet of		
File:	C:\Work\ \ADCin SchDoc	Drawn By	raelia	

