

PROCEDURE FOR INSERTING KEY BARREL INTO REPLACEMENT STEERING COLUMN

Models:

2002-05 Model Year Focus (excluding ST170)

Summary:

The procedure outlined below should be followed to ensure the Focus steering column is not inadvertently locked when installing the key barrel into the steering column.

Information:

2002-05 Model Year Focus (excluding ST170) steering columns can inadvertently be permanently locked if the correct procedure for installing the key barrel is not followed.

Note: If the steering column is locked with the white spacer removed and no key barrel inserted, the column will be **permanently locked**. The column will then need to be scrapped.

Follow the procedure below to ensure the column does not become locked:

1. Confirm the ignition switch spindle is in the "accessories" position (as per Figure 1). When the ignition switch spindle is the accessories position the column is able to be turned freely.

If the ignition switch spindle is in the "locked" position (as per Figure 2), depress the spindle and turn the spindle clockwise to the "accessories" position. **Do not** remove the white spacer when the spindle is in the "locked" position as the anti-theft locking mechanism will be triggered and the column will be permanently locked.

Figure 1: Ignition switch spindle is in the "accessories" position



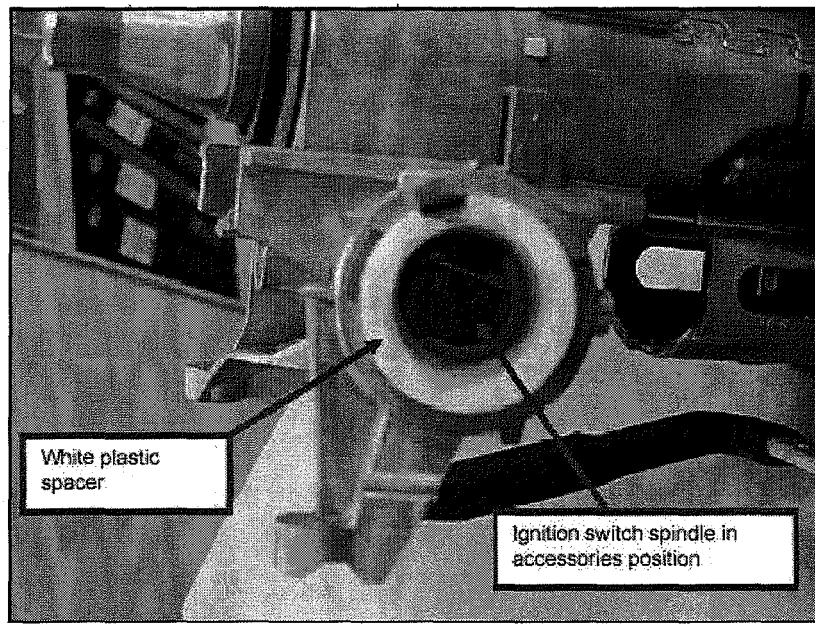


Figure 2: Ignition switch spindle is in the "locked" position – **DO NOT** remove white spacer whilst spindle is in "locked" position

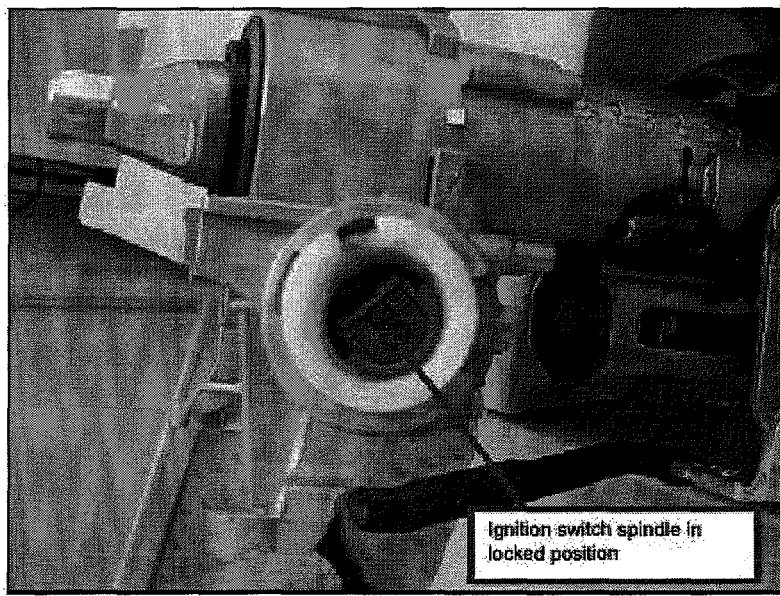

2. With the spindle in the "accessories" position, carefully rotate the white plastic spacer in the clockwise direction. Whilst rotating the white plastic spacer, watch the ignition switch spindle and ensure that the spindle is not rotated out of the "accessories" position. Rotate the white plastic spacer until it hits the stop position, as per Figure 3.

Figure 3: White spacer has been rotated clockwise until stop position. Spindle is now in correct position to be pulled out from steering column key barrel slot.

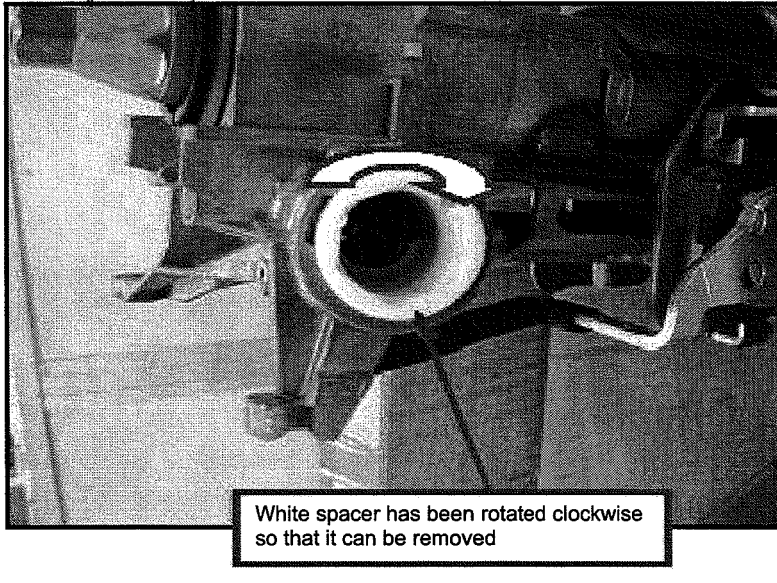

3. Carefully pull the white plastic spacer out from key barrel slot.
4. Confirm that the key barrel to be inserted into the column is in the "accessories" position. Carefully insert key barrel into the key barrel slot in the steering column.
5. When the key barrel is correctly inserted the locking pin in the key barrel will pop into the hole provided in the steering column lock assembly.
6. Confirm that column is able to be turned freely after inserting the key barrel.

(3)

(4)

(5)