



39

39

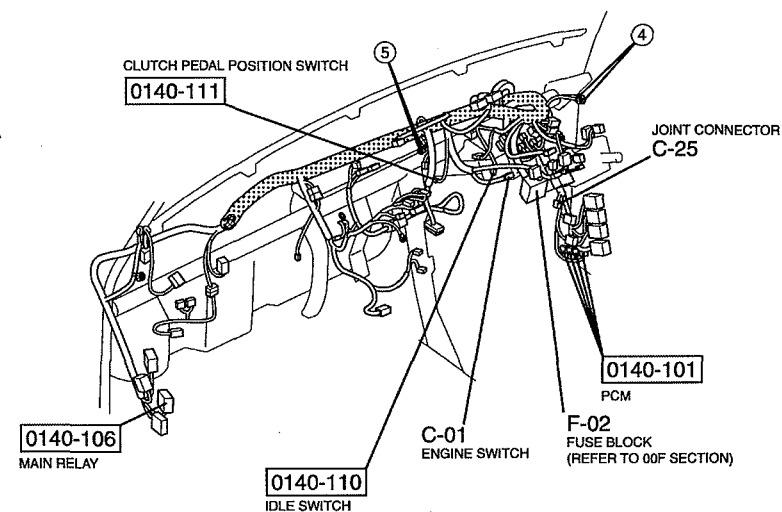


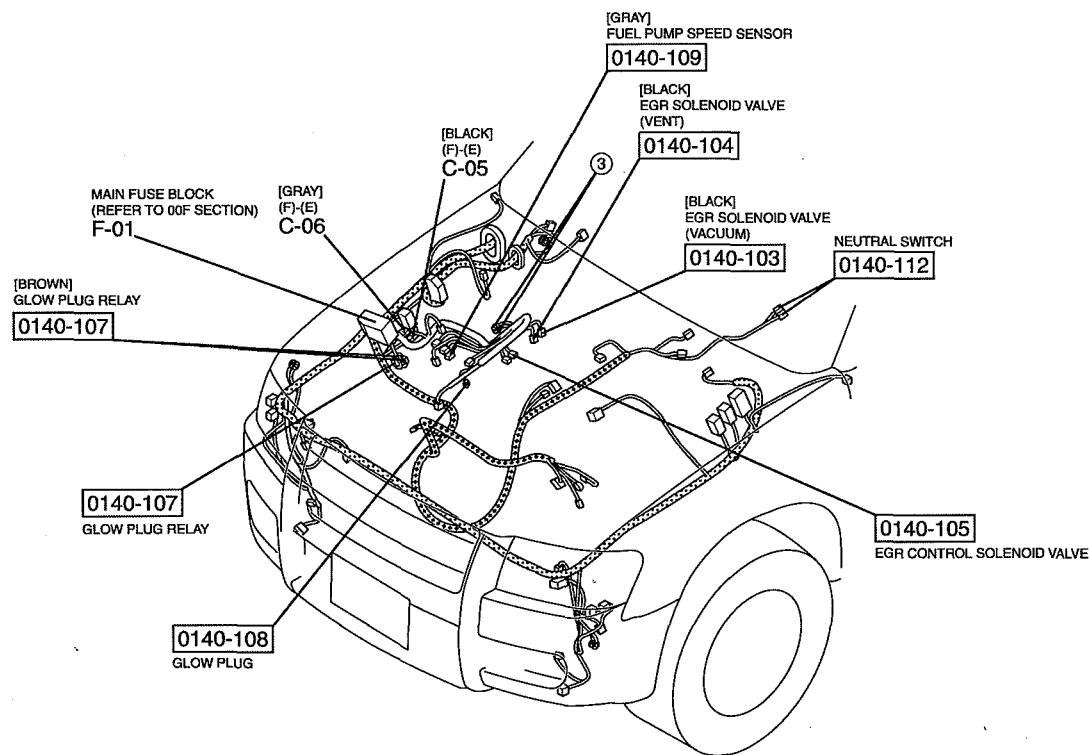



CONTROL SYSTEM (WL-3)

0140-1b

* ... VACANT
... NOT USED

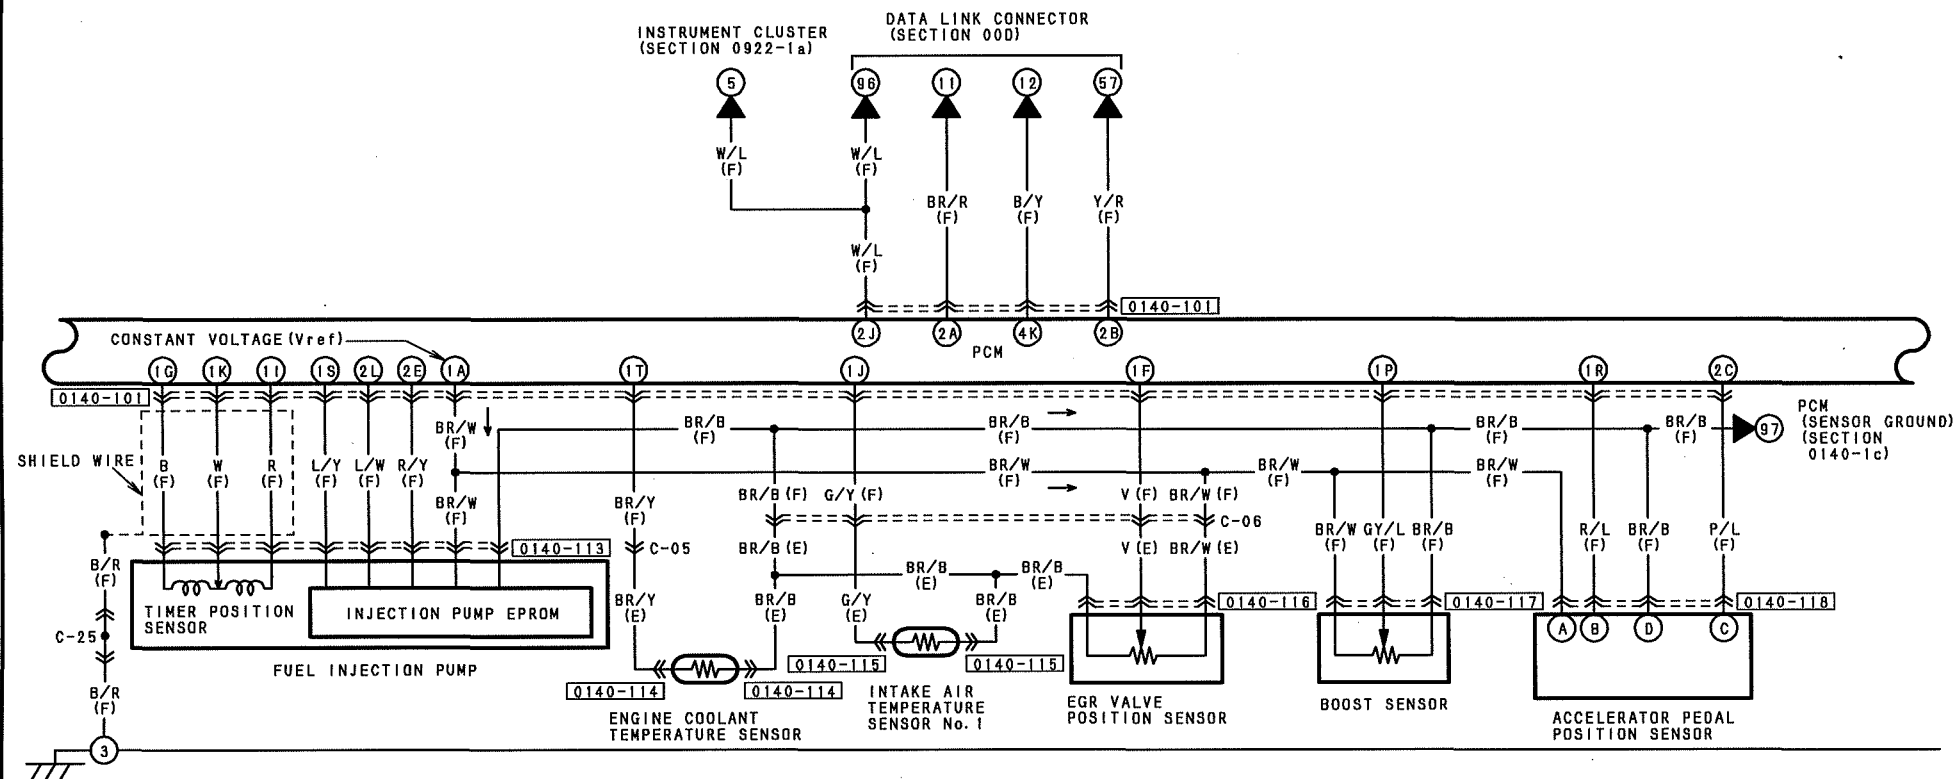


0140-101 PCM (F)			0140-114 ENGINE COOLANT TEMPERATURE SENSOR (E)			0140-115 INTAKE AIR TEMPERATURE SENSOR No. 1 (E)																																																																																																																										
<table><tr><td>1U</td><td>1S</td><td>1Q</td><td>1O</td><td>1M</td><td>1K</td><td>1I</td><td>1G</td><td>1E</td><td>1C</td><td>1A</td></tr><tr><td>B/Y</td><td>L/Y</td><td>W</td><td>B</td><td>R</td><td>W</td><td>R</td><td>B</td><td>*</td><td>L/R</td><td>BR/W</td></tr><tr><td>B/W</td><td>BR/Y</td><td>R/L</td><td>GY/L</td><td>G/R</td><td>GY/B</td><td>G/Y</td><td>P/B</td><td>V</td><td>G/B</td><td>BR/B</td></tr><tr><td>1V</td><td>1T</td><td>1R</td><td>1P</td><td>1N</td><td>1L</td><td>1J</td><td>1H</td><td>1F</td><td>1D</td><td>1B</td></tr></table>			1U	1S	1Q	1O	1M	1K	1I	1G	1E	1C	1A	B/Y	L/Y	W	B	R	W	R	B	*	L/R	BR/W	B/W	BR/Y	R/L	GY/L	G/R	GY/B	G/Y	P/B	V	G/B	BR/B	1V	1T	1R	1P	1N	1L	1J	1H	1F	1D	1B	<table><tr><td>2K</td><td>2I</td><td>2G</td><td>2E</td><td>2C</td><td>2A</td></tr><tr><td>P</td><td>*</td><td>*</td><td>R/Y</td><td>P/L</td><td>BR/R</td></tr><tr><td>L/W</td><td>W/L</td><td>*</td><td>*</td><td>L</td><td>Y/R</td></tr><tr><td>2L</td><td>2J</td><td>2H</td><td>2F</td><td>2D</td><td>2B</td></tr></table>			2K	2I	2G	2E	2C	2A	P	*	*	R/Y	P/L	BR/R	L/W	W/L	*	*	L	Y/R	2L	2J	2H	2F	2D	2B	<table><tr><td>4Y</td><td>4W</td><td>4U</td><td>4S</td><td>4Q</td><td>4O</td><td>4M</td><td>4K</td><td>4I</td><td>4G</td><td>4E</td><td>4C</td><td>4A</td></tr><tr><td>P</td><td>LG/B</td><td>L/B</td><td>GY</td><td>LG/R</td><td>*</td><td>*</td><td>B/Y</td><td>W/R</td><td>*</td><td>G/B</td><td>B/L</td><td>B/R</td></tr><tr><td>#G/O</td><td>B/L</td><td>BR</td><td>Y/G</td><td>*</td><td>*</td><td>*</td><td>R/B</td><td>*</td><td>*</td><td>*</td><td>B/L</td><td>B/R</td></tr><tr><td>4Z</td><td>4X</td><td>4V</td><td>4T</td><td>4R</td><td>4P</td><td>4N</td><td>4L</td><td>4J</td><td>4H</td><td>4F</td><td>4D</td><td>4B</td></tr></table>			4Y	4W	4U	4S	4Q	4O	4M	4K	4I	4G	4E	4C	4A	P	LG/B	L/B	GY	LG/R	*	*	B/Y	W/R	*	G/B	B/L	B/R	#G/O	B/L	BR	Y/G	*	*	*	R/B	*	*	*	B/L	B/R	4Z	4X	4V	4T	4R	4P	4N	4L	4J	4H	4F	4D	4B
1U	1S	1Q	1O	1M	1K	1I	1G	1E	1C	1A																																																																																																																						
B/Y	L/Y	W	B	R	W	R	B	*	L/R	BR/W																																																																																																																						
B/W	BR/Y	R/L	GY/L	G/R	GY/B	G/Y	P/B	V	G/B	BR/B																																																																																																																						
1V	1T	1R	1P	1N	1L	1J	1H	1F	1D	1B																																																																																																																						
2K	2I	2G	2E	2C	2A																																																																																																																											
P	*	*	R/Y	P/L	BR/R																																																																																																																											
L/W	W/L	*	*	L	Y/R																																																																																																																											
2L	2J	2H	2F	2D	2B																																																																																																																											
4Y	4W	4U	4S	4Q	4O	4M	4K	4I	4G	4E	4C	4A																																																																																																																				
P	LG/B	L/B	GY	LG/R	*	*	B/Y	W/R	*	G/B	B/L	B/R																																																																																																																				
#G/O	B/L	BR	Y/G	*	*	*	R/B	*	*	*	B/L	B/R																																																																																																																				
4Z	4X	4V	4T	4R	4P	4N	4L	4J	4H	4F	4D	4B																																																																																																																				
0140-113 FUEL INJECTION PUMP (F)			0140-116 EGR VALVE POSITION SENSOR (E)			0140-117 BOOST SENSOR (F)			0140-118 ACCELERATOR PEDAL POSITION SENSOR (F)																																																																																																																							

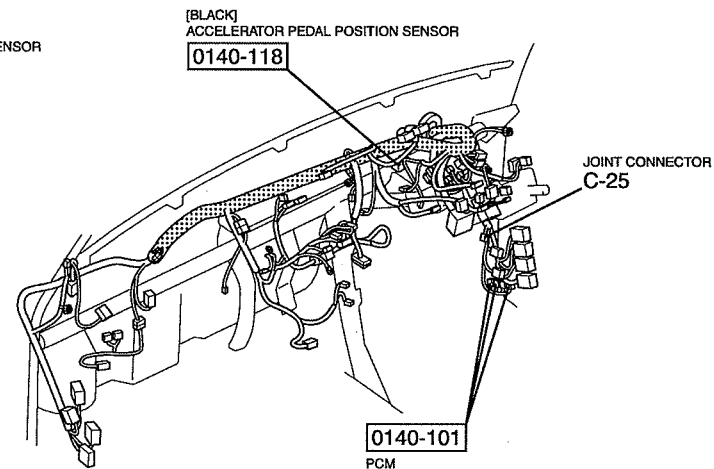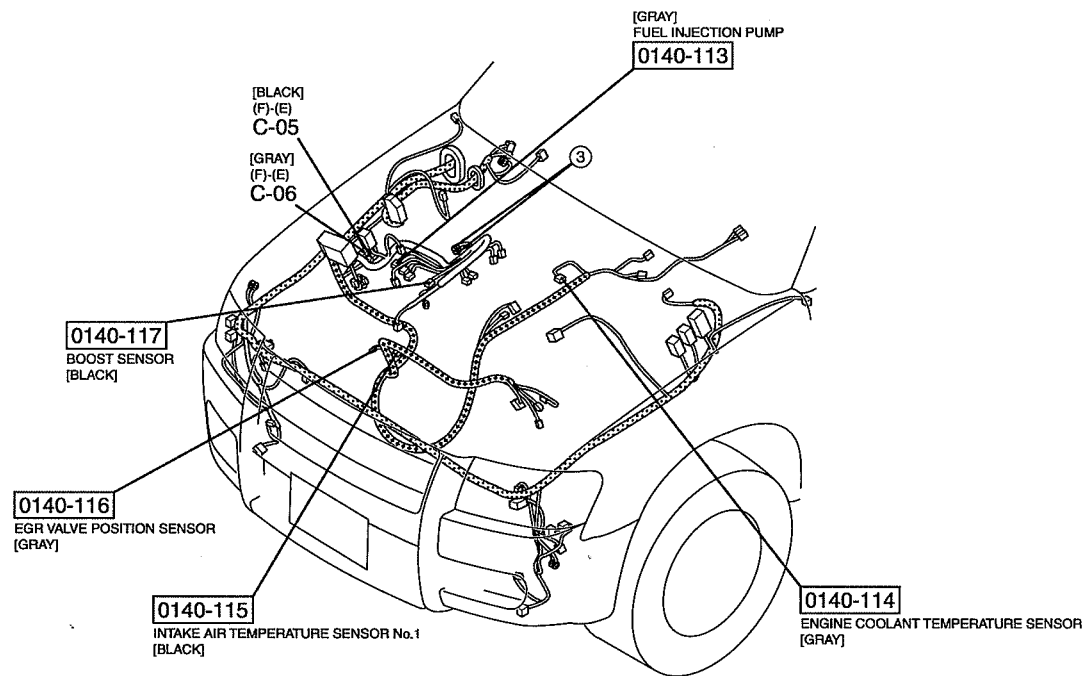



CONTROL SYSTEM (WL-3)

0140-1c

* ... VACANT
... NOT USED

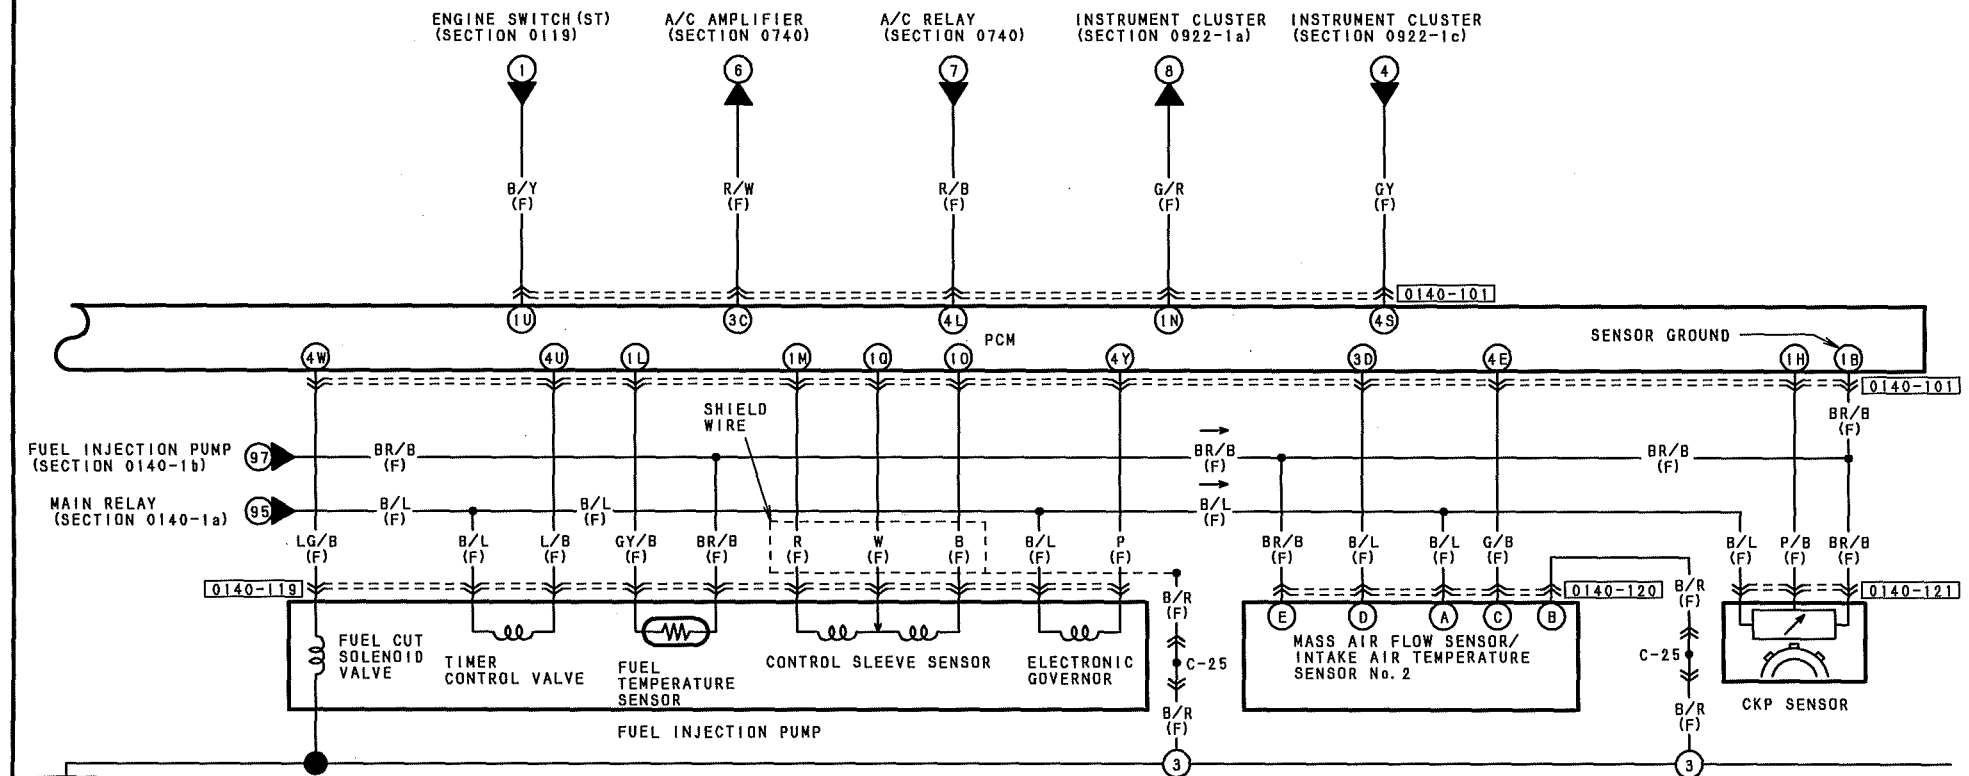


0140-101	PCM (F)	<table><tr><td>1U</td><td>1S</td><td>1Q</td><td>10</td><td>1M</td><td>1K</td><td>1I</td><td>1G</td><td>1E</td><td>1C</td><td>1A</td></tr><tr><td>B/Y</td><td>L/Y</td><td>W</td><td>B</td><td>R</td><td>W</td><td>R</td><td>B</td><td>*</td><td>L/R</td><td>BR/W</td></tr><tr><td>B/W</td><td>BR/Y</td><td>R/L</td><td>GY/L</td><td>G/R</td><td>GY/B</td><td>G/Y</td><td>P/B</td><td>V</td><td>G/B</td><td>BR/B</td></tr><tr><td>1V</td><td>1T</td><td>1R</td><td>1P</td><td>1N</td><td>1L</td><td>1J</td><td>1H</td><td>1F</td><td>1D</td><td>1B</td></tr></table>	1U	1S	1Q	10	1M	1K	1I	1G	1E	1C	1A	B/Y	L/Y	W	B	R	W	R	B	*	L/R	BR/W	B/W	BR/Y	R/L	GY/L	G/R	GY/B	G/Y	P/B	V	G/B	BR/B	1V	1T	1R	1P	1N	1L	1J	1H	1F	1D	1B	<table><tr><td>30</td><td>3M</td><td>3K</td><td>3I</td><td>3G</td><td>3E</td><td>3A</td></tr><tr><td>G/W</td><td>*</td><td>*</td><td>*</td><td>*</td><td>*</td><td>R/W</td></tr><tr><td>*</td><td>*</td><td>*</td><td>*</td><td>*</td><td>*</td><td>B/L</td></tr><tr><td>3P</td><td>3N</td><td>3L</td><td>3J</td><td>3H</td><td>3F</td><td>3D</td></tr></table>	30	3M	3K	3I	3G	3E	3A	G/W	*	*	*	*	*	R/W	*	*	*	*	*	*	B/L	3P	3N	3L	3J	3H	3F	3D	<table><tr><td>4Y</td><td>4W</td><td>4U</td><td>4S</td><td>4Q</td><td>4O</td><td>4M</td><td>4K</td><td>4I</td><td>4G</td><td>4E</td><td>4C</td><td>4A</td></tr><tr><td>P</td><td>LG/B</td><td>L/B</td><td>GY</td><td>LG/R</td><td>*</td><td>*</td><td>B/Y</td><td>W/R</td><td>*</td><td>G/B</td><td>B/L</td><td>B/R</td></tr><tr><td>#G/O</td><td>B/L</td><td>BR</td><td>Y/G</td><td>*</td><td>*</td><td>*</td><td>R/B</td><td>*</td><td>*</td><td>*</td><td>B/L</td><td>B/R</td></tr><tr><td>4Z</td><td>4X</td><td>4V</td><td>4T</td><td>4R</td><td>4P</td><td>4N</td><td>4L</td><td>4J</td><td>4H</td><td>4F</td><td>4D</td><td>4B</td></tr></table>	4Y	4W	4U	4S	4Q	4O	4M	4K	4I	4G	4E	4C	4A	P	LG/B	L/B	GY	LG/R	*	*	B/Y	W/R	*	G/B	B/L	B/R	#G/O	B/L	BR	Y/G	*	*	*	R/B	*	*	*	B/L	B/R	4Z	4X	4V	4T	4R	4P	4N	4L	4J	4H	4F	4D	4B
1U	1S	1Q	10	1M	1K	1I	1G	1E	1C	1A																																																																																																																						
B/Y	L/Y	W	B	R	W	R	B	*	L/R	BR/W																																																																																																																						
B/W	BR/Y	R/L	GY/L	G/R	GY/B	G/Y	P/B	V	G/B	BR/B																																																																																																																						
1V	1T	1R	1P	1N	1L	1J	1H	1F	1D	1B																																																																																																																						
30	3M	3K	3I	3G	3E	3A																																																																																																																										
G/W	*	*	*	*	*	R/W																																																																																																																										
*	*	*	*	*	*	B/L																																																																																																																										
3P	3N	3L	3J	3H	3F	3D																																																																																																																										
4Y	4W	4U	4S	4Q	4O	4M	4K	4I	4G	4E	4C	4A																																																																																																																				
P	LG/B	L/B	GY	LG/R	*	*	B/Y	W/R	*	G/B	B/L	B/R																																																																																																																				
#G/O	B/L	BR	Y/G	*	*	*	R/B	*	*	*	B/L	B/R																																																																																																																				
4Z	4X	4V	4T	4R	4P	4N	4L	4J	4H	4F	4D	4B																																																																																																																				
0140-119	FUEL INJECTION PUMP (F)	<table><tr><td>*</td><td>*</td><td>B</td><td>LG/B</td></tr><tr><td>L/B</td><td>BR/B</td><td>R</td><td>GY/B</td></tr><tr><td>B/L</td><td>W</td><td>B/L</td><td>P</td></tr></table> C I	*	*	B	LG/B	L/B	BR/B	R	GY/B	B/L	W	B/L	P	0140-120	MASS AIR FLOW SENSOR/INTAKE AIR TEMPERATURE SENSOR No. 2 (F)	<table><tr><td>BR/B</td><td>B/L</td><td>G/B</td><td>B/R</td><td>B/L</td></tr></table> E D C B A	BR/B	B/L	G/B	B/R	B/L	0140-121	CKP SENSOR (F)	<table><tr><td>B/L</td><td>P/B</td><td>BR/B</td></tr></table>	B/L	P/B	BR/B																																																																																																				
*	*	B	LG/B																																																																																																																													
L/B	BR/B	R	GY/B																																																																																																																													
B/L	W	B/L	P																																																																																																																													
BR/B	B/L	G/B	B/R	B/L																																																																																																																												
B/L	P/B	BR/B																																																																																																																														

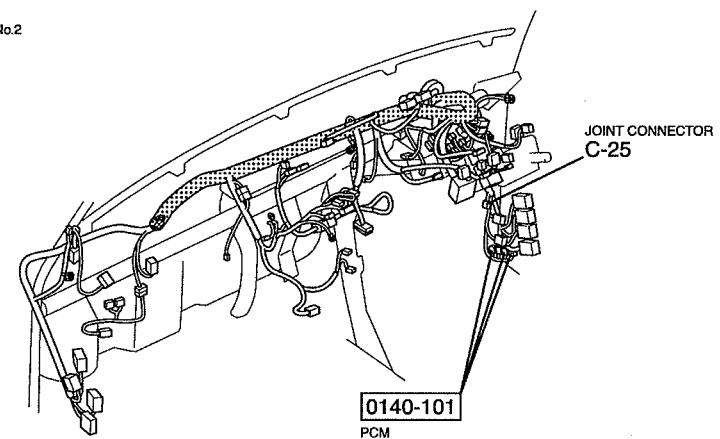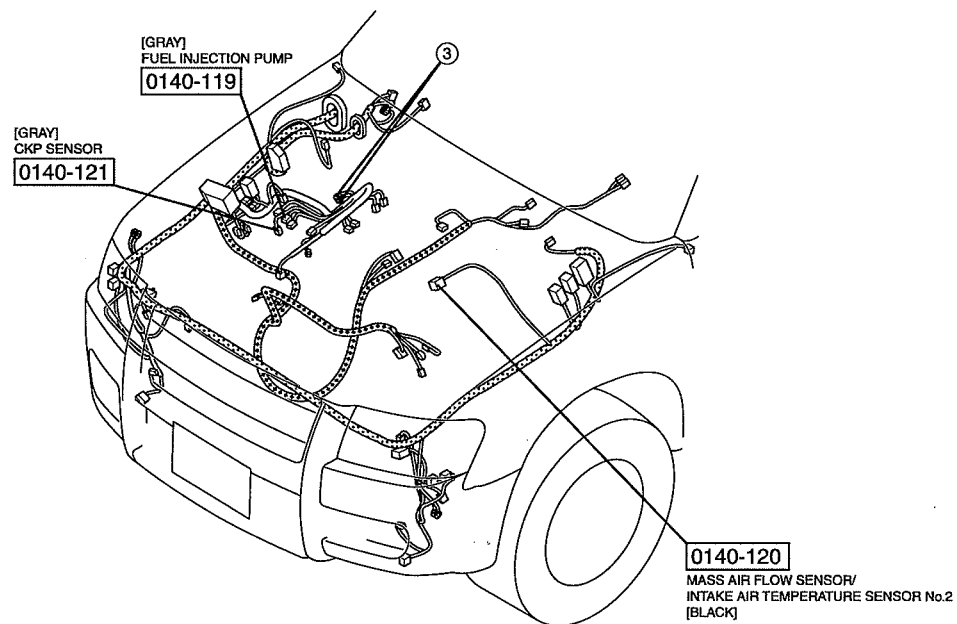




CONTROL SYSTEM (WL-C, WE-C)

0140-2a

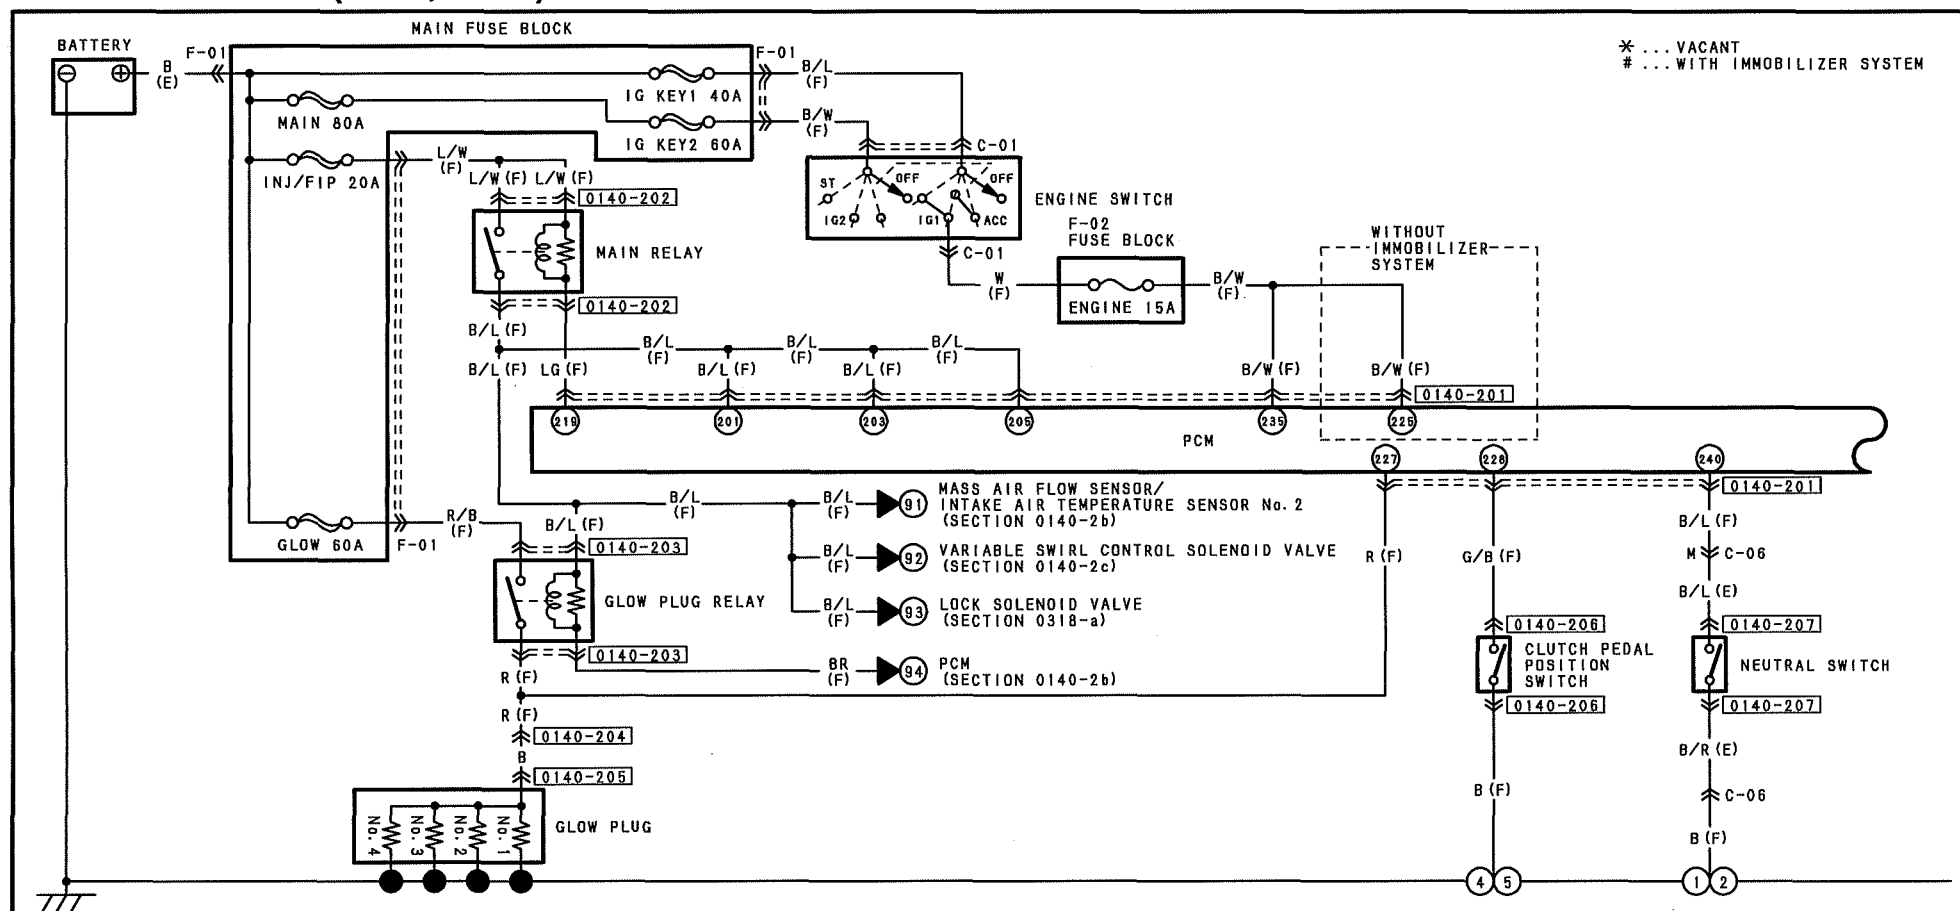

* ... VACANT
... WITH IMMOBILIZER SYSTEM

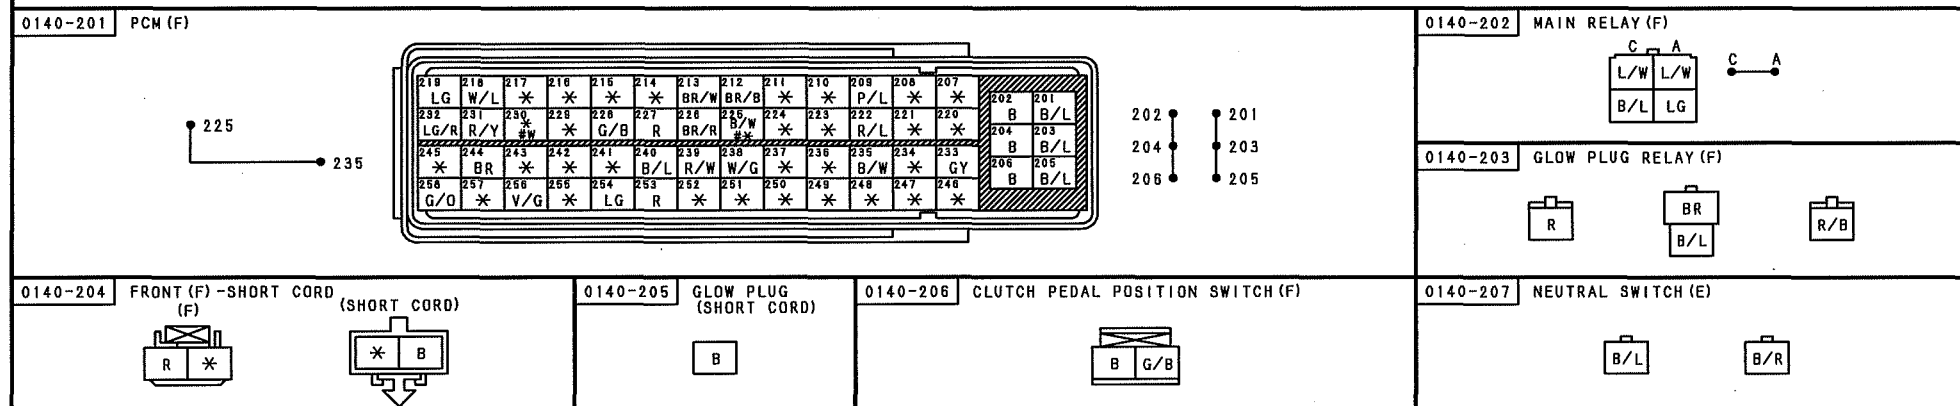


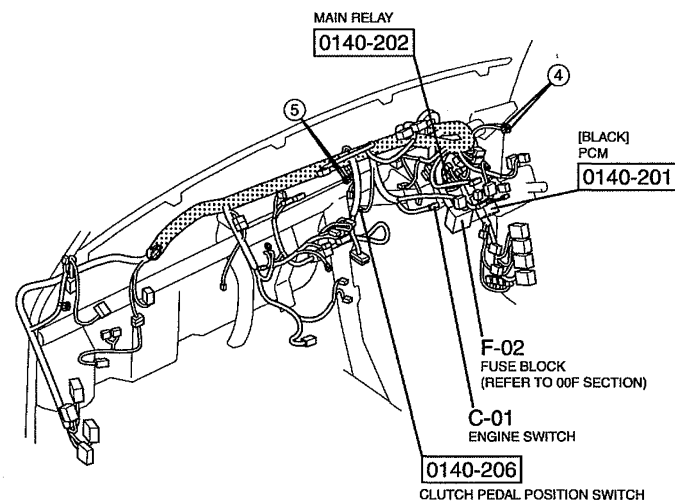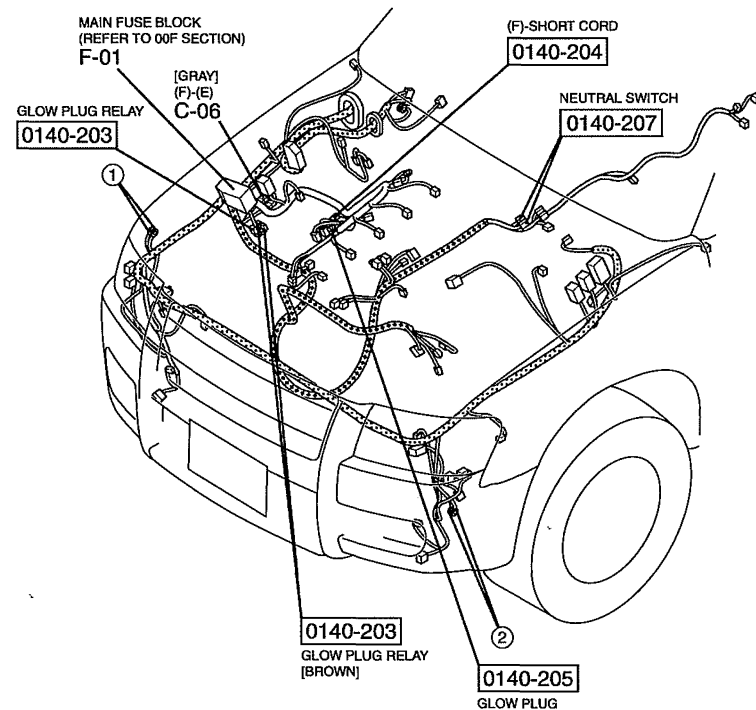

CONTROL SYSTEM (WL-C, WE-C)

0140-2b


* ... VACANT

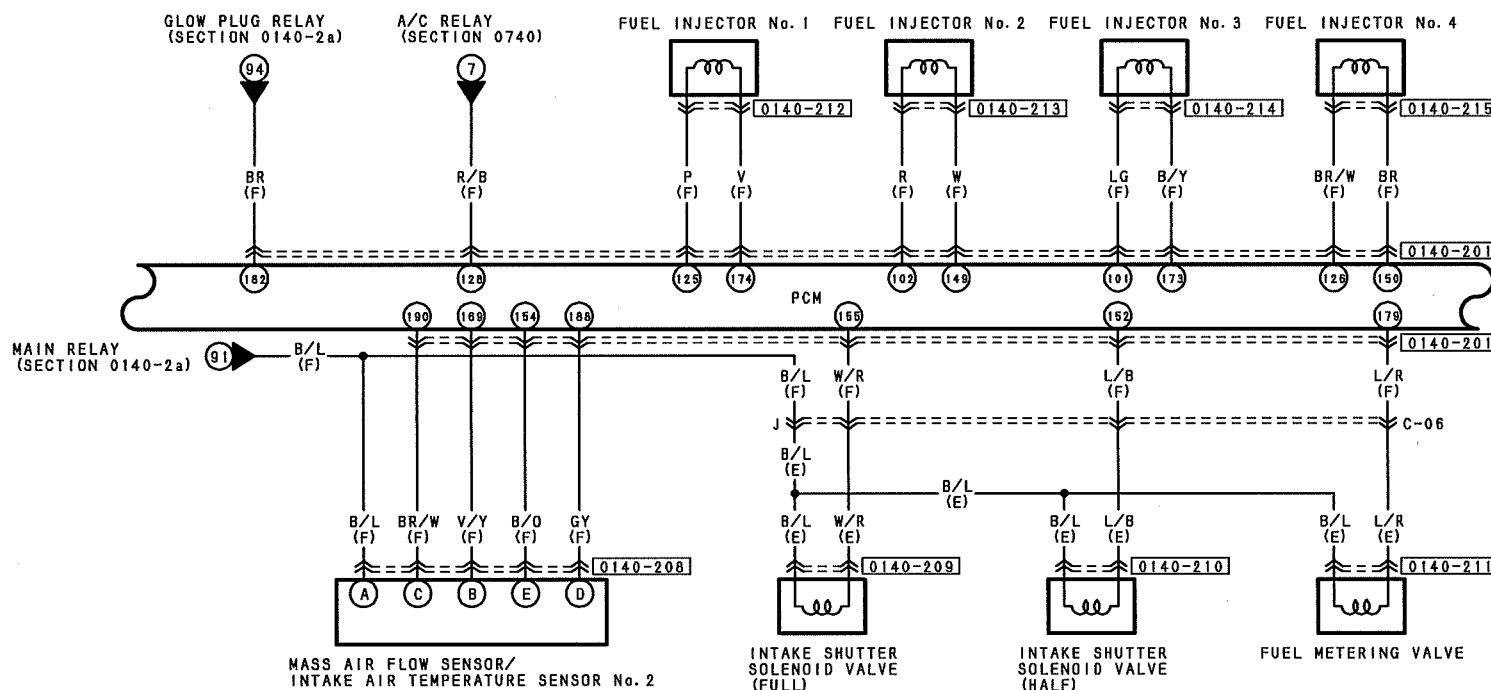

0140-201 PCM (F)

124	123	122	121	120	119	118	117	116	115	114	113	112	111	110	109	108	107	106	105	104	103	102	101
*	*	*	*	*	*	*	*	B/L	L/Y	Y	*	*	B/Y	R/G	LG/R	*	*	L/W	*	*	*	R	LG
148	147	146	145	144	143	142	141	140	139	138	137	136	135	134	133	132	131	130	129	128	127	126	125
*	*	*	*	*	*	*	*	GY/L	W/L	*	*	GY/R	*	LG/B	*	V/R	*	*	B/W	R/B	*	BR/W	P
172	171	170	169	168	167	166	165	164	163	162	161	160	159	158	157	156	155	154	153	152	151	150	149
*	P	W	V/Y	*	L/O	*	*	*	*	G/W	G/Y	*	BR/W	B/O	*	L/B	*	BR	W				
196	195	194	193	192	191	190	189	188	187	186	185	184	183	182	181	180	179	178	177	176	175	174	173
*	V	BR	L	G	O	BR/W	R/Y	GY	*	*	R/G	G/R	*	BR	W/G	*	L/R	Y/B	R/W	LG/B	*	V	B/Y


0140-208 MASS AIR FLOW SENSOR/INTAKE AIR TEMPERATURE SENSOR No. 2 (F)




0140-209 INTAKE SHUTTER SOLENOID VALVE (FULL) (E)




0140-210 INTAKE SHUTTER SOLENOID VALVE (HALF) (E)




0140-211 FUEL METERING VALVE (E)




0140-212 FUEL INJECTOR No. 1 (F)




0140-213 FUEL INJECTOR No. 2 (F)





0140-214 FUEL INJECTOR No. 3 (F)




0140-215 FUEL INJECTOR No. 4 (F)



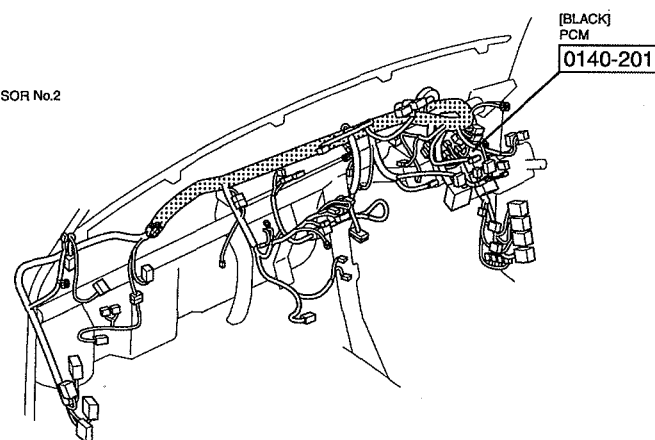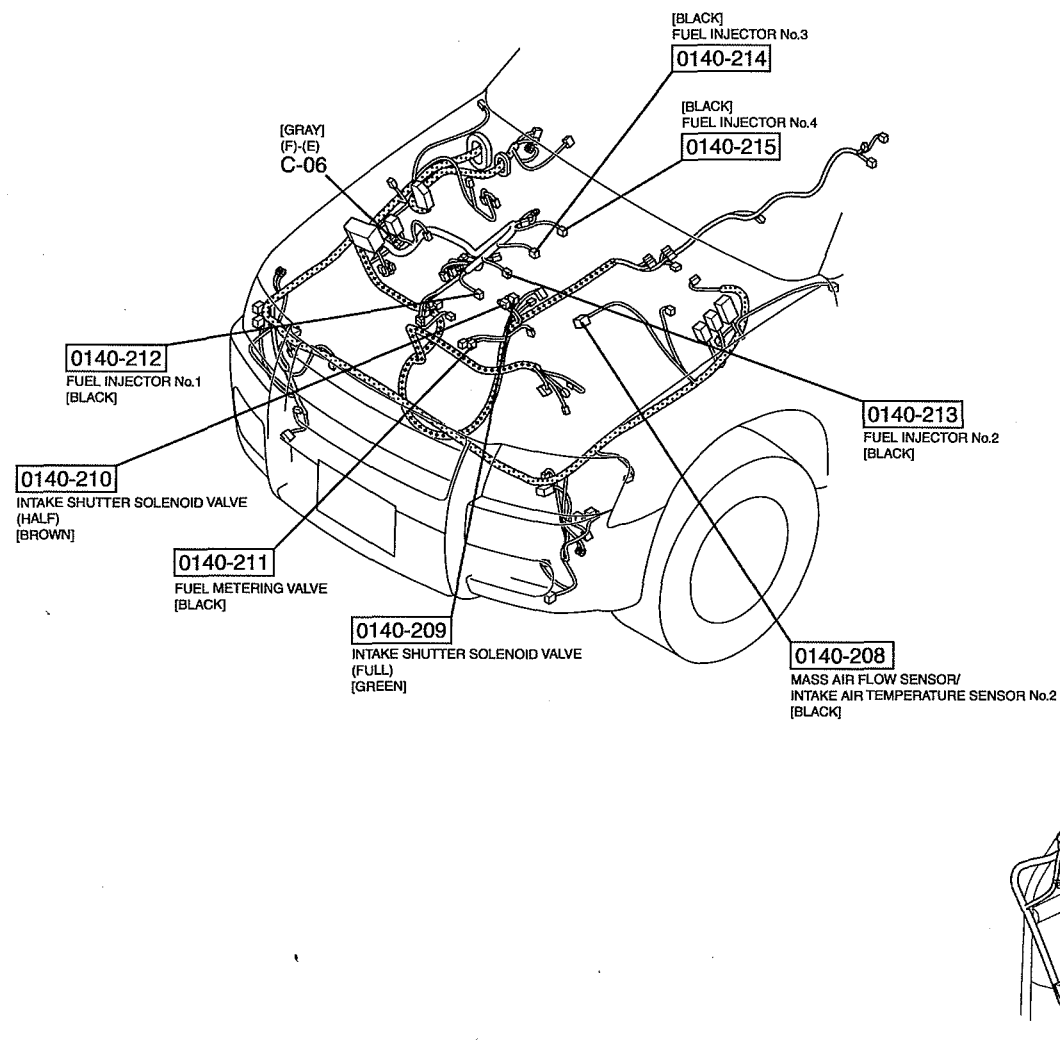


* ... VACANT

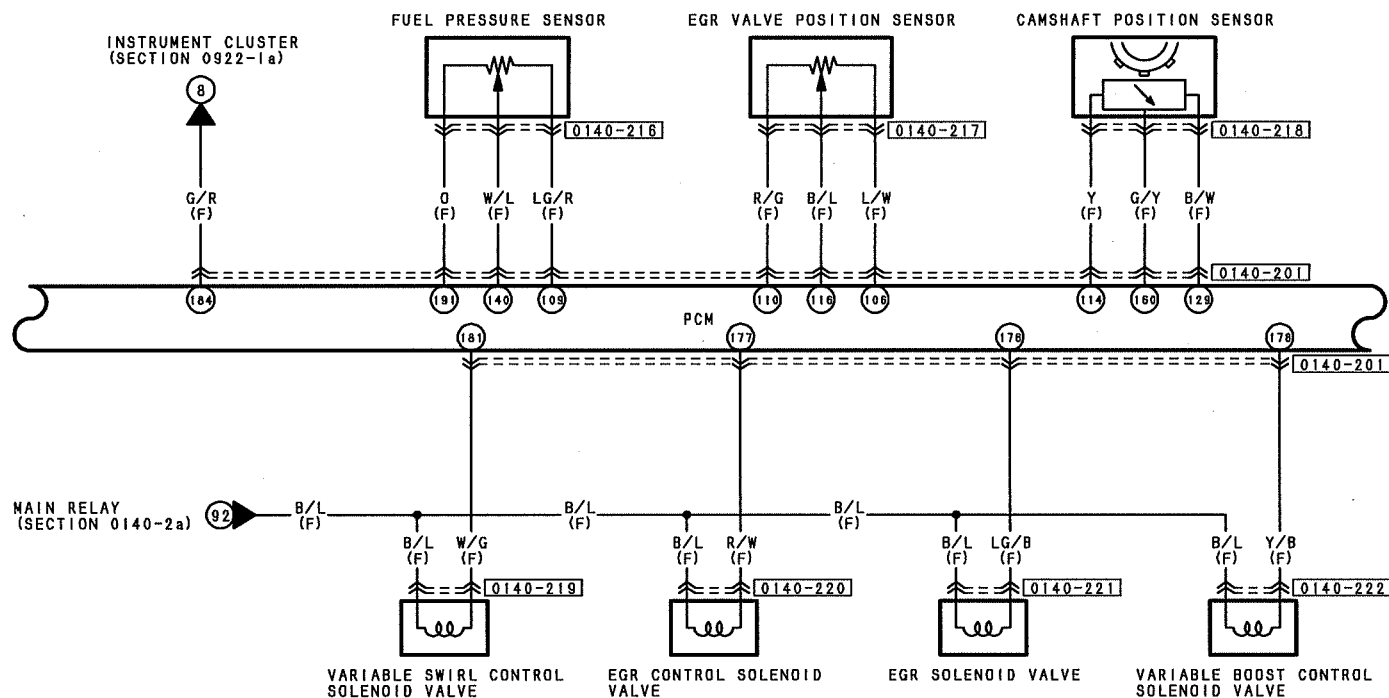


0140-201 PCM (F)

124	123	122	121	120	119	118	117	116	115	114	113	112	111	110	109	108	107	106	105	104	103	102	101
*	*	*	*	*	*	*	*	B/L	L/Y	Y	*	*	B/Y	R/G	LG/R	*	*	L/W	*	*	*	R	LG
148	147	146	145	144	143	142	141	140	139	138	137	136	135	134	133	132	131	130	129	128	127	126	125
*	*	*	*	*	*	*	*	GY/L	W/L	*	*	GY/R	LG/B	*	V/R	*	*	B/W	R/B	*	BR/W	P	
172	171	170	169	168	167	166	165	164	163	162	161	160	159	158	157	156	155	154	153	152	151	150	149
*	P	W	V/Y	*	L/O	*	*	*	*	G/W	G/Y	*	*	*	BR/Y	W/R	B/O	*	L/B	*	BR	W	
196	195	194	193	192	191	190	189	188	187	186	185	184	183	182	181	180	179	178	177	176	175	174	173
*	V	BR	L	G	O	BR/W	R/Y	GY	*	*	R/G	G/R	*	BR	W/G	*	L/R	Y/B	R/W	LG/B	*	V	B/Y


0140-216 FUEL PRESSURE SENSOR (F)



0140-217 EGR VALVE POSITION SENSOR (F)



0140-218 CAMSHAFT POSITION SENSOR (F)




0140-219 VARIABLE SWIRL CONTROL SOLENOID VALVE (F)




0140-220 EGR CONTROL SOLENOID VALVE (F)




0140-221 EGR SOLENOID VALVE (F)




0140-222 VARIABLE BOOST CONTROL SOLENOID VALVE (F)



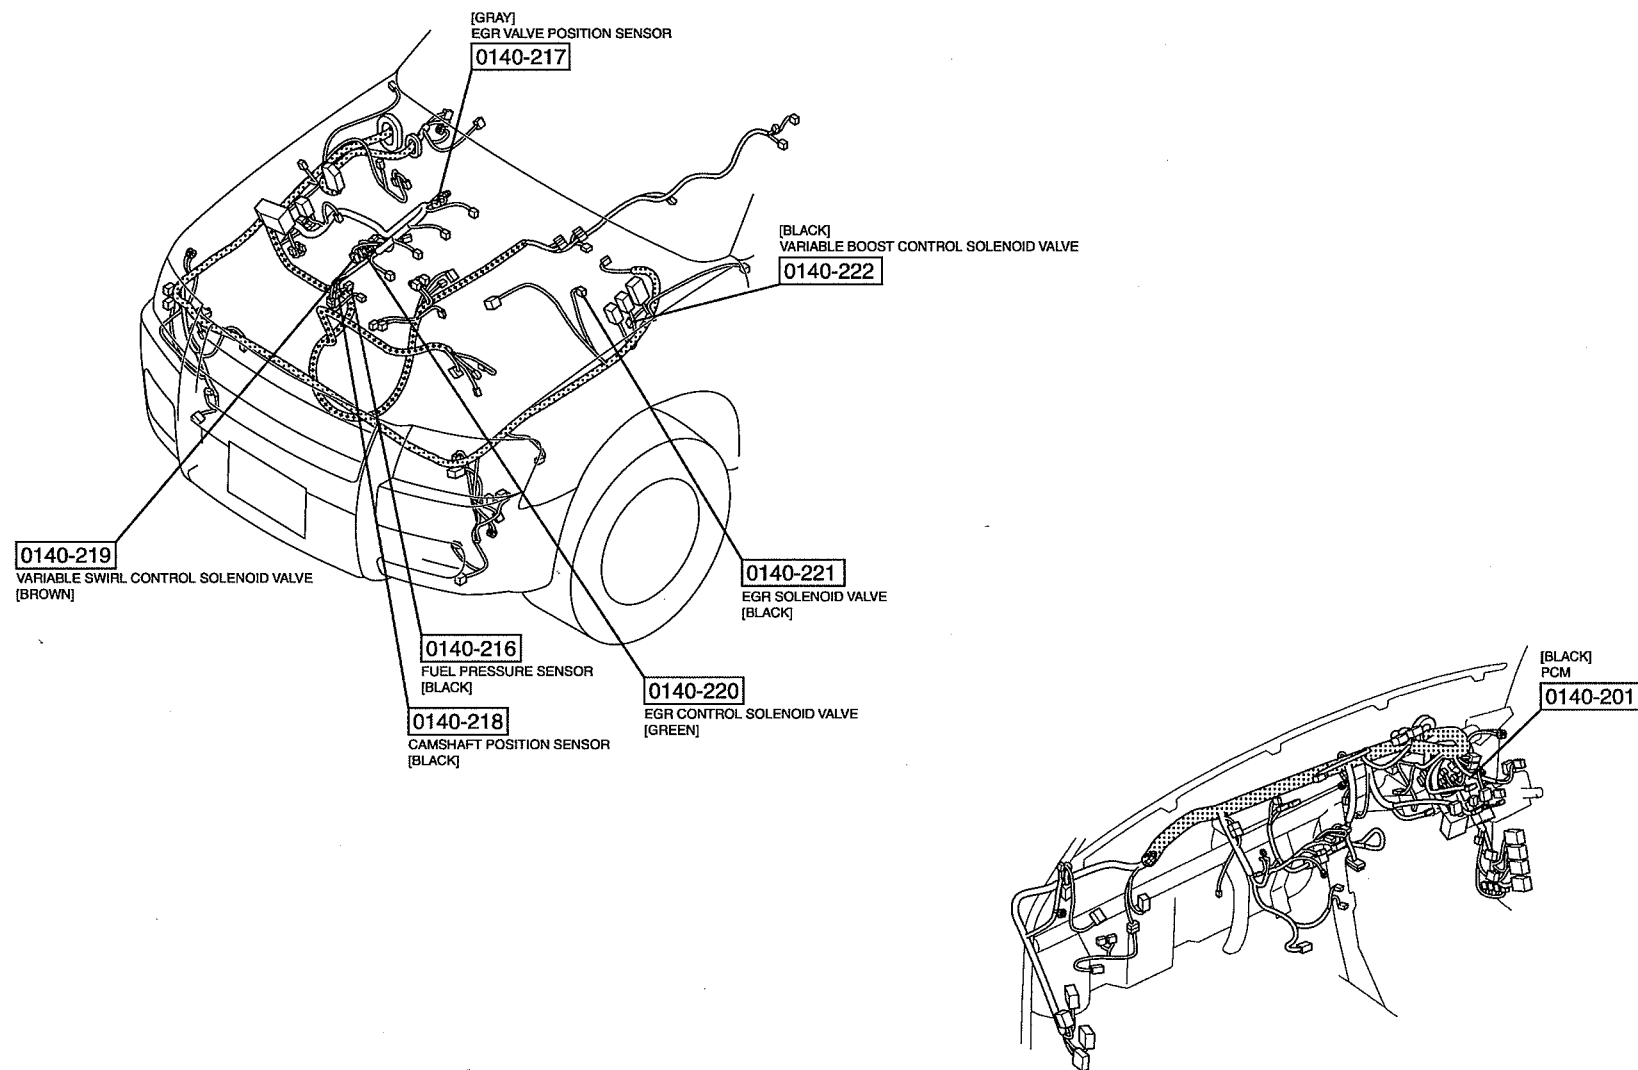


* ... VACANT

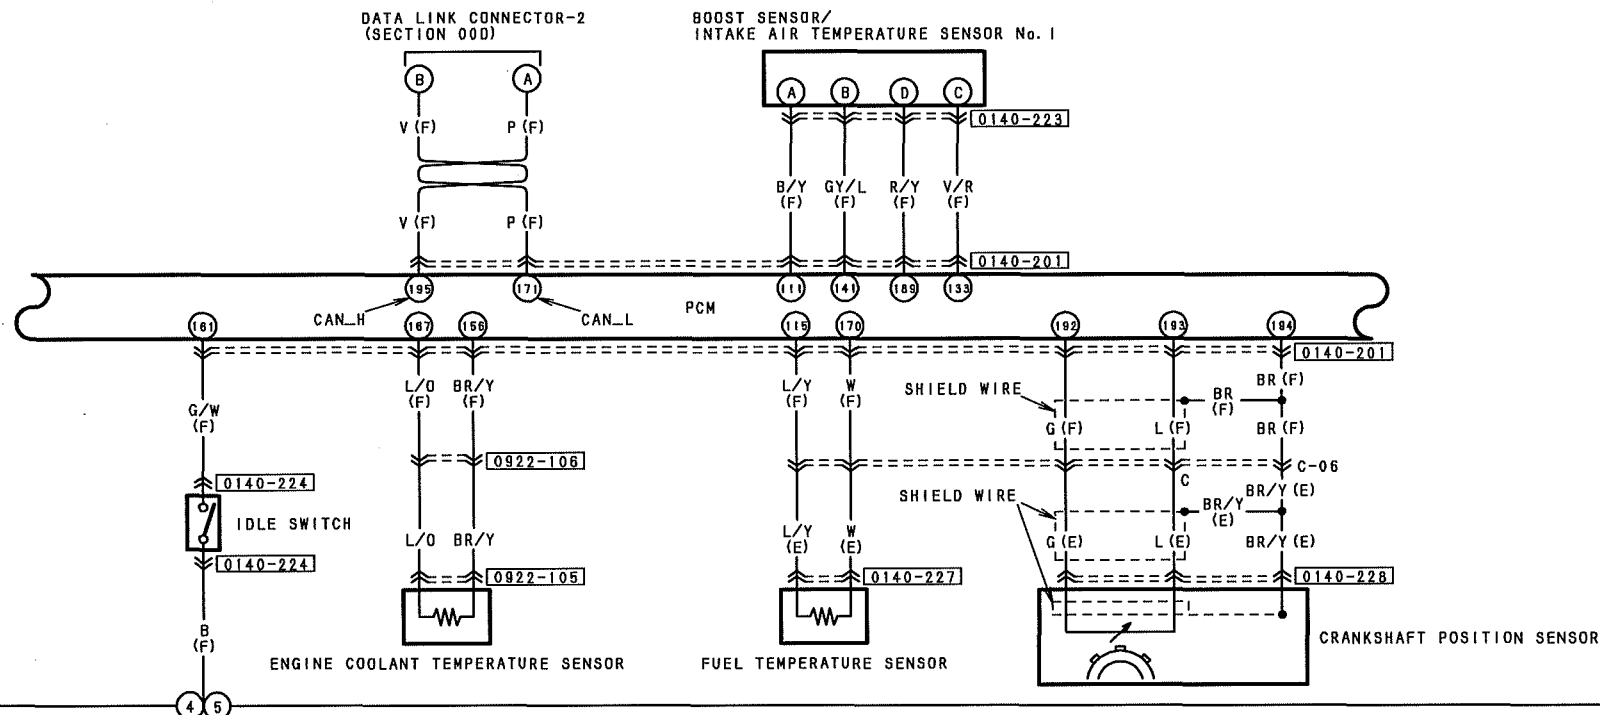


0140-201 PCM (F)

124	123	122	121	120	119	118	117	116	115	114	113	112	111	110	109	108	107	106	105	104	103	102	101
*	*	*	*	*	*	*	*	B/L	L/Y	Y	*	*	B/Y	R/G	LG/R	*	*	L/W	*	*	*	R	LG
146	147	148	145	144	143	142	141	140	139	138	137	136	135	134	133	132	131	130	129	128	127	126	125
*	*	*	*	*	*	*	*	GY/L	W/L	*	*	GY/R	*	LG/B	*	V/R	*	*	B/W	R/B	*	BR/W	P
172	171	170	169	168	167	166	165	164	163	162	161	160	159	158	157	156	155	154	153	152	151	150	149
*	P	W	V/Y	*	L/O	*	*	*	*	*	*	G/W	G/Y	*	*	BR/Y	W/R	B/O	*	L/B	*	BR	W
196	195	194	193	192	191	190	189	188	187	186	185	184	183	182	181	180	179	178	177	176	175	174	173
*	V	BR	L	G	O	BR/W	R/Y	GY	*	*	R/G	G/R	*	BR	W/G	*	L/R	Y/B	R/W	LG/B	*	V	B/Y


0140-223 BOOST SENSOR/INTAKE AIR TEMPERATURE SENSOR No. 1 (F)

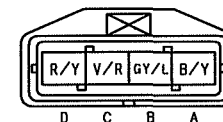


0140-224 IDLE SWITCH (F)




0922-105 ENGINE COOLANT TEMPERATURE SENSOR (SHORT CORD)

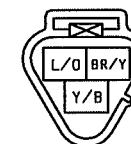

0922-106 FRONT (F) - SHORT CORD

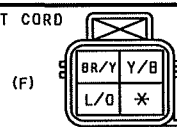


(SHORT CORD)





0140-227 FUEL TEMPERATURE SENSOR (E)



0140-228 CRANKSHAFT POSITION SENSOR (E)




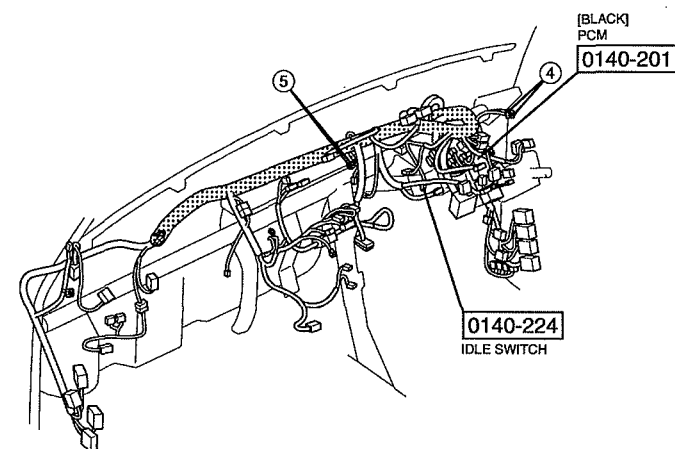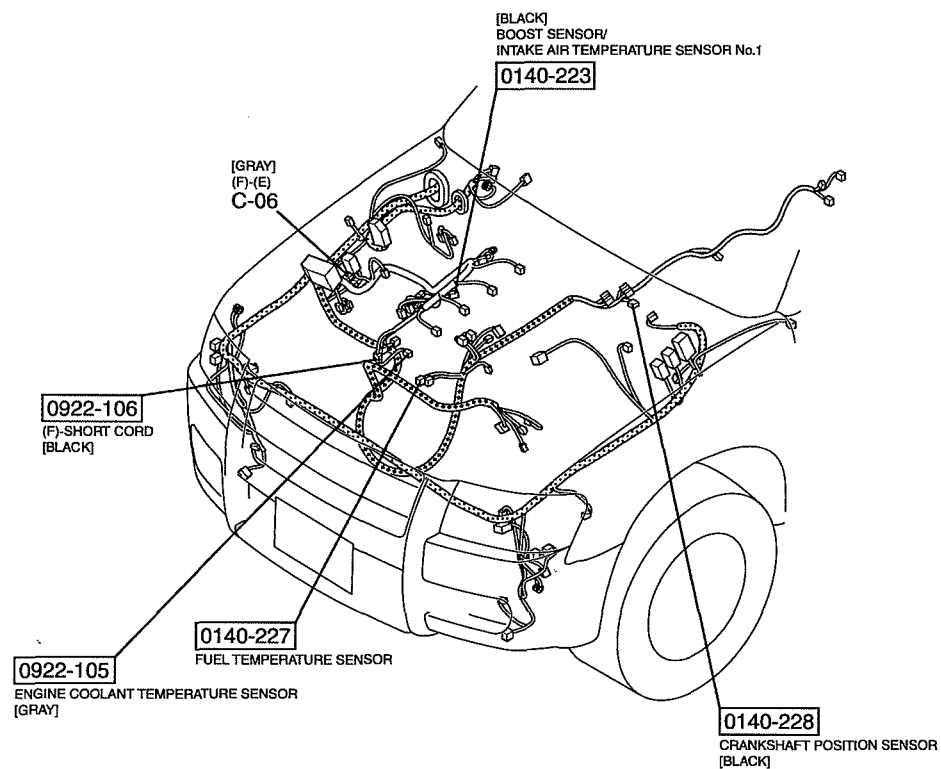

CONTROL SYSTEM (WL-C, WE-C)

0140-2e

* ... VACANT
... WITH IMMOBILIZER SYSTEM

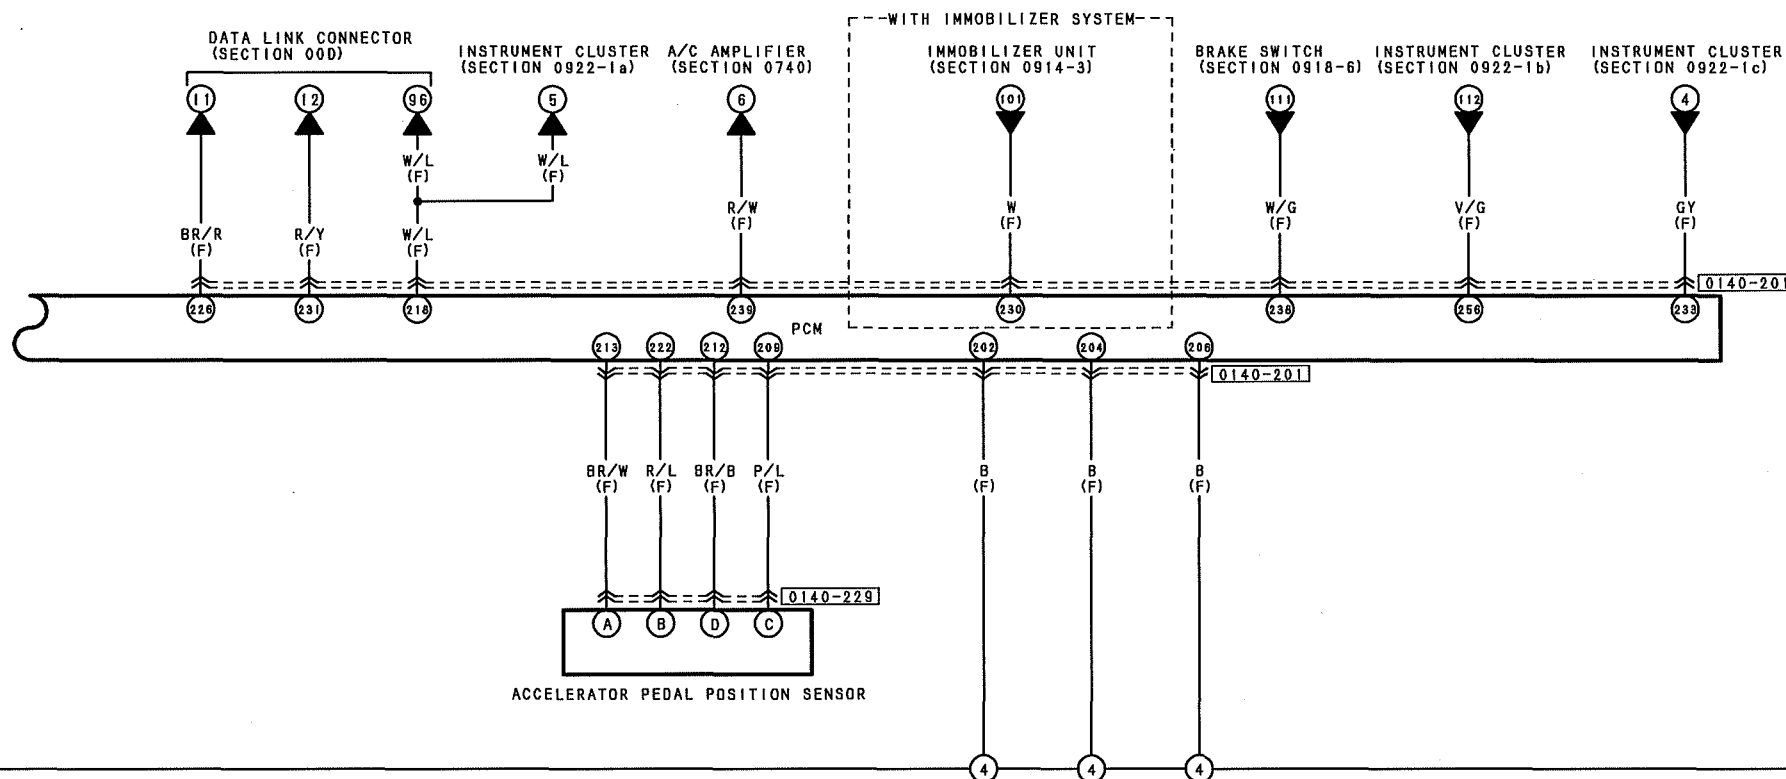

0140-201 PCM (F)

225
235

219	218	217	216	215	214	213	212	211	210	209	208	207	206	205	204	203	202	201
LG	W/L	*	*	*	*	BR/W	BR/B	*	*	P/L	*	*	B	B/L	B	B/L	B	B/L
232	231	230	229	228	227	226	225	224	223	222	221	220	219	218	217	216	215	214
LG/R	R/Y	*	*	G/B	R	BR/R	B/W	*	*	R/L	*	*	B	B/L	B	B/L	B	B/L
245	244	243	242	241	240	239	238	237	236	235	234	233	232	231	230	229	228	227
*	BR	*	*	*	B/L	R/W	W/G	*	*	B/W	*	GY	B	B/L	B	B/L	B	B/L
256	255	254	253	252	251	250	249	248	247	246	245	244	243	242	241	240	239	238
G/O	*	V/G	*	LG	R	*	*	*	*	*	*	*	*	*	*	*	*	*

202
204
206

201
203
205

0140-229 ACCELERATOR PEDAL POSITION SENSOR (F)

