



# Framework Laptop 16" Numpad Replacement

Use this guide to replace the numpad, aka &quot; lap...

Written By: Alex Diaz-Kokaisl



# INTRODUCTION

Use this guide to replace the numpad, aka "numpad module," in your Framework 16" laptop.


**Note:** the laptop used in this guide is a generic setup of one US keyboard, one numpad module, and two touchpad spacers. Your setup might vary, but the procedure should remain the same.

## Step 1 — Before you begin



- Unplug all cables and fully shut down your laptop.
- ① If your repair requires a spudger, a T5 Torx, or a Phillips screwdriver, you can use the included Framework screwdriver. Whichever works best for you!

## Step 2 — Unlock the Input Modules

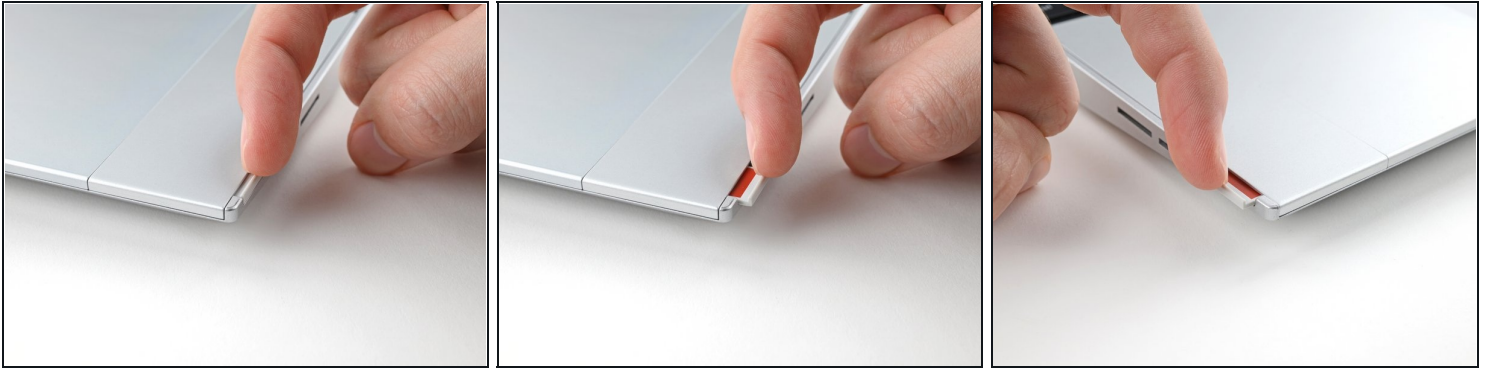

- Use your fingernail to pull out the two Input Module latches and unlock them.
  - ① The latch will show red if it's unlocked.

## Step 3 — Remove the touchpad spacers



- Use your fingers to slide the touchpad spacer toward the bottom edge of the laptop and unclip it.
  - ① If you're having trouble, check if the corresponding Input Module latch is properly unlocked.
- Lift the touchpad spacer off the laptop and remove it.

## Step 4



- Repeat the same procedure for the other touchpad spacer.

## Step 5 — Remove the touchpad



- Use your fingers to slide the touchpad toward the bottom edge of the laptop and disconnect it.
    - ⓘ If you're having trouble, check if the Input Module latches are properly unlocked.
  - Lift the touchpad and remove it.
- ☒ During reassembly, perform the following:
- Place the touchpad flat on its cutout so [its clips](#) are properly aligned.
  - Press the touchpad down and slide it into place so it lines up evenly with the bottom edge of the laptop.

## Step 6 — Remove the numpad



- ❶ The numpad is held in place with strong magnets. Apply gradually increasing force to avoid having the numpad violently eject.
- Grip the pull tab at the bottom of the numpad.
- Lift the pull tab until the numpad magnets release.
- Remove the numpad.
- ☑ During reassembly, make sure the numpad is seated properly on its [alignment pegs](#) and sits flush with the edges of the laptop.

---

**To reassemble your device, follow these instructions in reverse order.**

Take your e-waste to an [R2 or e-Stewards certified recycler](#).

Repair didn't go as planned? Try some [basic troubleshooting](#), or ask our [Answers Community](#) for help.