
Final package assembly instructions for TIME WARRIOR Model B-710

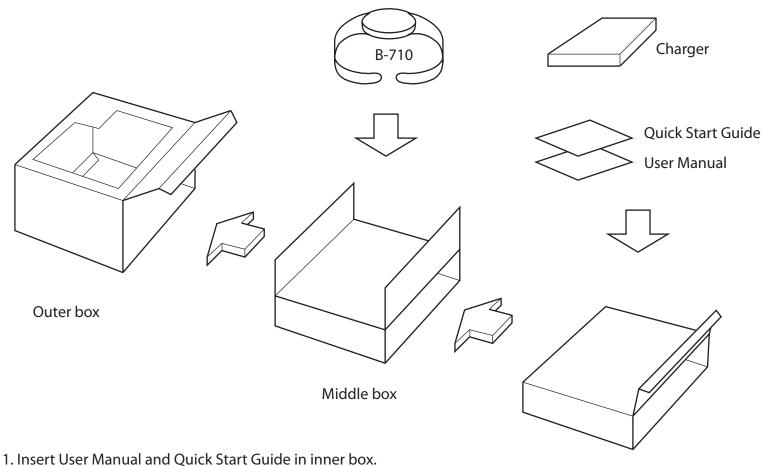

- 2. Insert charger in inner box.
- 3. Close inner box.
- 4. Place B-710 on supporting loop.
- 5. Insert B-710 and supporting loop into top of middle box.
- 6. Insert inner box in lower area of middle box.
- 7. Insert middle box in outer box.
- 8. Close outer box.



Inner box