




PRODUCT: 6680/7680
PN: 106840001
NAME: CARRIAGE DRIVE ASSEMBLY


PURPOSE: The purpose of this document is to provide instructions for assembling the 106840001 Carriage Drive Assembly.

RESPONSIBILITY: It is the responsibility of Pertech Management to maintain this documentation.


Tools: 51344 Fixture and E-Ring tool.

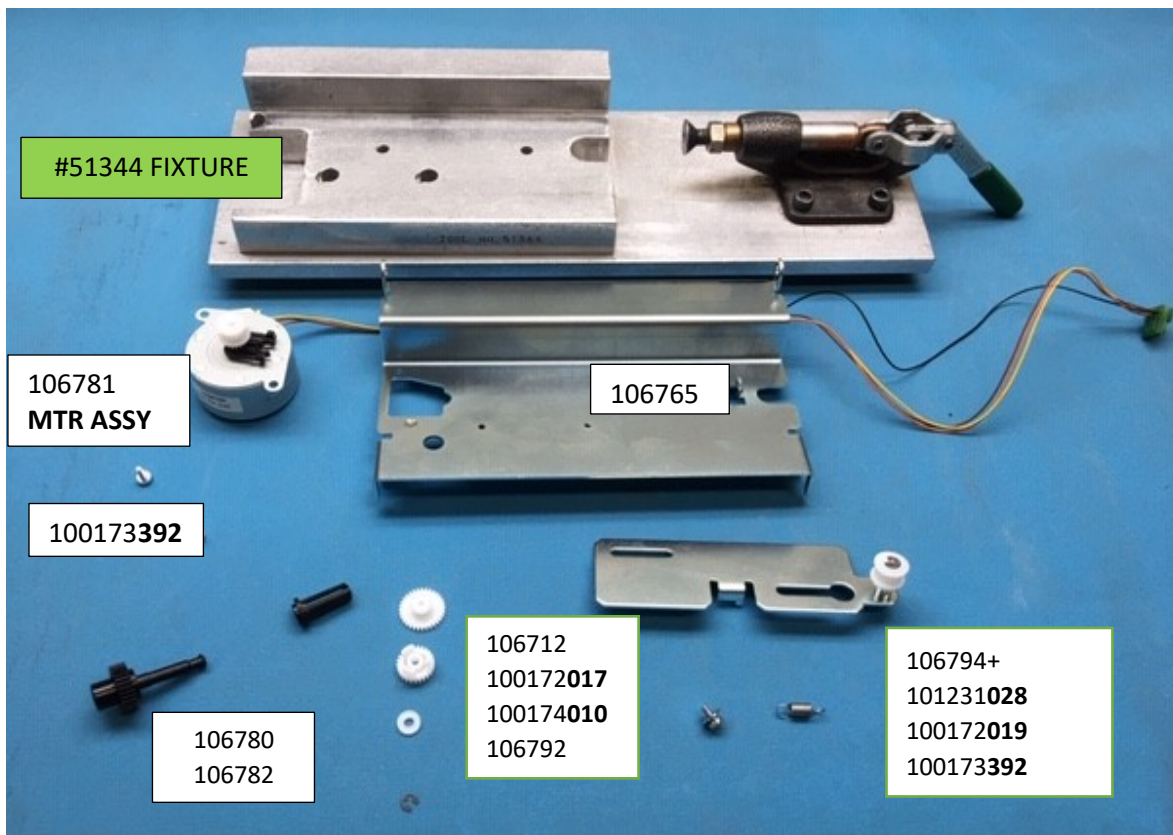


Reference 10684001x Bill of Material (BoM) in Odoo where x is the most recent revision. All part numbers have an alpha revision character on the end, i.e. 106781A. They are not on this procedure but the parts used must match the part number's revision on BoM.

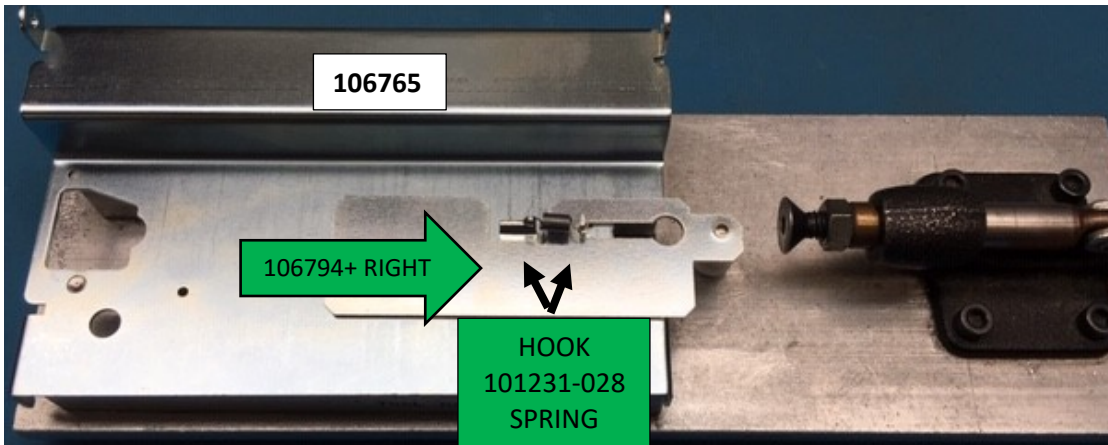


PLACE 106765 SUPPORT ON #51344 FIXTURE. ADD 106794+ w GEAR FACING DOWN, HOOK 101231-028 SPRING. (PUT KEY TAB THROUGH RIGHT SIDE ROUND HOLE AND THEN SLIDE RIGHT)

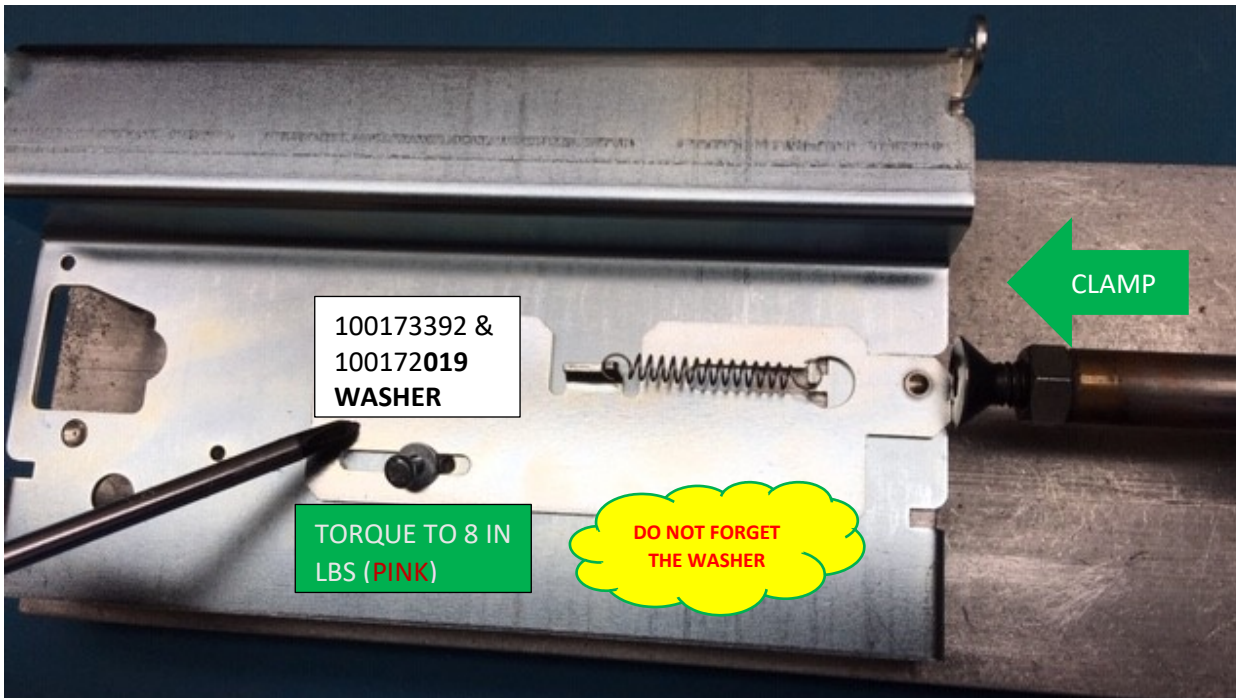


ENGAGE CLAMP TO PUSH TENSION PLATE LEFT. TORQUE SCREW AND WASHER TO 8 IN LB.

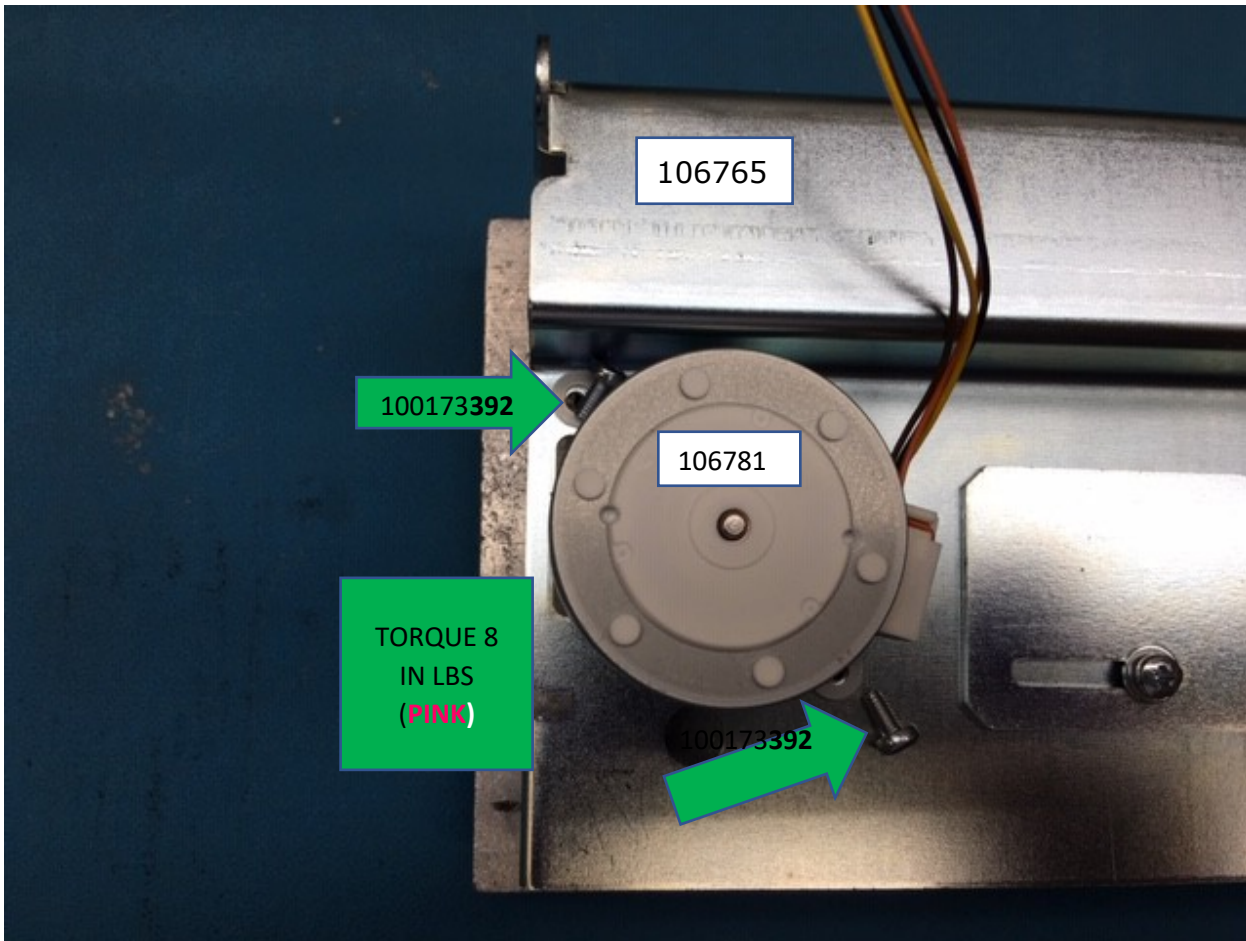

PLACE 106781 MOTOR CARRIAGE ASSEMBLY IN TO 106765 SUPPORT ASSEMBLY. SECURE THE MOTOR WITH TWO 100173392 SCREWS USING 8 IN-LB TORQUE. (**PINK**)

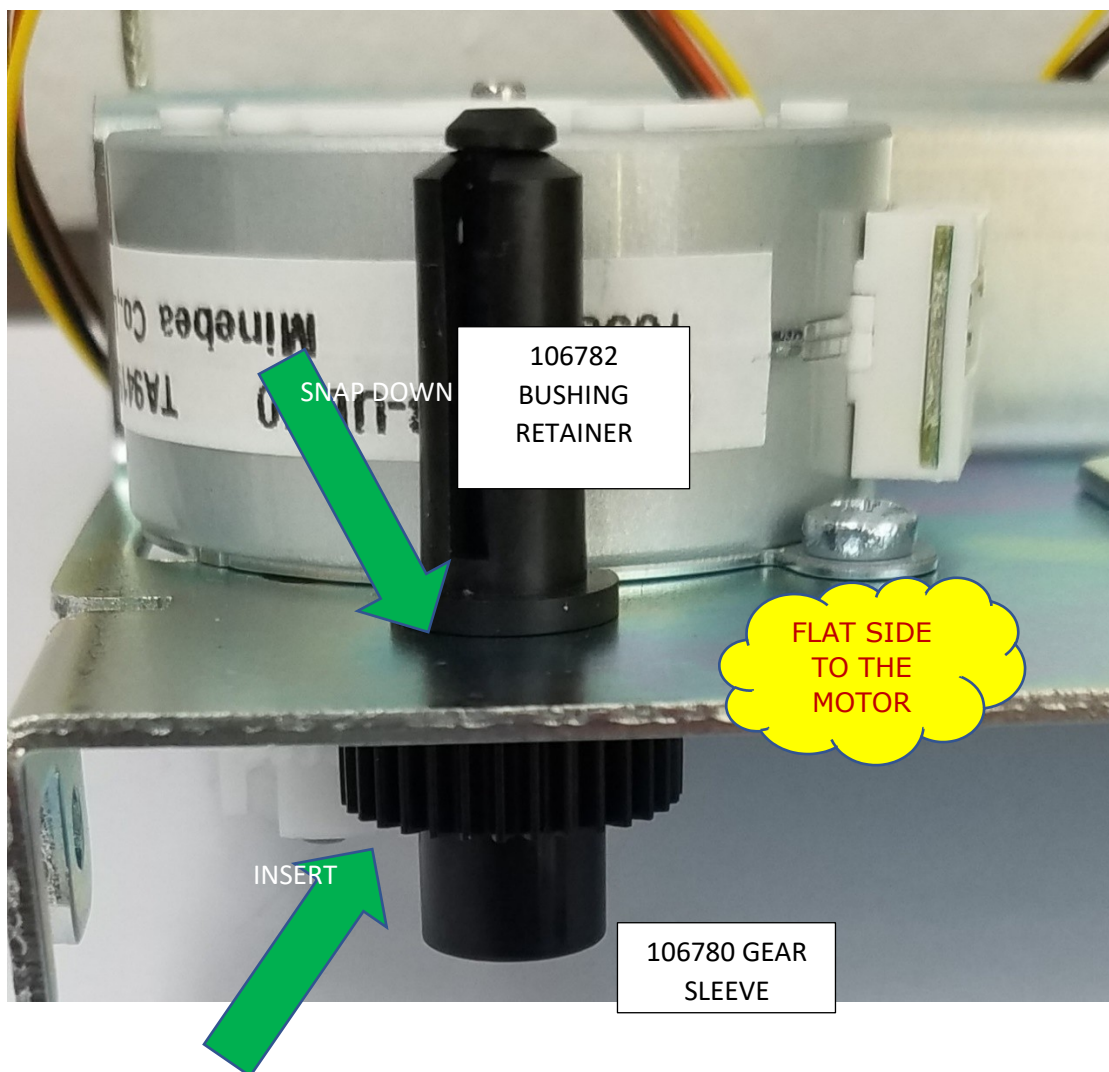

POSITION THE 106782 BUSHING RETAINER WITH THE FLAT SIDE TO THE MOTOR, IN THE HOLE NEXT TO THE MOTOR BODY. SNAP 106780 GEAR SLEEVE RIBBON DRIVE INTO THE BUSHING

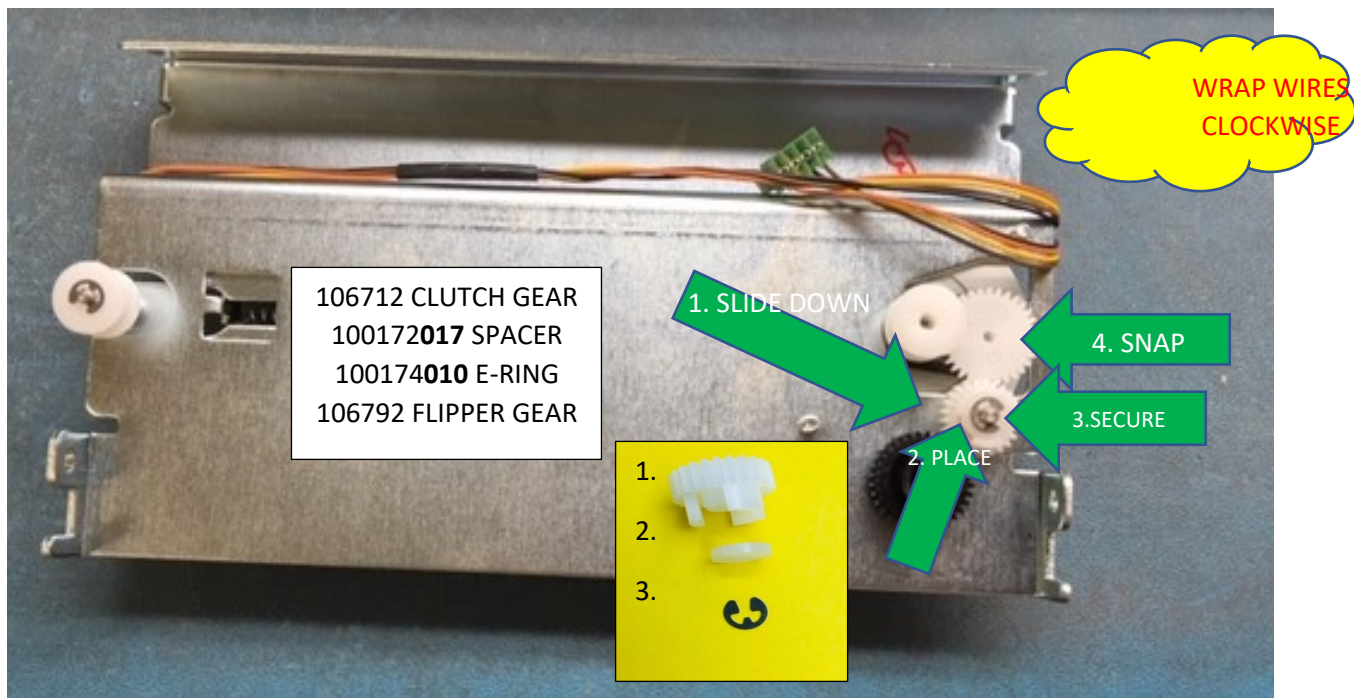

1. WITH THE 3 CLUTCH TEETH FACING AWAY FROM THE FRAME, SLIDE THE 106712 CLUTCH GEAR DOWN OVER THE POST.
2. PLACE 100172017 SPACER OVER THE SHAFT
3. SECURE 100174010 E-RING TO HOLD THE TWO IN PLACE.
4. SNAP 106792 FLIPPER GEAR INTO THE FLIPPER ON THE MOTOR.