


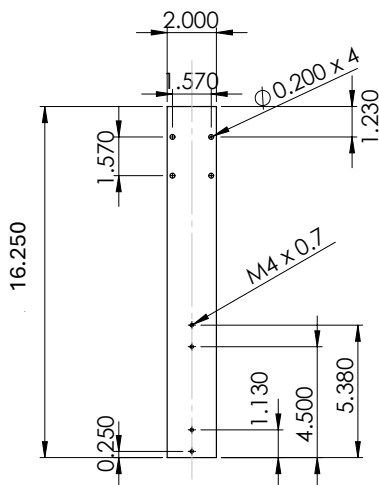

Note:

1. Break sharp corners.
2. Debur all holes
3. Four M4 x 0.7 tap holes use 0.136 drill bit (high tap resistance).
4. All dimensions are in Inches

DWG NO.

BACK_PLATE

A4

SCALE:1:5

SHEET 1 OF 1