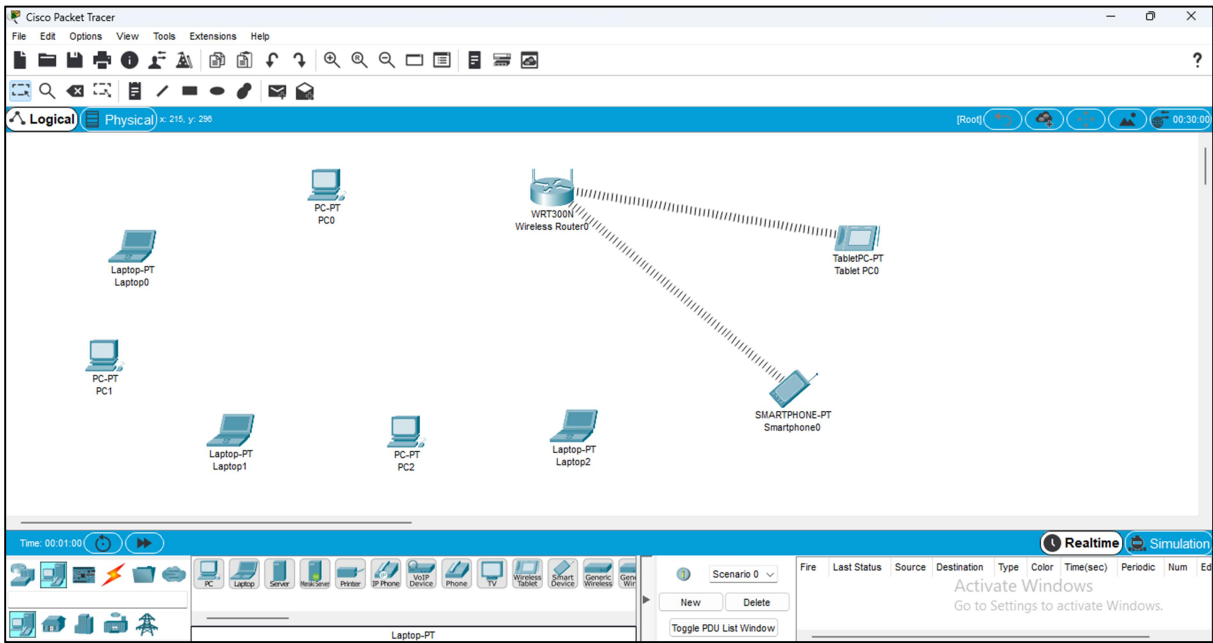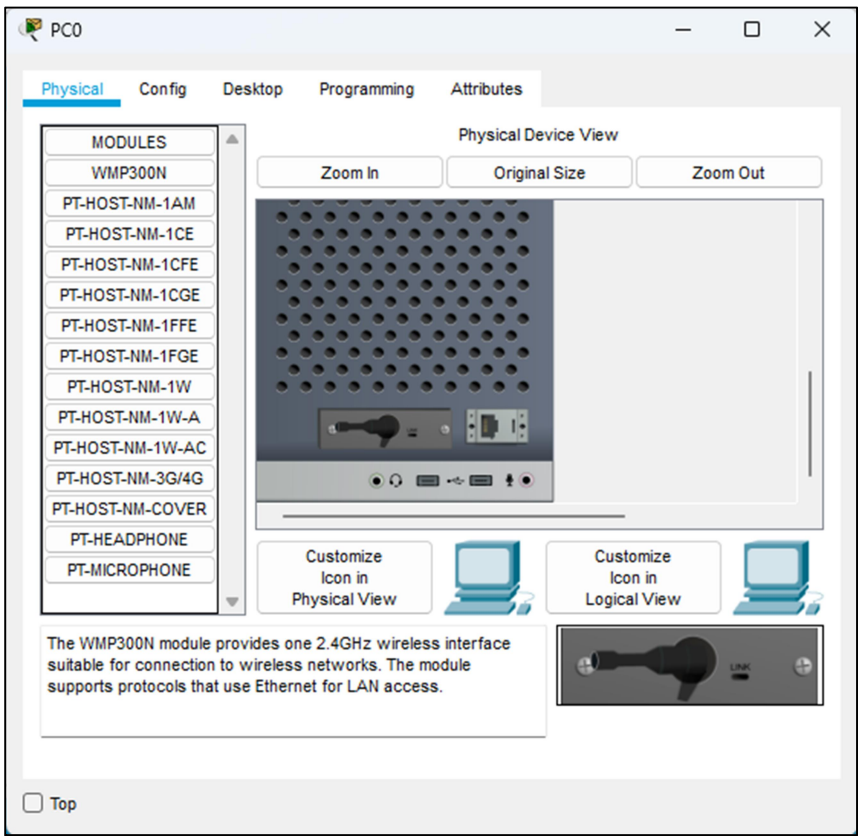**Create MAC protocol simulation implementation for wireless sensor Network.**
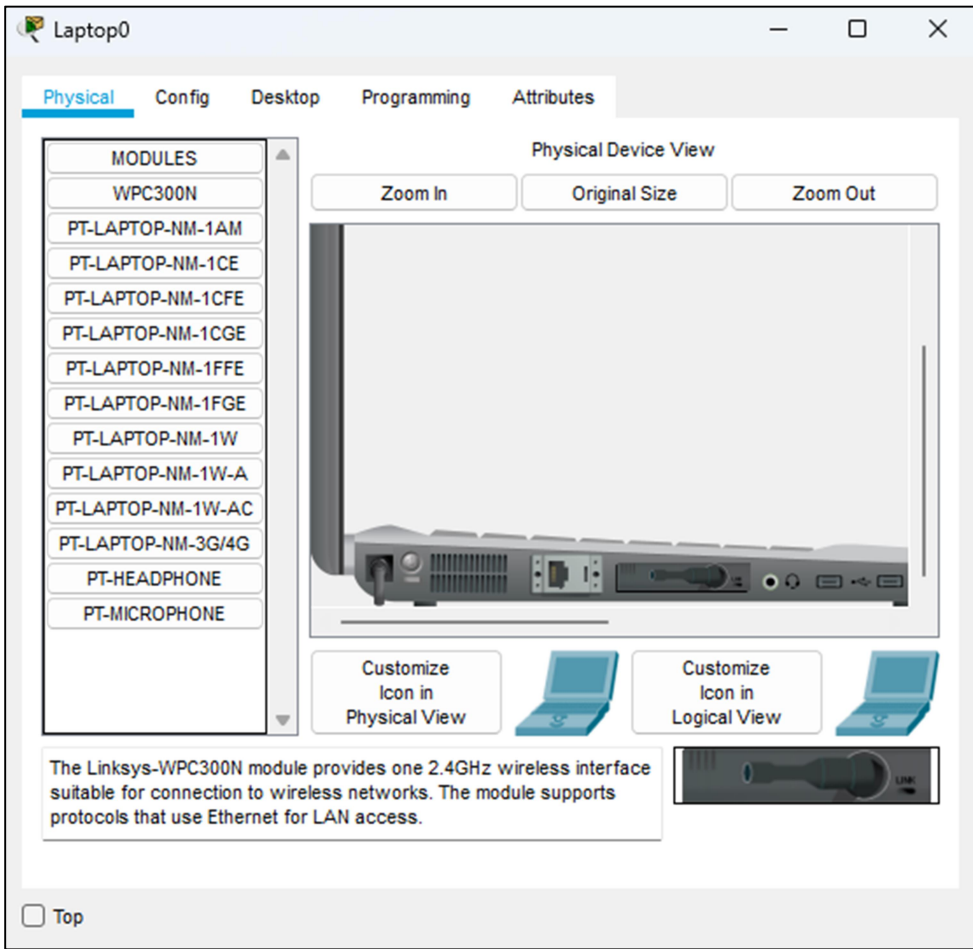
Take Devices. (WRT300N Router,Smartphone-PT,TabletPC-PT,3PC and 3Routers.)
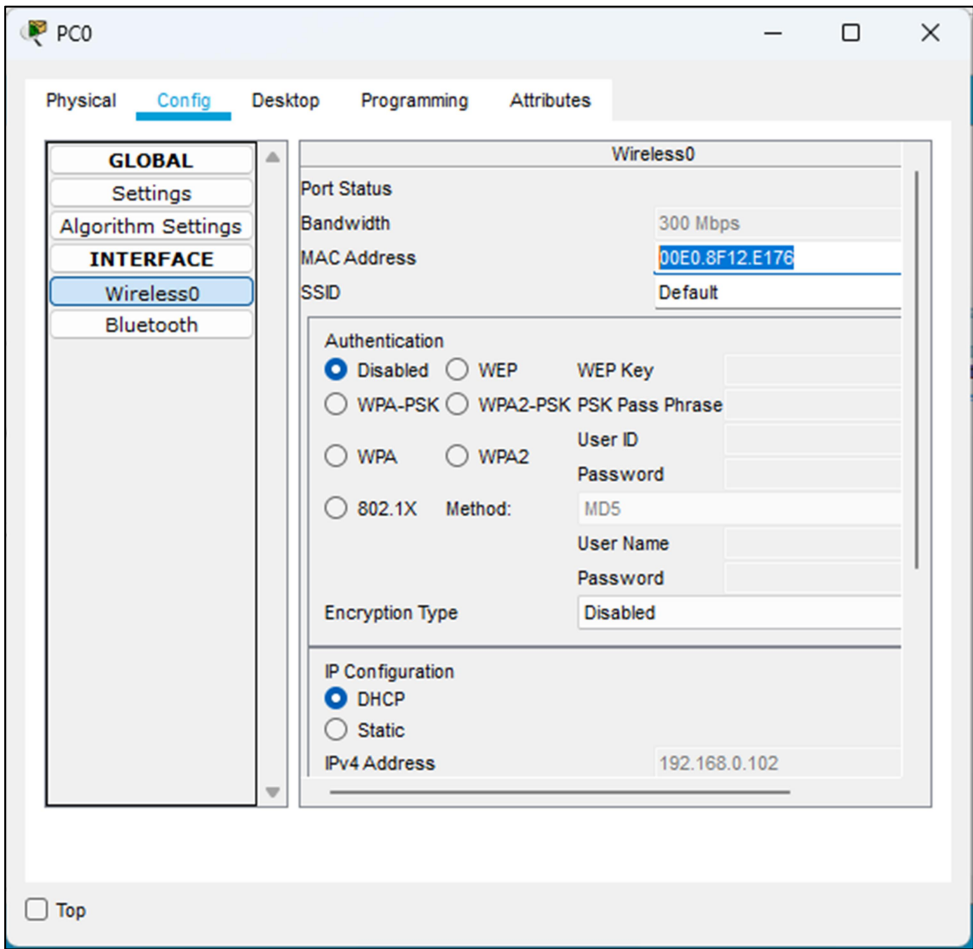

Select PC-Physical-CPU Off-Remove Port and Add Default-Port(For each PC.)

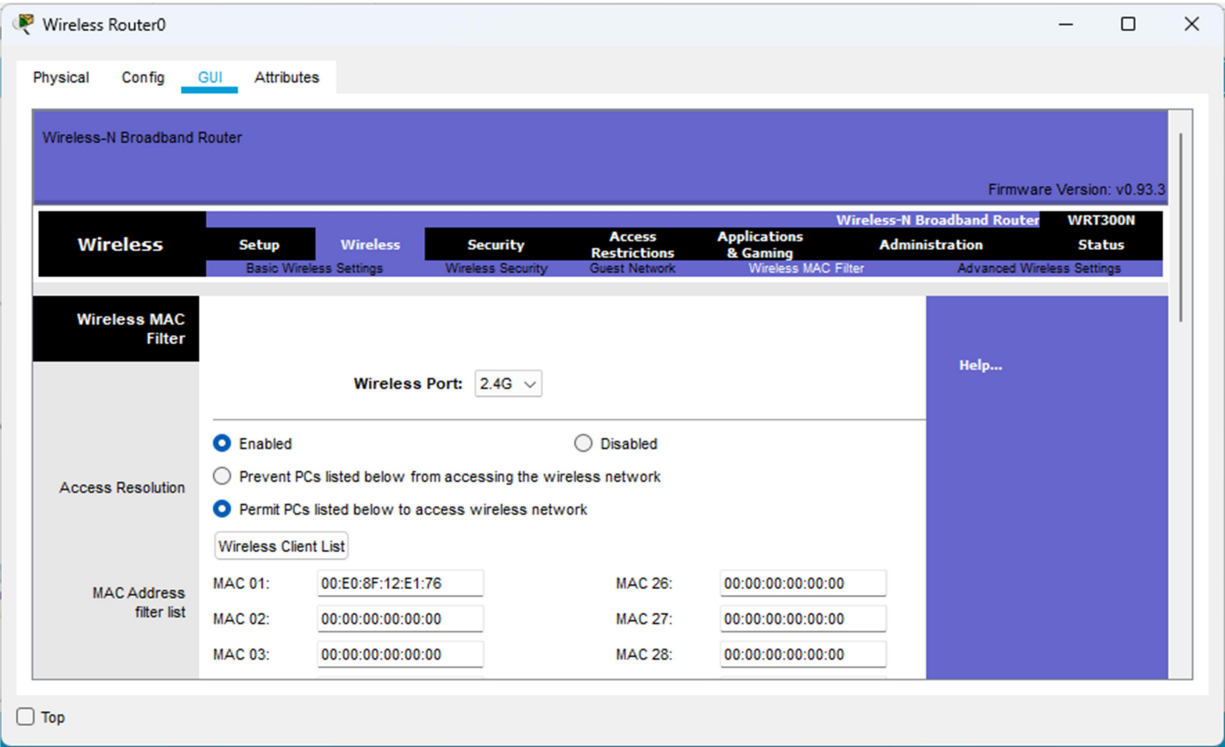Select Laptop-Physical-Switch Off-Remove Port and Add Default-Port(For each Laptop.)

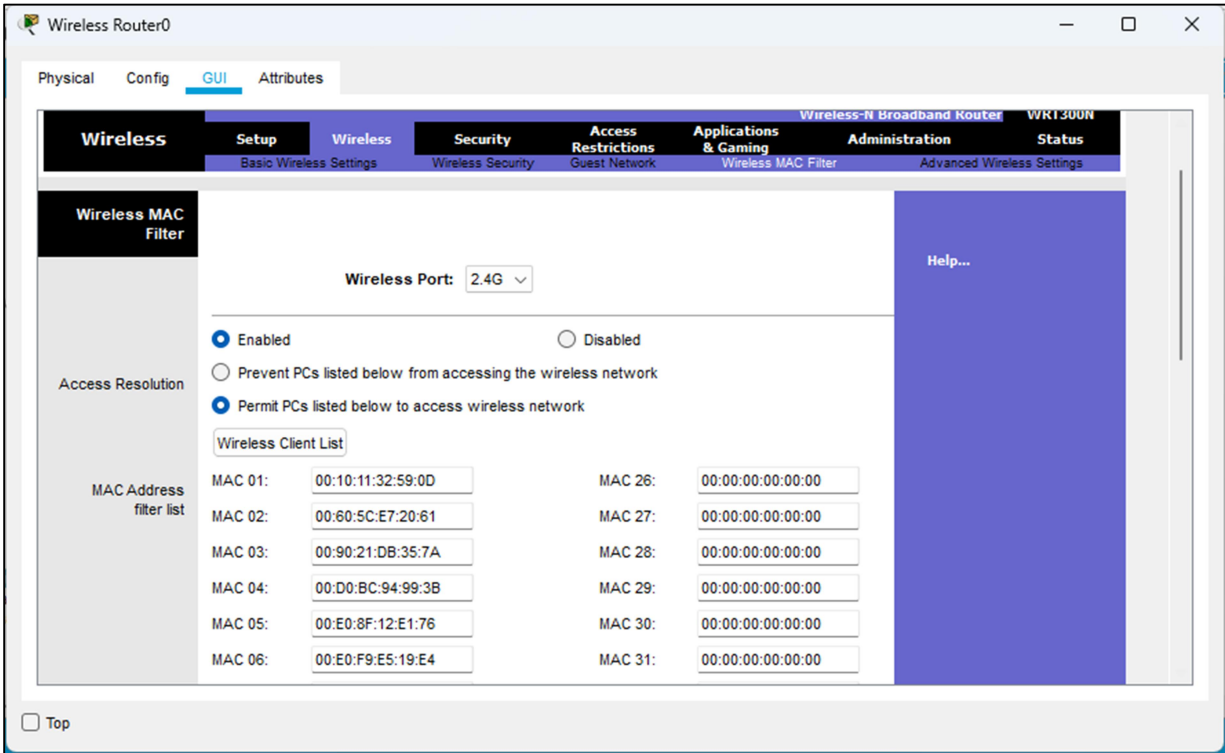Select PC-Config-Wireless0-Copy MAC Address.(For each device.)

Select Wireless Router-GUI-Wireless-Wireless MAC Filter-Enabled.

And Select Option for Permit PC's to access wireless network.

All Wireless Client List.(List of devices whose MAC addresses are added to access wireless network.)

Packet Send Successfully.