







HELIXCORE FIDGET

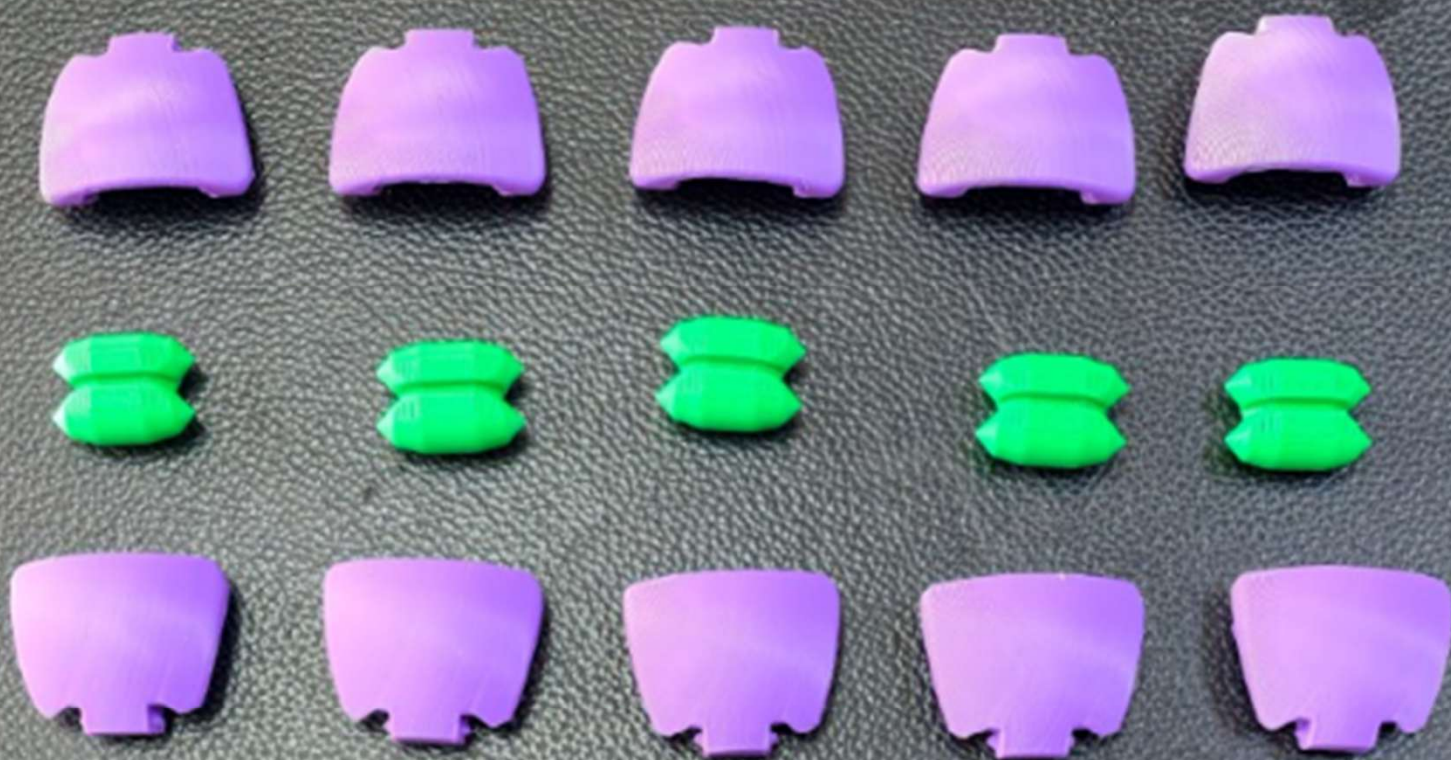

OPTIONAL M5 NUT X 5

REMOVE
SUPPORT

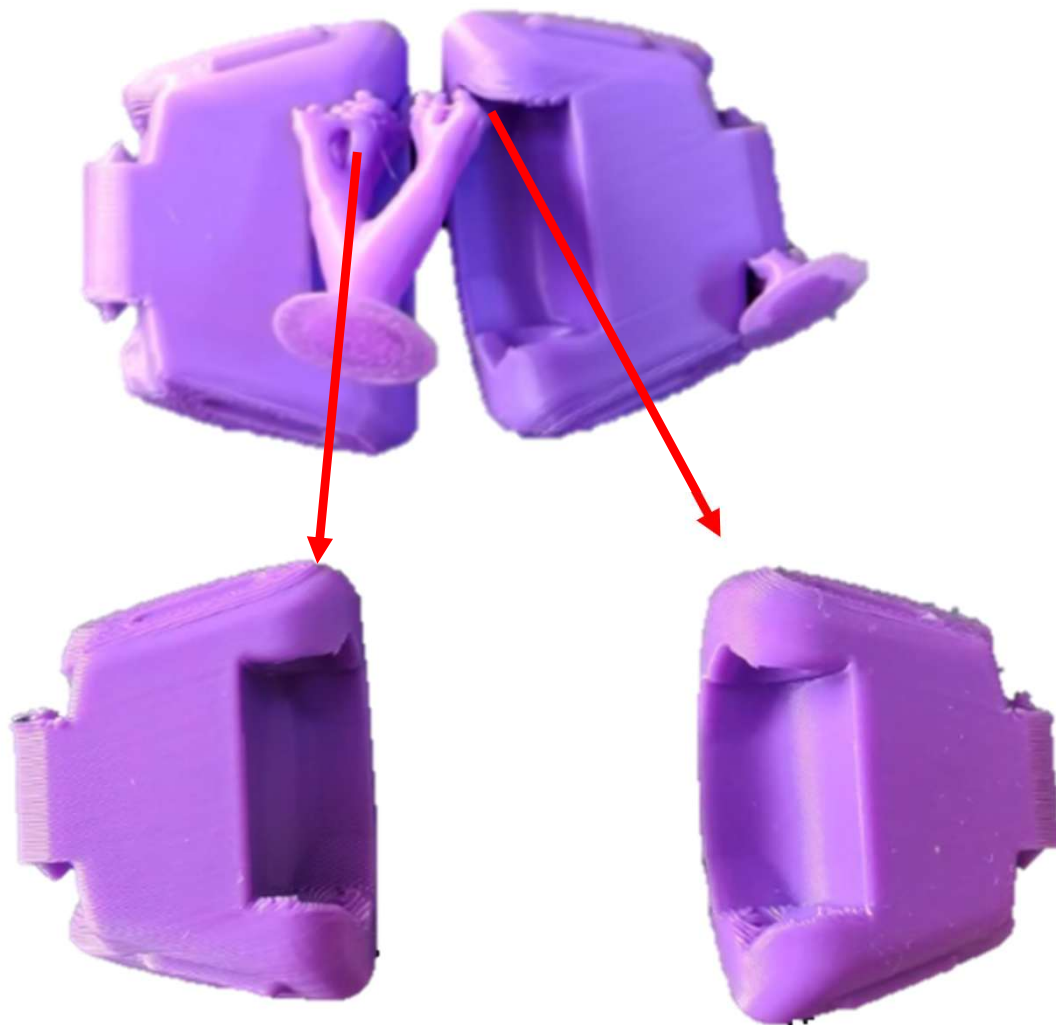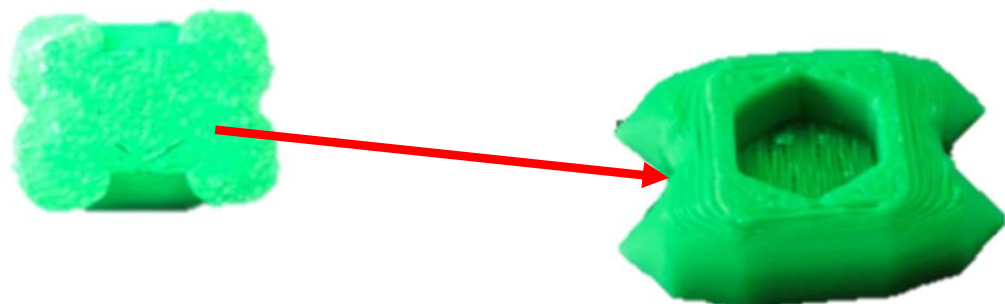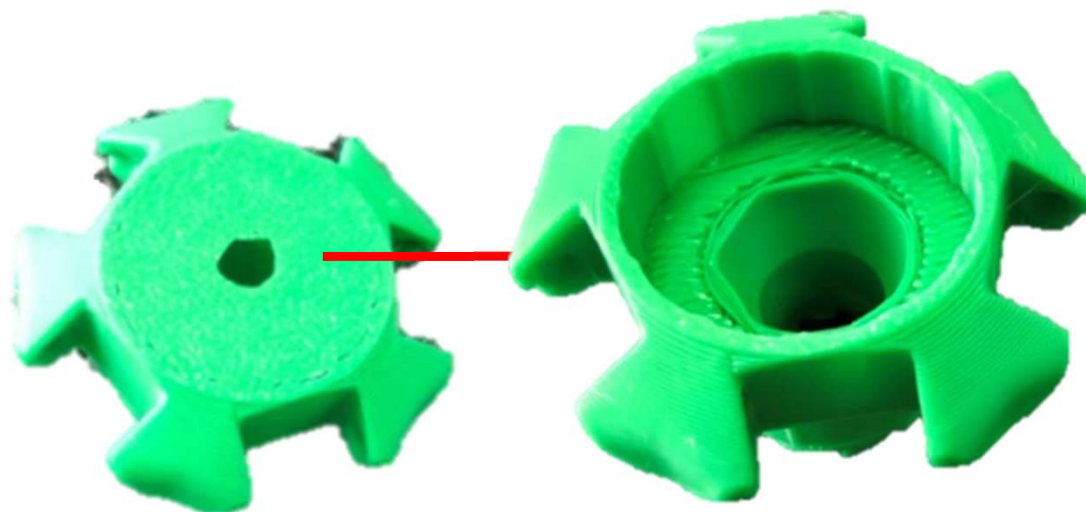


SKIP TO STEP 3 FOR SINGLE COLOR EASY ASSY PRINT PROFILE

01

OPTIONAL M5 NUT INSERT, FIDGET
WORK OK WITHOUT THIS, DO THIS IF U
WANT TO HAVE EXTRA WEIGHT



02

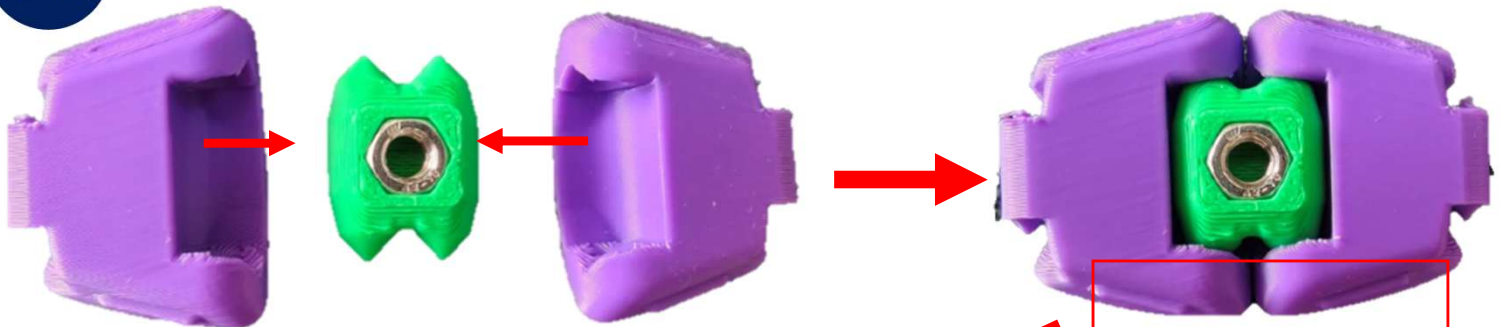

Only for single color print in assy profile

MAKE SURE
DIRECTION SAME

for updated type A, B print profile

03

FORCE FIT, IT'S DESIGN
TO FIT TIGHT




04




05

FORCE FIT, IT'S DESIGN
TO FIT TIGHT

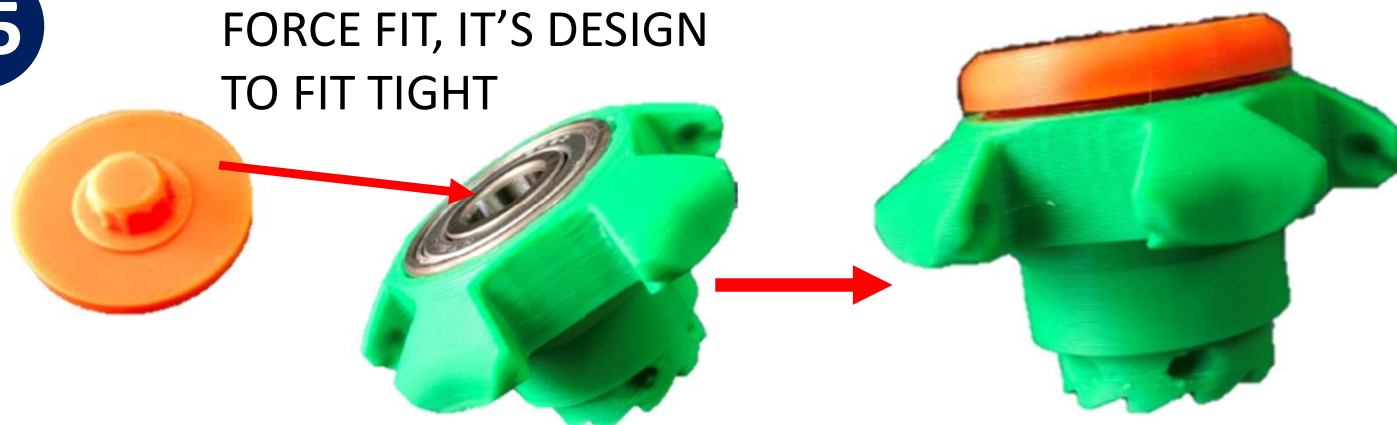

06


APPLY GREASE

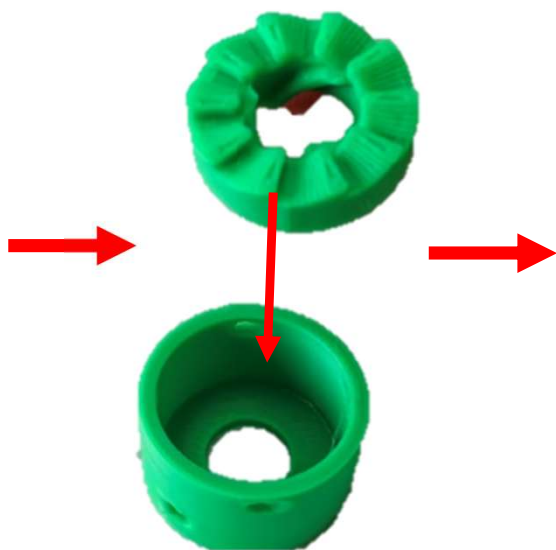

APPLY GREASE



07

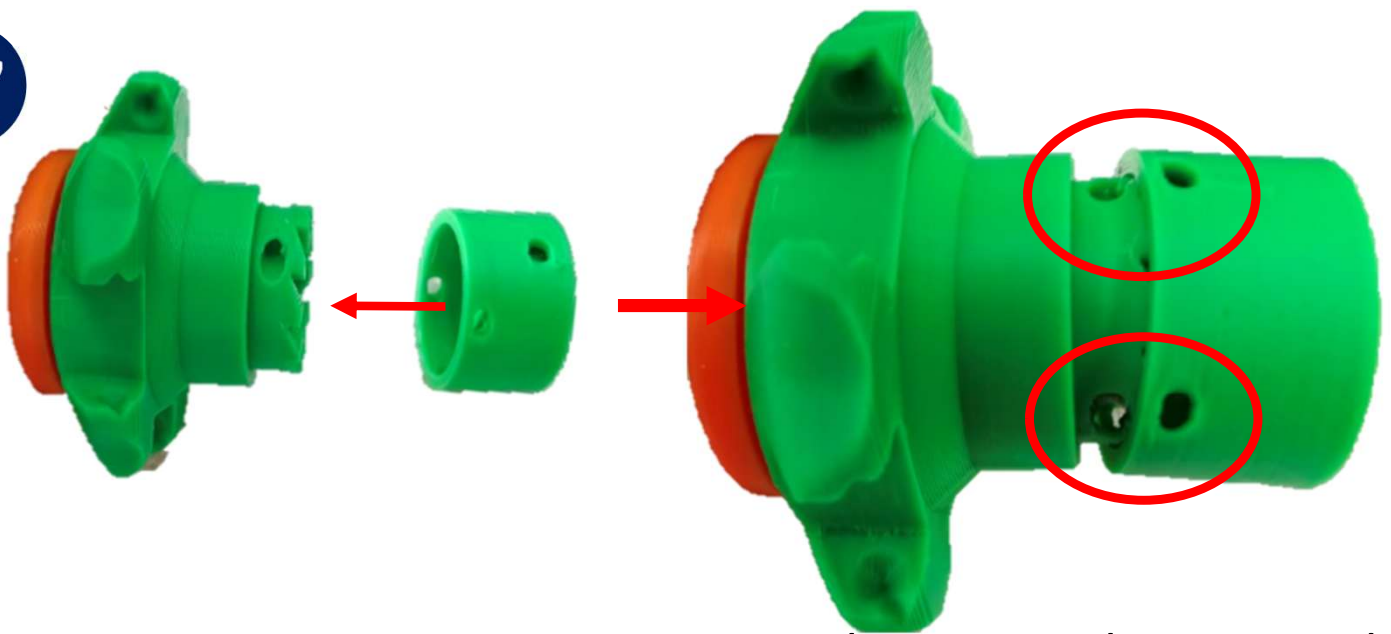

Make sure it align properly
like this

08

INSERT FILAMENT




09




TRIM EXCESS MATERIAL

10

FORCE FIT, IT'S DESIGN
TO FIT TIGHT

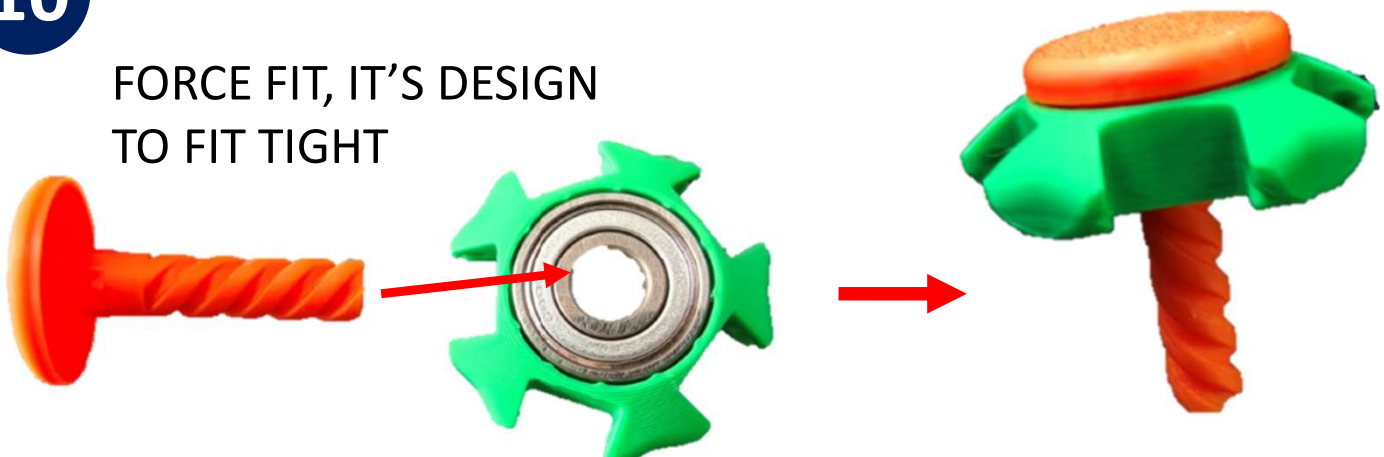

11

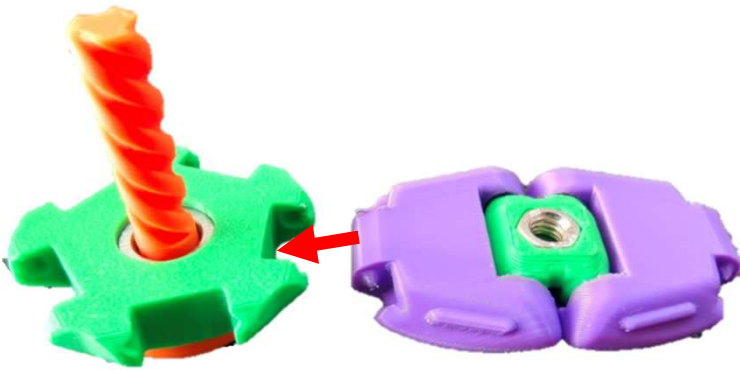

Make sure it align properly like this!!!

12



13



14



15



FOR EASY
INSTALLATION, TAKE
OUT THE LAST PIECE

16



INSTALL THE TOP &
BOTTOM PIECE
THEN ONLY JOINT
THE CENTER HINGE

17



WRAP RUBBER
BAND

DONE

